



Television User's Guide

Changing Entertainment. Again.

**Please read this manual before
operating this product for the
first time.**

TOCOM 15775710



Model: CR20310

Chapter 1: Setup and Connections


Things to Consider Before You Connect	4
Protect Against Power Surges	4
Protect Components from Overheating	4
Position Cables Properly to Avoid Audio Interference	4
Important Stand and Base Safety Information	4
Use Indirect Light	4
Choose Your Connection	5
Cables Needed to Connect Components to Your TV	5
Connection: TV Only	6
Connection: TV + VCR	6
Connection: TV + VCR + Satellite Receiver	7
The Front of Your TV	8
Turn on the TV	9
Automatic Tuning	9
The Buttons on the Remote Control	10

Chapter 2: Menus and Features


The Point and Select Method	12
TV Main Menu	12
The Picture Menu	12
Sound Menu	13
Channel Menu	14
Tuning Menu	14
Setup Menu	15
Using Closed Captioning	16
Channel Marker	16

Chapter 3: Other Information

 Troubleshooting	18
Care and Cleaning	20
Index	21

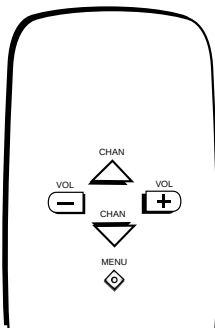


 Use the CHAN $\wedge$ /v and VOL + buttons to move through the menu system.

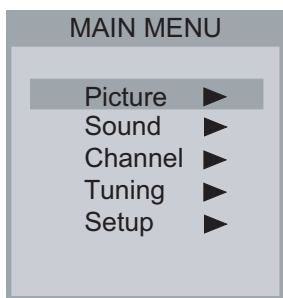

Tip

 Feel free to explore the menu system. If you're ever unsure where you are in the menu system, or you're just plain tired of exploring, press CLEAR to remove the menus from the screen and start over again.

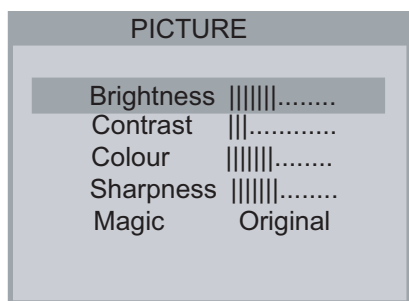

The Point and Select Method

You only need to know one rule to use the on-screen menus and control panels: point and select.

1. Point to a menu item using the CHAN $\wedge$ /v buttons to move up or down.
2. Select a menu item by pressing the VOL+ button.

Selecting an item tells the TV's menu system to go ahead and make the change or go to a place you have indicated.

TV Main Menu

The Main menu is your gateway to controlling the TV. It lets you adjust the TV's picture, sound and channel settings, as well as setup the TV to your match your preferences.

To select a menu item:

1. Press MENU to bring up the TV's Main menu.
2. Point to a menu item using the CHAN buttons on the remote. Select that item by pressing VOL+ on the remote.
3. To exit any menu screen, press MENU twice, or press CLEAR once.

The Picture Menu

The Picture Quality menu contains five slider controls that adjust the TV's picture. Use the CH $\wedge$ /v to select an item, and use the VOL +/- adjust the controls.

Brightness Adjusts the brightness of the picture.

Contrast Adjusts the difference between light and dark areas of the picture.

Colour Adjusts the richness of the color.

Sharpness Adjusts the crispness of edges in the picture.

Magic Toggles between four preset picture settings:

Personal Sets the picture quality to the settings you've defined.

Original Returns the picture settings to their factory presets.

- Brightness Sets the picture to a darker overall level.

+ Brightness Sets the picture to a brighter overall level.

Please do not send any products to the Indianapolis address listed in this manual or on the carton. This will only add delays in service for your product.

Thomson multimedia Inc.

10330 North Meridian Street
Indianapolis, IN 46290

©2001 Thomson multimedia Inc.

Trademark(s)® Registered

Marca(s) Registrada(s)

Printed in Manaus, Brazil

TOCOM 15775710