



nüvi

personal travel assistant

quick reference guide



Configuring Your nüvi

To turn on your nüvi, press and hold the **Power** button  on the top of the unit. Follow the on-screen instructions to set up your nüvi. You only have to do this once.

Finding Your Destination

1



Touch  **Where to?**

2




Select a category. Touch the arrows to see more categories.

3

Comfort Inn-Merriam	3.7 ^m W
Fairmont Kansas City A	3.8 ^m NE
Hampton Inn & Suites-M	3.8 ^m W
Sheraton Suites-Countr	3.8^m NE
Paradise Motel	3.9 ^m E

Select a destination. Touch the arrows to see more places.

4

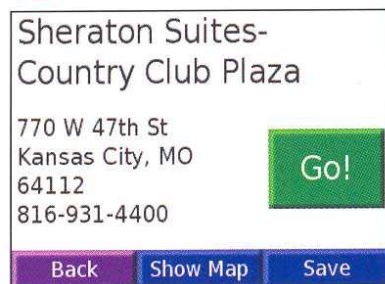

Touch .


5




Enjoy the route!

Following Your Route

Follow the route to your destination using the Map page. As you travel, the nüvi guides you to your destination with voice prompts, arrows on the map, and directions at the top of the Map page. If you depart from the original route, the nüvi recalculates the route and provides new route instructions.

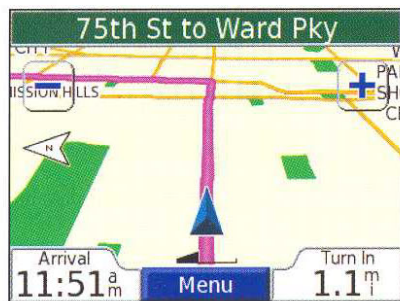

Your route is marked with a magenta line.

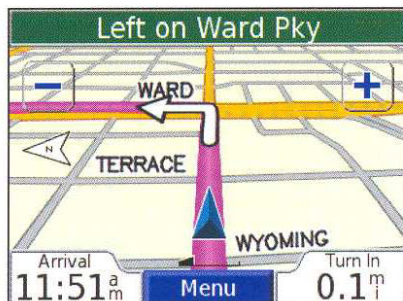


Follow the arrows as you take turns.



A checkered flag marks your destination.

Viewing the Map Page


From the Menu page, touch  **View Map** to open the Map page. The position icon  shows your location. Touch and drag the map to view different areas.

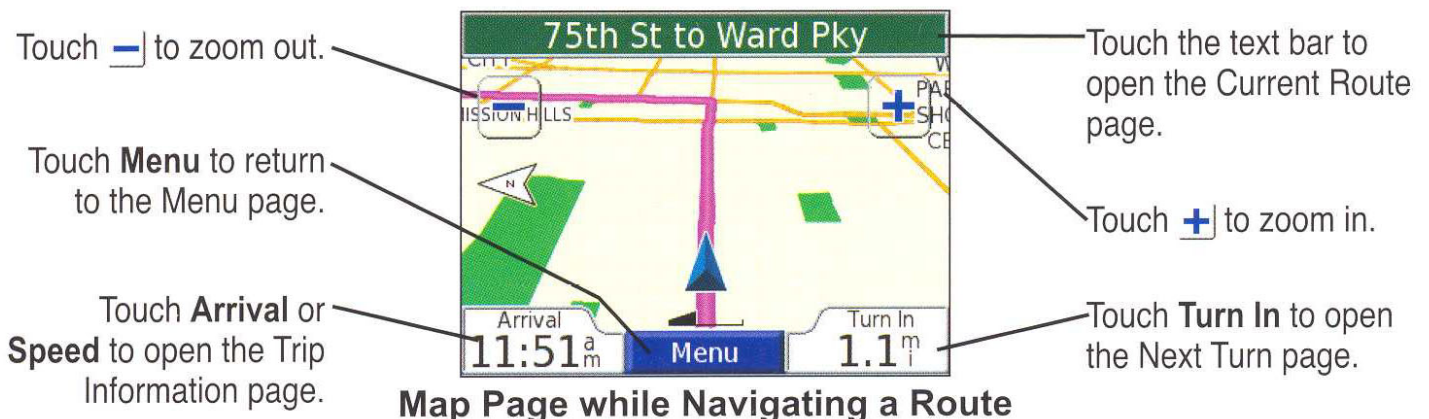

Adding Stops to Your Route

You can add a stop (via point) to your route. The nüvi gives you directions to the via point and then to your final destination. With a route active, touch **Menu** >  **Where to?**

1

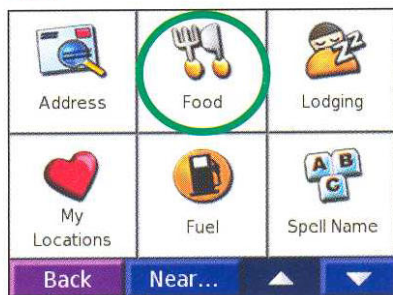


Search for the extra stop.

2



Touch .

3

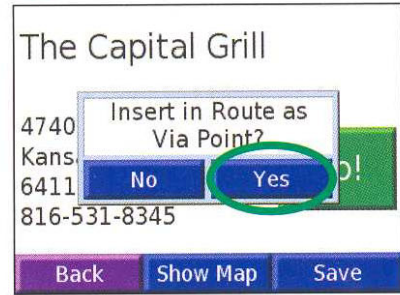

Touch **Yes** to add this stop before your destination.

Setting a Home Location

1




Touch  **Where to?** >  **My Locations.**

2



Touch **Set Home.**

3

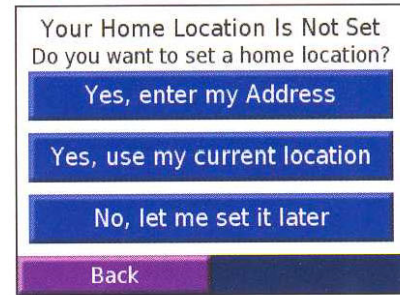

Select an option.

Saving Places You Find

1



After you have found a place you want to save, touch **Save**.

2



Touch **OK** in the pop-up window. The place is saved in  **My Locations > Favorites**.


Finding Saved Places

1



From the Menu page, touch  **Where to? >**  **My Locations > Favorites**.

2

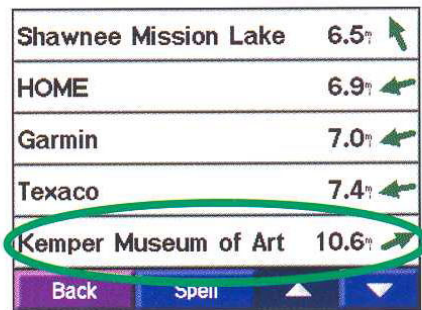

Select a place.

3




Touch .

Finding an Address


From the Menu page, touch Where to? > Address.

1

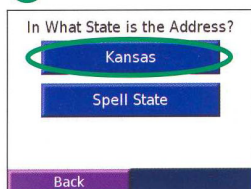

Select a state.

2

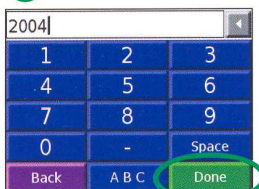


Type the address number and touch **Done**.

3




Type the street name until a list of streets appears or touch **Done**.

4

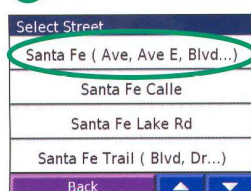

Select the street.

5

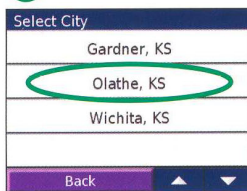

Select a city, if necessary.


6



Select the address, if necessary. Touch **Go!**.


Listening to MP3 Files

1

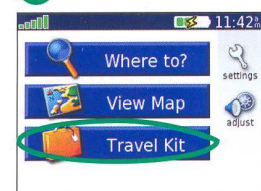


From the Menu page, touch **Travel Kit**.

2

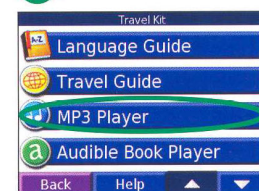


Touch **MP3 Player**.

3

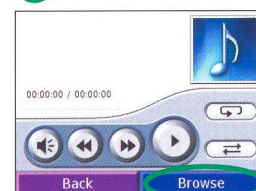


Touch **Browse**.

4

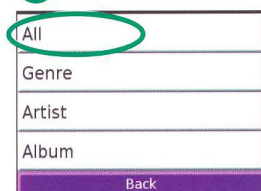

Select a category.

5

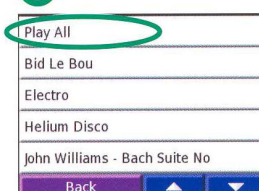

To play the entire category, touch **Play All**. To play one song, touch the title.

6



Touch **Back** to exit the MP3 page to view other pages, such as the map.

Touch to adjust the volume.

Tap to go to the beginning of the song; touch and hold to skip back.

Tap to skip to the end of the song; touch and hold to skip ahead.


Touch to pause the song.

Touch to repeat. Touch to shuffle.

Using the Quick Settings

To access the Quick Settings, quickly press and release the **Power** button. Move the sliders to adjust the volume and brightness. You can also touch  on the Menu page to adjust the levels.

Touch **Lock** to prevent accidental screen taps. To unlock the screen, press the **Power** button and touch **Unlock**.

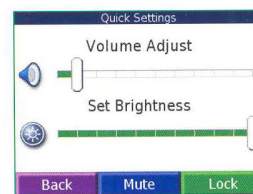

nüvi Tips

- To quickly return to the Menu page, press and hold the **Back** button.
- Touch the **Help** button to learn more about the nüvi's Travel Kit features.

Loading Items to Your nüvi

Connect the mini-USB connector to the side of the nüvi. Connect the larger end of the cable to an available USB port on your computer.

Double-click the My Computer icon on your computer's desktop. Two new Removable Disk drives appear in your list of drives: "nüvi" and "nüvi sd." "nüvi" is the available storage in the nüvi's internal memory. "nüvi sd" is the SD card inserted in your nüvi. If you do not have an SD card inserted in your nüvi, the "nüvi sd" drive does not appear in the list.


Double-click one of the nüvi drives to open it. Copy and paste files into the drive.



Playing Audible Books


Your nüvi provides sample Audible books, which are only portions of the book. Purchase full books from Audible.com at <http://garmin.audible.com>.

1

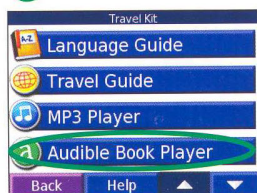


From the Menu page, touch  **Travel Kit** >  **Audible Book Player**.

2

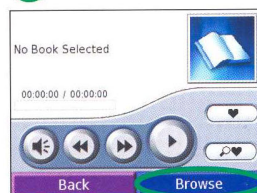


Touch **Browse**.

3

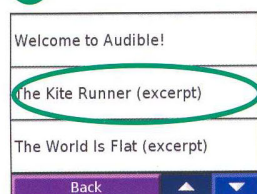

Touch a book title.

4

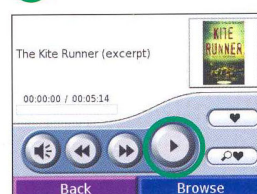

Touch .

Touch  to adjust the volume.

Tap  to jump back. Tap  to skip ahead. Press and hold to move more quickly.

Touch  to pause the book.

Touch the book cover art to view book information.

Using Bookmarks

To create a bookmark, touch  and **Bookmark**. To view your bookmarks, touch  and then touch a bookmark. Touch  to listen to the book from the bookmark.

Using an FM TMC Traffic Receiver

Using a Garmin FM TMC Traffic Receiver, the nüvi can receive and use traffic information broadcast over the FM Radio Data System. For more information about the GTM 10 FM TMC Traffic Receiver, visit <http://www.garmin.com/products/gtm10>.

Connecting the GTM 10 to Your nüvi

Place your nüvi in the mount and plug it into the 12-volt adapter. Plug the USB cable from the GTM 10 into the USB cable connector on the side of the nüvi

Viewing Traffic Events

From the Menu page, touch  to display a list of traffic events. The traffic symbols appear on the Map as well.

	Santa Fe St Eastbound	2.0" N
	I-35 Northbound	8.0" NE
	US-69 Northbound	8.5" NE
	I-35 Southbound	9.6" NE
	I-435 Eastbound	9.8" NE
Back Setup ▲ ▼		

Using the Travel Kit

Your nüvi provides a Travel Kit with several features that are helpful when you are traveling.

1



From the Menu page, touch  **Travel Kit**.


2



Touch the arrows to view all items in the Travel Kit. Touch the item you want to open.

Converting Currency

1

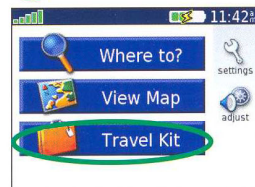


From the Menu page, touch  **Travel Kit**.

2



Touch  and then touch  **Currency Converter**.

3

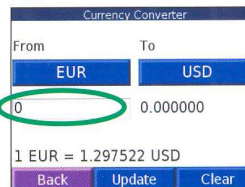

Select **From** and **To** currencies. Touch the blank field and enter the number. Touch **Done**.

Garmin Language Guide

The Garmin Language Guide puts the data from Oxford's multilingual resources and five bilingual dictionaries in the palm of your hand. A trial version of the Garmin Language Guide is provided. To purchase the Garmin Language Guide accessory, go to the Garmin Web site at <http://www.garmin.com/products/nuvi/> and click the **Accessories** link. You can also contact your Garmin dealer to purchase nüvi accessories.

More Information


For more information, refer to the English owner's manual located on your "nüvi" drive and on the Garmin Web site at <http://www.garmin.com/products/nuvi/>. Click the **Manuals** link and then select **Download**.

Mounting Your nüvi

For a tight grip, clean and dry your windshield before mounting the suction cup.



Place the suction cup on the windshield.
Flip the lever back, toward the windshield.

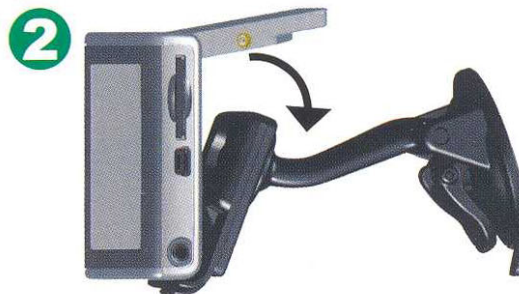

Open the antenna.
Fit the bottom of your nüvi into the cradle.
Tilt your nüvi back until it snaps in place.
If necessary, rotate the cradle.

Plug the small end of the cable into the back of the mount; plug the other end into a 12/24-Volt receptacle in your vehicle.

To remove your nüvi from the cradle, press the small tab on the bottom of the cradle up and tilt the nüvi forward.

Warning: For use in vehicles, it is the sole responsibility of the owner/operator of a vehicle with the nüvi installed to place and secure the device so it will not interfere with the vehicle operating controls and safety devices, obstruct the driver's view of driving conditions, or cause personal injury in the event of an accident.

Notice to State of California Drivers: California Vehicle Code Section 26708 (a) (1) provides that drivers in California should not use suction mounts on their windshield or side or rear windows. Other Garmin dashboard or friction mounting options should be used. For available accessories, refer to the Garmin Web site at www.garmin.com. Also, refer to the *nüvi Owner's Manual* for instructions on using the included mounting disk with the suction cup mount.

September 2005

© Copyright 2005 Garmin Ltd. or its subsidiaries
190-00627-01 Rev. B

Printed in Taiwan

IMPORTANT! UNLOCK CODE ENCLOSED (English)

The unlock code is used to enable Garmin® software products to work on your PC. See your unit setup guide for instructions on how to use this information. MapSource® CDs and DVDs are not included with the purchase of every GPS product.

Garmin would like you to Register your product!!!

The seven character Registration Code listed below will identify your purchase with our system. It will enable Garmin to provide you with information about unit software enhancements, and offer preferred rate updates to your map data as they become available. Please visit the following web site for registration: <https://www.garmin.com/unlockregister/register.jsp>

IMPORTANT! CODE DE DEVERROUILLAGE INCLUS (Français)

Le code de déverrouillage est utilisé pour permettre aux produits logiciels de Garmin® de fonctionner sur votre PC. Voir le guide de paramétrage de votre appareil, pour instructions sur la façon d'utiliser ces informations. Les cédéroms et les DVD MapSource® ne sont pas compris avec l'achat de chaque produit GPS.

Garmin aimerait que vous enregistriez votre produit!!!

Le Code d'enregistrement de sept caractères, qui est listé ci-dessous, identifiera votre achat dans notre système. Il permettra à Garmin de vous fournir les informations sur les améliorations des logiciels et de vous offrir des actualisations à taux préférentiel, s pour les données cartographiques, au fur et à mesure de leur disponibilité. Veuillez visiter le site Internet suivant pour l'enregistrement: <https://www.garmin.com/unlockregister/register.jsp>

IMPORTANTE! CODICE DI SBLOCCO INCLUSO (Italiano)

Il codice di sblocco è fondamentale per poter installare i software Garmin® sul vostro PC. Le istruzioni per il suo corretto utilizzo sono illustrate nella guida di setup del vostro prodotto. I CD e DVD MapSource non sono forniti con tutti i prodotti.

Garmin vi invita alla registrazione del vostro prodotto!!!

Il codice di registrazione di sette caratteri indicato di seguito vi servirà per registrare il vostro acquisto nel ns. sistema. Esso ci permetterà di fornirvi informazioni su futuri aggiornamenti software del prodotto, e vi consentirà di ottenere nuovi dati cartografici a prezzo speciale. Per la registrazione visitate la seguente pagina: <https://www.garmin.com/unlockregister/register.jsp>

WICHTIG! NACHFOLGEND FREISCHALTCODE (Deutsch)

Der Freischaltcode wird benötigt, damit Sie Garmin® Softwareprodukte auf Ihrem PC verwenden können. Lesen Sie in der Installationsanleitung Ihres Geräts wie dieser Code einzugeben ist. Hinweis: Nicht mit jedem Garmin GPS werden MapSource® CDs oder DVDs mitgeliefert.

Garmin empfiehlt, Ihr Produkt zu registrieren!!!

Der unten aufgeführte 7-stellige Registrierungscode identifiziert Ihren Kauf in unserem System. Er ermöglicht, dass Garmin Sie über Softwareverbesserungen informiert, und Ihnen Kartenupdates zu Vorzugspreisen anbietet, sobald sie verfügbar werden. Bitte besuchen Sie die nachfolgende Website zur Registrierung: <https://www.garmin.com/unlockregister/register.jsp>

IMPORTANTE! CODIGO DE DESBLOQUEO ADJUNTO (Español)

El código de desbloqueo se utiliza para habilitar el software de los productos Garmin® para trabajar en su PC. Vea la guía de instalación de para instrucciones sobre como utilizar esta información. Los CDs y DVDs MapSource® no están incluidos en la compra de todos los GPS.

Garmin está encantado de registrar su producto!!!

El código de registro de siete dígitos identificará su compra en nuestro sistema. I permitirá a Garmin proveerle información acerca de su unidad, las mejoras en el software, y ofrecerle actualizaciones cartográficas cuando estas estén disponibles. Por favor visite la siguiente página web para registrarse: <https://www.garmin.com/unlockregister/register.jsp>

Unit Serial Number :

Registration Code :

Unlock Code :



190-10050-00 Rev A



NÜVI PRODUCT INFORMATION SHEET

This sheet contains very important safety information. Read and understand all items on this sheet before operating your unit.



WARNING

Failure to avoid the following potentially hazardous situations could result in an accident or collision resulting in death or serious injury.

When installing the unit in a vehicle, place the unit securely so that it does not interfere with vehicle operating controls or obstruct the driver's view of the road (see diagram).

Do not mount where driver's field of vision is blocked.

Do not place unsecured on the vehicle dash.

Do not mount in front of an airbag field of deployment.

When navigating, carefully compare information displayed on the unit to all available navigation sources, including information from street signs, visual sightings, and maps. For safety, always resolve any discrepancies or questions before continuing navigation.

Always operate the vehicle in a safe manner. Do not become distracted by the unit while driving, and always be fully aware of all driving conditions. Minimize the amount of time spent viewing the screen of the unit while driving and use voice prompts when possible. Do not input destinations, change settings, or access any functions requiring prolonged use of the unit's controls while driving. Pull over in a safe and legal manner before attempting such operations.

The unit contains a non-user-replaceable, rechargeable lithium-ion battery. The battery may present a risk of fire or chemical burn if mistreated.

- Do not remove from the unit, heat unit above 140°F (60°C), or incinerate.
- Dispose of unit properly. Contact your local waste disposal department for information on properly disposing of lithium-ion batteries.

WARNING: This product, its packaging, and its components contain chemicals known to the State of California to cause cancer, birth defects, or reproductive harm. This Notice is being provided in accordance with California's Proposition 65. If you have any questions or would like additional information, please refer to our Web site at <http://www.garmin.com/prop65>.



CAUTION

Failure to avoid the following potentially hazardous situations may result in injury or property damage.

The unit is designed to provide you with route suggestions. It does not reflect road closures or road conditions, traffic congestion, weather conditions, or other factors that may affect safety or timing while driving.

Use the unit only as a navigational aid. Do not attempt to use the unit for any purpose requiring precise measurement of direction, distance, location, or topography. This

product should not be used to determine ground proximity for aircraft navigation.

The Global Positioning System (GPS) is operated by the United States government, which is solely responsible for its accuracy and maintenance. The government's system is subject to changes which could affect the accuracy and performance of all GPS equipment, including the unit. Although the unit is a precision navigation device, any navigation device can be misused or misinterpreted and, therefore, become unsafe.

Important Information

MAP DATA INFORMATION: One of the goals of Garmin is to provide customers with the most complete and accurate cartography that is available to us at a reasonable cost. We use a combination of governmental and private data sources, which we identify in product literature and copyright messages displayed to the consumer. Virtually all data sources contain inaccurate or incomplete data to some degree. This is particularly true outside the United States, where complete and accurate digital data is either not available or prohibitively expensive.

NOTICE TO STATE OF CALIFORNIA DRIVERS: California Vehicle Code Section 26708 (a) (1) provides that "No person shall drive any motor vehicle with any object or material placed, displayed, installed, affixed, or applied upon the windshield or side or rear windows." Drivers in California should not use the suction mount on their windshield or side or rear windows. Garmin does not take any responsibility for any fines, penalties, or damages that may be incurred as a result of disregarding this notice. A disk for attaching the suction mount to a vehicle's dashboard is enclosed.

LIMITED WARRANTY

This Garmin product is warranted to be free from defects in materials or workmanship for one year from the date of purchase. Within this period, Garmin will at its sole option repair or replace any components that fail in normal use. Such repairs or replacement will be made at no charge to the customer for parts or labor, provided that the customer shall be responsible for any transportation cost. This warranty does not cover failures due to abuse, misuse, accident, or unauthorized alteration or repairs.

THE WARRANTIES AND REMEDIES CONTAINED HEREIN ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES EXPRESS OR IMPLIED OR STATUTORY, INCLUDING ANY LIABILITY ARISING UNDER ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, STATUTORY OR OTHERWISE. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, WHICH MAY VARY FROM STATE TO STATE.

IN NO EVENT SHALL GARMIN BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, WHETHER RESULTING FROM THE USE, MISUSE, OR INABILITY TO USE THIS PRODUCT OR FROM DEFECTS IN THE PRODUCT. Some states do not allow the exclusion of incidental or consequential damages, so the above limitations may not apply to you.

Garmin retains the exclusive right to repair or replace the unit or software or offer a full refund of the purchase price at its sole discretion. SUCH REMEDY SHALL BE YOUR SOLE AND

EXCLUSIVE REMEDY FOR ANY BREACH OF WARRANTY.

To obtain warranty service, contact your local Garmin authorized dealer or call Garmin Product Support for shipping instructions and an RMA tracking number. The unit should be securely packed with the tracking number clearly written on the outside of the package. The unit should then be sent, freight charges prepaid, to any Garmin warranty service station. A copy of the original sales receipt is required as the proof of purchase for warranty repairs.

Garmin International, Inc.

Tel. 913/397.8200 Fax. 913/397.8282

Garmin (Europe) Ltd.

Tel. 44/0870.8501241 Fax 44/0870.8501251

Online Auction Purchases: Products sold through online auctions are not eligible for rebates or other special offers from Garmin. Online auction confirmations are not accepted for warranty verification. To obtain warranty service, an original or copy of the sales receipt from the original retailer is required. Garmin will not replace missing components from any package purchased through an online auction.

International Purchases: A separate warranty is provided by international distributors for units purchased outside the United States. This warranty is provided by the local in-country distributor and this distributor provides local service for your unit. Distributor warranties are only valid in the area of intended distribution. Units purchased in the United States or Canada must be returned to the Garmin service center in the United Kingdom, the United States, Canada, or Taiwan for service.

FCC COMPLIANCE

The unit complies with Part 15 of the FCC interference limits for Class B digital devices FOR HOME OR OFFICE USE. These limits are designed to provide more reasonable protection against harmful interference in a residential installation, and are more stringent than "outdoor" requirements.

Operation of this device is subject to the following conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television

reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult an experienced radio/TV technician for help.

The unit does not contain any user-serviceable parts. Repairs should only be made by an authorized Garmin service center. Unauthorized repairs or modifications could result in permanent damage to the equipment, and void your warranty and your authority to operated this device under Part 15 regulations.



Audio Lunchbox
AUDIOLUNCHBOX.COM/GARMIN
UNRESTRICTED. INDIE MUSIC.

over 1,000,000 songs
Largest selection of independent music on the web.
MAC, PC AND LINUX

MP3s and Ogg **NO DRM**

ALA-CARTE AND SUBSCRIPTION PLANS
SINGLE TRACKS **AS LOW AS**
20 CENTS

100% compatibility
with all portable music players and software

★★★★★★
"6 Out of 6 stars. AUDIO LUNCHBOX can proudly claim to be
the **ONLY** online music store we'd recommend outright."
-PC PRO MAGAZINE

190-00491-01 Rev A

READ A PAPERBACK
without the paper.

HEAR A BEST SELLER ANYWHERE YOU GO.



DIGITAL AUDIOBOOK DOWNLOAD CARD

audible.com®

audible.com®

This card is good for up to two digital audiobooks plus one bonus audio program. With more than 25,000 digital audio programs to choose from, you have virtually unlimited listening options! Choose from best-selling audiobooks, radio shows, audio editions of popular magazines, daily newspapers, and more. Then, transfer your audio programs to your AudibleReady® device and listen anytime, anywhere.

Need help? Go to www.audible.com/helpcenter or call (888) 283-5051 (US) or (973) 837-2845 (International).

SYSTEM REQUIREMENTS:

WINDOWS:

- Microsoft® Windows® 98, 98 SE, ME, 2000, or XP
- Pentium® (or compatible) 200 Mhz or higher
- 32 MB available RAM

MACINTOSH:

- Mac OS X version 10.1.5 or later
- Apple iTunes 3.0 or later

3 FREE DIGITAL AUDIO PROGRAMS



Follow these steps to download your digital audio:

1. Visit www.garmin.audible.com
2. Create your Audible account
3. Choose your free audio programs
4. Download your audio and listen anywhere you go

190-00491-00 Rev. A