

folder view
 music 49
 photos 56
 videos 37

G

GNU general public license 158
GPL software 158

H

HD media player
 error messages 149
HDMI
 connection 19
 connectors 9
Home
 button 25, 26
 error messages 149
 Music 48
 overview 28
 Photos 55
 screen navigation 29
 Setup 127
 Videos 36
Home Theater
 connection 22

I

I/O connectors
 composite AV 9
 HDMI 9
 Toslink 9
 USB ports 9
information panel
 music 52
 photo 60
 videos 45
installation
 composite AV connection 21
 HDMI connection 19, 22
 power connection 13, 19, 20, 21
 procedures 13
 requirements 12
 USB connection 23
iTunes server 137

K

keyboard 34

L

language setup 130

LED indicators 10
 power 10
Live365 93
 adding a station to your preset list 98
 exit 100
 getting track information 99
 listening 95
 providing song feedback 99
 removing a station from your preset list 99
 searching 98
 sign in 93
 signing out 99
locating media content
 manual search 32
 Search function 33

M

maintenance
 system 144
media library
 clear 31
 exemptions 142
media library compilation
 categories 31
 enable 31
 error messages 149
 exemptions 31
 overview 30, 142
Mediafly 101
 browse content plug-ins 104
 deleting an account 105
 exit 106
 my channels 102
 player 103
 player options 103
 popular channels 103
 search 105
 signing in 101
menus overview 7
Music
 audio track display 134
 auto play 139
 background music info panel 134
 browser display 134
 folder view 49
 media library compilation categories 31
 menu options 50
 playback controls 51
 playback options 52
 playback procedures 48

- playback screen 52
- playback sequence setting 134
- settings 133
- shuffle mode 53
- sort & filter 49
- supported formats 8
- use in slideshow 61

N

- navigation buttons 25, 26
- Netflix 107
 - activate the media player 107
 - existing membership 107
 - navigation 107
 - new membership 107
- network services
 - Web UI 71
- Network settings
 - check connection 136
 - clear login info for network share 137
 - device name 137
 - DLNA media server 137
 - iTunes server 137
 - network setup 136
 - network share server 137
 - proxy 137
 - wireless favorites 136
 - workgroup 137
- Network setup
 - Ethernet 64
 - wireless 67
- NTSC 129

O

- on-screen keyboard 34
- operating precautions 1
- operating system requirements 12
- Operation
 - auto play 139
 - sync from network folder 139
 - synchronize from USB storage 139

P

- package contents 12
- PAL 129
- Pandora 108
 - bookmarking a song or artist 113
 - providing song feedback 112
 - QuickMix 112
 - signing in 109
 - stations 110

- why a song is in my station's
playlist 113

Photo settings

- photo scaling 135
- slideshow interval time 135
- slideshow sequence 135
- slideshow transition 135

Photos

- browser display 136
 - list mode 134, 136
 - thumbnail mode 134, 136
- digital camera support 57
- display options 58
- folder view 56
- information panel 60
- media library compilation categories 32
- menu options 57
- pan options 59
- rotate 58
- set as background 59
- sort & filter 56
- supported formats 8
- view 55
- zoom options 59

Play To 7

playlist

- supported formats 8
- videos, playback 37, 49

podcasts 101

power

- AC connector 9
- cable connection 13
- global AC adapter configurations 13
- LED indicator 10
- power button 25, 26
- turn on 19, 20, 21

power button 10

product

- accessories 4
- obtaining service 157
- overview 5
- recording information 3
- registration 3
- regulatory compliance 155
- safety information 1
- warranty 157

R

- register your media center 140
- regulatory compliance 155
 - environmental compliance (China) 157

- remote control 11
- remote controller 11
 - buttons and functions 25
 - delete music preset 139
 - layout 11
 - settings 138
 - troubleshooting 148
 - virtual 72
 - Web UI 72
- repeat mode
 - music 53
- reset switch 9
- reset to factory defaults 140
- restart device 141
- RoHS 157
- S**
- screensaver
 - delay 132
 - style 132
- Search function
 - button 25, 27
 - procedure 33
- Services
 - add to Favorites 77
- settings
 - apply new values 128
 - Audio/Video menu 128
 - network 136
 - System menu 136
- Setup 127
 - About screen 141
 - additional encoding support 140
 - appearance 130
 - audio/video output 128
 - background 131
 - device registration 140
 - device restart 141
 - disk manager 140
 - language 130
 - media library 140
 - music settings 133
 - navigation buttons 128
 - photo settings 135
 - remote controller settings 138
 - reset to factory defaults 140
 - screensaver delay 132
 - screensaver style 132
 - select time zone 139
 - setup menu bar 127
 - setup screen navigation 128

- theme 130
- video calibration 130
- video settings 132
- setup 127
- slideshow
 - interval time 135
 - music background 61
 - playback controls 61
 - sequence setting 135
 - shuffle and repeat 135
 - transition 135
 - troubleshooting 146
 - view 60
- Software, GPL 158
- subtitle
 - adjust 43
 - border setting 133
 - default setting 133
 - enable 43
 - font size setting 133
 - supported formats 8
- sync
 - from network folder 139
 - from USB storage 139
- system compatibility 12
- system reset
 - service accounts 140
 - system 140

- T**
- temperature display 79
- theme 130
- thumbnail support for media files 32
- time
 - setting 139
- Toslink
 - connectors 9
- troubleshooting 146
 - audio 147
 - content playback 149
 - display 146
 - error messages 149
 - firmware upgrade 148
 - media library compilation 149
 - remote control 148
 - USB device 147
- TwonkyMedia 73

- U**
- USB device
 - connection 23

- disconnection 24
- Eject button 26, 27
- error messages 149
- media library 142
- media library compilation 30
- removal 24
- supported devices 9
- troubleshooting 147
- USB ports 9

V

Video

- menu options 38

video output

- component 129
- composite 128

Video settings

- browser display 133
- HDMI deep color mode 129
- subtitle border 133
- subtitle default 133
- subtitle font size 133
- video sequence 133

Videos

- aspect ratio 129
- audio channel 44
- auto play 139
- browser display
 - grid view 133
 - list view 133
 - preview view 133
- DVD navigation 46
- folder view 37
- information panel 45
- media library compilation categories 32
- pan options 44
- playback controls 41
- playback options 42
- playback procedures 36
- repeat mode 46
- settings 132
- sort & filter 37
- subtitles 43
- supported formats 8
- video calibration 130
- video output setting 128
- view chapter 42
- zoom options 44

videos

- supported resolutions 8

W

- warranty information 157

weather 77

- change temperature display 79

Web UI 71

- launching 71

- logout 75

- status bar 75

- support 74

- system 72

- TwonkyMedia 73

- widescreen setup 130

Windows 7

- Play To 7

- wireless network setup 67

Y

YouTube 114

- adding videos to a playlist 124

- adding videos to favorites 124

- deleting an account from the media player 125

- encoding support 125

- featured videos 118

- like or dislike videos 123

- most popular 119

- most viewed 119

- my account 115

- options 120

- player 122

- preferences 121

- related videos 123

- restricted video content 125

- search history 117

- searching for videos 116

- signing in 114

- top favorites 118

- top rated 120

Z

zoom options

- photos 58, 59

- videos 44