

folder view
music 49
photos 56
videos 37

G

GNU general public license 158
GPL software 158

H

HD media player
error messages 149
HDMI
connection 19
connectors 9
Home
button 25, 26
error messages 149
Music 48
overview 28
Photos 55
screen navigation 29
Setup 127
Videos 36
Home Theater
connection 22

I

I/O connectors
composite AV 9
HDMI 9
Toslink 9
USB ports 9
information panel
music 52
photo 60
videos 45
installation
composite AV connection 21
HDMI connection 19, 22
power connection 13, 19, 20, 21
procedures 13
requirements 12
USB connection 23
iTunes server 137

K

keyboard 34

L

language setup 130

LED indicators 10

power 10

Live365 93

adding a station to your preset list 98

exit 100

getting track information 99

listening 95

providing song feedback 99

removing a station from your preset
list 99

searching 98

sign in 93

signing out 99

locating media content

manual search 32

Search function 33

M

maintenance

system 144

media library

clear 31

exemptions 142

media library compilation

categories 31

enable 31

error messages 149

exemptions 31

overview 30, 142

Mediafly 101

browse content plug-ins 104

deleting an account 105

exit 106

my channels 102

player 103

player options 103

popular channels 103

search 105

signing in 101

menus overview 7

Music

audio track display 134

auto play 139

background music info panel 134

browser display 134

folder view 49

media library compilation categories 31

menu options 50

playback controls 51

playback options 52

playback procedures 48

- remote control 11
- remote controller 11
 - buttons and functions 25
 - delete music preset 139
 - layout 11
 - settings 138
 - troubleshooting 148
 - virtual 72
 - Web UI 72
- repeat mode
 - music 53
- reset switch 9
- reset to factory defaults 140
- restart device 141
- RoHS 157
- S**
- screensaver
 - delay 132
 - style 132
- Search function
 - button 25, 27
 - procedure 33
- Services
 - add to Favorites 77
- settings
 - apply new values 128
 - Audio/Video menu 128
 - network 136
 - System menu 136
- Setup 127
 - About screen 141
 - additional encoding support 140
 - appearance 130
 - audio/video output 128
 - background 131
 - device registration 140
 - device restart 141
 - disk manager 140
 - language 130
 - media library 140
 - music settings 133
 - navigation buttons 128
 - photo settings 135
 - remote controller settings 138
 - reset to factory defaults 140
 - screensaver delay 132
 - screensaver style 132
 - select time zone 139
 - setup menu bar 127
 - setup screen navigation 128

- theme 130
- video calibration 130
- video settings 132
- setup 127
- slideshow
 - interval time 135
 - music background 61
 - playback controls 61
 - sequence setting 135
 - shuffle and repeat 135
 - transition 135
 - troubleshooting 146
 - view 60
- Software, GPL 158
- subtitle
 - adjust 43
 - border setting 133
 - default setting 133
 - enable 43
 - font size setting 133
 - supported formats 8
- sync
 - from network folder 139
 - from USB storage 139
- system compatibility 12
- system reset
 - service accounts 140
 - system 140

- T**
- temperature display 79
- theme 130
- thumbnail support for media files 32
- time
 - setting 139
- Toslink
 - connectors 9
- troubleshooting 146
 - audio 147
 - content playback 149
 - display 146
 - error messages 149
 - firmware upgrade 148
 - media library compilation 149
 - remote control 148
 - USB device 147
- TwonkyMedia 73

- U**
- USB device
 - connection 23

- disconnection 24
- Eject button 26, 27
- error messages 149
- media library 142
- media library compilation 30
- removal 24
- supported devices 9
- troubleshooting 147
- USB ports 9

V

Video

- menu options 38

video output

- component 129
- composite 128

Video settings

- browser display 133
- HDMI deep color mode 129
- subtitle border 133
- subtitle default 133
- subtitle font size 133
- video sequence 133

Videos

- aspect ratio 129
- audio channel 44
- auto play 139
- browser display
 - grid view 133
 - list view 133
 - preview view 133
- DVD navigation 46
- folder view 37
- information panel 45
- media library compilation categories 32
- pan options 44
- playback controls 41
- playback options 42
- playback procedures 36
- repeat mode 46
- settings 132
- sort & filter 37
- subtitles 43
- supported formats 8
- video calibration 130
- video output setting 128
- view chapter 42
- zoom options 44

videos

- supported resolutions 8

W

- warranty information 157
- weather 77
 - change temperature display 79
- Web UI 71
 - launching 71
 - logout 75
 - status bar 75
 - support 74
 - system 72
 - TwonkyMedia 73
- widescreen setup 130
- Windows 7
 - Play To 7
- wireless network setup 67

Y

YouTube 114

- adding videos to a playlist 124
- adding videos to favorites 124
- deleting an account from the media
 - player 125
- encoding support 125
- featured videos 118
- like or dislike videos 123
- most popular 119
- most viewed 119
- my account 115
- options 120
- player 122
- preferences 121
- related videos 123
- restricted video content 125
- search history 117
- searching for videos 116
- signing in 114
- top favorites 118
- top rated 120

Z

zoom options

- photos 58, 59
- videos 44