

- Call Log view 52
- call waiting 49
- caller ID
 - photos 98, 142
 - ringtones 143
- calls
 - barring 52
 - conference 50
 - methods of dialing 41–43
 - receiving 44
 - See also active calls
 - viewing minutes usage for 52
 - volume, adjusting 141
- camera
 - customizing settings 94
 - solving problems with 182
- card readers 113
- Category list 106
- caution regarding magnet 10
- charge indicators 40
- chatting 80
- choosing music 116
- color, system 146
- color-coding appointments 103
- command buttons, accessing 22
- components of Treo 650 3, 7
- computers
 - synchronizing with 33
 - transferring music from 113
- conference calls 50
- connecting
 - to trusted devices 58
 - to VPNs 157
 - to Web 83
 - with Bluetooth® 58
- contacts
 - dialing calls by contact names 41
 - looking up 123
 - managing 98–100
 - synchronizing 33

- viewing list details from phone 42
- Cookies preference 89
- current event, displaying in Main View of Phone 40
- customizing
 - alarms 111
 - appearance 145–146
 - applications settings 147
 - button settings 148
 - calendar display 105
 - camera settings 94
 - date and time settings 149
 - display 145–146
 - email setting with VersaMail 70
 - favorite buttons 55
 - messaging settings 80
 - phone settings 140–143
 - power preferences 151
 - system sound settings 144
 - tasks 111
 - Web browser settings 88

D

- data
 - receiving over Bluetooth® 61
 - sending over Bluetooth® 60
 - synchronizing 33
- date
 - preferences 149
 - setting 119
- Day View option 106
- decimal values 122
- Default View pick list 105
- deleting
 - favorite buttons 55
 - messages with VersaMail 69
 - photos 94
 - songs 118
- Device name field 58

- devices, naming 58
- devices, trusted 60
- Dial Pad 41
- Dialup Networking 59
- disclaimer 2
- Discoverable setting 58
- display, customizing 145–146
- displaying
 - calendar 106
 - decimal values 122
 - tasks 105, 110
 - unread messages 105
- downloading web files 86

E

- echoes 186
- Edit Favorites Pages command 53
- editing
 - favorite buttons 55
 - playlists 118
- email
 - problems with, solving 177–180
 - settings 70
 - unread messages 40
 - viewing unread messages for 105
- Enable Background Playback check box 117
- ending active calls 47
- engineering notation 122
- entries, private 155–156
- errors, system 184
- events. See calendar
- exchanging information 33
- expansion cards
 - and photos or videos 93
 - applications on 136
 - audio files, transferring to 113
 - pictures, moving to 93
 - using 134–137
 - viewing information about 137

F

- fade setting 105
- favorite buttons
 - defining 53–54
 - dialing calls with 42
- features
 - monitoring on Phone screen 39–40
 - of Treo 650 8–10
- finding information 123
- 5-way navigator, using 20
- font, screen 145
- formats, audio files 113
- forwarding
 - calls 50–51
 - messages with VersaMail 68
- freeing memory 89
- freezing during soft reset 164

G

- Glossary 187

H

- handset, charging 40
- hanging up phone 47
- hard reset 165
- headset
 - phone 56
 - specifications 57
- help 159
- highlighting items 21
- History list in Web browser 87
- HotSync, solving problems with 172–176

I

- Image option 98
- images, moving 93

information

- expansion cards, viewing 137
- finding 123
- locking 152–158
- synchronizing 33
- updating 33
- installation problems, solving 163
- installing applications 130–131
- internal memory, freeing up 185
- items
 - highlighting 21
 - selecting or activating 22
- items needed to use Treo 650 6
- iTunes 114

K

- keyboard
 - dialing calls from 41
 - overview 24–25
- Keyguard 152

L

- liability 2
- links, using in messaging 78
- listening to music 113
- lists, scrolling 21
- Location field 104
- locking phone and information 152–158
- Lookup feature 123
- low lighting conditions 24
- lowercase letters 25

M

- Macs, listening to music on 114
- magnet, caution 10
- managing
 - active calls 46–52

messaging 79

- tasks 108–111
- media formats 113
- memory, freeing up 185
- memos 112
- menu features, selecting 23
- messages
 - creating 65, 75
 - dialing calls from 42
 - displaying unread email 105
 - managing with VersaMail 69–70
 - setting preferences with VersaMail 72
 - signatures with VersaMail 73
 - VersaMail 67
- messaging
 - alert tones 82
 - chatting 80
 - links, using 78
 - messages, managing 79
 - messages, receiving 77
 - multimedia, creating and sending 75
 - multimedia, playing 78
 - settings, customizing 80
 - text, creating and sending 74
 - using 74–82
- Microsoft Exchange ActiveSync and VersaMail 73
- Microsoft Outlook, applications that synchronize 33
- Month View 106
- moving pictures 93
- MP3 files 113
- multimedia
 - messages 75
 - playing or viewing 78
- multimedia messaging. See messaging
- MultiMediaCard 134
- music
 - changing playlists for 118
 - details, viewing 116

- files 113
- formats 113
- listening to 113
- playing during call 44
- playing on Treo 650 116
- playlists 117–118
- selecting 116
- stopping 117
- storing 113
- transferring from CD 114
- transferring from computer 113
- volume, adjusting 141

N

- naming devices 58
- navigating screen 20
- network connection, problems with 168–171
- No Service message 16
- notification of voicemail 45
- number recently called, redialing 43
- numbers
 - displaying as decimals 122
 - entering from keyboard 25
 - rounding 122

O

- opening applications 28
- operating systems 30
- Option Lock 25
- overdue tasks 105, 110
- overview of document 4
- Owner Preferences 155

P

- Palm OS features independent of wireless features 15
- password lock, system 154

- pausing video recording and playback 91
- pending alerts 39, 45, 77

- personal computers

- synchronizing with 33
 - transferring music from 113

- phone

- adjusting call volume 17
 - advanced features 49–52
 - answering 44
 - before using 16
 - checking your phone number 17
 - hanging up 47
 - locking 152–158
 - redialing 16
 - settings, customizing 140–143
 - using 16
 - viewing minutes usage for 52

- Phone application

- accessing 38
 - Bluetooth® icon 39
 - email messages, unread 40
 - monitoring status of features 39–40

- phone headset 56

- Phone Lock 153

- phone numbers

- checking yours 17
 - pasting into Dial Pad View 41
 - saving 48

- photos

- caller ID 142
 - deleting 94
 - naming groups of 95
 - on phone without camera 90
 - organizing 94
 - saving 90
 - selecting as backgrounds 105
 - sending 93
 - taking 90
 - thumbnails 105
 - VersaMail 66

- viewing on computer 96

- viewing on phone 92

- pick lists 23

- Picture size option 95

- playing multimedia messages 78

- playlists

- creating 117
 - deleting songs from 118
 - reordering music on 118
 - selecting music from 116

- power preferences 151

- private entries 155–156

Q

- Quick Install icon 114, 131

R

- RealOne Mobile Player 113

- RealPlayer

- getting help with 114
 - icon 115, 116

- receiving

- calls 44
 - information over Bluetooth® 61
 - messages with VersaMail 67
 - messaging 77

- recharging handset 40

- recording time (actual) 91

- redialing phone 16, 43

- removing

- applications 132
 - songs from playlists 118

- repeating events, displaying 106

- replacing battery 166

- replying to messages with VersaMail 68

- required items to set up Treo 650 6

- resetting 164

- resolution of photos and videos 90, 182

- resolution pick list 90, 91
- retrieving voicemail 45
- reverse type 22
- ringer
 - adjusting volume 141
 - silencing 44
- ringer switch
 - setting 144
- ringtones
 - caller ID 143
 - selecting 140
 - VersaMail 66

S

- safe reset 164
- Save as Wallpaper command 94
- saving
 - phone numbers 48
 - photos 90
 - videos 91
- scientific calculator 122
- screen
 - adding photos as background 105
 - aligning 146
 - brightness 145
 - font, changing 145
 - moving around 20
 - problems with, solving 167
 - waking up 15
- scrolling through screens 20
- SD expansion cards
 - and warranty 7
 - using 134
- SDIO (Secure Digital input/output) cards 134
- searching 123
- secure sites
 - in Web browser 88
 - problems accessing 181
- security features 152–158

- security password 157
- selecting
 - alert volume 141
 - items 22
 - menu features 23
 - music 116
 - ringtones and alerts 140
 - wallpaper for Phone application 143
- sending
 - applications over Bluetooth® 61
 - information over Bluetooth® 60
 - multimedia messages 75
 - photos 93
 - text messages 74
 - videos 93
- setting
 - date and time 119
 - vibrate 141
- setting up
 - VersaMail 62
 - VersaMail account on computer 63
 - VersaMail account on phone 64
 - voicemail 45
- settings, messaging 80
- signal strength display 39
- silencing ringer 44
- SIM (subscriber identity module) card
 - inserting and using 14
 - required 6
- SIM Phonebook, viewing 100
- slide shows, viewing 92
- soft reset 164
- software, bonus 7
- Song Details command 116
- songlists. *See* playlists
- sound settings, system 144
- sounds 111
- Sounds icon 107, 140
- specifications
 - headset 57

- Treo 650 199
- speed dial, creating favorite buttons 54
- Start Time and End Time preference 106
- stopping music play 117
- storing MP3 files 113
- switching accounts in VersaMail 70
- switching from Bluetooth® headset to earpiece 47
- symbols
 - and accented characters 25–27
 - entering from keyboard 25
- synchronization
 - discussed 33
 - preparing for 30
 - problems with, solving 172–176
 - software, installing 32
- system
 - errors 184
 - password lock 154
 - profiles 30
 - requirements 30
 - resetting 164
- system requirements 30
- system settings
 - color 146
 - sound and volume levels 144

T

- taking photos 90
- tasks
 - customizing 111
 - display options 110
 - displaying 105, 110
 - managing 108–111
 - overdue 105, 110
 - setting alarms for 111
 - setting preferences 111
- text messaging. *See* messaging
- text, viewing against photos 105

- third-party applications
 - and 5-way navigator 20
 - help with 131
 - problems with, solving 183
- thumbnails (photos) 105
- time
 - displaying recording 91
 - preferences 149
 - setting 119
- timed events 106
- touchscreen lockout 153
- transferring
 - audio files 113
 - data from another device 160
 - information 33
- Treo 650
 - features 8–10
 - turning on and off 15
- troubleshooting 159
- trusted pairs 60
- turning Treo 650 on and off 15

U

- unread email messages 40, 105
- untimed events 106
- updating information 33
- upgrading from another device 160
- uppercase letters 25
- USB HotSync cable 31
- using
 - expansion cards 134–137
 - voicemail 45

V

- VersaMail
 - accounts, switching between 70
 - alert tones 71
 - attachments 68

- Auto Sync, scheduling 71
- email settings, customizing 70
- files, attaching 66
- messages, creating and sending 65
- messages, managing 69–70, 72
- messages, receiving and replying 67
- Microsoft Exchange ActiveSync 73
- photos, attaching 66
- ringtones 66
- setting up on computer 63
- setting up on phone 64
- setup options 62
- signature, attaching to message 73
- transferring settings from other account 62
- using 62–73
- videos, attaching 66
- vibrate, setting 141
- video recording screen 91
- videos
 - jumping to specific sections 91
 - on phones without camera 90
 - organizing 94
 - pausing 91
 - saving 91
 - sending 93
 - VersaMail 66
 - viewing on computer 96
 - viewing on phone 92
- viewing
 - application information for 133
 - applications 29
 - events 106
 - lists 21
 - messages with VersaMail 67
 - multimedia message 78
 - photos and videos on phone 92
 - photos or videos on computer 96
 - tasks 105, 110
 - unread messages 105

- voice quality, problems with 186
- voicemail
 - sending ignored calls to 44
 - using 45
- volume levels, system 144
- volume of call, adjusting 17
- VPN, connecting to 157

W

- waking up screen 15
- wallpaper
 - accessing Dial Pad when using 41
 - for Phone application 143
 - saving photo as 94
- warm reset 164
- Warranty and SD cards 7
- Web browser
 - beaming from 125
 - bookmarks 85–86
 - customizing settings 88
 - downloading web files 86
 - faster browsing 87
 - History list 87
 - problems with, solving 181
 - secure websites 88
 - using 83–89
 - viewing web pages 83
 - web pages in 84, 85–86, 87
- web browsing problems, solving 181
- web pages
 - dialing calls from 42
 - in Web browser 83, 84, 85–86, 87
 - setting initial view for 88
- wireless features independent of Palm OS features 15
- World Clock 119

Specifications

Radio	<ul style="list-style-type: none"> • GSM 850/900/1800/1900 quad band world phone • GPRS class 10, class B; also supports CSD • EDGE up to 170kbps 	
Phone features	<ul style="list-style-type: none"> • Personal speakerphone • Hands-free headset jack (2.5 mm, 3-barrel connector) 	<ul style="list-style-type: none"> • Microphone mute option • TTY compatible • 6-way calling
Processor technology	<ul style="list-style-type: none"> • Intel PXA270 312MHz processor 	
Expansion	<ul style="list-style-type: none"> • SD/MultiMediaCard/SDIO card slot 	
Battery	<ul style="list-style-type: none"> • Rechargeable Lithium Ion • Removable for replacement 	<ul style="list-style-type: none"> • Up to 6 hours talk time • Up to 300 hours standby • 4 hours full charge time
Palm OS® version	<ul style="list-style-type: none"> • Palm OS 5.4 	
Camera (not included on all models)	<ul style="list-style-type: none"> • VGA resolution (640 x 480), 0.3 megapixel 	<ul style="list-style-type: none"> • Automatic light balance
Size	<ul style="list-style-type: none"> • 4.4 in x 2.3 in x 0.9 in (11.3 cm x 5.9 cm x 2.3 cm) with antenna 	
Weight	<ul style="list-style-type: none"> • 6.3 ounces (178 grams) 	
IR	<ul style="list-style-type: none"> • Yes 	
Display	<ul style="list-style-type: none"> • Touch-sensitive LCD screen (includes stylus) • 65,536 colors (16-bit color) 	<ul style="list-style-type: none"> • User-adjustable brightness
Keyboard	<ul style="list-style-type: none"> • Built-in QWERTY keyboard plus 5-way navigator • Backlight for low lighting conditions 	

Specifications

Included software	<ul style="list-style-type: none"> • Phone (including Palm OS Contacts, Favorites, Dial Pad) • Camera • Messaging (text and multimedia) • Web browser (Internet) • VersaMail® • Calendar 	<ul style="list-style-type: none"> • Memos • Tasks • Calculator Basic and Advanced • Palm® Desktop software and HotSync® Manager • World Clock
System requirements	<ul style="list-style-type: none"> • Windows 2000 or XP with USB port • Mac OS 10.2 –10.3 with USB port 	<ul style="list-style-type: none"> • Later versions may also be supported
Operating and storage temperature range	<ul style="list-style-type: none"> • 32°F to 104°F (0°C to 40°C) • 5% to 90% RH 	