



Office of Engineering and Technology

[FCC](#) > [FCC E-filing](#) > [EAS](#) > List Exhibits Page

[FCC Site Map](#)
[OET Home Page](#)

Filing Options

[Grantee Registration](#)
[Modify Grantee Information](#)
[Reply to Grantee Name
Change Correspondence](#)
[Test Firm Accrediting Body
Login](#)
[Return to 159 / Pay for a
Grantee registration](#)

Reports

[Pending Application Status](#)
[Authorization Search](#)
[Grantee Search](#)
[Pending Grantee Search](#)
[TCB Search](#)
[Test Firms](#)
[Test Firm Accrediting Bodies](#)
[Equipment Class/Rule Part List](#)

Miscellaneous

[Get FRN](#)
[Knowledge Database](#)
[Hearing Aid Compatibility
Status Reporting](#)
[Measurement Procedures](#)

OET Exhibits List

19 Matches found for FCC ID PY77130501

<u>View Attachment</u>	<u>Exhibit Type</u>	<u>Date Submitted to FCC</u>	<u>Display Type</u>	<u>Date Available</u>
Exhibit 2 IMEI Security	Attestation Statements	07/13/2002	pdf	10/15/2002
Exhibit 13 Request for Confidentiality	Cover Letter(s)	07/13/2002	pdf	10/15/2002
Exhibit 13 Power of Attorney	Cover Letter(s)	07/13/2002	pdf	10/15/2002
Request for Deferring Grant	Cover Letter(s)	07/13/2002	pdf	10/15/2002
Exhibit 3 External photos	External Photos	07/13/2002	pdf	10/15/2002
Exhibit 1 Label	ID Label/Location Info	07/13/2002	pdf	10/15/2002
Exhibit 1 Revised Label	ID Label/Location Info	07/18/2002	pdf	10/15/2002
Exhibit 9 Internal Photograph	Internal Photos	07/13/2002	pdf	10/15/2002
Exhibit 9 Antennas	Internal Photos	09/06/2002	pdf	10/15/2002
Exhibit 11 SAR Report	RF Exposure Info	07/13/2002	pdf	10/15/2002
Exhibit 11 Additional SAR	RF Exposure Info	07/13/2002	pdf	10/15/2002
Response to correspondence 23660	RF Exposure Info	09/06/2002	pdf	10/15/2002
Exhibit 11 SAR leaflet	RF Exposure Info	09/06/2002	pdf	10/15/2002
Exhibit 11 SAR additional Plots	RF Exposure Info	09/06/2002	pdf	10/15/2002
Exhibit 11 SAR vs Power	RF Exposure Info	09/06/2002	pdf	10/15/2002
Exhibit 6 Test Report	Test Report	07/13/2002	pdf	10/15/2002
Exhibit 7 Test Setup	Test Setup Photos	07/13/2002	pdf	10/15/2002
Exhibit 8 New User Manual Part 1	Users Manual	09/06/2002	pdf	10/15/2002
Exhibit 8 New User Manual Part 2	Users Manual	09/06/2002	pdf	10/15/2002

Please use the Submit Inquiry link at www.fcc.gov/labhelp to send any comments or suggestions for this site

Federal Communications Commission
45 L Street NE
Washington, DC 20554
[More FCC Contact Information...](#)

Phone: 888-CALL-FCC (225-5322)
TTY: 888-TELL-FCC (835-5322)
Fax: 202-418-0232
E-mail: fccinfo@fcc.gov

- [Privacy Policy](#)
- [Web Policies & Notices](#)
- [Customer Service Standards](#)
- [Freedom of Information Act](#)

P800

User's manual

Preliminary

Sony Ericsson P800

User's Manual

First edition (September 2002)

This manual is published by Sony Ericsson Mobile Communications AB, without any warranty. Improvements and changes to this manual necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Ericsson Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this manual.

©Sony Ericsson Mobile Communications AB, 2002. All rights reserved.

Publication number:

User's Manual

EN/LZT 108 6039 P1A

The Bluetooth trademarks are owned by Bluetooth SIG, Inc.

Symbian and all Symbian-based marks and logos are trademarks of Symbian Limited.

“Memory Stick” is a trademark of Sony Corporation.

Beatnik is a trademark of Beatnik, Inc.

Java and all Java based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

Other product and company names mentioned herein may be the trademarks of their respective owners.

Copyright © SyncML initiative Ltd. (1999-2002). All rights reserved.

Men In Black 2™ ©(2002) Columbia Pictures Industries, Inc. All rights reserved.

This product contains software copyright © Beatnik, Inc. 1996-2002. The user is granted non-exclusive, non-sublicensable rights to use a single copy of the Licensed Software solely in conjunction with the Licensee Product [i.e. the P800]. The user may not alter, transfer, modify, incorporate into or with other software or create a derivative work of any part of the Licensed Software. No ownership rights to the Licensed Software and Documentation are transferred to the user. The user may not use the Licensed Software otherwise than as a part of the equipment or software in which the Licensed Software has been incorporated or for which they have been delivered. The user may not remove any proprietary, copyrights, trade secret or warning legend from the Licensed Software or Documentation or copies thereof. The user may not copy any Licensed Software, except for archival purposes. The user may not decompile or reverse engineer Licensed Software except to the extent permitted by compulsory law. The user may not furnish

any Licensed Programs or Documentation into any country in violation of the end-user license agreement for Sun™ Java™ J2ME™:

1. Restrictions: Software is confidential copyrighted information of Sun and title to all copies is retained by Sun and/or its licensors. Customer shall not modify, decompile, disassemble, decrypt, extract, or otherwise reverse engineer Software. Software may not be leased, assigned, or sublicensed, in whole or in part.

2. Export Regulations: Software, including technical data, is subject to U.S. export control laws, including the U.S. Export Administration Act and its associated regulations, and may be subject to export or import regulations in other countries. Customer agrees to comply strictly with all such regulations and acknowledges that it has the responsibility to obtain licenses to export, re-export, or import Software. Software may not be downloaded, or otherwise exported or re-exported (i) into, or to a national or resident of, Cuba, Iraq, Iran, North Korea, Libya, Sudan, Syria (as such listing may be revised from time to time) or any country to which the U.S. has embargoed goods; or (ii) to anyone on the U.S. Treasury Department's list of Specially Designated Nations or the U.S. Commerce Department's Table of Denial Orders.

3. Restricted Rights: Use, duplication or disclosure by the United States government is subject to the restrictions as set forth in the Rights in Technical Data and Computer Software

Clauses in DFARS 252.227-7013(c) (1) (ii) and FAR 52.227-19(c) (2) as applicable.

Any rights not expressly granted herein are reserved.

Note *Some of the services in this manual are not supported by all networks. This also applies to the GSM International Emergency Number 112. Please contact your network operator or service provider if you are in doubt whether you can use a particular service or not.*

Important

Your mobile phone has the capability to load, store and forward additional content, e.g. ring tone melodies. The use of such content may be restricted or prohibited by rights of third parties, including but not limited to restriction under applicable copyright laws. You, and not Sony Ericsson, are entirely responsible for additional content that you download to or forward from your mobile phone. Prior to your use of any additional content, please verify that your intended use is properly licensed or is otherwise authorised. Sony Ericsson does not guarantee the accuracy, integrity or quality of any additional content or any other third party content. Under no circumstances will Sony Ericsson be liable in any way for your improper use of additional content or other third party content.

Preliminary

Contents

Overview	6
Getting started	7
General functions	18
Phone	36
Contacts	50
Messages	59
Internet	70
Calendar	79
Tasks	83
Jotter	86
Games	89
Voice memo	92
CommuniCam and Pictures	94
Audio player	99
Video player	104
Viewer	108

Online services	114
Time	116
Calculator	120
Personalizing your P800	121
Control panel	124
Installing applications	147
Connecting to other devices	150
Synchronization and backup	154
Getting started with Internet and Messages	159
Troubleshooting	168
Guidelines for safe and efficient use	172
Terms and definitions	179
Technical data	187

Preliminary

Preliminary Overview

You have bought a very advanced smartphone. To learn to use the features, you should start by reading *Getting started*.

The P800 is a full-featured mobile phone, fully integrated with the other functions of the device, including third party applications. Like a computer, the P800 has a flexible and simple way of organizing applications and data. The built-in memory is available for photos, music, messages or applications. When space becomes limited, you can move files to a Memory Stick. You can also send data to another P800, e-mail, upload it to a website, or transfer it to a PC.

The P800 includes useful features such as:

- Audio player
- Contacts
- Personalized ring signals
- Picture phone book
- Voice dialling and voice answer
- Office handsfree
- Flight mode PDA use
- Games
- CommuniCam
- Video player



The complete P800 documentation consists of the following parts:


- User's manual.
- Help texts in the P800.
- Complementary information on the Internet, refer to www.sonyericsson.com.
- Information on the PC suite and Multimedia CD's.

This manual contains the following information:

- What you need to know to get started using your P800.
- A presentation of the P800's general functions.
- A detailed description of each application in the P800.
- How to personalize and set up the functions of the P800, and how to install applications.
- How to connect the P800 to other devices, and synchronize its data.
- How to set up the browser and messaging functions.
- How to solve problems that might occur during use.
- Guidelines for safe and efficient use.
- Description of terms and abbreviations used in the manual.
- Important technical information.

Getting started

The P800 package

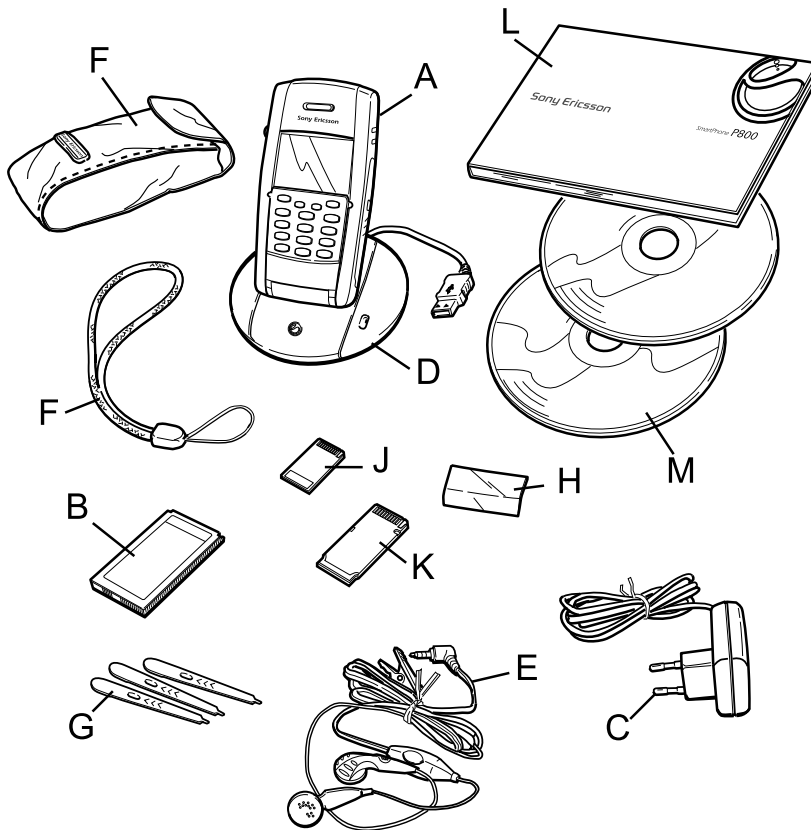

A P800 with stylus

B Battery

C Travel charger

D Syncstation with USB cable

E Stereo headset

F Protective bag and strap

G 3 extra styli

H Cover - flip replacement

J Memory Stick Duo

K Memory Stick Duo adapter

L User's Manual package

M 2 CDs, PC Suite for P800 and Multimedia for P800

Note If your package does not include all the listed items above, please contact your retailer.


Note Before you can use your P800 you need to insert the SIM card, and insert and charge the battery. Always detach the charger and turn off the phone before you insert or remove the SIM card.

Preliminary

P800 outline




- A** Connector for stereo headphones
- B** Jog Dial for navigating through menus and more
- C** Infrared port for communication
- D** On/Off button
- E** Flip with Keypad (in closed position)
- F** Connector for accessories

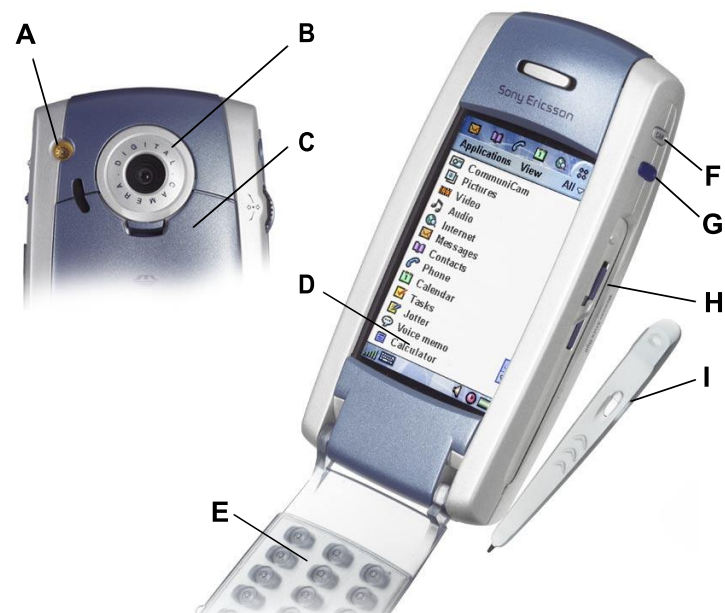

- A** External antenna connector (on the rear side)
- B** CommuniCam lens (on the rear side)
- C** Battery compartment (on the rear side)
- D** Touchscreen
- E** Flip (in open position)
- F** Shutter release for the CommuniCam
- G** Internet button for activation of the browser
- H** Slot for Sony Memory Stick Duo™ (under the stylus)
- I** Stylus for writing on the screen

Applications - Flip closed

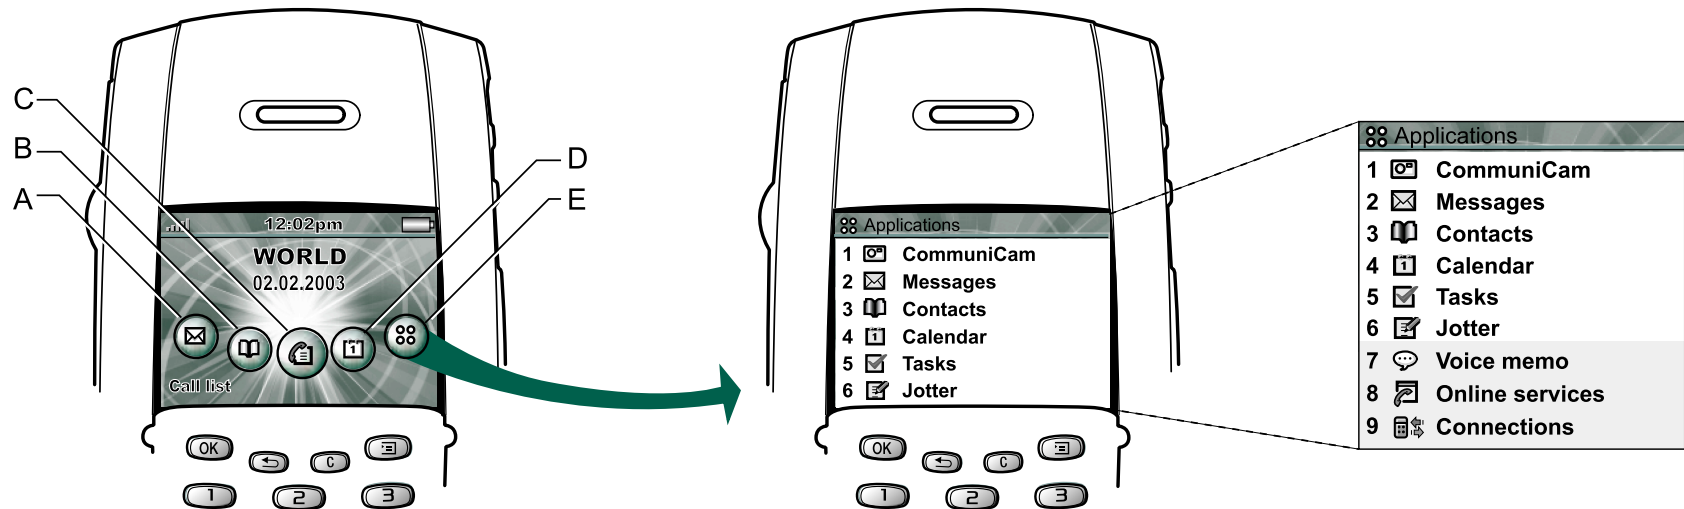

- A** Shortcut to the Messages application
- B** Shortcut to the Contacts application
- C** Shortcut to the Call list application
- D** Shortcut to the Calendar application
- E** Shows all Flip closed applications

The P800 works in different operational modes.

With the Keypad Flip closed, the P800 can be used like a conventional mobile telephone with the added benefit of the Jog Dial.


You can select between the four most important applications by rotating the Jog Dial. You start the selected application by pressing the Jog Dial inward or pressing the **OK** key.

If you select the Applications icon, all applications that can be used with the Flip closed are shown in a list. Rotate the Jog Dial to select an application, and press the Jog Dial or press the **OK** key to start the application.

At any time you can open the Flip to continue working in the more comprehensive flip open mode. Closing the flip generally ends an activity. (Multimedia will however continue playing.)

Preliminary

Applications - Flip open

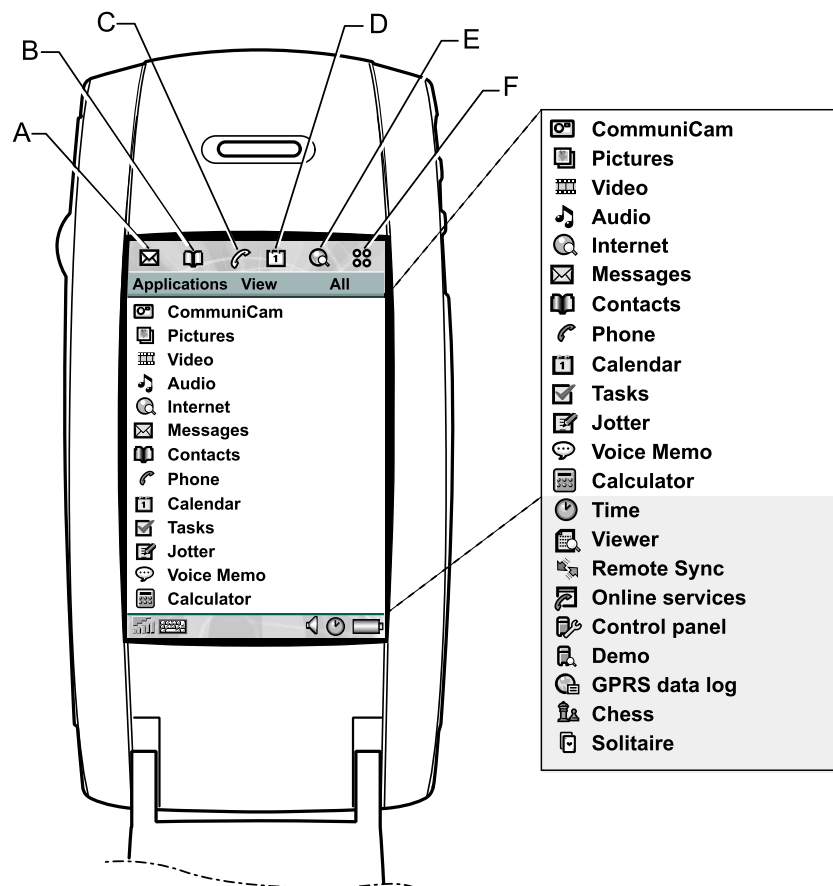

- A** Shortcut to the Messages application
- B** Shortcut to the Contacts application
- C** Shortcut to the Call list application
- D** Shortcut to the Calendar application
- E** Shortcut to the Internet application
- F** Shows all Flip open applications

When the Flip is opened, the large touch-screen is revealed. In this mode, the stylus can be used to navigate and enter data. The Jog Dial provides further navigation and selection capability.

Text can be entered using natural handwriting on the screen. An on-screen keyboard is also available at all times. Symbol and special character keyboards can be selected when required.

With the Flip open, you can select between the five most important applications, either by tapping the icon with the stylus, or by rotating and pressing the Jog Dial.


If you select the Applications icon, all applications are shown in a list. Tap the application with the stylus, or rotate and press the Jog Dial to start the application.

The Flip can also be removed. A virtual flip is then available, making it possible to work in both operational modes.

Jog Dial

<i>Action</i>	<i>Function</i>
Rotate the Jog Dial (up)	Scrolls up items in a list; Adjusts volume during a call; moves back a page when playing a multimedia message.
Rotate the Jog Dial (down)	Scrolls down items in a list; Adjusts volume during a call; moves forward a page when playing a multimedia message.
Press the Jog Dial (inward)	Flip closed: Generally the same as OK (select/action). Flip open: Selects a highlighted item. Dials selected phone number.
Press the Jog Dial (away)	Flip closed: This always has the same action as ↶ . Goes back to the previous screen, dismisses dialogues, and sends a busy signal to the calling party when you receive a call. It will not end a call. Flip open: Scrolls to the left across the main Application tabs at the top.

<i>Action</i>	<i>Function</i>
Press the Jog Dial (toward)	Flip closed: Always brings up the Options menu. Flip open: Scrolls to the right across the main Application tabs at the top.

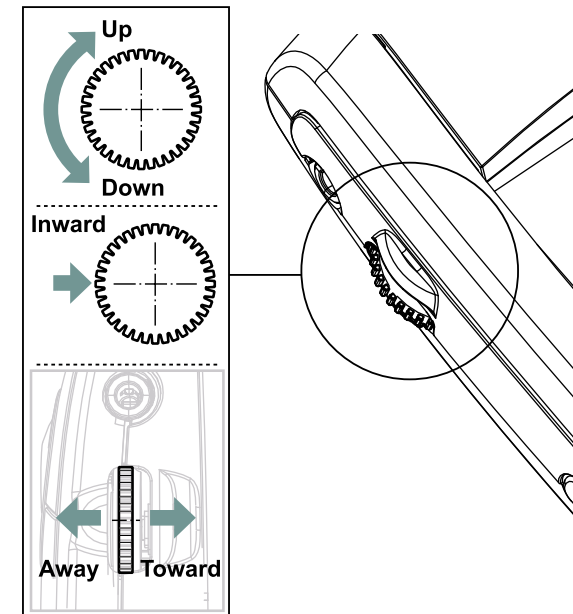

Preliminary

The SIM card

When you register as a subscriber with a network operator, you get a SIM (Subscriber Identity Module) card. The SIM card contains a computer chip that keeps track of your phone number, the services included in your subscription, and your phone book information, among other things.


A PIN (Personal Identity Number) code is supplied with the SIM card from your operator and must be entered when switching on your P800.

The SIM card is placed under the battery.

Tip You can also store SIM card data, such as contacts, in the phone's own memory. It is possible to export/import data between these media.

Battery

The battery that comes with your P800 may not be charged. You should charge the battery for at least 4 hours before you use it for the first time.

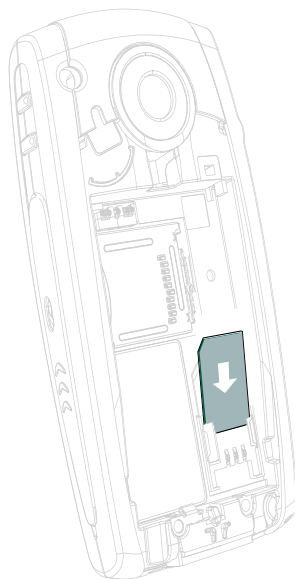

Should you need to discharge the battery, simply use your P800 as usual until the battery runs out of power.

Charge the battery by using the charger supplied with your P800. You can also use other battery chargers that have been supplied with other Ericsson mobile phones using the same connector plug, for example T28, R320s.

Warning! Avoid direct sunlight. Extremely high temperatures reduce the capacity of the battery permanently.

Battery insertion and removal


To insert the battery

1. Ensure that the flip is closed.
2. Place the battery into the battery compartment and close the lid.

To remove the battery

1. Ensure that your P800 is turned off.

Note It is important that you always turn off your P800 before removing the battery. Failure to do so can result in loss of information.

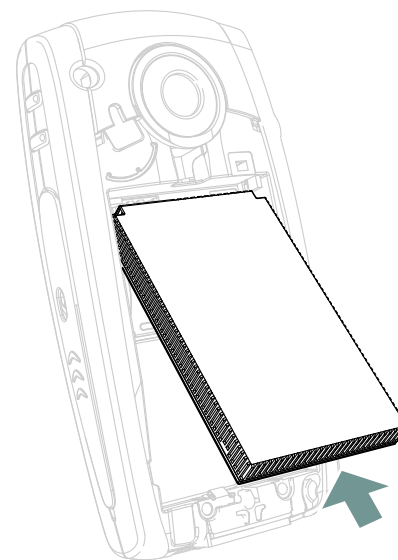

2. Remove the battery lid by pulling down the release catch.
3. Take out the battery.

Charging the battery

Warning! *The mains (power) supply plug may look different depending on the mains socket in your country. Do not connect the AC-plug-in unit to any other item than your Sony Ericsson Travel Charger or other compatible Sony Ericsson / Ericsson chargers with the same plug.*


- When the battery needs to be charged, a beep is heard, the indicator light (on the top of your P800) blinks red and a battery low message appears on the screen.
- The battery can be charged whenever you want without affecting its performance. However, using your P800 while charging lengthens the charging time.

To charge the battery

The P800 can be charged either switched on or off.

1. Make sure the battery is attached to your P800 and the lid is closed.

2. Connect the charger to the P800 at the flash symbol on the P800's connector. The flash symbol on the charger plug must face upwards.

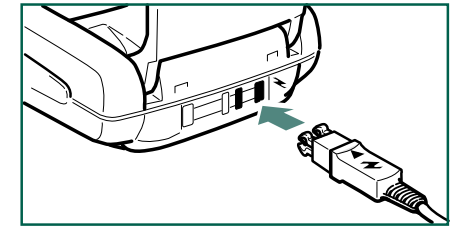


Warning! *If the guidance-pins on the charger plug are damaged, do not try to connect the charger. If you do, you might damage the P800.*

3. Connect the charger to the mains

Charging is indicated by the battery meter on the screen pulsing continuously, and the indicator on top of the P800, showing a steady red light (or green, if the P800 is turned on).

Note *When the battery is completely discharged, or new, it may take up to 30 minutes before the battery charging icon appears in the screen.*

4. Wait approximately 4 hours or until the battery meter on the screen is full and the indicator on the top of the P800 shows a steady green light.
5. Remove the charger by tilting the plug upwards.

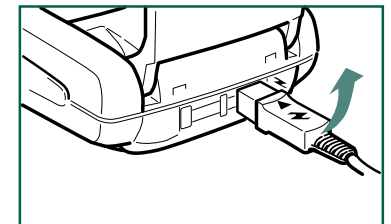

Preliminary

Memory Stick Duo


With the Sony Memory Stick Duo™ you can easily save still images, music, voice and computer data and applications. If your phone memory runs low, you can transfer the content from the phone memory to the Memory Stick Duo. You can then move the Memory Stick Duo to another P800 to share the information.

When your P800 is connected to a PC, you can use the P800 to read from and write to a Memory Stick Duo.

For more information on how to move data to and from the Memory Stick, refer to “*Folders*” on page 18.

To insert the Memory Stick Duo

1. Remove the stylus by pushing it upwards.
2. Insert the Memory Stick Duo in the slot, with the connector side facing you (see picture).
Make sure it is securely inserted. A click should be heard.

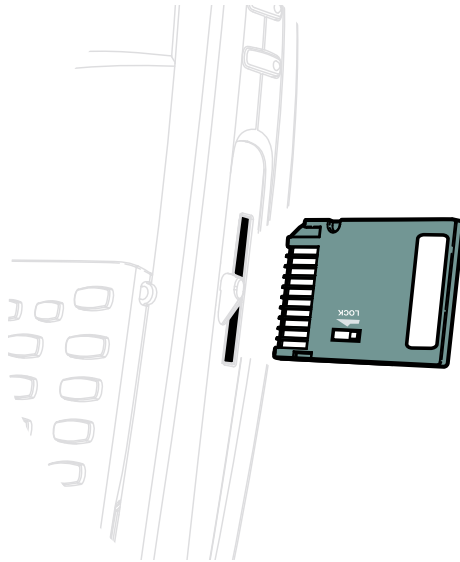

Warning! *Improper insertion may damage your P800 and the Memory Stick Duo.*

To remove the Memory Stick Duo

1. Remove the stylus.
2. Press the edge of the Memory Stick Duo using your fingernail or the stylus to release it. You will hear a click as it is pushed out of the slot.

Note *Take care when removing the the Memory Stick Duo to avoid dropping it.*

Memory Stick Duo Adapter


Your P800 uses the shorter memory stick variant, Memory Stick Duo. Memory Stick Duo is around a third the size and half the weight of a regular sized Memory Stick

Use the Memory Stick Duo Adapter when using your Memory Stick Duo in a device (camera, MP3 player, for example) equipped with a regular sized Memory Stick. Insert your Memory Stick Duo according to the picture on the adapter.

Warning! *Do not insert a Memory Stick Duo adapter into a Memory Stick slot without Memory Stick Duo. This may damage the product. Please ensure that the adapter's connector side is inserted first.*

For more information about Sony Memory Sticks, visit www.memorystick.com.

Connecting the accessories

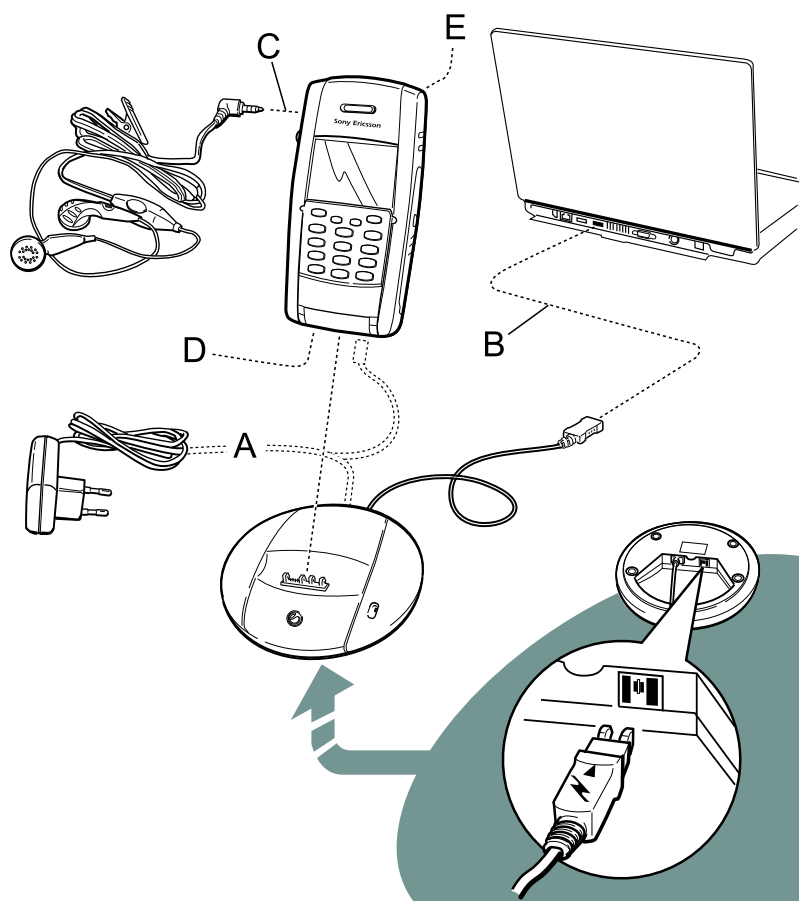

- A** The travel charger is connected to the desk stand or to the P800.
- B** The USB cable from the desk stand is connected to a PC.
- C** The headset is connected to the P800.
- D** Other accessories can be connected to the connector at the bottom.
- E** An external antenna can be connected to the connector at the rear.

The wrist strap is placed in the holder beneath the battery and routed out through the slot in the battery compartment lid.

Warning! If the guidance-pins on the charger plug are damaged, do not try to connect the charger. If you do, you might damage the P800.

Services

You need the following services to use the functions of the P800:

To use...	You need...
telephony	GSM subscription
text messaging (SMS)	GSM subscription
multimedia messaging (MMS)	MMS account, GSM data subscription
e-mail	e-mail account, GSM data subscription
Internet	Internet account, WAP account, GSM data subscription
data communication	GSM data subscription

Preliminary

Although the manual covers the modes of operation in detail, it is very important to remember that many of the functions described are dependent on them being available from your network operator and Internet service provider. Please consult your network operator and Internet service provider for more information about the services that are available to you.

Note *To keep track of the cost using data connections, a GPRS data log is available. See “GPRS - data logs” on page 166.*

First time start-up

1. Press the On/Off button to turn on your P800, keeping the flip closed.
2. Enter your PIN when the dialogue box appears and press , press  to delete a digit.

When the P800 is turned on for the first time, the **Setup Wizard** will be started automatically, and guide you through the essential settings. Follow the instructions on the screen.

The different steps in the Setup Wizard

1. You will be prompted to open the flip.
2. Information on the wizard.
3. Calibrating the screen.
4. Setting the location.
5. Setting date, time and formats.

6. More information about the Jog Dial, text entry and status bar.
7. Setup complete.

Demo application

The Demo application demonstrates some of the most common functions in your P800.

To start the Demo

1. Select the Applications icon .
2. Select the demo icon .
The demo is started.

To stop the Demo

- Tap the screen or rotate the Jog Dial to stop the demo. The demo is also stopped at:
 - An incoming call.
 - An incoming text or multimedia message.

Making and receiving calls

To make a call

- Enter the area code and phone number, and press the Jog Dial inward or press  to make the call.

To end a call

- Press the Jog Dial inward or press **OK** to end the call.

To receive a call

- Press the Jog Dial inward or press **OK** to answer an incoming call.

Care instructions

Your P800 is a highly sophisticated electronic device. To get the most out of it, please make sure that you follow this advice:

- Keep the P800 in its protective bag when not using it.
- Use a commercial glass screen cleaner sprayed on a cloth, when you clean the screen.
- Use only the stylus to tap on the screen.

See chapter “*Guidelines for safe and efficient use*” on page 172 for more information how to take care of your P800.

Preliminary

General functions

This chapter describes a number of general functions that are the same for many applications in your P800.

Icon views

The P800 can present the applications in two ways:

- List view (small icons appears in one column)
- Icon view (large icons in two columns)

Folders

On the right of the menu bar is the *folders menu*. Folders are used to organize user data, for example contacts, jotter entries, or task lists, into user definable sets.

Each application has its own set of folders: a folder created in one application is not visible in another.

In list view, the folder menu is used to organize your entries. In detail view, the folder menu allows you to change the folder of the current item.

Every item created in an application is always assigned to a single folder, by default the same folder as displayed in list (or detailed view). There are three recommended folders for most applications: **Unfiled**, **Personal**, and **Business**.

In list view, there is a super-folder called **All**, which, when selected, displays items from all folders. **All** is the default value in list views and when an application is first launched.

You can add folders or change the names of existing folders through the **Edit Folders** menu item. A folder can only be deleted if it is empty. Not all folders can be deleted.

You use folders to move items to and from the Memory Stick. When a Memory Stick is available in the P800, the folders on it are shown in the folders menu.

Common functions

Zooming

You can change the size of the screen fonts between Small, Medium or Large. From the menu bar, select **Edit > Zoom**.

Find

The Find function searches through all the items stored in an application. The standard **Find** dialogue contains a single text edit box with two buttons, **Find** and **Cancel**. Selecting **Find** starts the search, **Cancel** closes the **Find** dialogue.

In some applications, for example Messaging, Find may be more complicated:

- the size of each message is so large that you may want to restrict the search to the current message only.
- folders are potentially more significant, so you may want to restrict the search to the current folder only.

Sorting your files

You can sort the files you have stored in your P800. By sorting your files, you choose in which order you want the files to be displayed on the screen. You can choose between four different ways:

Type: The different file types are sorted together in the list.

Size: The largest file (size in kB) is displayed at the top of the list, and the smallest at the bottom of the list.

Date: The latest file you saved in your P800 is displayed at the top of the list.

Name: The files are displayed in alphabetical order, from top to bottom.

Note *Sort is not valid for all applications.*

General functions

Beaming

It is very convenient to be able to exchange data using infrared or Bluetooth™ wireless technology when “beaming” between two devices that support the exchange standards.

For example, one user selects an item in the Pictures application and then enters the menu **Pictures > Send as > IR**, and the two users align their devices.

The receiving user usually does not have to initiate anything provided that the infrared or Bluetooth wireless technology is enabled. As a precaution, however, the recipient does have the opportunity to accept or reject the item sent and has the option to view it after saving.

Save saves the item into the destination application and then optionally opens the application to show the item just saved.

Methods for storing data

Your P800 can store data in three different ways:

- SIM card (Only for phone numbers and associated names). See “*Managing the SIM phone book*” on page 56.
- Phone memory (12 MB of capacity for storing pictures, messages, music, applications and so on).
- Memory Stick (Expansion memory. There are several alternatives with different amounts of memory on the market). See “*Folders*” on page 18.

Preliminary

Getting help

From the menu bar select **Edit > Help** or **View > Help** to get to the inbuilt help system. The help system uses two views:

- The *Topics view* shows all available topics, for example both the topics connected to a specific application and general topics.
- The *Detail view* presents the title and text of a single topic.

The Topics view allows you to select a topic, which opens the detail view/text view and displays the selected topic. You can also set the zoom level and exit the Help system.

Also, in many dialogue boxes it is possible to select the help icon in the upper right corner to get help.

Icons

Application icons

An application icon starts its application when you select it. Below are the default application icons that you can see in the screen when the flip is closed, or in the application picker when the flip is open. A list of more application icons is available in the application launcher.

	Phone
	Call list
	Application launcher
	Calendar
	Contacts
	Internet
	Messages

Indicators and status bar icons

These icons appear in the flip closed standby screen or in the status bar when the flip is open. They indicate status for several functions or that something has happened, for example, the P800 has received a text message. .

 Battery strength

 Bluetooth on

 Calls screened

 Divert all calls notification

 GPRS

 Help

 Held call

 Incoming call

 Speed dial entry

When the flip is open, you can often select the icons to get more detailed information or start an application.

 Infrared port active

 Keyboard

 Missed call

 Ongoing data call

 Signal strength, GPRS active

 SMS notification

 SMS overflow

 Status

 Time, alarm set

Preliminary

Flip closed - overview

This chapter describes how your P800 works with the flip closed. With the flip closed the P800 behaves very much like an ordinary mobile telephone.

The screen is not touch sensitive when the flip is closed; therefore you operate the P800 by pressing the keys.



Keypad

Key	Function
	OK Enter selected function.
	BACK • Return to previous menu. • Press and hold to return to Standby.
	CLEAR • Delete entered characters/digits from the screen one by one. • Press and hold to delete an entire row of entered characters/digits. • Delete an entry from Contacts, Calendar, Tasks, Voice memo, and Messaging. • Press and hold to disconnect the microphone (mute function) when a call is in progress. • Mute the ring signal during an incoming call. • Press and hold to put the P800 into silent mode, when in the standby mode.
	OPTIONS • Open the menu with different options for different applications. • Press and hold to open Applications.
	ASTERISK • Enter the character *. • Press and hold to enter a p (pause) character. • Press and hold to switch between different input modes (Abc, 123 ...).

Key	Function
#	HASH / @ - Enter the character #. - Press and hold to see a list with special characters. - Terminate the input of PIN and security codes. - Retrieve a phone number from the SIM card phone book (enter the number of the memory position and then press #).
0 - 9	NUMERIC KEYS - Enter the digits 0 to 9. - Enter associated characters or perform associated functions, for example: - Press and hold 0, to enter the international character '+'. - Press and hold 1, to dial your voice mail. - Press and hold any of the keys 2 - 9 to reach a contact beginning with a specific letter.

General functions

Standby view

When you switch your P800 on, the standby view is displayed. This view is displayed only in flip closed mode and contains configurable shortcuts (see the section *Application shortcuts* below) to other applications. Also, when closing the flip, you always return to the standby view.



There are five application shortcuts in the standby view. The selected application is highlighted and its name is shown at the bottom left of the screen above the OK key. Press **Jog Dial** or OK to start the application.

There are also 6 icon positions, 3 at each side of the screen, for temporary indicators such as missed calls and unread messages.

Options menu

Press [Menu] or press the Jog Dial towards you to open the standby options menu to get access to keylock, battery status, missed calls and more.

Application shortcuts

It is very convenient to have shortcuts to the applications you use most frequently in the standby view. Change the shortcuts in the following menu in flip open mode:

Preliminary

 **Control panel > Device > Flip closed shortcuts**

Background Image

You can change the background image (wallpaper) in flip open mode, go to  **Control panel > Device > Display.**

Tip *More background images can be found on the Multimedia for P800 CD, delivered with your P800.*

Status bar

The status bar on top of the screen displays:

 **Signal strength.** Varies from very low to full signal. Indicates also the status of your GPRS connection.

12:02 pm Time. Shows the current time and indicates activated alarms.

 **Battery.** Indicates current battery level (zero to four units) and charging status.

Note *More information about battery status and GPRS can be found in Options menu > Status*

Applications in flip closed mode

Select  to list all the applications that can be started with the flip closed.

Call list

The Call List displays the latest calls either outgoing, incoming or missed. Press the Jog Dial or **OK** to call selected entry. Activated from the standby view only.

Contacts

Displays a list of your contacts. Select a contact to view associated contact data. Then press the Jog Dial or **OK** to make a call.

Messages

You can read, create, send and delete text (SMS), multimedia (MMS) and e-mail messages in this view.

Calendar

The Calendar view displays entries, if any, for the current day. Use the Jog Dial to get more information about a selected entry or to change day.

Example

Tuesday 29 January

11:00 Lunch with A. Eriksson

14:00 Project meeting

Tasks

Keeps track of your tasks. Set due date, alarm, priority, and so on, for all your tasks and let your P800 remind you on time.

Jotter

Displays a list of stored entries. In detailed view, the whole entry can be seen. With , it is possible to edit or make a new entry via the keypad. It is not possible to make, edit or view a drawing in this mode.

Voice Memo

Your P800 can be used like a voice recorder. Use  to play, create a new or delete an old memo.

CommuniCam

In CommuniCam view the screen becomes a viewfinder. Press the CommuniCam button or the Jog Dial to take a photo.

Tip *The CommuniCam button is also a shortcut to the CommuniCam application.*

Online services

Your service provider might offer different services reachable from your P800. For example: weather forecasts, financial information or newsletters. Contact your service provider for more information.

Connections

Set the way you communicate with your PC or other device. Select between infrared, Bluetooth wireless technology and cable. In the cable menu, you also select whether the P800 is going to operate as a modem or not.

Selecting and starting applications

Rotate the Jog Dial to select an application. In the standby view, the selected application becomes coloured and slightly enlarged and the name is shown down to the left of the screen, just above the  key on the keypad. Press the Jog Dial or  on the keypad to start the selected application.

Tip In  view, it is also possible to start an application by pressing its specific number.

Closing applications

The current application automatically closes and the data is saved when you return to the standby view or switch to another application.

Entering text in flip closed mode

When you press a key, a pre-edit box with different characters is shown on the toolbar: 

If the same key is pressed again, the next character in the pre-edit box will be selected.

Preliminary

The **C** key deletes the character to the left of the cursor. If continuously pressed, the **C** key deletes several characters and then whole words.

Inserting text

There are four text entry types:

- Abc – initial uppercase letter, the rest lowercase. Default for each new text edit field.
- 123 – numeric entry only.
- ABC – uppercase entry.
- abc – lowercase entry

In text edit mode, press **≡** and choose **Text Options > Input type** to select text entry type.

A short press on ***a/A** toggles the input types in text edit mode.

Inserting symbols

In text edit mode, press **≡** and choose **Text Options > Add symbol** to select an item from the symbol selector table. Use Jog Dial to select the row and press **OK**. Then scroll within the row to select a symbol and press **OK**.


Virtual flip

The virtual flip is to be used when you have physically removed the flip and want to use your P800 in flip closed mode.

The virtual flip gives you the same functionality as the real flip keypad. Enter numbers and characters using your stylus.

Select **☑** to open the virtual flip. Select **☒** to close the virtual flip.

See the chapter “Removing and attaching the flip keypad” on page 32” on how to remove the flip and activate the virtual flip.

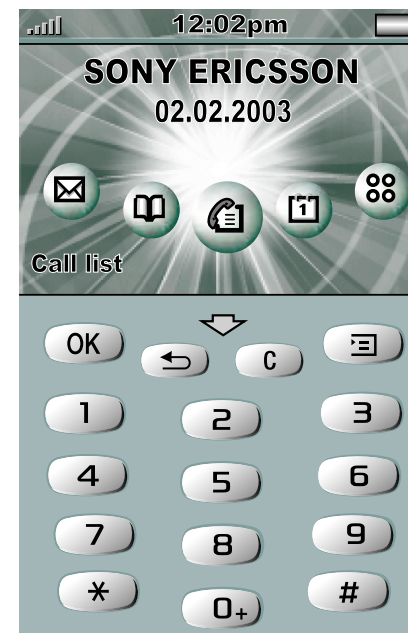

Flip open

This chapter describes what functions are available with the flip open.




Screen areas

In the flip open mode the screen is touch sensitive. The screen is divided into a number of areas, see the figure and table below..



**P800 WEB/WAP
Internet Browser**

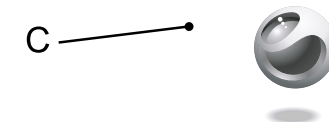

Sony Ericsson



Item	Description
A Application picker	Displays six icons for quick and easy access to the most common applications, customizable.

Preliminary

- B** Menu bar Usually, contains two menus on the left, and a *folder menu* on the right.
The two left-hand menus always have the same form:
- the *application menu*, whose name is *always* the same as the application, and which contains the system services used by most applications, such as **Find**, **Send as**, and **Delete**.
 - the *edit menu*, with editing items such as **Cut**, **Copy**, **Paste**, **Zoom**, **Preferences** and **Help**
- C** Application space Applications use this central area of the screen in a way that is appropriate to the information that they display.
Many of the built-in applications are based on two standard view layouts: a *list view* and a *detail view*
- D** Button bar Optionally, an application view displays a button bar at the bottom of the application space, containing useful controls and shortcuts. Not all application views require a button bar.
- E** Status bar Displays device status information such as signal strength, battery and device information. Settings for sounds and time.
On-screen keyboard.
Temporary indicators such as missed calls and unread messages.

Navigation

In flip open mode navigation is carried out using the stylus and tapping selected items and by using the Jog Dial, see the chapter “*Jog Dial*” on page 11”.

Calibration

The screen is pre-calibrated to factory settings. However, this may not necessarily agree with how you use the stylus. Calibration is calculated by the average stylus tap speed and the location of the stylus tap on selection.

To recalibrate the screen

1. Select **Applications > Control panel > Device > Display**.
2. Tap **Calibrate** and the calibrate screen appears.
3. Tap once at the centre of each of the three calibration points in numerical order.
4. Tap **Yes** or **No** to accept or reject the new settings.

To restore the factory settings

1. Select **Applications > Control panel > Device > Display**.
2. Tap **Calibrate** and the calibrate screen appears.
3. Press Jog Dial - the text “Factory settings restored” is shown and you are taken back to the screen.

Entering text - Flip open


This section describes how to enter text in flip open mode. See “*Entering text in flip closed mode*” on page 25 on how to enter text in flip closed mode.

There are two ways of entering text with the flip open:

- Use the on-screen keyboard  found at the bottom of the screen.
- Write directly on the screen using the stylus.

On-screen keyboard

In text edit mode, select the keyboard icon and then select characters. Select **Done** when ready.

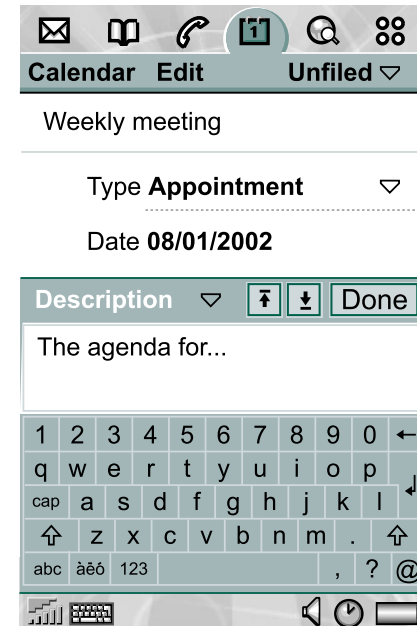

At the bottom left of the keyboard you can choose between three keyboard layouts with different character sets. Tap one of the following keys:

abc - standard characters

àëó - international characters


123 - numeric characters and currencies

Preliminary

The current input field is shown to the left in the top bar of the keyboard. Tap the arrows or rotate the Jog Dial to change input field. The keyboard top bar also contains a drop-down menu with **Cut**, **Copy** and **Paste**. When copying or cutting, the text must be selected first.

Handwriting recognition

Handwriting recognition translates stylus gestures into letters, numbers or other characters, and displays these characters as text. Handwriting recognition is only active when needed, that is, when focus is currently on a text input field in an application view or in a dialogue that needs a text entry.

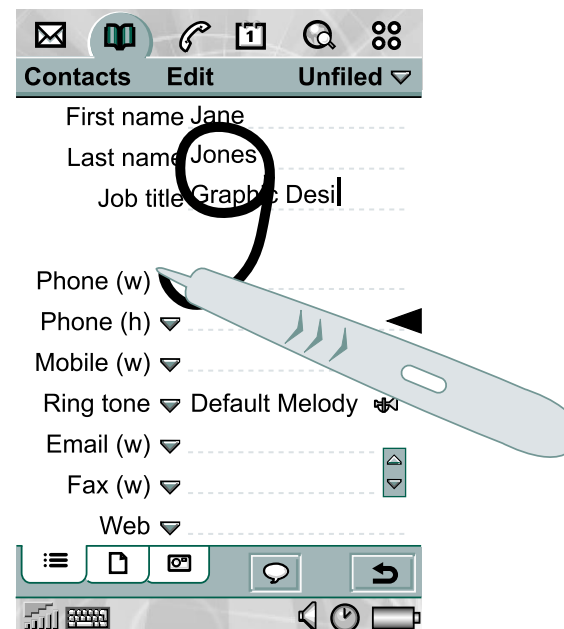

The text mode screen is split into an upper and a lower part, by an arrow in the middle of the right edge. Write lowercase letters below the arrow and uppercase in line with it. Write numbers above the arrow.

Note Most letters can be written in different stroke styles, see the tables below. The style itself does not matter when making letters upper- or lowercase, this depends only on the position on the screen.

Preliminary

Letters

Lowercase letters are written below the arrow and uppercase letters in line with the arrow.

a a a A A	n n N N	full stop \
b b b B B	o o o	comma ,
c C	p p p	apostrophe ' 7
d d d D D	q q q	question ? 2
e e e	r r R R	exclamation ! 2
f f f f 1	s s	ampersand & &
g g g G G	t t t	at @
h h h H	u u u	double quote " " 77
i i i i	v v v	tab
j j j j 2	w w	space
k k k k 1 2	x x x	backspace
l l l L	y y y	carriage return
m m m	z z z	

Note Start each stroke at the dotted end.

Accented letters

Write the character as described above, then write the accent above the arrow.

à \	â ^	ä .. or //
á /	ã N	å o

Note Start each stroke at the dotted end.

Numbers

Numbers are written above the arrow.

0 o o	8 8 8	= =
1 1	9 9 9	full stop • or \ *
2 2 2	+ 1 2	comma ,
3 3	* 1 2	dash —
4 1 4 2 4 4	/ /	tilde ~ N
5 5 1 2 5	\ \	backspace
6 6	((	tab
7 7	))	

Note Start each stroke at the dotted end.

General functions

Preliminary

Extended characters


Write the character above the arrow, then insert the character 1 (written from bottom to top) before writing the extended character. See the *Handwriting recognition* help topic for information on how to write these characters.

Removing and attaching the flip keypad


To remove the Flip

1. Use your fingernail to gently lift up and push the cover plate under and away from the keypad, see picture below.

Note Be careful with the touch-sensitive screen. Never use a sharp object like a screwdriver.

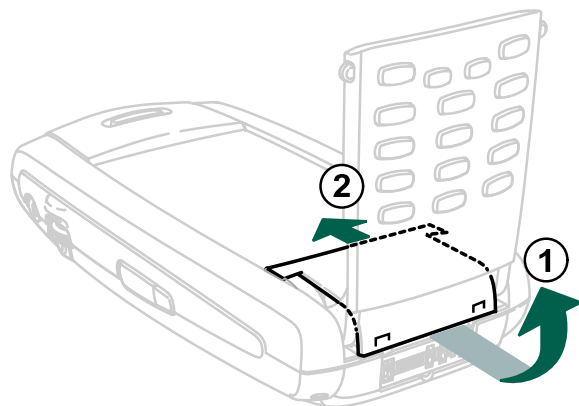

2. Unlock the catch and lift away the keypad.

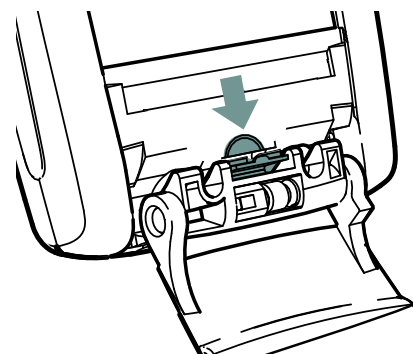


3. Attach the flip replacement by first placing the small hooks by the screen and then press on the curved front part until it is securely fixed.


To attach the Flip

1. Use your fingernail to gently lift up and push the flip replacement.
2. If needed, turn the hinge on the keypad to the correct position, see the figure below.

3. Attach the keypad to the P800.

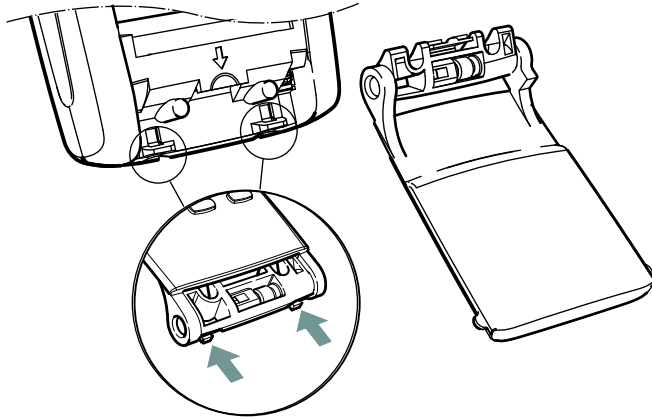

4. Secure the flip by pressing the catch until you hear a click.

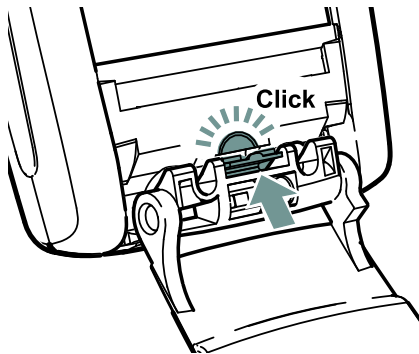

5. Attach the cover plate by first placing the small hooks by the screen and then press on the curved front part until it is securely fixed.

Virtual flip open mode

The virtual flip is to be used when you physically have removed the flip. Activate this function in  **Control Panel > Device > Flip removed**.  is shown on the status bar when virtual flip is activated. Tap it to get to virtual flip closed mode.


P800 locks

You can lock your P800 to prevent other people from using it. Use the SIM card lock and the device lock to protect your SIM card and your P800 from unauthorized use.

The P800 will ask you to enter the codes when necessary. You release the locks by entering codes that will be displayed as asterisks (*) when you enter them.

Note You can usually make an emergency call without unlocking the P800.

Preliminary

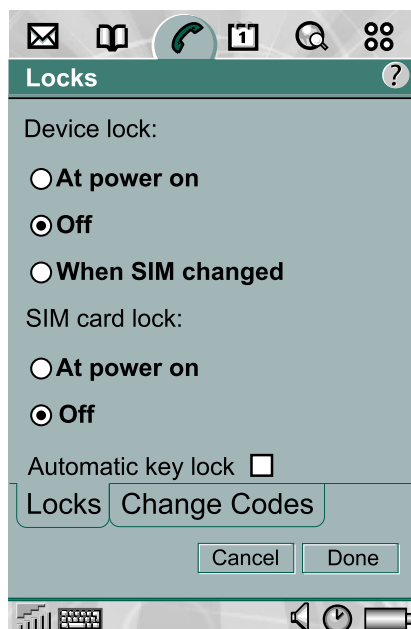

SIM card lock

The SIM card lock protects your SIM card, not the P800, against unauthorized use. It is unlocked by the PIN and PUK codes. You can find your PIN code and sometimes your PUK code in the documentation you received with your SIM card. If required, contact your service provider to obtain your PUK code. (PIN stands for Personal Identification Number and PUK for Personal Unblock Key.)

Your PIN code consists of four to eight digits. If the PIN code is enabled, the P800 will ask for the PIN code when you start it.

To activate the SIM card lock

1. Select **Phone > Edit > Preferences > Locks**
2. Select a lock option.
3. Select **Done**.

You can choose to have the SIM card locked every time you turn the P800 on, or to have the SIM card unlocked.

An error message informs you if a wrong PIN code has been entered. Usually after three wrong attempts (SIM card dependent) the SIM card will be blocked and you need to enter the PUK code to unlock it.

The PUK code consists of eight digits. When you have entered the right PUK code you must enter a new PIN code. You have ten attempts to enter the PUK code. If all ten attempts fail, the SIM card will be disabled and you need to contact your network operator.

You cannot change the PUK code.

PIN2

Some functions on the SIM card can be protected by a secondary code feature.

The PIN2 lock cannot be deactivated. The code can be changed by a user who knows the old code. Some SIM cards do not have a PIN2 lock.

Device lock

The device lock protects your P800 against unauthorized use. If the device lock is set to **When SIM changed**, it means that normally the P800 is not locked. However, if the SIM is changed, the P800 asks you to enter the code to unlock the P800 before you can use it. Thus, if someone steals your P800 and puts another SIM card into it, they will not be able to use it.

To activate the device lock

1. Select  **Phone > Edit > Preferences > Locks**
2. Select a lock option.
3. Select **Done**.

You can choose to have the P800 locked every time you turn it on, locked when the SIM card has been changed, or unlocked.

It is also possible to use the device lock in combination with the screen saver. Just mark the checkbox  **Control panel > Device > Display > Phone lock protected** to have the device lock activated when the screen saver goes on.

Change code

To change a code

1. Select **Phone > Edit > Preferences > Locks**.
2. Select Change Codes.
3. Select the code you want to change.
4. First enter the old code, then the new one. (To ensure that you have typed the new code correctly you have to enter it twice.)

Key lock

This option locks the keys on your P800. This is to protect the device if the keys are being accidentally pressed.

To activate or change the key lock

- Select **Phone > Edit > Preferences > Locks**.

To unlock the keys

- Select  > .

Preliminary

Phone

This chapter describes how to use your P800 as a telephone. Different possibilities are available:

- In flip closed mode you can call using the keypad.
- In flip open mode you can call using the virtual keypad on the screen.
- In flip closed as well as flip open mode you can make a call from the contact list.
- In flip open mode you can speed dial any of the 9 speed dial numbers using the Speed Dial view. In flip closed you can press the number representing the speed dial entry on the keypad.
- In flip closed as well as flip open mode you can call any previously called numbers using the call list.
- You can even call by selecting a number included in a text message or listed in an application.

Options in flip closed mode

The following options, available by pressing , are available during or after a call:

- End call.
- Hold call/retrieve call/switch calls.

- Add to contacts (displayed if the phone number of the active call is known, and not found in the contacts database).
- Show contact (displayed if the phone number of the active call is known, and appears in the contacts database).
- Transfer sound (to a Bluetooth™ wireless technology headset).
- Turn On/Off tones.
- Microphone mute On/Off.
- Copy number (displayed if the phone number of the active call is known).
- Paste number (displayed if the clipboard contains a number).
- Speakerphone On/Off.
- Transfer calls.
- Join calls.
- Call list.

The following options, available by pressing , are available in the call list:

- Incoming calls.
- Outgoing calls.
- Missed calls.
- SIM last dialled.

- Zoom in/out.
- All calls.
- Applications.

Note *The currently selected filter is not shown in the options list, for example if the call list is currently showing Incoming calls, then this option is not shown in the options list.*

Call handling

To call in flip closed mode, you can use either the keypad or the Jog Dial.

To make a call

- Enter the telephone number on the keypad and press **OK**.
To delete a typed character - press **C**. To delete all characters - press and hold **C**.

To make a call using Speed Dial

Speed Dial is a fast way to call one of your special speed dial numbers. See “Speed dial numbers” on page 44

1. Select the key corresponding to the desired number.
2. Press **OK**.

To make a call using the Call list

1. Select .
2. Press the Jog Dial inward or press **OK**.

3. Scroll with the Jog Dial to select an entry.
4. Press the Jog Dial inward or press **OK**.

To make a call using the Contact list

1. Select .
2. Press the Jog Dial inward or press **OK**.
3. Scroll with the Jog Dial to select a contact and number.
4. If more telephone numbers are shown, scroll with the Jog Dial to select a number.
5. Press the Jog Dial inward or press **OK**.

To answer a call

The P800 rings when you receive a call. If the calling party is found in contacts, the name of the caller will be displayed. If there is a picture, it will also be shown.

- Press **OK** to answer the call.

To make a new call during a call

1. Make a call or answer a call.

Preliminary

2. Make a second call, or answer a call. The first call is put on hold.

The held call is shown with a grey background.

- To switch between the calls, press , then select **Switch calls** (could be network dependent).
- To end the active call and continue with the held call, press  and select **End active call**.
- To join the calls to a conference, press  and select **Join calls**. See “Conference calls” on page 42



To end a call

- Press , or press the Jog Dial.

To reject a call

- Press , or press , and select **Reject**.

To silence the ring signal

This does not affect the call. It just silences the ring signal. The calling party will not notice that you have silenced the call.

- Press , or press , and select **Mute**.

To make a call using voice control

- Say the “magic word” and then the name of the person you want to call, and the P800 will connect you. For more information on, see “Voice control” on page 46.

Note This option requires that the number of the calling party is provided with a voice recording. See “To record a voice command” on page 46

Tip The magic word is not needed if you use a portable handsfree or a Bluetooth™ wireless technology headset. Press the headset call button and say the name of the person you want to call.

Options in flip open mode

The following options are available during or after a call:

- End call.
- Hold call.
- Add to contacts (displayed if the phone number of the active call is known, and not found in the contacts database).
- Show contact (displayed if the phone number of the active call is known, and appears in the contacts database).
- Transfer sound (Only when Bluetooth™ wireless technology headset has audio).
- Show cost / Hide cost.

Call handling

To make a call in flip open mode, you use the stylus and the virtual keyboard.

To make a call

1. Select .
2. Select .
3. Call the number with the virtual keyboard and select .

To remove a typed character - select .

To make a call using Speed Dial

Speed Dial is a fast way to call one of your special speed dial numbers. See “*Speed dial numbers*” on page 44

1. Select the speed dial icon .
2. Use the Jog Dial or tap with the stylus to select an entry.

To make a call using the Call list

1. Select the call list icon  from the button bar.
2. Scroll with the Jog Dial or tap with the stylus to select an entry.
3. Select the phone icon .

To make a call using the Contact list

1. Select the contacts icon .

2. Scroll with the Jog Dial or tap with the stylus to select a contact.
3. Scroll with the Jog Dial or tap with the stylus to select a number.

To answer a call

The P800 rings when you receive a call. If the calling party is found in contacts, the name of the calling party will be displayed. If there is a picture, it will also be shown.

- Select **Answer** to answer the call.

To make a new call during a call

1. While making or answering a call, select **Hold call**.

Preliminary

2. Make a second call, or answer a call. The held call is shown with a grey background.
- To switch between the calls, select the call with the grey background and select **Switch calls** (can be network dependent).
- To end the active call and continue with the held call, select **End active call**.
- To join the calls to a conference, select **Join calls**. See “Conference calls” on page 42



To end a call

- Select **End call**, or press the Jog Dial.

To reject a call

- Select **Send busy**.

To silence the ring signal

This does not affect the call. It just silences the signal. The calling party will not notice that you have silenced the call.

- Rotate the Jog Dial and select **Mute**.

To make a call using voice control

- Say the “magic word” and then the name of the person you want to call, and the P800 will connect you. For more details see “To make a call using voice control” on page 38.

General functions

Copying/pasting number

A highlighted telephone number may be copied and pasted for exchange with other text fields or in applications.

- Copy number - if a number has been entered.
- Paste number - if there is a copied number stored on the clipboard.

To copy/paste a number (flip open)

- Select **Telephone > Edit > Copy/Paste number**

To copy/paste a number (flip closed)

1. Press  and select **copy number** or **paste number**.

Displaying calls

During call setup, a progress window shows the current status. **Calling** is displayed until a line has been allocated. When the line has been allocated, **Connecting** is displayed.

If an incoming call matches an entry in contacts, the corresponding information will be displayed. If the number is not found in Contacts, only the telephone number will be displayed.

At the top of the window, the call timer for the call is displayed. The cost meter is also displayed, if available.

Missed calls

When a call has been missed, a message is displayed.

- Select **View** to display information on the missed call.

Network indication

The area at the top of the screen contains network indication (in standby view in flip closed), which can be:

- Network/service provider name.
- No network.
- Emergency calls only.
- Searching.

Call log

The call log allows you to check the P800's data on calls made, received, rejected, or missed. The log keeps track of date, time, length, and cost information (if available) of each call.

The List view of the call log shows the calls in order with the most recent call at the top.

In flip open:

1. Select  from the button bar.
2. Select a listed call to see more detailed information about it.

In flip closed:

1. Press  and select **Calls**.
2. Select **Call list** or **Missed calls**, depending on what you are looking for.

Tip *In flip closed mode you may press  twice to call the last number used in the P800.*

Advice of Charge (AoC)

Advice of charge allows you to keep track of the cost of calls and to stop the device from making chargeable calls when a certain credit limit has been exceeded. This option is only available if Advice of Charge is supported by the SIM subscription.

Preliminary

If the credit is limited, a warning **Low credit** is displayed, when there is approximately thirty seconds of credit left.

When the credit runs out, **Credit expired** is displayed and ongoing, chargeable calls are stopped.

Auto retrying

If a call attempt is not successfully connected, the P800 can be set to automatically retry the call after a while.

When retry has been initiated, the P800 will continue to retry a number of times or until you invoke any other action.

While the time between retry attempts is elapsing, the dialogue **Retrying** is shown. When a retry is successful, the P800 alerts you with a single ring signal.

Remote party notifications

When a remote party carries out certain operations, the P800 may notify you of the operation. An alarm is sounded and one of these messages is shown.

- Call held by other party.
- Call retrieved by other party.
- Call transferred by other party.
- Calls joined by other party.
- Call is waiting at other party.

Ending a call when another call is on hold

When the active call is ended, you are asked to retrieve the held call. If you do not respond within a few seconds, the held call will also be ended.

Receiving a call when another call is on hold

If someone calls when a call is on hold, you will be asked if you want to release the held call and answer the incoming call.

Conference calls

A conference call can be started when you have an active call and a held call.

The conference call view is automatically displayed whenever a member has been added to the conference. The conference call view is displayed when selecting the **Show parties** button, from the standard call control view. You return to the standard call control view by pressing the **Hide parties** button.



If an incoming call is answered during a conference call, the conference call will be put on hold.

To start a conference call

- Select the **Join calls** button, or select **Phone > Join calls** from the menu.

To extract a party

- Tap the required party and choose **Extract** from the pop up menu.

This causes the conference call to be put on hold, the selected party is then removed from the conference and becomes the active call.

To release a party

- Tap the required party and choose **Release** from the pop up menu.

This ends the call to the selected party.

Note *If you have set up the conference, you still have to pay for the total time.*

Emergency calls

If you initiate a call to a number which is identified as an emergency number, **Emergency call** will be shown.

An emergency call can be made without PIN or PUK codes. You can end the call using the menu key.

Note *Emergency calls are not confined to the network of your operator; they can be made as long as you have coverage from any GSM network.*

Hints and smart functions

Speakerphone

If you open the flip during a call, the speaker phone function is activated and the volume will increase. This lets you continue the conversation while using other functions of the P800.

Silent mode

Press and hold **(C)** in standby view, flip closed, to put the phone in silent mode. Press **(C)** again to turn off silent mode.

Note *When silent mode is on, this will also silence personal handsfree.*

Voice mail

In flip closed, you can call the voice mail number if you press and hold **(1)**.

Preliminary

Special characters

- Press and hold  to insert a pause (represented by the character **p**) in a DTMF (Dual Tone Multi Frequency) sequence.
- Press and hold  to insert the international call prefix +.

Change phone volume

During a call you can use the Jog Dial to change the phone volume.

Warning! *The volume may be uncomfortably loud at the higher volume levels if the phone is close to your ear. Exposure to excessive volume levels may damage hearing.*



- During an active call, pressing and holding  mutes the microphone. Pressing  reactivates the microphone.
- When entering text in flip closed mode, pressing  erases the last entered letter. Pressing and holding  deletes all text in the active field.
- When in stand by mode, pressing and holding  puts the phone in silent mode.

Banking services

You can use your telephone banking services or other tone based services.

The P800 provides different ways of sending tones during a call:

- Pressing keypad keys during an active call, like on most landline phones.
- Including tone digits already in the call set up. After the phone number, but before the digits, press and hold  to insert a **p**. Then insert your digits. Finally send away the call by pressing .
- Program digit sequences into your Contact card for the bank. Each digit sequence to be sent as tones must begin with a **p**.

Once your call to the bank has been established and you want to send your pre-programmed digit sequences, choose **Show contact** on the menu to get to the Contact card with the tone sequences.

Warning! *Never program any personal codes into your P800.*

Set-up

Speed dial numbers

To set a speed dial number

1. Select  from the button bar.
2. Select an empty position.
3. Select the desired contact.
4. Select **Done**.

To remove a speed dial number

1. Select , on the status bar.
2. Select **Edit > Remove speed dial**.
3. Select the contact to remove.
4. Select **Done**.

Flight mode

Turns off the radio function so it does not disturb sensitive equipment, for instance in an aeroplane or in a hospital.

Note *The phone and other communication functions must never be used in an aircraft unless otherwise instructed by the aircraft personnel. If the use of equipment without a radio transmitter is permitted you can turn on the flight mode on the product. Doing so turns off the radio function.*

When the flight mode option is set, you have the possibility to start the P800 in normal or flight mode each time the power is turned on.

To use the power menu

This menu is activated when pressing the On/Off button if the menu has been activated. See “Flight mode” on page 47 on how to activate the menu.

- Select the **Phone on** alternative to start the P800 in the normal way.

- Select the **Flight mode** alternative to start the P800 in flight mode.
- Select the **Power off** alternative to turn the P800 off.

To set flight mode on without restarting the P800

1. Select **Phone > Edit > Preferences**.
2. Select **Fight mode**.
3. Select **Flight mode now > Done**

To set flight mode off

1. Select **Phone > Edit > Preferences**.
2. Select **Flight mode**.
3. Select **Phone on now > Done**.

Preferences

In this menu you may change the settings for a number of telephony options.

To set the telephony preferences

1. Select **Edit > Preferences**.
2. Select the item to setup.

Preliminary

Incoming call alert

This option lets you choose individual ring melodies for voice and data calls. You may use any sound recording or audio file. You may also set individual volume levels for Handheld, Handsfree and Car, or let the P800 vibrate.

You may personalize the ring melodies further for individual contacts, see “Contacts”.

1. Use the stylus to point and drag the bar lever to the preferred sound level.

Warning! *The volume may be uncomfortably loud at the higher volume levels if the phone is close to your ear. Exposure to excessive volume levels may damage hearing.*

2. Select the list view and highlight the signal of your choice.
3. Select **Done** to activate the changes.

Incoming call picture

- Select the option to automatically show the picture saved in contacts at incoming calls.

Voice control

The voice control option lets you handle calls using your voice. Say a “magic word” and then the name of the person you want to call, and the P800 will try to call the person.

The magic word is used to ensure that the P800 will not call somebody whose name has just been mentioned by chance.

To enter settings for voice commands

- Select **Phone > Edit > Preferences > Voice control**.

In this menu you can:

- Turn **Voice dialing** on/off
- Set when to use the **Magic word** (Handheld, Handsfree or Car).
- Turn **Voice answer** on/off
- Select if the P800 should **Play caller name** at incoming calls.
- Record voice commands for **Magic word**, **Answer** and **Busy**.

To record a voice command

1. Select one of the options, **Magic word**, **Answer**, or **Busy** and select **Record**.
2. Say the “magic word” after the tone
Be sure to use a word that you can remember. For example “Calling”.
3. Select **Play** if you want listen to your recording.
4. Select the voice message options for each P800 profile.
5. Select **Done** to exit.

To record voice tags for individual contacts, see “Contacts”.

Flight mode

Here you select if you want to turn the flight mode on or off and also if you want the **Power menu** activated.

To access flight mode settings

- Select **Phone > Edit > Preferences > Flight mode**.

To turn on the Power menu

1. Select **Phone > Edit > Preferences > Flight mode**
2. Select the **Prompt me...** check box and tap **Done**.

Locks

Locks contains options for:

- Activating the lock on the device, the SIM card or the keys on the keypad.
- Changing the lock codes.

The device lock option appears when powering on the P800.

Key lock blocks your keys from being pressed by mistake, for instance when the P800 is in your pocket.

The SIM card lock demands your code when the phone is turned on or when a new SIM card is installed.

Note For more information see “P800 locks” on page 33.

Add to contacts

This option enables the function for adding called and calling parties to **Contacts**. After a call has ended, if the telephone number is not already stored in the **Contacts**, you are asked if you would like to add it.

Handsfree

Handsfree lets you choose how to answer the P800 when it is used with a handsfree kit connected.

You may also select preferred Bluetooth™ wireless technology device from this menu.

To set handsfree options

- **1 ring** means that the P800 answer automatically after one signal.
- **Any key** means that the you answer by pressing any key.

Note Using **1 ring** as the automatic answering mode may violate your privacy (for instance passengers in your car can hear who is calling if the phone is used with a car kit).

To set Bluetooth wireless technology options

- Select the preferred sound device; **Phone** or **Headset**.

Forward calls

Forward calls lets you choose how to forward incoming calls to another number, on:

Preliminary

- Busy
- Not reachable
- No reply
- All calls
- Data calls
- Fax calls

To forward calls

1. Enter the telephone number you want to forward to.
2. Select Done.

Tip *Normally the data/fax options should not be changed.*

Accepted callers

Accepted callers allows you to set up a filter for incoming calls. All calls except from persons on your list of Accepted callers will be rejected.

To add an accepted caller

1. Select **Add new**.
2. Select **Lookup** and chose a contact, or write the name and number of the contact.
3. Select **Done**.

Call waiting

This option sets the call waiting option on or off.

Restrict calls

You can set restrictions for calls made from or to your P800. You may for example protect it from being used for long distance calls.

To restrict incoming calls

1. Select the **Incoming calls** tab.
2. Set restrictions for:
 - All incoming calls.
 - Incoming calls when roaming.

To restrict outgoing calls

1. Select the **Outgoing calls** tab.
2. Set restrictions for:
 - All outgoing calls.
 - Outgoing international calls.
 - Outgoing international calls except to home PLMN.

To change the password

1. Select **Change password**.
2. Enter the old code.
3. Enter the new code.
4. Confirm the new code.

Voice mail

For easy voice mail access, enter the number to the voice mail of your operator.

GSM Networks

This option lets you choose what net to use when you are outside your operators area. Choose if you want to search for a new network or use a preferred one. You can also make a list of preferred networks.

Note *Your operator may not allow you to access all available networks, depending on your operator's policy.*

Calling cards

This option is used to handle calling cards.

AoC - Call meter settings

This option is only available if Advice of Charge (AoC) is supported by the SIM subscription. PIN2 is required for storing any changes you make to the Call meter settings.

- **Limited** – the limit is preset by the user. When the credit is set to limited, chargeable calls should only be made if the credit is larger than 0. The option is, however, useful if you want to restrict the call cost for yourself or another person that uses the P800.

- **Unlimited** – there is no credit limit. Not all networks provide charging information to the phone during a call. If your network provides this service and your subscription is for AoC Charging, you cannot make or receive any chargeable calls if you are roaming in a network that does not provide charging information. This restriction does not apply when your subscription is for AoC Information. You cannot change the type of subscription from your phone settings. Please consult your operator for more details.

Preliminary

Contacts

Contacts is like an address book, in which you can store names, phone numbers, e-mail addresses and other useful information.

The information stored in the SIM phone book is also accessible. SIM phone book entries can be imported to Contacts and Contacts entries can be exported to the SIM phone book.

Flip closed mode

With the flip closed, you can place calls and send text or multimedia messages.

Contacts has two views in flip closed mode:

- List view** An alphabetical list of contacts. The list view is the starting point for finding a contact.
- Detail view** The details for a contact.

Menus

In both views, you can use  to access some of the P800's contact functions.

Menu options in list view

Option	Description
Zoom in/out	Zoom the screen in or out.
SIM phone book	Display the contacts of the SIM card.
Send owner card	Send your owner card via IR or Bluetooth wireless technology.
Find	Search for a specific contact.
Undo delete	Restore the last deleted contact.
Applications	Return to the application launcher.

Menu options in SIM phone book

Option	Description
Zoom in/out	Zoom the screen in or out.
View all	Switch to Contacts list.
Information numbers	Display the Information numbers on the SIM card. This option is only displayed if there are Information numbers stored on the SIM card.
Service numbers	Display the Service numbers on the SIM card. This option is only displayed if there are Service numbers stored on the SIM card.
Applications	Return to the application launcher.

Menu options in detail view

Option	Description
Call	Call the active contact.
Send SMS	Send a text message to the active contact.
Send MMS	Send a multimedia message to the active contact.
Send as	Send the active contact via text message, IR or Bluetooth wireless technology.
Delete contact	Delete the active contact.
Applications	Start other applications.

Making a call with the flip closed**To select a contact**

1. Select .
2. To place a call to a contact in the SIM phone book, select **SIM phone book** from the options menu.
If there are information numbers or service numbers stored on the SIM card, you can also access them.
3. Scroll down to the desired contact
or select **Find** from the menu and search for the contact.

To use the quick index

1. Press and hold a number key.
The first contact, corresponding to the first letter of the key, appears.
2. To search further, continue to enter the letters with the keys.

To make a call

1. Select a phone number.
 2. Press the Jog Dial inward or press .
- or
1. Select a phone number.
 2. Select **Call** from the options menu.

Preliminary

To send a text message

1. Select a phone number.
2. Select **Send SMS** from the options menu.

To send a multimedia message

1. Select an e-mail address.
2. Select **Send MMS** from the options menu.

To add a contact

You can create a new contact using information from a recently received voice call or message.

1. Select **Yes** when asked to add to contacts.
 2. Enter contact name and edit the number, if required.
- To access the full edit view, open the flip.

To delete a contact

1. Select the contact.
 2. Select **Delete contact** from the options menu.
- To restore a deleted contact, select **Undo delete** from the options menu.


Flip open mode

Open the flip and tap  or select **Contacts** in the Application launcher  to open Contacts.

Contacts has three views in flip open mode:

- | | |
|--------------------|--|
| List view | An alphabetical list of contacts. The list view is the starting point for finding a contact. |
| Detail view | The details for a contact. |
| Edit view | Contact details, displayed in a way that allows you to add and change the information. |

 Tabs at the bottom of the list view provide a fast way to locate information. To highlight the first entry that begins with the first letter on a tab, select the tab once. To highlight the first entry that begins with the next letter on the tab, select the tab again.



Menus

In all views there is a menu bar from which you can access some of the contact functions.

Menu options in list view

Menus	Option	Description
Contacts	New	Create a new contact.
	Find	Search contacts containing a specific text.
	Send owner card	Send your business card via Bluetooth wireless technology, e-mail, text message, IR or multimedia message.
	View owner card	View your personal business card.
Edit	Undo delete	Restore the last deleted contact.
	Paste contact	Paste a received or copied contact into Contacts.
	Zoom	Set zoom level, small, medium or large.
	Preferences	Select how the contact list is to be sorted, and if telephone numbers should be displayed in the list.
	Help	Open the help application.
Folders	All	Show all contacts in the list.
	Unfiled	Show the contacts that are not in a folder.
	Edit folders	Categorize your contacts in folders.

Menu options in SIM phone book list view

Menus	Option	Description
Contacts	New	Create a new contact.
	Information numbers	Display the information numbers on the SIM card.
	Service numbers	Display the service numbers on the SIM card.
	Own numbers	Display speech, fax and data numbers on the SIM card.
Edit	Paste contact	Paste a received or copied contact into Contacts.
	Copy to contacts	Copy the shown SIM card entry into Contacts.
	Copy all to contacts	Copy all SIM card entries into Contacts.
	Sort by SIM position	Sort the list according to SIM position.
	Zoom	Set zoom level, small, medium or large.
	Preferences	Select how the contact list is to be sorted, and if telephone numbers should be displayed in the list.
	Help	Open the help application.

Preliminary

Menu options in detail view and edit view

Menus	Option	Description
Contacts	New	Create a new contact.
	Find	Search contacts containing a specific text.
	Send as	Send a contact via Bluetooth wireless technology, e-mail, text message, IR or multimedia message.
	Set as owner card	Set the active contact as your owner card.
	Delete contact	Delete the active contact.
Edit	Edit contact	Change the details of the active contact.
	Copy contact	Copy the active contact entry.
	Cut	Cut out the marked text.
	Copy	Copy the marked text.
	Paste	Paste the copied text into the selected field.
	Add field (in Edit view only)	Add an extra field to the active contact.
	Show in list	Specify the phone number to be displayed next to the contact in the list view.
	Zoom	Set zoom level, small, medium or large.

Menus	Option	Description
	Preferences	Select how the contact list is to be sorted, and if the telephone number should be displayed in the list.
	Export to SIM	Export the contact to SIM.
	Help	Open the help application
Folders	Unfiled	Show the contacts that are not in a folder.
	Edit folders	Categorize your contacts in folders (for example business, personal and so on.)

Personal details

The first time you use your P800 you are advised to enter your personal details. You create an electronic business card, containing your contact details, including notes and a photo. You can attach this card to e-mails, or beam it to another device.

To create your owner card

1. Select **Contacts > New** and enter your details.
2. Select **Contacts > Set as owner card**.

Making a call with the flip open

To open Contacts

- Tap  or select **Contacts** in the Application launcher .

To search for an entry containing specific text

1. Select **Contacts > Find**.
2. Enter the text string you wish to search for.
3. Select either **In all fields** or **In Names & Company** and tap **Find**.
4. When search is completed, all results are displayed.

Note Searching is not case sensitive and you do not have to enter an entire word to locate a matching entry.

To make a call

1. If required, change category from the **Folders** menu.
2. Scroll down to the desired contact.
If the contact list is long, first select a tab at the bottom of the view.
3. Select the contact to display the information.
4. Depending on what you want to do, select according to the following:
 - Tap  or  or the phone number to place a call.
 - Select  or the e-mail address to send an e-mail.
 - Select  or URL to open a web page.
 - Select  to send a multimedia message.
 - Select  to send a text message.

Managing contacts

You can sort the contacts according to first name, last name or company. The contact entries can also be filtered by category, such as business or personal.

To create a new contact

1. Select **Contacts > New**.
2. Enter the desired information. When applicable, select from the drop-down menus.

To add a voice dialling command

Voice dialling commands can be added when you create or change a contact.

1. Select  at the bottom of the screen.
2. Select a number.
3. Select the **Record** button.
4. Record a new voice command after the tone.
 - To play a recorded voice command, select the **Play** button.
 - To remove a voice command, select the **Del** button.

To add a note to a contact

1. Select .
2. Enter the text.

Preliminary

3. If you do not want the note to be included when you send, beam, or synchronize the contact, select the **Private** check box.

To add a photo or other picture to a contact

1. Select the photo view tab .
 2. Select the picture space.
 3. If required, change folder.
 4. Select the picture to use.
 5. Select the **Select** button.
- To change a picture, select the old picture and select **Replace image**.
 - To remove a picture, select the old picture and select **Delete image**.

To change the details of a contact

1. Select a contact.
2. Select **Edit > Edit contact**.
3. Change the desired information. When applicable, select from the drop-down menus.

To add a field to a contact

1. Select the contact.
2. Select **Edit > Edit contact**.
3. Select **Edit > Add field**.

4. Select the field to be added from the drop-down list.
5. Select **Add**.

To delete a contact

1. Select the contact.
2. Select **Contacts > Delete contact**.

Managing the SIM phone book

You manage the SIM phone book the same way as the Contacts. You may also sort the SIM phone book according to SIM position. You can also copy information between the P800 and the SIM card.

To import contacts from SIM

1. Select **SIM phone book** in the folders menu to the right in the menu bar.
2. Select **Edit > Copy all to Contacts** for importing all SIM entries or
Tap a SIM entry to open it and select **Edit > Copy to Contacts** for importing the selected SIM entry.

To export contacts to SIM

1. Select a contact.
2. Select **Edit > Export to SIM**.
3. If the contact has multiple telephone numbers, select the number to export.

4. Select **Done**.

Sending a contact

You can send contact details to others: by text message, multimedia message, infrared, or Bluetooth wireless technology.

To send contact details

1. Select a contact.
2. Select **Contacts > Send as**.
3. Select the message type.
4. Select **Done**.

To send your own contact details

1. In list view, select **Contacts > Send owner card**.
2. Select the message type.
3. Select **Done**.

Settings

To sort the contact list and show the preferred phone number

1. Select **Edit > Preferences**.
2. Select the desired sorting option (first name, last name or company) and click **Done**.

3. If you want a telephone number to be shown next to the name in list view, select **Show preferred phone number**.
If no number is selected, the first telephone number will be used.

4. Select **Done**.

To change the preferred phone number

1. Select a contact.
2. Select **Edit > Edit contact**.
3. Select **Edit > Show in list**.
4. Select the number to be shown from the list.
5. Click **Done**.

Note *If no numbers appears, ensure that **Show preferred phone number** is checked in preferences.*

Phone book manager

On the CD, there is an application called **Phone book manager**. This application is used to manage the SIM card information from a PC.

To use the Phone book manager

1. Connect the P800 to the PC. See “*Connecting to other devices*” on page 150 for more information.
2. Start the Phone book manager on the PC.

Preliminary

3. For instructions on the ***Phone book manager***, refer to the application help information.

Messages

With  **Messages** you can create, send, and receive different types of messages:



E-mail messages. Your P800's mail client supports POP3 and IMAP4 mail servers, MIME attachments and SMTP for sending mail.



SMS (Short Message Service) messages are text messages sent and received via the network operator's message centre. EMS (Enhanced Message Service) messages also allow pictures, sounds, melodies and animations to be inserted.



MMS (Multimedia Message Service) messages. A multimedia message can contain text, graphics, animations, photographic images, audio clips and ring melodies.

You also use **Messages** to receive:

- Area Information messages. These are text messages broadcast to all subscribers in a network area for example local road reports or local taxi phone numbers (Area Information services are not available from all operators).
- BIO (Bearer Independent Object) messages. There are different types of BIO messages:
 - Setup (e-mail, Internet, WAP accounts)
 - E-mail notifications.

- Files for exchanging electronic business cards (vCard) and calendar information (vCal).

- Auto setup files for OTA (Over The Air configuration).
- Beamed messages. These are files received via Infrared or Bluetooth.

The different types of messages, e-mail, text messages, and multimedia messages are handled by separate messaging accounts. Select  **Control panel > Connections > Messaging accounts** to see the details of the messaging accounts on your P800.

You can have any number of e-mail accounts - a typical configuration will be one business and one personal account. When you set up a synchronization with your PC, an account for synchronized e-mails is automatically created on your P800.

Accounts are automatically created for storing received:

- Text messages
- Multimedia messages
- Area information messages
- Auto setup messages
- Beamed messages

Preliminary

Before using Messages

Before you can send and receive any messages you need to set up the necessary accounts. See “*Getting started with Internet and Messages*” on page 159

Tip *A simple way of setting up an Internet or e-mail account is to ask your service provider to send you a message that contains the required information to create an account automatically on your P800.*

Folders in Messages

There are four folders for each messaging account: **Inbox**, **Outbox**, **Draft** and **Sent**.

Inbox

Inbox contains received messages. You can reply to, forward, and delete messages, but not edit them.

Received auto configuration messages are stored in the **Auto setup** account **Inbox**.

Outbox

Outbox contains messages that are ready to be sent. Saving a message to **Outbox** is useful if you have several to send: you reduce connection time by sending them all at the same time.

To save an e-mail message to Outbox

1. After composing your message, select **Send**.
2. Select **Save to Outbox**.
You cannot save text messages to **Outbox** unless the phone fails to connect.

Messages that you send from an e-mail synchronization account are always saved to **Outbox** and sent from your PC after your next synchronization.

Draft

Draft contains messages that are not ready to be sent.

To store a new message in Draft

- Create the message and exit without selecting **Send**.

To move a message from Outbox to Draft

- Open the Outbox message list and select **Message > Move to Draft**.

Sent

Sent contains messages you have sent from your P800.


Tip *To avoid running out of storage space on your P800, make it a habit to clear out unneeded messages from your **Sent** folder.*

The accounts in Messages

When you open Messages, a list of your accounts appears.

The top item in the list, **Create SMS**, is a shortcut for directly creating a new text message

An asterisk next to an account indicates that a message has arrived since you last opened the accounts inbox.

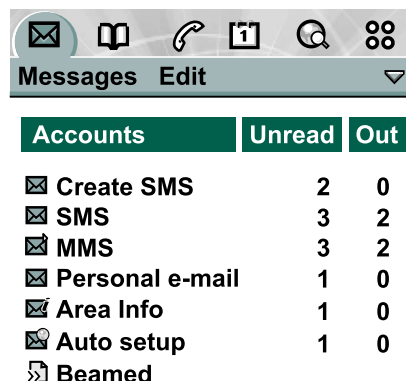

Messages Edit		
Accounts	Unread	Out
✉ Create SMS	2	0
✉ SMS	3	2
✉ MMS	3	2
✉ Personal e-mail	1	0
✉ Area Info	1	0
✉ Auto setup	1	0
✉ Beamed		

How to use Messages

Text messages including EMS features

SMS text message is a short message that you can send and receive on a mobile telephone. It can contain up to 160 characters. If you create a longer message it will be sent as two (or more) separate messages, but received (if the receiving telephone supports this) as one message. If you add pictures, animations, melodies and sounds to your message it becomes an EMS (Enhanced Message Service) message.



Text messages can be sent to one person, or to a group of recipients that you have saved in Contacts.

To write and send a text message

1. In  **Messages** select **Create SMS**. (You can also select **SMS > Message > New**.)
2. Enter the recipients number or select **To** and select recipient or recipients from your contact list and select **Done**.
3. Write your message and select **Send**.

To add EMS features to your text message

1. Select **Edit > Insert Object**.
2. Select the type of media you wish to import and select **Done**
3. Select the item you want to insert and tap **Select**.

Preliminary

Here you can see an example of an text message with inserted EMS features.

Multimedia messages

A MMS (Multi Media Service) messages can include real pictures, animations and sound, organized like a slide presentation with time-based control of the playback. Composing a multimedia message is like building a small slide presentation. A typical page will consist of a picture, some text and sound.

A picture taken with the integrated CommuniCam can be quickly and conveniently be sent via multimedia message using the **Send as** command from the viewer. Multimedia messages can be sent to a mobile phone or an e-mail account.

To create a new multimedia message

1. Select your multimedia message account and then select **Message > New** or open an existing message and select **Message > New**.



To: +46 13 244500 Size: 29

Hello Tom
I'll see you at...




2. From the **Select template** dialog, tap on the name of the template you want and tap **Select**. The **Blank** template will open a blank message.
3. The first page of the new message is now displayed. To add a picture, text, audio, voice or scribble select



To insert an item

1. Select
2. Select the type of item you want to insert from the list.

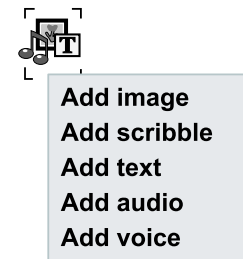


Preliminary

Here you can see the first page with an inserted picture.

To delete, replace or edit an inserted item

- Select the inserted item and choose an action.

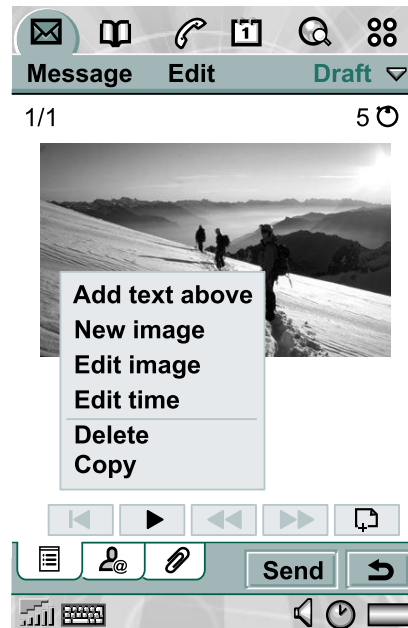

To add a new page to your multimedia message

- Select . You now have a completely new page to insert items onto.



To edit an inserted picture

1. Select the picture so that it is highlighted.
2. Select **Edit image**. While editing your picture you can add scribble, resize, crop or rotate your picture. To undo your changes, select **Edit > Undo all**.

Note *If you have accepted changes by selecting Done, you will not be able to undo them.*



To insert an attachment

1. While creating your multimedia message, select the tab with the  attachment icon, Select **Add**.
2. Select the type of attachment you want to add.
3. Select the attachment.

Preliminary

To play a received multimedia message

- The first time a MMS is opened it plays automatically. The next time you open the MMS you can play it by pressing the Play Button (flip open) or choosing **Play** from the menu (flip closed)

To set the download method for receiving multimedia messages, manual or automatic

1. In  **Control panel**, select **Connections > Messaging accounts > MMS > Download method**.
 - **Manual** means that only headers will be downloaded and can be viewed. The full message will be downloaded to your P800 when you select **Receive**.
 - **Automatic** means that the MMS is downloaded and can be read like any other message. There is no intermediate step.

E-mail

Writing e-mails

To write a new e-mail

- Select an e-mail account and select **Message > New** or open an existing e-mail and select **Message > New**.

If you leave the message before sending it, it will automatically be stored in the **Draft** folder (unless it was created from Outbox).

To mark an e-mail as urgent

- On the  address tab, select **High** in the **Priority** list.

Tip *If you are creating several e-mails, you can reduce connection time by saving them to **Outbox** and then connect and send them all at the same time.*

To save an e-mail to Outbox

1. Select **Send**.
2. Select **Save to Outbox > Done**.

To enter addresses from Contacts when writing an e-mail

1. Select **To**:
2. In the **Find contact** dialogue select the check box for each entry you want to send the e-mail to.
3. Select **Done**.

Tip *To enter several addresses manually (without using Contacts) in a text message or e-mail: enter a comma between each address.*

Sending e-mail

To send an e-mail message

- Select **Send > Send immediately**.

Note If your P800 is connected to the Internet when you send an e-mail, it will be sent immediately and your P800 will remain connected to the Internet when it is finished. If not, your P800 will connect to the Internet, send the e-mail and then disconnect.

To save an e-mail message and send it later

- Select **Send > Save to Outbox**.

To move an e-mail message from Outbox to Draft

- In your list of Outbox messages, tap to the left of the e-mail (a tick appears), and select **Message > Move to draft**.

Sending attachments

To attach an entry to an e-mail message

1. On the  attachment tab, select **Add**.
2. Select the type of attachment you want to add.
3. Select the item.

You can attach entries to e-mails directly from the following applications:  **Calendar**,  **Contacts**,  **Tasks**,  **Jotter**, and  **Voice** and  **Pictures**.

To attach a Calendar entry to an e-mail message

1. Open the entry in Calendar and select **Calendar > Send As**.
2. Select **e-mail > Done**.
3. Create the e-mail and select **Send**.

To attach a Contact to an e-mail message

1. Open the contact details for the contact you wish to send and select **Contacts > Send as**.
2. Select **e-mail > Done**.
3. Create the e-mail and select **Send**.

Note When you forward an e-mail, you can choose whether or not you wish to forward the attachment. Large attachments increase the size of an e-mail and consequently the connection time needed to send it.

Receiving attachments

Any attachments to an e-mail message are displayed on the  tab. The icon next to an attachment in the list identifies the type of attachment.

To view an attachment you need a viewer for that type of file. Your P800 comes with pre-installed viewers for Microsoft® Word, Excel, PowerPoint® and Adobe® Acrobat® (PDF) files. Many more are available from the **Multimedia for P800** CD.

Downloading

You can choose not to download large e-mails and receive just a header instead. A header contains the subject line, sender's details, and date, but not the full message.

Preliminary

To specify a size limit for e-mail, above which you only receive a header

1. Select  **Control panel > Connections > Messaging accounts > E-mail** (select the e-mail account) > **Edit**.
2. Select **Inbox**.
3. Select an option from the **Download** list.

In your list of messages, headers are denoted by .

To download the full message

- In your list of messages: Select the header.

To download a series of messages

1. In your list of messages: select the check box to the left of each entry (a tick appears).
2. Select **Get & Send**.

Note *If you delete a header the message will no longer be visible in your message list, but the actual message will not be deleted until your P800 has connected to the mail server.*

Downloading e-mails automatically

You can schedule your e-mail messages to be downloaded automatically at certain times.

To download your e-mails automatically

1. In Control Panel, select **Connections > Messaging accounts > E-mail**.

2. Select the required e-mail account and select **Edit**.
3. Select **Inbox > Schedule**.
4. Set time or interval for scheduled download and select **Done**.

Synchronized e-mails

When you set up a synchronization with your PC, an account for synchronized e-mail messages is automatically created on you P800 and indicated by . You can have more than one account for synchronized e-mails.

If you set up an account to call in for messages that you also receive using e-mail synchronisation, the two accounts will contain the same messages. Note that there is no connection between the accounts; the copies in each account are separate.

Disconnecting and connecting

If your P800 is already connected to the Internet when you send an e-mail, it will remain connected after sending it. If your P800 is not connected before sending an e-mail, it will connect and send the message and then disconnect.

Note *You can send text messages while connected to the Internet. If your connection is CSD or HSCSD it must be disconnected before you can make or receive a phone call. If your connection is GPRS, it may be suspended to enable a phone call to be made or received. You may need to repeat the data activity (web page fetch, get e-mail) after the call has ended.*

If your P800 cannot connect to the e-mail account, automatic download will fail, and  will be displayed next to the e-mail account. Check, if downloads are scheduled to occur from the same location each time, that the reception in that location is good enough.

A scheduled download will fail if your P800 is engaged in a voice call. It may fail if it is connected to another ISP that is, through a different Internet account than specified for the e-mail account.

If e-mail messages are not downloaded because a scheduled download fails, they will be downloaded during the next successful connection.

You can select an e-mail account that uses Dial-Up rather than a GPRS account but automatic download will fail if your P800 is not connected to the Internet when downloads are scheduled.

Area information

Area information messages are text messages that are sent to all subscribers in a certain network area, for example, a local traffic report. When you receive an area information message, the message automatically appears on the screen. When you dismiss the information, it will be stored in the **Area Info** Inbox until it is written over by a new message received on the same channel. Please consult your service provider for more information about availability of area information services and area information channel numbering.

Messages

To add an area information channel

1. In Control Panel, select **Connections > Messaging accounts > CBS**.
2. Check the **Area information** check box.
3. Select **New**.
4. Enter the desired **Channel number** and check the **Subscription active** check box.
5. Select **Done**.

To remove an area information channel

1. In Control Panel, select **Connections > Messaging accounts > CBS**.
2. Select the channel to be deleted.
3. Select **Delete** and confirm the removal by selecting **Yes** in the subsequent dialog. Any messages belonging to that channel will also be deleted.

Get and send

To get and send messages for one specific account

1. Select  **Messages**.
2. Select the desired account (text message, multimedia message or e-mail for example).
3. Select **Get&send**.

Preliminary

To get and send messages for all your accounts

1. Select  **Messages**.
2. Select **Message > Get&send**. Any unsent messages in your **Outbox** will now be sent and new messages not yet downloaded will be downloaded to your P800.

Connecting and disconnecting from the Internet

To disconnect from the Internet

1. Select the connection icon (HSCSD/CSD  or GPRS ) in the status bar.
2. The dialog **Do you want to disconnect, Yes/No** appears.
3. Select **Yes**.

Finding messages

In both the list of accounts and list of messages, **Find** searches through the subject lines, senders' details and dates.

In an open message, Find searches through the text of the message and highlights the text it finds.

You can only search through e-mail messages that have that have been fully downloaded.

Saving contact details

When you receive a message, you can save the contact details of the person who sent you the message.

To save the sender's details

- In the message select **From**.

Note *If you save an address from an e-mail synchronized from your company PC, the corporate version of the address rather than the full Internet e-mail address, will be saved to Contacts. If the corporate version of the address is not an Internet address (an X.400 address, or just the sender's name, for example), you can use it to send e-mails from your synchronized account, but you cannot use it in e-mails that you send directly from your P800.*

If your service provider or network is unavailable

Sometimes a message cannot be sent because your P800 cannot connect to a network. Please check that the Messaging Account and Internet Account information in the Control Panel is correct.

If you have both GPRS and Dial-Up Internet accounts, try sending the e-mail message using an account of the other type. This works when only the GPRS or the GSM network is available (but not both), because the two account types use different networks. GPRS Internet accounts use the GPRS network and Dial-Up Internet accounts use the GSM network.

Preliminary

If your e-mail service provider is unavailable and you have access to another account, you can copy and paste the text from the unsent e-mail in **Outbox** into a new one created with the other account and send it.

You can cancel sending an e-mail. The message will remain in **Outbox** and you can send it later.

Preliminary Internet

You use the browser to:

- Connect to the Internet to view and access Web and WAP pages.
- View HTML and WML e-mail attachments.
- Receive and view Push messages from your WAP service provider.
- Download Java applications, images and audio.

The browser can open web pages that do not use Java script or frames.

You can save bookmarks to viewed pages, to be able to access them easily. You can also save pages in the P800 for off-line viewing.

The browser uses folders for categorizing the information. The folders used are bookmarks, saved pages, signed documents, and Push messages.

Before you can use Internet, you need to set up an Internet account in the **Control panel**. If you intend to use certain WAP services it might be necessary to set up a WAP account in the **Control panel** as well.

To start the browser

- Start the browser by:
 - pressing the browser button (the home page is shown).
 - selecting  in the application picker (the start page is shown).
 - selecting  in the application launcher  (the start page is shown).
 - selecting a URL in another application.




Note *If required, you have to enter your ID and password to log in to your Internet account.*

The application has two views:

- | | |
|-----------------------|--|
| Browser view | The base view of the application, where you can view Web and WAP pages. |
| Bookmarks view | A list view where you can save shortcuts: <ul style="list-style-type: none">• to Web and WAP sites on the Internet• to locally stored pages• to documents digitally signed by you. |

Browser view

Screen

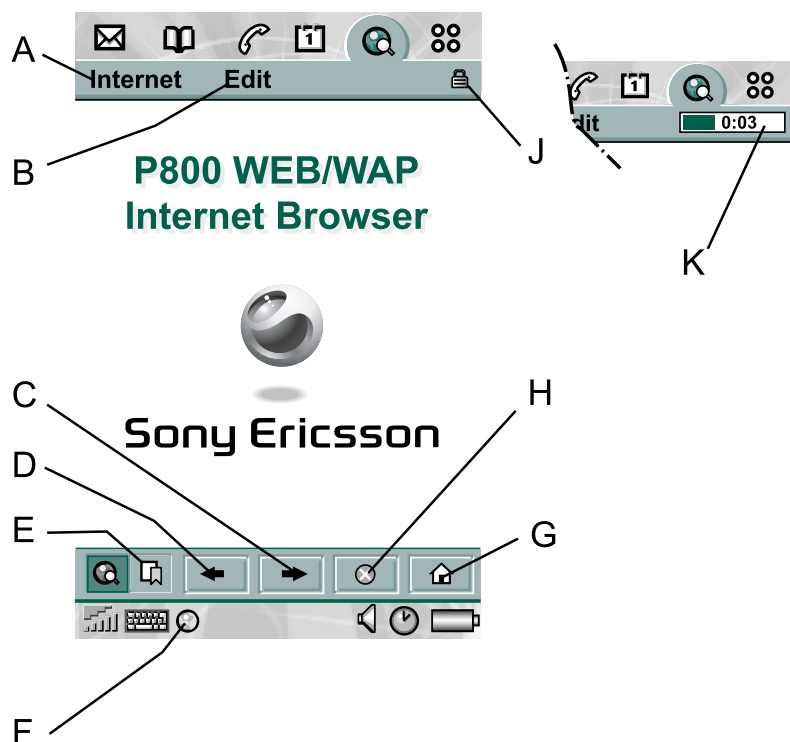

- A Internet menu.
- B Edit menu.
- C Select to change to the next page.
- D Select to change to the previous page.

- E Select to see the bookmarks view.
- F Select to close or get information about the connection.
- G Select to go to the home page.
- H Select to stop loading the page.
- J A secure connection is established.
- K Progress bar, shows the loading progress.

Preliminary

Menus

Menus	Option	Description
Internet	Open page	Enter the URL, or select from the drop-down list.
	Add to bookmarks	Enter the name of the bookmark and select the folder to save it in.
	Save page	Enter the name of the page and select the folder to save it in.
	Send as	Send the current URL via text message, IR or Bluetooth wireless technology.
	Find	Enter a text and search for the text in the page.
	Find next	Search for the next occurrence of the search text.
	Reload page	Reload the page.
	Load all images	Load all images of the page.
	Page information	Show the page information.
Edit	Cut	Cut out the marked information from an input field.
	Copy	Copy the marked information.
	Copy all	Copy all information on the page.
	Paste	Paste the copied text into the selected field.
	Zoom	Set zoom level.

Menus	Option	Description
	Preferences	Set the preferences of the browser.
	Help	Open the help application.

Context sensitive menus

The context sensitive menu is opened when you keep the stylus pressed on a link or a picture.

Link/picture	Option	Description
Text link and picture link	Open link	Open the active link.
	Link information	Show information on the link.
	Add to bookmarks	Add the active link URL to the bookmark list.
Loaded picture (with or without link)	Save image	Save the picture in the P800.
	View image	View the picture adopted to the screen (enlarged or reduced).
	Copy image	Copy the picture to the clipboard.
	Send image as	Send the picture as text message, IR or Bluetooth wireless technology.
Not loaded picture (with or without link)	Load image	Load the picture.



Link/picture	Option	Description
Voice call link	Call	Place a call according to the link.
	New SMS	Send an SMS according to the link.
	New MMS	Send an MMS message according to the link.
	New contact	Create a contact with the link information.
Mailto link	New e-mail	Send an e-mail according to the link.
	New MMS	Place an MMS message according to the link.
	New contact	Create a contact with the link information.

Icons within a page

  Picture not loaded (can be loaded manually).

  Damaged picture (not possible to load).

To open a specific web page

1. Select **Internet > Open page**.
2. Enter the page URL or select a previously viewed page from the drop-down list.
3. Select **Open**.

Note If images are not loaded, select the picture icons   or select **Internet > Load all images**.

To navigate through recently opened pages

1. Select  to move back to previously viewed pages.
2. Select  to move forward.

To save a page for off-line browsing

1. Select **Internet > Save page**.
2. Change the page name, if required, and select a folder to save it in.
3. Select **Done**.

To create a bookmark to the open page

1. Select **Internet > Add to bookmarks**.
2. Change the bookmark name, if required, and select a folder to save it in.
3. Select **Done**.

To download and upload files

- When you select a link to a downloadable file, information on the file is displayed.
Select **Yes** to start the download.
- When you select a link for uploading a file, a form for submitting the file is displayed.
Select the file and select **Yes** to start the upload.

Preliminary

To view information on the open page

1. Select **Internet > Page information**.
2. Select the **Content** tab to view the page information.
3. Select the **Connection** tab to view information on the connection.
4. Select the Certificates button to view the information on:
 - Server
 - User

To disconnect the connection

1. Select the connection icon (HSCSD/CSD  or GPRS ) in the status bar.
2. Select **Disconnect**.
3. Select **Yes**.

WIM Access

When the Browser requires access to the WIM card, for example when establishing a secure connection, you have to enter the correct PIN.

Signing documents

You have to enter the signing PIN each time a signing operation is going to be performed.


User authentication request

Whenever a user authentication is requested, you have the possibility either to select a certificate and confirm the user authentication, to select to continue anonymous or to cancel the connection.

If **Always connect anonymous** has been set, the browser will instead automatically try to connect anonymous.

Bookmark view

Screen

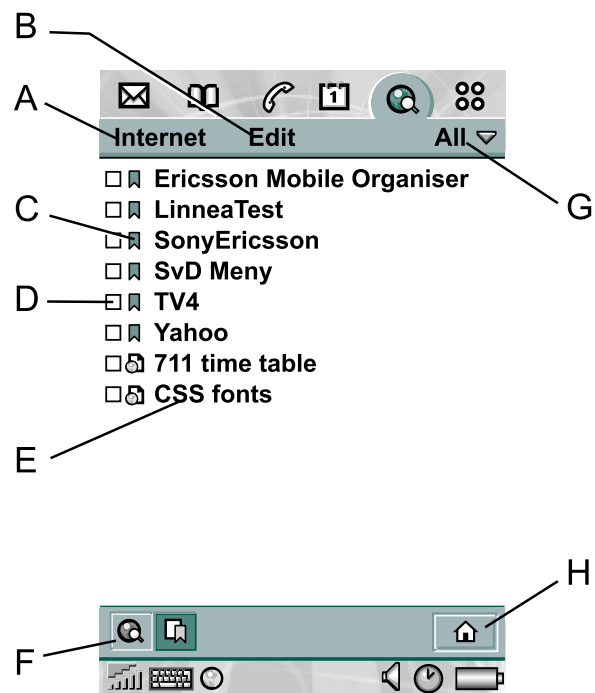

- A Internet menu.
- B Edit menu.
- C Select an icon to view information on the bookmark.
- D Checked bookmarks can be deleted from the Internet menu.
- E Select the bookmark text to view the page.
- F Select to see the browser view.
- G Folder menu.
- H Select to go to the home page.

Preliminary

Menus

Menus	Option	Description
Internet	Open page	Enter the URL, or select from the drop-down list.
	New bookmark	Enter the URL, the name of the bookmark and select the folder to save it in.
	Edit	Edit the selected bookmark.
	Delete	Remove the selected bookmark.
View	Zoom	Set zoom level.
	Preferences	Set the preferences of the browser.
	Help	Open the help application.
Folders	All	Show all contacts in the list.
	Bookmarks	Show all bookmarks.
	Saved pages	Show all saved pages.
	Unfiled	Show the bookmarks that are not in a folder.
	Edit folders	Categorize your contacts in folders (business, personal and so on).

Icons



Bookmark



Saved page



Push message from the WAP service provider



Signed document

To open a bookmark

- Select the bookmark text.
The bookmarked item is opened.

To view bookmark information

- Select the bookmark icon.
Information on the bookmark is shown. From the information screen you can:
 - Edit the bookmark.
 - Delete the bookmark.
 - Send the bookmark as e-mail, SMS message, Bluetooth wireless technology, IR, or MMS message.

To delete several bookmarks

1. Select the check box of the bookmarks to delete.
2. Select **Internet > Delete**.
3. Select **Yes** to confirm.

WAP and OTA provisioning messages

WAP Provisioning and OTA messages are received by the browser application and stored within the messaging store. These messages are then accessed and managed by Auto setup account in Messages. When you select a provisioning or OTA message, dialogues are shown to aid the provisioning process.

Settings

You must set up the account for the application to work. Refer to the Control Panel section for more information. The browser is initially set up to work. However, you can change these settings, if required.

The easiest way to set up Internet and WAP accounts is to ask your Internet service provider to send you an auto setup message containing the required setup information. The accounts will then be set up automatically on your P800. To guarantee the integrity of the settings, a PIN may be used.

For security reasons, some WAP pages and services, for example on-line banking, can only be accessed from a particular WAP account. Refer to the Control panel section for more information.

Note *Proxy settings for MMS message and for a WAP gateway should be set in the WAP account. Other proxy settings should be set in the Internet account.*

To set up the browser

1. Select **Edit > Preferences**.
2. Perform the setup according to the following:

Basic settings

- Enter the URL for the page to be shown when the browser is started from the application picker; either a page in the P800 or a page on the Internet.
- Select the WAP account to be used when the home page is loaded. The accounts are set up in the control panel.
- Select if images should be loaded. If images are not loaded, the page will be loaded faster. Non-loaded images can be loaded manually when viewing the page.
- Select if sounds should be played when the page is opened.
- Select if animations should be played when the page is opened.

Security settings

- Select if you want to save signed documents.
- Select if you want to connect without giving away your identity.
- Select if you want to connect using the WIM card.
- Select if you want to allow cookies.

Advanced settings

Preliminary

- Select if you want to be able to receive messages from your WAP service provider.
- Select if you want to automatically open the URL in WAP Push messages.
- Select if you want to remove out-of-date messages automatically.
- Set the size of memory where viewed pages are stored. Stored pages will load faster when you visit them again.
- Select **Clear memory** to empty the list of pages visited.
- Select **Clear cache** to empty the cache memory.

Calendar

The Calendar function helps you to keep track of appointments and events, and you can also set reminder alarms for the entries.

There are three types of entries in the calendar:

- **Appointments** - An entry with start and end time (for example, a meeting).
- **Reminders** - An entry that does not need a specified time (for example, a birthday). However, you can specify a time if you, for example, want to set an alarm. A reminder is denoted by a .
- **All day events** - An entry with start and end dates but no specific times. An appointment can overlap an All Day Event.

Different views

You can see your Calendar entries in three views with the flip open: Day, Week and Month.

To change view

- Select  to display the Day view.
- Select  to display the Week view.
- Select  to display the Month view.

The  icon places itself over the selected view.

With the flip closed you will see the Day view.

Using the calendar

To create a new calendar entry

1. Select **Calendar > New** and enter a short description of the entry. This is the description you see in the calendar.
2. Select **Unfiled** (the folder menu) in the menu bar and select a folder to store the entry in.
3. Continue to enter information to the items on the detail page.
 - **Type** - Specify if the entry is an appointment, reminder or all day event.
 - **Date** - Select the date to get a calendar where you can set a date for the entry.
 - **Time** - Set start and end time for the entry.
 - **Location** - Specify a location or select a location you have used before.
 - **Alarm** - Select the check box if you want your telephone to alert you about the entry with a sound. Select the time and date that appears for your settings.
 - **Repeat** - Specify if you want to repeat the entry or not. Read more about this below.

Preliminary

- **Private** - Select the check box to prevent the task from being viewed by others than yourself if you synchronize your calendar with, for example, your PC.
4. Select the note page tab to write a note to this entry.
 5. Select  to save and close the entry.

You should delete old entries regularly to release memory in the P800.

To repeat re-occurring entries

1. When the entry is open, select **Repeat**.
 - Set repeating to **Daily, Weekly, Monthly by date, Monthly by day, Yearly by day** or **Yearly by date**.
 - **Interval** - Specify how often the event will happen, for example, by selecting **Weekly** and **Interval 2** means that the event will go off every two weeks on the specified day.
 - **Forever/Until** - Set the time limit for the alarm or select forever.
2. **Select days** - Weekly repeated events can be set to occur twice or more in a week. For example, eating lunch with a friend Tuesday and Friday every week.

Note You cannot repeat All Day Events

To edit an entry

1. Open the entry by tapping it in the calendar.
2. Make the changes in accordance with the instructions above.

Managing entries

To find a certain entry

1. Select **Calendar > Find**.
2. Enter a search word in the menu that appears.
3. Select where to search (**Everywhere, Future, Past**).
4. Select **Find**. A result list is then displayed.
5. Select an entry on the result list to open it.

To delete an entry

- Open the entry and select **Calendar > Delete entry**.

A deleted entry may be restored with **Edit > Undo delete**.

To delete all entries in a period of time

1. Select **Calendar > Remove entries**.
2. Select the time period and select **Done**. All entries from that time period are deleted from the Calendar.

Note Repeated entries will not be deleted.

To copy, cut or paste an entry

1. Open the entry.
2. Select **Edit > Copy entry/ Cut entry**.
3. Go to the day where you want to place the entry.
4. Select **Paste entry**.

To move a Calendar item to Tasks

- Open the entry and select **Calendar > Move to Tasks**.
The entry is moved, not copied.

If you move an entry with an alarm, it will also sound in Tasks.

To cut or copy Calendar entries to the Tasks application

1. Open the entry and select **Edit > Cut entry** or **Copy entry**.
2. Open Tasks.
3. Select **Edit > Paste entry**.

Customize the calendar

You can customize the calendar views and alarm settings to suit your own needs.

To customize the calendar view, General tab

1. Select **Edit > Preferences**.
2. Select the **General** tab.

Now you can change the following settings:

- The hours to be shown in a day.
- Standard time intervals in the day view. How detailed the time is shown in the calendar day view.
- Standard entry length.
- View hours in week from/to.

To customize the alarm settings

1. Select **Edit > Preferences**.
2. Select the **Alarm** tab.

Now you can change the following settings:

- **Alarm precedes event by** - how long before an entry the alarm goes off.
- **Alarm sound** - select sound for the alarm.

To customize the screen

1. In calendar, select **Edit > Preferences**.
2. On the **General** tab you change the hours displayed in one day, one week, standard time intervals or standard entry length.
3. On the **Alarm** tab you set the alarm to proceed an entry in the calendar.

To set colours to your entries using the folders

1. In Calendar, select the folders menu to the right in the menu bar and select **Edit folders**.
2. Select a folder and select **Edit** or create a new folder by selecting **Add**.
3. Select the colour box and select colour for that folder and select **Done**.

Preliminary

Entries in a folder with a specific colour appear in that colour in Day and Week views (but not in Month view) so that you can see the pattern of events in your diary. Reminders appear as  whatever the folder colour.

Saving changes

If you leave Calendar while editing an entry, your changes will be saved automatically.

Tasks

With the Tasks function you can make a list of things you need to do. The folders help you to separate different types of activities.

You can move entries between Tasks and the Calendar, which is useful when you come to schedule a Tasks entry. You can also send an entry via text message, IR, Bluetooth wireless technology, multimedia message or e-mail.

Using Tasks

When opening Tasks you will have a task list of entered tasks. In this list you can only see a short description of the task. Select a task to see its full information.

A task entry consists of two pages. One detail page where you set the properties for the task, and one page where you can add notes.

To create a new task entry

1. Select **Tasks > New** and enter a short description of the task. This is the description you see in the task list.
2. Select **Unfiled** (the folder menu) in the menu bar and select a folder to store the task in.
3. Continue to enter information to the items on the detail page.

- **Completed** – Select the check box when task is done. This can also be done directly in the tasks list.
- **Priority** – Set a priority for the task. You can sort the tasks by priority.
- **Due date** – Select the check box to set a deadline to the task. Select the date that appears to get a calendar where you can set a due date.
- **Alarm** – Select the check box if you want your telephone to alert you about the task. Select the time and date that appears for your settings.
- **Private** – Select the check box to prevent the task from being visible when synchronized with tasks in other devices, for example your PC.

4. Select the note page tab to write a note to this entry.

5. Select  to save and close the task.

Note Delete will delete the whole task entry.

To edit an entry

1. Open the entry by tapping it in the tasks list.
2. Make the changes according to the instructions above.

Preliminary

Managing task entries

To open an existing entry

- Select the entry in the tasks list

To mark an entry as completed

- Select the check box to the left of the entry in the tasks list.

To sort the entries

- Select **Edit > Sort on priority** or **Sort on date**.

To find a certain entry

1. Select **Tasks > Find**.
2. Enter a search word in the menu that appears.
3. Select in which folder to search or use the default value **All folders**.
4. Select **Find**. A result list is then displayed.
5. Select an entry on the result list to open it.

To make a copy of an entry

1. Select **Edit > Copy entry**.
2. Select **Edit > Paste entry**.

To delete an entry

- Open the entry in the task list and then select **Delete**.

To restore a deleted entry

- Select **Edit > Undo delete**.

To delete all completed entries

- In your task list, select **Tasks > Delete completed**.

Note Unlike individual entries; when you delete All Completed Entries, they are removed permanently and cannot be restored.

Sending and moving task entries

To send an entry to another device

1. Open the entry and select **Tasks > Send as**.
2. Select how to send entry (text message, infrared, Bluetooth wireless technology or multimedia message) and then select **Done**.

To move an entry to the Calendar

- Open the entry and select **Tasks > Move to Calendar**. The entry is moved, not copied.

To copy a task entry to Calendar

1. Open the entry and select **Edit > Copy entry**.
2. Open Calendar.
3. Enter the day you wish the task to appear.
4. Select **Edit > Paste Entry** in Calendar.

Note *If you move or copy an entry to the Calendar, it will lose the priority it was assigned in Tasks.*

If you do not set a due date for the tasks entry, the current date will be used for the new Calendar entry. If you move or copy an entry with an alarm, the alarm will also be moved to the Calendar.

Settings

- Select **Edit > Preferences** to do the settings. The following settings are available.
 - **Display due dates** – Select whether or not to display them in the tasks list.
 - **Display completed** – Select whether or not to display them in the tasks list. This will *not* delete the completed tasks.
 - **Alarm sound** – Select an alarm sound from the list. You can tap the trumpet symbol to hear it.

Preliminary Jotter

The Jotter works as a notebook where you can write notes and draw pictures. The folders help you to separate different types of notes. You can read the notes with the flip closed but you should have the flip open when you work with them.

A Jotter entry consists of two pages. One text page and one drawing page.

When opening Jotter you will see a list of entered notes. In this list you can only see the first words of the text note. Select a note to see its full information.

Writing text notes

Open Jotter and select **Jotter >New**.

The new note will automatically start as a text note.

Note You write text notes on the text page by using the keys or the handwriting recognition. See the *Getting Started* chapter to get more information.

Select **A** to get bold text and **•** to create a bullet list.


Drawing pictures

The drawing mode gives you several options to draw in different styles or colours. The main window is the “paper” where you may draw with your stylus in the same way as you draw with an ordinary pen.

Select  to change colour. A colour scheme will be displayed. Select the colour you prefer.

Select  to change the virtual nib. A list of nibs representing different pen widths appears. Select the nib you want to use.

Select  to activate the eraser. The eraser is either on or off and it works like the pen. Tap the eraser again to re-activate the pen.

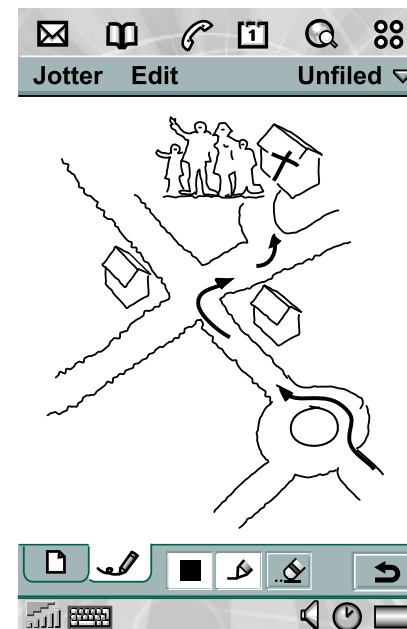

All jotter files (both text and drawings) are automatically stored in the telephone. The list view will be presented to you as soon as you start the Jotter application.

Creating and editing notes

To create a new note

1. Select **Jotter > New** and enter a note on the text page.
The first words will name the note in the jotter list.
2. Select **Unfiled** (the folder menu) in the menu bar and select a folder to store the jotter in.
3. Select the drawing page tab to draw a sketch to this note.
4. Select  to save and close the note.

To edit a note while working with it

- For text, select **Edit > Revert**
The text returns to its original state. All changes are lost.
- For sketches, select **Edit > Undo**
This choice removes your last pen stroke. If you change your mind, select **Edit > Redo**.

To create a new note from text or sketches copied from another application

1. Open the list of notes and select **Edit > Paste**.

Note *If you paste a sketch over an existing sketch, the existing sketch will be deleted.*

Create a note from the flip closed mode

1. Select **Applications > Jotter** from the flip closed mode.
2. If you have previous notes stored, these will now be listed.
Use the Jog Dial to select a previous note in order to open it.
3. Press the menu key if you want to create a new note. Select **New**. Insert your text by using the keypad.

Managing notes

To delete a note

1. Select the note in the notes list.
The note opens.
2. Select **Jotter > Delete note**.

Sending a note

You can send a Jotter note by e-mail, text message, multimedia message, infrared or Bluetooth wireless technology.

To send a note

- Open the note and select **Jotter > Send as**.
The note will be sent as text and/or with the picture depending on message type:

Preliminary

- text message: text only.
- e-mail: text as body and picture as an attachment.
- multimedia message: text and picture on first slide.
- Bluetooth wireless technology and infrared: complete jotter entry, text only or picture only.

Games

There are two pre-installed games in your P800. Traditional Chess and the card game Solitaire. You will find both games in the flip open mode's list view.

There are more games available for the P800. You will find these games on a disc in your original P800 box.

Games from third-party developers might be installed in the P800. Games which are not certified by Sony Ericsson or their partners are not guaranteed to work correctly or securely, and users install them at their own risk.

Chess

You can play Chess against the P800 or against another P800 user. In the latter mode, Chess communicates with the other player through SMS text messaging.

On completion of a move, the move data is transmitted in text message form to the other player. After transmission, the game waits for an incoming text message from your opponent and uses its contents to determine the next move on the board, at which point control reverts to you.

To start a new game

1. Select **Chess > New game** to initiate a game.

2. Enter details as desired in the **New game** dialogue. You can return to these details later.
 - **Name** – Give the game a name so you can return to it later if you have to interrupt it.
 - **Notes** – Write a note about the game.
 - **You play** – Choose to play white or black.
 - **Against** – Select the level of your opponent. If you end up winning all the games, it may be time to select a more difficult level. Choosing a higher level may, however, force the P800 to take longer to select a move.
 - **Locally** – Select if you want to play against your P800 or against another P800 user.

3. Tap **Play** to start the game.

To play Chess

1. Select the piece you want to move.
The square where it is standing will now be highlighted.
 2. Select the square to where you want to move the piece.
The square will flash and the selected piece will move to it.
- Selecting a square that is not allowed for a piece is not possible.

Preliminary

Switching to flip closed mode closes the game temporarily and saves the session status. In multi-player mode, an end-game text message is sent to the remote player.

Solitaire

Solitaire is a card game played with a standard deck of 52 cards and up to 4 Jokers.

Understand the game

The purpose of Solitaire is to remove all the cards from the piles to the layout card whilst scoring as many points as possible.

Points are awarded for playing pile cards and bonus points are awarded for unbroken, ascending or descending runs of four or more rank cards.

When you cannot play any more cards and cards still remain in the piles, the game is over. If all the pile cards are removed, bonus points are awarded and the hand is won. You are then challenged to play a Hi/Low game to acquire more bonus points. After the challenge, the game continues and a new hand is dealt with one less Joker.

Rules

When the game starts, 35 cards are dealt from the deck into 7 piles of 5 cards. A further card is then dealt face up to from the layout card.

- Cards can only be played from the bottom of the piles.
- To play a pile card it must have a face value of one or more or one less than the layout card.
- Aces are low and may not be played onto Kings. Jokers can be played onto any card and any card can be played onto a Joker.

Settings

To restart the game during a game

- Select **Solitaire > New**.

To undo/redo a move

- Select **Edit > Undo/Redo**.

To change card backs and playing background

- Select **Edit > Preferences**.

If your result is one of the sixth best it will be placed in the high score table. You can also watch individual player statistics.

Play Solitaire

Solitaire is only available in the flip open mode.

1. Select the icon for Solitaire.

The game will either start with a new game or with the layout for an earlier, interrupted game. (The game data is saved on return to desktop, when the flip is closed or when the battery is low.)

2. Select the card you want to move and it will be highlighted.
3. Select the card where you would like to move the highlighted card.

Preliminary

Voice memo

In **Voice Memo** you can record and listen to your own sound recordings. You can also exchange sound recordings between phones via Bluetooth wireless technology, infrared communication, e-mail or multimedia message, and use a sound recording as a ring signal.

You cannot name a sound recording that you have recorded. Each memo is identified by the date and time it was recorded and by its position in the list of sound recordings. For example, the third of five sound recordings is identified as **3 of 5** on the screen.

Making sound recordings

You can record and listen to your own sound recordings, as well as save and listen to sound recordings that others have sent to you.

You can add a new recording to the end of an existing sound recording. When you do this, the position of the sound recording in the list does not change and the original date and time of the recording are retained.

To record and save a sound recording

1. Select  >  > **New**.
A new sound recording is created.

2. Select  and start recording after the beep.
3. Select  to finish the recording.

The new sound recording is automatically saved in the list of sound recordings with the current date and time.

Key functions

Select...	To...
	start recording a sound.
	listen to the current sound recording.
	stop the current sound recording.
	go to the previous sound recording, in the list of sound recordings.
	go to the next sound recording, in the list of sound recordings.

To delete a sound recording

1. Select a sound recording you want to delete.
2. Select **Delete > Yes**.

Using sound recordings as ring signals

You can set a sound recording as a ring signal. Choose between a recording you have made yourself, and a recording you may have received via e-mail or in a multimedia message.

- To set a sound recording as ring signal see “*Incoming call alert*” on page 46.

Exchanging sound recordings

You can send and receive sound recordings by Bluetooth wireless technology, infrared communication, e-mail or multimedia message.

To send a sound recording

1. Select **Voice Memo** > **Send as**.
2. Select how you want to send the sound recording.

See the chapter “*Messages*” on page 59 for further details on how to send and receive sound recordings.

Preliminary

CommuniCam and Pictures

Using the camera

With the built-in camera CommuniCam you can take pictures, view them in your phone screen and send them to friends or colleagues via multimedia messaging. You can also send the pictures you have saved in your P800 to any other PC device via infrared communication or Bluetooth wireless technology. It is also possible to exchange pictures between the P800 and the web.

The pictures in your P800 can be set as background pictures or they can be added to the contacts in your phone book.

See chapter “*Personalizing your P800*” on page 121 to find out more about using pictures.

To take a picture

1. Press the camera button to activate the CommuniCam application.
2. Press the camera button again to capture the image on the screen. The picture is automatically saved in **Pictures**.

To send the picture via multimedia message, select **Send as MMS** from the flip closed context menu.

Open the flip to access the full range of CommuniCam settings. With the flip open, the CommuniCam is activated by selecting



To view, edit or send the picture, select  which takes you directly to **Pictures**.

Delay timer

You can take a picture with a 15-second delay before the actual picture is taken. This is a useful function if you want to be in the picture yourself.

To take a picture with delay timer

1. Select  > .
2. Select **CommuniCam > Delay Timer**.
3. Press the camera button. The timer beeps for 15 seconds and a timer icon is shown before the picture is taken.

Select **CommuniCam > Delay Timer** again to deactivate the delay timer.

Preferences

You may want to change some of these settings if, for example you are taking a picture in daylight or in dark surroundings. You can also choose what resolution (size and quality) you want for each separate picture.

To change preferences for the camera

1. Select  > .
2. Select **CommuniCam > Preferences**.
3. Select the setting you want to change:



Move the slider to change the brightness of the picture.



Move the slider to change the contrast.



Turn the backlight On when the light behind the subject is brighter than the light in front of the subject.



Turn the flicker free function On to reduce the effects of flicker from, for example, fluorescent light.



Choose white balance according to the lighting conditions you are in when taking the picture.



Choose quality and size for the picture. High picture quality means larger file size and larger memory size than low picture quality. The picture sizes are displayed in pixels.

To restore default camera preferences

1. Select **CommuniCam > Restore defaults**.
2. Select **Yes**.

Pictures

In Pictures you can manage all pictures saved in your P800. The pictures can be taken using the CommuniCam, received via e-mail, Bluetooth wireless technology or infrared communication, downloaded via the browser or transferred from your PC via a cable. Your P800 supports JPEG, GIF, PNG, WBPM and BMP picture formats. The pictures can be sent in multimedia messages, added to the contacts in your phone book, or used as background image and screensaver.

Preliminary

List view



In the list view, you get an overview of all the pictures in your P800. You can search for specific pictures, zoom the picture names and sort your pictures by name, date, size or type.

Change between a thumbnail view and a list view of the pictures by selecting  and .

At the bottom of the screen you can see how many pictures you have saved in your P800.


Tip To take a new picture, select  which takes you directly to the **CommuniCam**.

Tip Use the **Find** function to locate a certain picture, and the **Zoom** function to change the size of the screen fonts.

To sort the pictures

- Select **Edit** > to choose how you want to sort the pictures in your folders.

Detail view

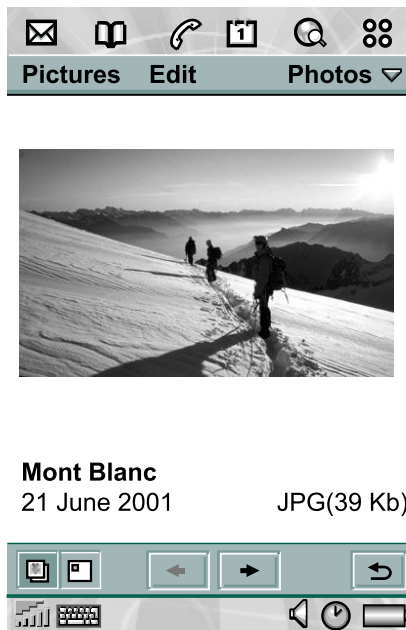

In the detail view, you can rename your pictures and sort them into folders. This makes it easier for you to keep track of the pictures in your P800.

To rename a picture

1. Select **Pictures > Rename picture**.
2. Enter a picture name > **Done**.

Note Two or more pictures cannot have the same name.

Tip Use the **Folder** function to organize all your pictures. Read more about organizing files in the chapter General functions.

At the bottom of the screen you can see the picture information, for example, the size of the picture and the date the picture was taken.

To change between the actual size of the picture and a size that fits on the screen, select  and .

Use  and  to move between the pictures in the current folder.  takes you back to the list view.

Sending and receiving pictures

You can send pictures to other phones or to a PC via multimedia messaging. You can also save pictures that you have received via e-mail and in multimedia messages.

To send a picture

- Select **Pictures > Send as**.

See “Messages” on page 59 for further details.

To save a picture from a message

- See “Messages” on page 59 for further details.

To delete a picture

1. Select **Pictures > Delete picture**.
2. Select **Yes**.

Preliminary

If you want to use one of your pictures in another application you can simply copy it and then paste it into the application of your choice.

To copy a picture

- Select **Edit > Copy picture**. A copy of the picture is saved in Pictures.

Sony Image Station

You can exchange pictures between your P800 and Sony Image Station on the Web. Use the browser in your P800 to go to <http://www.imagestation.com> and sign up.

Audio player

Your P800 has mobile music in the form of an audio player. With the audio player you can listen to the latest music tracks, or complete albums. You can download tracks to your P800 from a PC, the Internet or Memory Stick, and create different play lists, using the folder function. Your P800 supports a number of different sound files. Refer to “*Technical data*” on page 187 for more information on supported file types.

List view

In the list view, you can decide what types of sound files to include in your different play lists, and how to play back the play list you are currently in. You can also easily move between the play list view and the file list view for the current folder.

To adjust the volume

- Move the Jog Dial up to increase the volume, and down to decrease the volume.

Warning! *The volume may be uncomfortably loud at the higher volume levels if the phone is close to your ear. Exposure to excessive volume levels may damage hearing.*

Play list view


This view is intended for playing entire folders. In the play list view you can

▶ **Play**, || **Pause**, and
■ **Stop** the playback of the current folder, and see the duration of the track.

Selecting a track and tapping

▶ will Play the selected track and all the following tracks in the folder. Tap

≡ to move directly to the file list view.

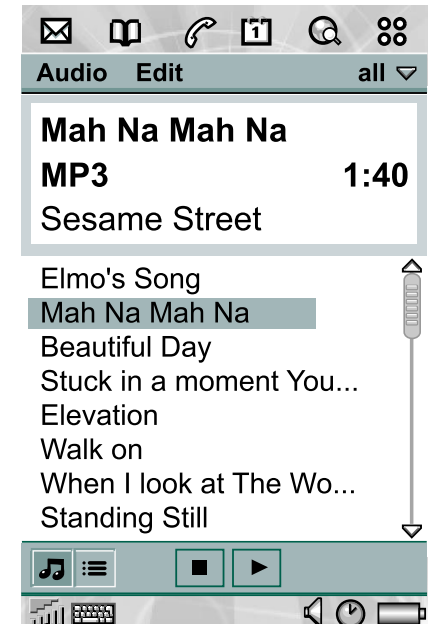


Preliminary

File list view


This view is intended for playing one file at a time. In the file list view you can see how many tracks you have in the current folder. Tapping a file name will open the Detail View, and allow you to manage that file.

Tap  to move directly to the play list view

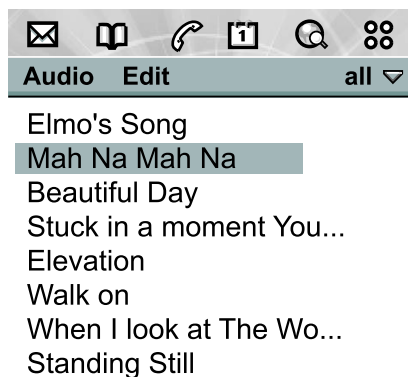

Loop

 With the loop function you can decide if you want to listen to the tracks in the current folder only once, or if you want to loop them until you manually stop the play-back.



To loop a list

1. Select **Audio > Loop**.
2. Select the check box.

Managing play lists

You can create your own play lists using the folder function. We recommend that you create folders for play lists on the Memory Stick. In any Audio player view, you can create a new folder using the **Edit Folders** command in the **Folder Menu**. Then you move or copy your sound files to the new folder to get your own play list. You can add more playlists as long as there is memory available.

Preferences

You can choose if you want all types of sound files to be displayed and played in the play lists, or if you want to display and play only a certain type of sound file. The sound files you can choose from are the ones that are supported by the P800.

To select sound file types for the play lists

1. Select **Edit > Preferences**.
2. Check the boxes next to the sound files you want to include in the play lists > **Done**.

Detail view

This view is intended for managing one file at a time. You can play and pause the file by tapping  and .

In the detail view, you can move tracks between your different folders using the folder function, send tracks to other phones or to a PC, using e-mail, multimedia messaging, Bluetooth wireless technology, infrared communication or cable. Here it is also possible to rename and delete tracks saved in your P800.

The detail view displays the name of the track, the artist name, the album title, the track number, the copyright year, the sound file type and the duration of the track.

Note *The amount of information displayed depends on how much information is available on the sound file.*

Move between the tracks in the current folder using the  and  buttons.



To rename a track

1. Select **Audio > Rename track**.
2. Enter a track name > **Done**.
Two or more tracks cannot have the same name.

To delete a track from the P800

1. Select **Audio > Delete track**.
2. Select **Yes**.

To send a track

- Select **Audio > Send as**.
See *Messaging* for further details.

Note *You cannot send MP3 or AU sound files in a multimedia message. WAV and AMR sound files can be sent using multimedia messaging.*

Preliminary

Downloading tracks

When you receive sound files in other applications, such as e-mail and multimedia messages, you activate the viewer in your P800. From the viewer you can then save the sound file to your P800.

To save a track from another application

1. Tap Save or select **Audio** > **Save**.
2. Select what folder you want to save the track in > **Save**.

Note *To create your own melodies, see the information on the CD for your P800.*



Preliminary

Audio player

103

Preliminary

Video player

You can view video clips that you have saved in your P800. The video clips can be downloaded in the P800 from an Internet site or transferred from a PC via cable or from Memory Stick. It is also possible to send these video clips to other phones or PCs, via infrared communication, Bluetooth wireless technology and multimedia messaging.

It is not necessary to download the video clips to be able to view them. You can use the streaming function and view the video clip from the website where it is located. The video clip is played with only a short time delay.

The video player supports files in the MPEG-4 file format, for example *name.mp4*.

To adjust the volume

- Move the Jog Dial up to increase the volume, and down to decrease the volume.

Warning! *The volume may be uncomfortably loud at the higher volume levels if the phone is close to your ear. Exposure to excessive volume levels may damage hearing.*

List view

In the list view, you get an overview of all the MPEG-4 video clips in your P800. You can search for specific video clips, zoom the video clip names and sort them by name, date, size or type. At the bottom of the screen you can see how many video clips you have saved in your P800.


To view a video clip

1. Select  > .
2. Select a video clip in the list.

Tip Use the **Find** function to locate a certain video clip, and the **Zoom** function to change the size of the screen fonts.

To sort the video clips

- Select **Edit** and choose how you want to sort the video clips in the current folder.

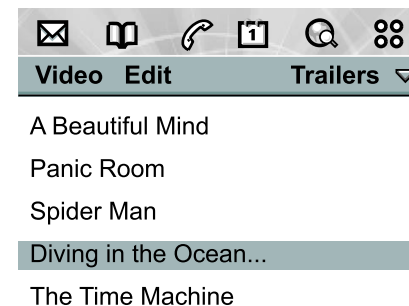

Preferences

When you download a video clip to your P800, it is saved in the download cache memory. When this memory is full, you have to empty it to be able to download new video clips to your P800.

To clear the download cache

- 1. Select **Edit > Preferences**.
- 2. Select **Clear cache > Done**.

When you view a video clip from a website, using the streaming function, a media buffer is used to provide a steady flow of data. Increasing the size of the media buffer may improve the playback of the video clip.

To change the media buffer size


- 1. Select **Edit > Preferences**.
- 2. Select **Custom setting** and move the slider left or right.

Detail view

This view is intended for managing one clip at a time. You can play and pause the clip by tapping  and .

In the detail view you can send, rename, delete or categorize your video clips. Only the video clips saved in you P800 can be handled in the detail view. To handle a video clip saved on a Sony Memory Stick, you first have to save it to your P800.

Video player

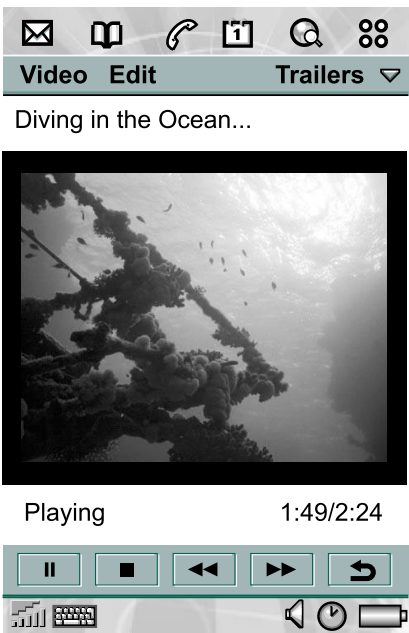

Icon	Function
	Stop the track that is playing.
 	Play/Pause the highlighted track.
	Rewind the current track.
	Forward the current track.
	Takes you back to the previous view.

Preliminary

To rename a video clip

1. Select **Video > Rename clip**.
2. Enter a video clip name > **Done**.
Two or more video clips cannot have the same name.

To send a video clip

1. Select the video clip you want to send.
2. Select **Video > Send as** and choose how you want to send it.

Tip Use the **Folder** function to organize all your video clips.

To copy the current video clip to another folder, select **Video > Copy to**, then select a folder from the list.

To view the video clip information

- Select **Video > Clip info**.

To delete a video clip

1. Select the video clip you want to delete.
2. Select **Video > Delete clip**.

Saving video clips

When you play video clips that you have received via e-mail or multimedia messaging, or that you have downloaded to your P800 from the web, the viewer detail view is automatically launched. From the viewer detail view you can then save the video clip to your P800.

To save a video clip from another application

1. Select the video clip you want to save.
2. Select **Video > Save clip**.
3. Select what folder you want to save the video clip in > **Save**.

Preliminary

Video player

107

Viewer

Viewer is an application used to view various types of documents:

- Word processing documents
- Spreadsheets
- Drawings
- PDF documents
- Presentations
- Archives

Document viewer has two views in flip open mode:

- List view** An alphabetical list of files, for selecting a file to view.
- Detail view** The contents of a file, for viewing and manipulating the file.

In addition to opening documents from the list view, you can also open a document from another application, for example by selecting an attached document in an e-mail.

The functions available differ depending on the document type. General functions are similar between the document types and are therefore described separately.

General functions

In all views there is a menu bar from where you can access some of the functions. This section describes the functions that are common to all document types.

List view

Menus	Option	Description
Viewer	Find file	Search files with a name containing a specific text.
Edit	Sort by name	Sort the file list by name.
	Sort by size	Sort the file list by file size.
	Zoom	Set the zoom level of the file list, small, medium or large.
	Zoom in	Set the zoom level of the viewed document.
	Zoom out	
	Restore	
Folders	All	Show all files in the list.
	Unfiled	Show the files that are not in a folder.
	Edit folders	Categorize your files in folders (for example business or personal).

Detail view

Menus	Option	Description
Document	Rename	Rename the document.
	Send as	Send a document as e-mail, Bluetooth™ wireless technology, IR or, multimedia message.
	Save (if opened from another application)	Save the document in the P800.
	Delete	Delete the active document.
	Properties	Show information on the active document.
Edit	Zoom in	Increase the view of the file.
	Zoom out	Decrease the view of the file.
	Restore	Restore to the original size.
Folders	Unfiled	Show the contacts that are not in a folder.
	Edit folders	Categorize your documents in folders (for example business, personal and so on).

To open a document from an e-mail

- Select the document link.
The document viewer is started, showing the detail view of the document.

Viewer

To save the document in the P800

- Select **Document > Save** from the menu.
- Select where to save the document and select **Save**.

To open a document from the list view

- Select the Application launcher icon .
- Select the Document viewer icon .
- If required, change folder.
- Scroll to the desired file and select the file name.
The document is shown in the Detail view.

To save the document to a different location

- Select **Edit > Copy to** from the menu.
- Select where to save the document and select **Save**.

Functions specific for different document types

When you open a document, the document type is indicated by the name of the first menu, for example **Spreadsheet**.



Preliminary

Detail view - Document

Menus	Option	Description
Document	Find	Search the document for a specific text.
	Find next	Search for the next occurrence of the search text.
	Clear search hits	Remove the search hits.
Edit	Copy	Copy the selected text or elements of the document.
	Select all	Select the contents of the entire document.
	Draft view	Display the document as formatted text without graphics, adapted to the screen.
	Normal view	Display the document as formatted text including graphics, adapted to the screen.
	Page view	Display the document in print preview, showing the complete layout.

To copy text from the document

1. Select the text to be copied. To select all text in the document, select **Edit > Select all**.
2. Select **Edit > Copy**.
The text is put into the clipboard and a message is displayed.

To search for a text in the document

1. Select **Document > Find** from the menu.
2. Enter the text to search for.
3. Select find.
4. If required, select **Document > Find next**.
5. To clear the highlighted search hits, select **Document > Clear search hits**.

To change the document view

1. To display the document as formatted text without pictures, wrapped to the screen size, select **Edit > Draft view**.
2. To display the document as formatted text including pictures, wrapped to the screen size, select **Edit > Normal view**.
3. To display the complete layout of the document, select **Edit > Page view**.

Detail view - Spreadsheets

Menus	Option	Description
Spread-sheet	Find	Search the document for a specific text.
	Find next	Search for the next occurrence of the search text.
	Clear search hits	Remove the search hits.
Edit	Copy	Copy the selected text or elements of the document.
	Select all	Select the contents of the entire document.
	Draft view	Display the document as formatted text without graphics, adapted to the screen.
	Show gridlines	Turn the gridlines on/off.
	Next sheet	Open the view of the next sheet in the workbook.
	Previous sheet	Open the previous sheet in the workbook.

To copy text from the document

1. Select the text to be copied. To select all text in the document, select **Edit > Select all**.
2. Select **Edit > Copy**.
The text is put into the clipboard and a message is displayed.

To search for a text in the document

1. Select **Document > Find** from the menu.
2. Enter the text to search for.
3. Select find.
4. If required, select **Document > Find next**.
5. To clear the highlighted search hits, select **Document > Clear search hits**.

To change the document view

1. To display the document as formatted text without pictures, wrapped to the screen size, select **Edit > Draft view**.
2. To display the document as formatted text including pictures, wrapped to the screen size, select **Edit > Normal view**.
3. To display the complete layout of the document, select **Edit > Page view**.

To show/hide the spreadsheet grid lines

1. Select **Edit > Show gridlines**.

To navigate in the workbook

1. To go to the next sheet in the workbook, select **Edit > Next sheet**.
2. To go to the previous sheet in the workbook, select **Edit > Previous sheet**.

Preliminary

Detail view - Drawing

Menus	Option	Description
Drawing	Find	Search the document for a specific text.
	Find next	Search for the next occurrence of the search text.
	Clear search hits	Remove the search hits.
Edit	Fit to width	Displays the drawing with a width equal to the screen width.
	Fit to window	Displays the drawing with a width and height equal to the screen width and height.
	Next slide	Open the view of the next slide in multi-page documents.
	Previous slide	Open the view of the previous slide in multi-page documents.

To search for a text in the document

1. Select **Document > Find** from the menu.
2. Enter the text to search for.
3. Select find.
4. If required, select **Document > Find next**.
5. To clear the highlighted search hits, select **Document > Clear search hits**.

To navigate in a multi-page drawing

1. To go to the next slide in the drawing, select **Edit > Next slide**.
2. To go to the previous slide in the drawing, select **Edit > Previous slide**.

Detail view - Archive

Menus	Option	Description
Edit	Open	Open the selected file for viewing in a Document viewer window.
	Extract	Extract the selected file to be saved in a selected folder.
	Extract all	Extract all the archive files to be saved in a selected folder.
	Sort by	Allow the user to view files in an archive by name, date, or size.
	Sort order	Allow the user to view files in ascending or descending order.

To extract documents from an archive

1. To open a file for viewing in the Document viewer, select the file and select **Edit > Open**.
2. To extract a file and save it in the selected folder, select **Edit > Extract**.
3. To extract all files in the archive and save them in the selected folder, select **Edit > Extract all**.

To change the archive sort order

1. To sort the documents by name, date or size, select **Edit > Sort by** and select as desired.
2. To change between ascending and descending order, select **Edit > Sort order**.

Online services

Online services is a customized service offered by a network operator.

This symbol  indicates that a service or function is network- or subscription-dependent.

On-line services provides a mechanism that allows applications that exist on the SIM to interact and operate with the P800. It may provide services ranging from weather forecasts to the latest information from the stock market.


Online service are placed on your SIM card by your operator.

Note *Contact your operator to find out which services are available for your account.*

Preliminary

Preliminary Time

The time and date are always displayed in standby mode. You can customize the display of times and dates throughout your P800. You can set your current location and another location of your choice. It is also possible to set three different alarms.

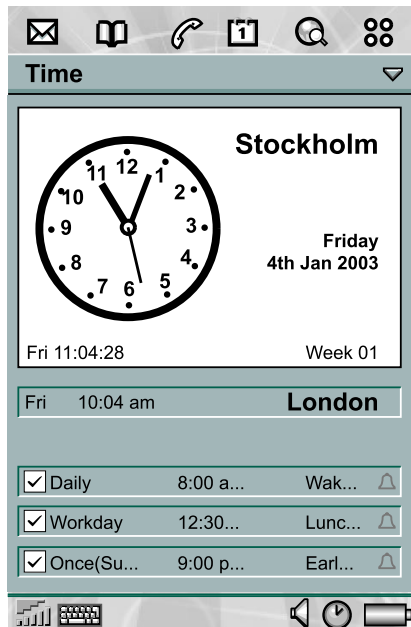

Current city

Current date


Other city

Alarm slot

Time and date

To set the current time and date

1. Select > .
2. Tap the clock to view the current time and date settings.
3. Tap the Date box, then use the arrows to set the current year and month. Then select the current day.
4. Tap **Daylight saving time**, then select the check box next to the zone that currently has summer time > **Done**. This is only required if you are currently in a country with summer time.
5. Tap the time box, then tap the upper half of the hour or minute box to increase the number displayed, or the lower half to decrease the number.

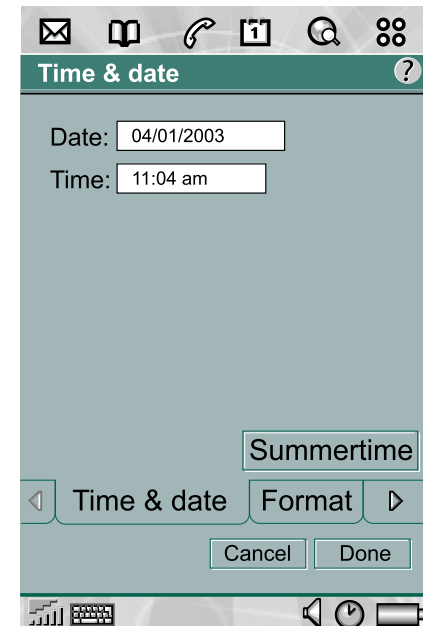


- Use the **am/pm** box to switch between am and pm > . This is only possible if you use the 12-hour time format.
- Select **Done**.

Format

You can specify how you want the time and date to be displayed on the screen, and if you want to use the 12- or 24-hour time format.

To set the time and date display format

- Select > .
- Tap the clock to view the current time and date settings.
- Select **Format**.
- Tap the Date Format box > choose a format.
- Tap the Date Separator box > choose a separator.
- Select a **Time format**.
- Tap the Time separator box > choose a separator.
- Select **Done**.

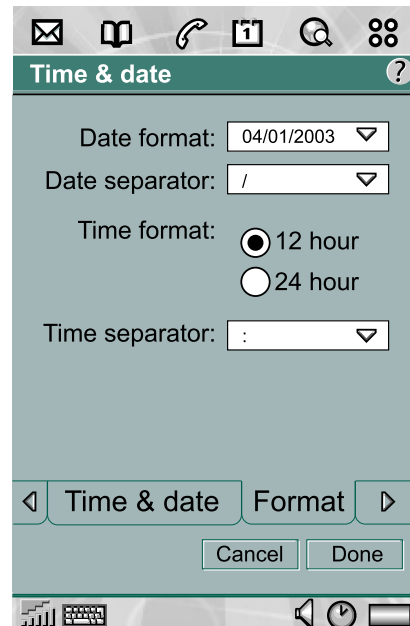


Workdays

You can specify what days you work, if, for example, you want to set an alarm that sounds only on workdays. You can also specify the first day of your week to customize the display of both Week and Month views in Calendar.

To specify your workdays

- Select > .
- Tap the clock
- Tap the right arrow key icon twice.
- Tap the check boxes next to the days you normally work.
- Select **First day of week** > choose a day.
- Select **Done**.

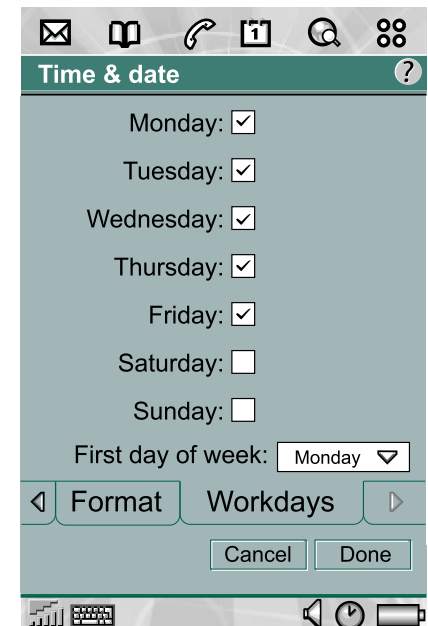

Preliminary


Locations

Specify the country and city you are currently in. The city you select will be displayed next to the clock in Time.

If you are away from home, for example travelling in another country, it can be useful to know what the time is in your home country as well as the country you are in. The city you select as Other City will be displayed below the clock in Time.

To set the locations

1. Tap  > .
2. Tap **Time** > **Set location**.
3. Tap the Current Country box > the country you are in at the moment.
4. Tap the Current City box > the city you are in at the moment. If the city you are in is not listed, select the city closest to you.
5. Tap the Other Country box > choose a country.
6. Tap the Other City box > choose a city.
7. Select **Done**.

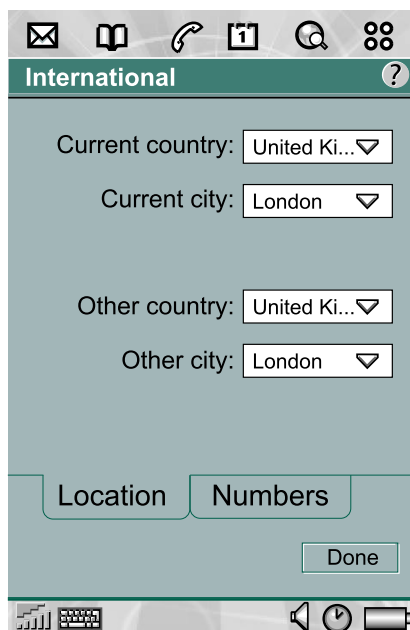

Numbers

You can choose how you want the measurements and numbers in your P800 to be displayed in all your applications. Distances can be displayed using the imperial or the metric system and different punctuation marks can be used as separators.

To set the number details

1. Select  > .
2. Select **Time** > **Set location**.
3. Select **Numbers**.
4. Tap the distance boxes > choose imperial or metric.
5. Choose separators and symbol position in the same way as in 4.
6. Select **Done**.

Alarms

You have the possibility to set up to three different alarms in your P800. You can choose to activate one of the preset alarms, or set a new alarm with your own definitions.


You can choose to set a silent alarm, where only a message is displayed when it goes off, or you can set a sound alert.

To activate an existing alarm

- Select the check box in the alarm slot.  is displayed on the status bar on the screen.

To set a new alarm

1. Select  > .
2. Select one of the alarm slots.
3. Select **Time** > choose at what time you want the alarm to go off.
4. Select **When** > choose how often you want the alarm to go off:
 - **Once** The alarm will go off at a time more than 24 hours from now but within the next eight days.
 - **Next 24 hours** Within the next 24 hours.
 - **Daily** Every day at the specified time.
 - **Weekly** Every week at the specified time.
 - **Workdays** Every workday at the specified time.
5. Select **Alarm sound** > choose a sound.
6. Select **Message** > choose a preset message or write a new one.
7. Select **Done**.

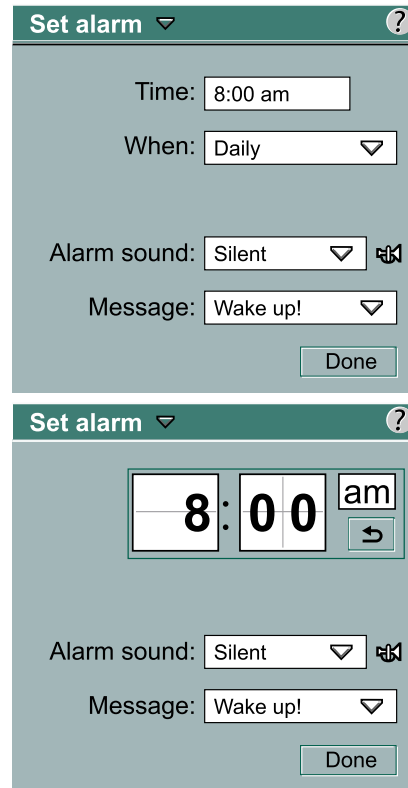

8. Make sure the check box next to the alarm is selected.

When the alarm goes off, select **Snooze** to postpone the alarm for five minutes or **Silence** to turn off the alarm sound. To turn off the alarm completely, select **Done**.

Preliminary

Calculator

The Calculator is a standard 10-digit calculator. You can add, subtract, multiply, divide, calculate square root and percentage. It also has a memory function.

To use the calculator

1. Select  > .

2. Enter the calculations by tapping the digits.

All calculations, except percentage calculations, are performed as they are entered, for example: $5+5 \times 5=50$, not 30.

Percentage calculations are performed backwards. To calculate, for example, 10% of 50, enter $50 \times 10\%$. The result is displayed when you tap the %-key.

Key functions

- | | |
|---|---|
| <i>m+</i> | Tap once to store an entered value in the memory.
If you already have entered a value in the memory, tap once to add the value on the screen to the value in the memory. |
| <i>mr</i> | Tap once to retrieve a value from the memory and enter it into the screen.
Tap twice to clear the memory. |
| <i>m-</i> | Tap once to subtract the entered value from the value in the memory. The memory is adjusted but not displayed. |
|  | Tap once to delete the last digit you entered. |
| <i>C</i> | Tap once to reset the screen to 0. |

You can copy and paste values to and from other applications by selecting **Calculator > Copy** or **Paste**.

Values stored in the memory are retained while using other applications.

Personalizing your P800

There are a number of ways you can give your P800 a personal touch and change its settings to suit your requirements.

Changing your application shortcuts

The standby screen displayed when the flip is closed shows five short-cuts to applications.

From the  **Control panel** you can change them, rearrange them as you prefer, or even hide them, if you wish. See “*Application shortcuts*” on page 23.



Displaying the Area Code in the Standby Screen

If your network operator provides CBS (Cell Broadcast Services) with cell information you can set your P800 to display the area code below the network name in the standby view. See “*CBS tab*” on page 140.

Setting a background picture

From the  **Control panel** you can set a background picture for the stand-by screen. See “*Wallpaper*” on page 127.

You can obtain suitable background picture files by downloading, beaming using  **Bluetooth** or  **Infrared**, or transferring them from your PC.

Background picture images are 208 x 144 pixels and the picture can be seen in the standby screen. (Any chosen picture will be scaled to fit well on the screen). The images can be JPEG, GIF, BMP, WBMP, MBM or PNG format.

Setting a Screen Saver

You can set a screen saver picture to be displayed after a period of inactivity. From the **Control panel** you can also turn this facility on and off and select the delay period before the screen saver is displayed. See “*Display*” on page 127. Key lock and device lock may be used in combination with the screen saver. When you press a key or touch the screen, you will be prompted to activate keys and/or enter the device lock code.

Preliminary

Picture format for the screen saver is 208 x 320 pixels.



Adding images to your Contacts

You can store a picture with each entry in Contacts. See “Managing contacts” on page 55.

Pictures are easily taken using the CommuniCam (see “CommuniCam and Pictures” on page 94) though of course other images can be used.



If your network operator provides a CLI (Calling Line Identity) service, your P800 can display the contact's picture together with the other information when an incoming call is received with a CLI matching that contact (not all numbers can be displayed). The contact's picture is also displayed when making a call.

To show the contact's picture when receiving an incoming call

1. Select **Phone > Edit > Preferences > Incoming call picture**
2. Select the **Show picture for incoming calls** check box.
3. Tap **Done**.

Ring signals

Your P800 can play both iMelody format and polyphonic ring signals (WAV, AU, AMR, and MIDI sound file formats). You can add as many ring signals as desired, subject only to available file space.

A ring signal may be selected for an entry in **Contacts**, so that the caller can be identified by the ring signal that is played.

You can use a recording as a ring signal. See “Voice memo” on page 92. Choose between a recording you have made yourself, and a recording you may have downloaded, transferred from your PC, or received via e-mail, EMS message or MMS message.

The recommended format for WAV files is PCM, 22,050 Hz, 8 bit, Mono, often called 'radio quality'. This format requires approximately 22 kilobytes of space for each second duration. Many PC audio applications support WAV.

Alarm tones and sound notification

You can choose different sounds for alarms and notifications in these applications:

-  **Time** See “*Alarms*” on page 118
-  **Calendar** Set a sound for reminder alerts, see “*Customize the calendar*” on page 81)
-  **Tasks** Set a sound for reminder alarms. See “*Settings*” on page 85
-  **Messages** Set a different sound for each type of message as notification of a new message:
See “*Alerts*” on page 141

Master reset

In the  **Control panel** you can reset all the settings in your P800 to the way they were when you originally bought it. See “*Master reset*” on page 136 for more details.

Control panel

The Control Panel is the location for all the main settings on your P800 that are system-wide and affect more than one application. This is the main place to go to initially set up your P800, and to change settings at any point thereafter. To access it, select  **Control Panel** in  **Applications**.

Tip You can find settings that apply to a single application in the **Preferences** menu of the application, for example: **Phone > Edit > Preferences**, **Communicam > Preferences**, **Internet > Preferences**

To make the **Control panel** settings easier to find, they have been grouped into three groups shown on separate tabs: **Device**, **Connections** and **General**:

<i>Device tab</i>	<i>Connections tab</i>	<i>General tab</i>
Certificate Manager	Bluetooth	International
Display	Cable	Time & date
Flip closed shortcuts	Infrared	
Flip removed	Internet accounts	
Format disk	IP security manager	
Language	Messaging accounts	
Master reset	Secure tokens	
Storage manager	WAP accounts	
System sounds		
Text input		
User greeting		
WIM management		

To see a list of all control panel settings and the groups to which they have been assigned, select **Control panel > Set groups**.

- To sort the list of settings by group name: at the top of the list, select **Group**.
- To change the group to which a setting is assigned: select the name of the setting in the list.

The sections below, arranged in alphabetical order, describe the settings available for each of the default items in the **Control panel**.

Bluetooth

Bluetooth™ wireless technology uses radio waves to enable wireless connections between your P800 and other Bluetooth-enabled devices. This method of linking works well at a range of up to 8-10 metres. Obstructions between the transmitting devices will have an effect on the performance.

Bluetooth settings are shown on two tabs:

- Devices** A list of all the Bluetooth-enabled devices that your P800 is paired (bonded) with.
 - To change the name of a device, select the name in the list.
 - To remove a device from the list, select the name and select **Remove**.
- Settings**
 - A “friendly” device name for your P800.
 - Security-related settings:
 - Its Bluetooth wireless technology operation mode.
 - How it should act when receiving a beamed entry.

Tip *You will probably find that the preset name of your P800, and of devices you pair it with, are not very meaningful or easily recognizable. It is a good idea to change these names to something more useful. The name you choose for your P800 appears on any devices you pair it with.*

To locate other Bluetooth-enabled devices in the vicinity

- Select **Add**. The **Available Bluetooth devices** dialogue opens:
 - All enabled devices that are discoverable within range are shown with their name and icon. You can use **Show:** to restrict the list to one category (only PC, for example).
 - Paired devices that are within range are shown with regular text.
 - Non-paired devices that are within range are shown with their names in *italics*.

- Devices that are within range but unknown are shown with a preset name.

If a device you want to pair with your P800 does not appear in the list, check that:

- It is on and within range.
- Bluetooth function on the device has been activated and that it is in discoverable mode.

To pair a device to your P800

1. Select the device in the **Available Bluetooth devices** list.
2. If the device requires a passkey, you will be asked to enter it.
3. Select **Done**.

Note *The other device (a PC, for example) may require that you enter the same passkey in its own dialogue.*

Security

On the **Settings** tab you can make the following security-related settings:

- You can set your P800 to different operation modes:

- On** All Bluetooth wireless technology functionality from your P800 works. Your P800 is *connectable*, paired devices can access it.
- Auto** All Bluetooth wireless technology functionality from your P800 works. Your P800 is *not connectable*.

Preliminary

- Off** Bluetooth wireless technology is turned off.
- Discoverable** Other Bluetooth-enabled devices can find and connect to your P800. To pair with another device, your P800 must be **Discoverable**.
- You can also set how your P800 should act when receiving beamed items:
 - Always receive** Receives the entry automatically.
 - Ask first** You will be shown a **Connection request** that you can accept or reject.
 - Never receive** Rejects the item automatically.

Cable

Use **Cable** to set the cable connection mode and the connection parameters used when communicating through your P800's cable port.

Select **Control Panel > Connections** and select **Cable** to:

- Choose the cable connection mode: when connecting via cable the P800 must be set in PC connect mode or Modem mode, see table below.

PC connect mode	Modem mode
- Synchronization - Installation of software - Backup and restore	- P800 as a modem - Phone Book Manager (PC software)

- Set the baud rate, parity, number of stop bits, character length and type of flow control required for the connection. When connecting your P800 via the desk stand to a USB port on your PC, use the following (default) settings:

Baud rate	460800
Parity	None
Stop bits	1
Character length	8
Flow control	CTS/RTS

Tip You can set the cable connection mode when the flip is closed by selecting  **Applications>**  **Connections >**  **Cable**.

Certificate manager

Digital certificates ensure that the web or WAP pages you visit, or any software you install, really are created by the person you expect.

Certificates may be present on the pages that you view or the software that you download. Your P800 compares these certificates with a set of certificates that are stored in **Certificate manager** to ensure the authenticity of the page or software. If the certificates do not match, your P800 informs you, and gives you the following choices:

- Prevent the page being loaded or the software being installed.
- Continue at your own risk.

The certificates on your P800 have been created and issued by an independent organisation that ensures their authenticity.

Security information

Security information is displayed when **Certificate manager** cannot be sure of the origin of the page or software. For example, security information will be displayed if:

- The certificate on a page has expired.
- The identity of a software manufacturer cannot be verified.

Security information is also displayed when a certificate on your P800 has:

- Expired.
- Been revoked by the independent organisation that issued it.

Adding and removing certificates

Your P800 handles certificates automatically so, most of the time, you can browse the Internet securely without using **Certificate manager**. If you *do* need to add or remove a certificate, you will usually be informed by your network operator or system administrator. You should remove a certificate from **Certificate manager** if you are informed, or suspect, that:

- The certificate does not belong to the person who supplied it.

- The certificate was issued incorrectly by the independent organisation that created it.

Type of certificate

The type can be either **Certificate Authority** or **User**.

- **Certificate Authority** certificates contain server details. This type of certificate is handled by your P800 when the server only requires server authentication. This means that your identity remains anonymous.
- **User** certificates contain your identity. This type of certificate is used when the server asks for client authentication. The client application requests you to identify yourself by choosing a user certificate.

Display

Use the **Display** settings to control the screen and power functions of your P800.

Wallpaper

You can set a picture to be the background for the standby screen. (See “*Flip closed - overview*” on page 22 for details on the standby view.) Select **Browser** from the drop-down list to see picture files available on your P800. Read more about background pictures in “*Personalizing your P800*” on page 121.

Preliminary

Screen saver

You can set a screen saver picture to be displayed after a period of inactivity. You can also turn this facility on and off and select a delay period of up to 15 minutes before the screen saver is displayed. Read more about screensaver images in “*Personalizing your P800*” on page 121.

If you select the **Phone lock protected** check box the Device lock will activate when the delay runs out. Read more about locks and security in “*P800 locks*” on page 33.

Power save

You can set a power saver to switch off the screen after a period of inactivity (2, 3, 5, 7, 10, 15, or 30 minutes). When the power saver activates, the screen will be switched off.

If you set times for both screen saver and power saver, the power saver setting will automatically be set higher.

Light

You can set the screen light settings for car use and handheld use.

- Auto** Light switches on when you tap the screen, press a key, or receive an incoming call
- On** Light is always on
- Off** Light is always off

Lock

Select **Lock** to activate the screen saver immediately. If the **Phone lock protected** check box has been selected, this will also activate the Device lock.

Calibrate

Occasionally you may find that you tap one item (for example a button or menu option) but another is activated. Calibrating the screen ensures that the correct item is activated. To restore calibration to the factory settings, press the Jog Dial.

Flip closed shortcuts

Use this dialogue to configure the application shortcuts shown in the Flip Closed **Standby** view, see “*Standby view*” on page 23. You can change the five shortcuts shown. If you feel that the shortcuts obscure your background image, you can choose to have them hidden when you do not need them. By default these shortcut icons are displayed:



To change an application shortcut in the Standby view

1. In the **Flip closed shortcuts** dialogue, select the icon you wish to change. The name of the application is shown in the **Set Application** pick list.
2. Choose the application you want to replace it with from the list.

To hide the application shortcuts when your P800 is inactive

3. Clear the **Shortcuts always displayed** check box.

Flip removed

When you use your P800 with the hardware flip removed, you can use the keys on the virtual flip instead. Use this setting to turn it on or off (see “*Virtual flip*” on page 26).

Format disk

This dialogue primarily lets you rename and format any Sony Memory Stick Duo that you install in your P800. Your P800 comes with one Memory Stick Duo.

When you format a disk, you delete all the information on it, including any applications that you may have installed.

Your P800’s internal ROM drive is also listed in the dialogue, so that you can rename it to give it a more meaningful name if you wish.

Control panel

Infrared

Use this setting to control the state of the infrared communications port of your P800. You can set it **On**, **Off** or **On for 10 minutes**. Read more about connecting to other devices using infrared in “*Connection via infrared port*” on page 151.

International

Use these settings to set the locations shown in  **Time**, as well as the units for distances, numerical separators, and how currency values should be shown. There are two tabs: **Locations** and **Numbers**.

On the Locations tab

- Set **Current country** and **Current city** to your current location.
- Set **Other country** and **Other city** to an alternative location (for example your home location if you are abroad).

If the city you want is not listed, select another city in the desired time zone.

On the Numbers tab

- Set **Long Distance** and **Short distance** to **Imperial** or **Metric**.

Long distances are those that are displayed in and are measured in miles or kilometres. Short distances are those that are measured in metres or and centimetres, or feet and inches.

Preliminary

- Set the decimal separator and thousands separator you desire.
- For applications that use currency values you can set a currency symbol and choose how the symbol should be placed in relation to the symbol.

Internet accounts

You access the Internet using an Internet Service Provider (ISP), who supplies you with account details including: a username, a password, and the phone number or web site address that your P800 automatically uses to access the Internet. You need to set up an Internet account before you can:

- Access web pages and download multimedia messages.
- Set up an e-mail account to send and receive e-mail messages.

Tip *A simple way of setting up an Internet account is to ask your service provider to send you a message that contains the required information to create an account automatically on your P800.*

There are three types of Internet account:

Dial-Up account:



With a Dial-Up account, you're charged for the length of time that you are connected to the Internet.

High-speed Dial-Up account:



This is a special kind of Dial-Up account. With a High-Speed Dial-Up account, you're charged for the length of time you're connected but you can increase the connection speed so that information is transferred faster. Billing rates from your Internet Service Provider (ISP) may increase as you increase the connection speed.

GPRS account:



With a GPRS account, you're charged for the amount of information you view, download, or send.

The dialogue has two tabs: **Accounts** and **Other**.

Accounts tab

The Internet accounts dialogue lists all the Internet accounts that have been set up on your P800.

You can add a **New** account to the list and **Edit** or **Delete** an existing account.

If you want to select an Internet account every time you connect to the Internet, select the **Show connection** dialogue check box.

This may be useful if you use different Internet accounts for



Internet and



Messages.

Whenever you connect to the Internet, your **Preferred** account is the account that your P800 prompts you to use.

To create a new Internet account

1. On the **Accounts** tab, select **New**.
2. Give the account a name. This will be the name shown in your list of accounts. (In dialogs that appear while a connection is being established the text **-GPRS** is automatically added to names of GPRS accounts.)
3. Choose the **Connection type** for the type of account that you want to create, GPRS or Dial-Up.
4. Continue entering settings as required. These will differ depending on the type of account: GPRS, Dial-Up or High-Speed Dial-Up:

New GPRS account

For some accounts you may need to make advanced settings. If advanced settings are required, they must be provided by your ISP. Select **Advanced** and enter settings on the tabs as described below:

GPRS Advanced settings tabs

Server	User name and password
	Normally, you do not have to enter a user name and password when you connect to a GPRS account. However, some service providers may require you to enter these details.
	If you select the User name and password required check box, but do not enter a user name and password, you will be prompted to enter these when the P800 connects.

Address

Enter the Internet address of your access point. The address is supplied by your service provider.

Log in

The settings on this tab deal with IP and DNS addresses. The DNS address uniquely identifies your Internet Service Provider (ISP)'s computers, which your P800 uses to connect to the Internet. Your P800 can normally fetch these addresses automatically from most ISPs. If, after setting up an Internet account, you cannot connect to the Internet and you suspect these addresses are incorrect, ask your ISP for their primary and secondary DNS addresses.

Preliminary

GPRS Advanced settings tabs

IP address types

There are four different types of IP addresses:

- **IPv4:** Consists of four 3-digit boxes and valid input is between 000 and 256 in each box.
- **IPv6:** Consists of eight hexadecimal boxes and valid input is between 0000 and FFFF.
- **IPv4 compatible:** Consists of six hexadecimal boxes and four 3-digit boxes. The last hexadecimal box is prefilled with 0:0:0:0. Only the four 3-digit boxes can be changed, and the valid input is between 000 and 256.
- **IPv4 mapped:** Consists of six hexadecimal boxes and four 3-digit boxes. The last hexadecimal box is prefilled with F:F:F:F. Only the four 3-digit boxes can be changed, and the valid input is between 000 and 256.

IPv4 is the most common addressing method.

Proxy

A proxy server is a computer connected between your P800 and the computer you communicate with. This arrangement can be used for connections to SyncML servers, or within a company network. If this setting is needed, your company's Information Services department or SyncML provider must give you instructions.

GPRS Advanced settings tabs

Other

If your Internet Service Provider (ISP) supports Point to Point Protocol (PPP) extensions, you can select the **Enable PPP extensions** check box. PPP extensions allow your P800 to provide features such as encryption, which increases the security of your Internet connection.

Your ISP may require plain text authentication. If you select the **Plain text authentication** check box, the security of your connection will decrease during the connection process. Once you are connected, the security of your connection will be restored.

QoS

Check with your mobile operator before changing any of the QoS (Quality of Service) settings. If your operator supports the use of **Header compression**, selecting **On** can speed up your connection. The settings **Precedence**, **Delay**, **Reliability**, **Peak rate**, and **Mean Rate** are all by default set to **Subscribed**, which means that your operators default QoS (Quality of Service) values will apply.

New Dial-Up or High-Speed Dial-Up account

Your Internet Service Provider (ISP) supplies you with your **User name**, your **Password**, and their **Phone number**, which your P800 dials to connect to the Internet. If you have a High-Speed Dial-Up account with your ISP you can increase the speed of your connection by making settings under **Advanced** settings on the **Speed** tab.

Tip To avoid having to change the phone number when you travel abroad: enter the international dialling prefix (for example '+') and the appropriate country code for your ISP.

For some accounts you may also need to make advanced settings.

Select **Advanced** and enter settings on the tabs as described below

Dial-Up and High-Speed Dial-Up advanced settings tabs

Log in	The settings on this tab deal with IP and DNS addresses. For an explanation of these settings, see Log in in the table <i>GPRS Advanced settings tabs</i> .
Script	As an alternative to entering your user name and password to access the Internet you may need to use a login script stored on your P800. Although uncommon, scripts may be required by your Internet Service Provider (ISP). Select the Use login script check box and enter the script text in the Script editor . If you select the check box Plain text authentication (required by some ISPs), the security of your connection will decrease during the connection process. Once you are connected, the security of your connection will be restored. Select the check box Post connect terminal if: • The login script of the account that you are setting up requires that you input certain information or you will need to respond to prompts from the Internet account. • You are connecting to a Dial-Up account that uses Secure Access generated by a separate smart card or password generator.
Proxy	For an explanation of these settings, see Proxy in the table <i>GPRS Advanced settings tabs</i> .

Preliminary

Dial-Up and High-Speed Dial-Up advanced settings tabs

Speed You can only increase the speed of your connection if you have a High-Speed Dial-Up account with your Internet Service Provider (ISP).

Dial-Up and High-Speed Dial-Up advanced settings tabs

Secure To enable secure access for this Internet account you must link it to a vendor-associated Secure Token in this dialogue:

1. Select the Enable secure access check box.

To create or delete Secure Tokens on your P800, select **Control panel > Connections > Secure tokens**.

2. Select the vendor and token names of the Secure Token that you want to link to this account from the drop-down lists.

Other If your Internet Service Provider (ISP) supports Point to Point Protocol (PPP) extensions, you can select the **Enable PPP extensions** check box. PPP extensions allow your P800 to provide features such as encryption, which increases the security of your Internet connection.

If the computer that you connect to supports call back, it can break the Internet connection after you have logged in and then call your P800 back to re-establish the connection. Call back saves you money and increases security.

To enable call back:

1. Select the **Use call back** check box.
2. In the **Call back type** list, choose whether you want the ISP to call you back using the phone number stored on the provider's server (**Use server number**) or another phone number (**Use number below**).

To Edit an Internet account

1. On the **Accounts** tab, select the account in the list.
2. Select **Edit**.
3. Change your settings as desired.
4. Select **Done**.

Note *If you change the **Connection type**, all account data for that account will be deleted.*

To Delete an account

1. On the **Accounts** tab, select the account in the list.
2. Select **Delete**.
3. Select **Done**.

Other tab

You can use the **Dial-Up timeout** and **GPRS timeout** settings to set up your P800 to disconnect automatically from the Internet, if you're not using it. The connection is broken after the period you specify has lapsed.

Preferred Mode (bearer preference)

Select **GPRS only** if you do not want to be disturbed by incoming phone calls while browsing the web. All incoming voice (and GSM data) calls are rejected.

When you have selected **GSM only**, no GPRS data connection is possible.

Control panel

If you select **Automatic**, your P800 will let you answer incoming GSM calls while having normal GPRS functionality. A GPRS data connection will be temporarily interrupted by a voice call.

IP security manager

The IP security manager displays stored policies and only one policy can be activated at a time. This is used for secure connections over the Internet, typically to a corporate intranet. If needed, your company IS department will supply the necessary information.

There are two types of passwords needed:

- **IP security password:** is to be set when activating the very first policy, that is, this password is only set once, but it is possible to change it later at any time by tapping the **Password** button.
- **Activation password:** is needed when a policy is activated for the first time and the supplier of the policy gives this.

Language

Use this list of all languages stored on your P800 to change language. The highlighted entry is the language presently in use.

Preliminary

Tip *To conserve storage space only a limited set of languages is loaded on your P800 at delivery. You can use the P800 Change Language utility on the **PC suite for P800** CD to load and delete languages.*

Master reset

Use **Master reset** to return your P800 to the state it was in when originally delivered.

Warning! *All user data will be deleted and all settings will be in your P800 to the way they were when it was originally delivered.*

If you want to keep installed applications clear the **Delete user installed applications** check box.

Messaging accounts

The  **Messages** application can handle many different types of messages, but you must first set up accounts and make settings as described below.

The Messaging accounts dialogue has four tabs, one for each type of messaging account:

- Email** You can have any number of e-mail accounts. To receive and send e-mail, you must first set up an Internet account (if one isn't already set up). See “*Internet accounts*” on page 130.
- SMS** You can only have one SMS message (Short Message Service) account. These settings also apply to EMS (Extended Message Service) messages.
- MMS** You can only have one MMS message (Multimedia Messaging Service) account. To receive MMS message WAP-based content you must first set up an Internet account (if one isn't already set up). See “*Internet accounts*” on page 130.
- CBS** You can only have one CBS (Cell Broadcast Services) account. The number of Area Information channels that you can subscribe to is limited by the space on your SIM.

Tip *A simple way of setting up an e-mail or multimedia message account is to ask your service provider to send you a message that contains the required information to create an account automatically on your P800.*

Read more about the different types of messages in “*Messages*” on page 59.

Email tab

The **Email** tab shows a list of the e-mail accounts on your P800. You can add a **New** account to the list and **Edit** or **Delete** an existing account.

You can choose one of your e-mail accounts as **Preferred**. This will be the e-mail account that your P800 uses when you use **Send as** to send an entry as e-mail directly from one of your P800 applications

To create a new e-mail account

1. On the **Email** tab, select **New**.
2. On the **Basic** tab, enter the following settings:

E-mail account basic tab settings

Account name	This is the name you give to your e-mail account.
Your name	This name appears on your outgoing e-mail messages.
Email address	Your Internet Service Provider (ISP) supplies you with your e-mail address.
Connection type	Select POP3 or IMAP. POP3 is most common.
Internet account	Select the Internet account to access your e-mail messages.

3. On the **Inbox** tab, enter the following settings, as required:

E-mail account Inbox tab settings

User name	Your Internet Service Provider (ISP) supplies you with your user name, your password, and its
Password	incoming server address, which identifies the
Incoming server address	computer where your incoming e-mail messages are stored.
Download	If you do not have much time to download your e-mail messages, you can choose to receive just Just headers (the sender, subject, and date only) or set a size limit (if a message is larger than the e-mails smaller than limit, only the headers are downloaded). You can download the complete message later.
Schedule	Select Schedule to schedule an automatic download of your incoming e-mail messages. Messages that are waiting in your Outbox will not be sent at the same time.

Preliminary

4. On the **Outbox** tab:

E-mail account Outbox tab settings	
Outgoing server address	Your Internet Service Provider (ISP) supplies you with its Outgoing server address, which identifies the computer through which your outgoing e-mail messages are sent.
Use SMTP authentication	Some SMTP servers might require authentication also when sending e-mail. In that case, select the check box Use SMTP authentication and enter your User name and Password .
Use Inbox login details	If the SMTP server accepts using your Inbox login information for authentication, select the check box Use Inbox login details .

5. On the **Advanced** tab:

E-mail account Advanced tab settings	
Secure connection	Your Internet Service Provider (ISP) will tell you whether you can use either a Secure connection or Secure password authentication .
Secure password authentication	A secure connection means that all information (including your username, password, and all messages) is encrypted to maximize security while you're connected to the Internet. In contrast, secure password authentication means that only your password is encrypted.
Outgoing mail port	Normally 25. Do not change unless your ISP instructs you to.

E-mail account Advanced tab settings

Incoming mail port	Normally 110. Do not change unless your ISP instructs you to.
Use MIME encoding	MIME encoding is a standard that allows non-textual information (for example graphics) and accented characters to be sent in e-mail messages. If you should not wish to Use MIME encoding , clear the check box.

To edit an e-mail account

1. On the **Email** tab, select the account in the list.
2. Select **Edit**.
3. Change your settings as desired.
4. Select **Done**.

To delete an e-mail account

1. On the **Email** tab, select the account in the list.
2. Select **Delete**.
3. Select **Done**.

SMS tab

Use these settings to set up text message and EMS messaging:

Messaging accounts SMS tab settings

Service centre address	The Service centre address is the phone number where your text messages are stored. It is normally imported from the SIM card but if that fails, your network operator can provide you with the service centre address.
Character Set.	Your network operator may also specify the Character Set .
Messages stored for	You can set a time limit after which text messages are deleted from the network by choosing a value in the Messages stored for list.
Extended messaging	Clear the check box Extended messaging when you do not want to use EMS message functions when composing your messages.
Smilies	Clear the check box Smilies if you want to use only plain text smilies.

Tip *If you send and receive text messages in several countries, you can avoid having to change the service centre address when you travel abroad by entering the international dialling prefix (for example '+') and the appropriate country code for your network operator.*

You can set the **Connection type** to one of the bearer types in the list.

MMS tab

Use these settings to set up multimedia messaging:

Messaging accounts MMS tab settings

Service centre address	The Service centre address is URI to the server on which your multimedia messages are stored. Your MMS service provider or your network operator can provide you with the service centre address.
WAP Accounts.	Specify which of your configured WAP accounts you wish to use. • WAP accounts are created in Control panel > General (tab) > WAP Accounts
Download method	Select between Manual or Auto: • Manual - only a notification will be sent to your P800 and you can decide whether or not to download the full message. • Auto - the full message is downloaded directly to your P800
Download size and Less than	Set whether or not to have a size limit for incoming messages: • No restrictions - the size of the incoming messages doesn't matter, all messages will be received. • Less than - messages smaller than the limit will be received, bigger messages will be deflected.

Preliminary

Advanced settings

Select **Advanced** to make settings about how your P800 will send and receive multimedia messages.

MMS Advanced settings tabs

Send	The values you give these settings will be default for all multimedia messages that you send. You can of course choose other values for an individual message in Messages. You can set the Validity period for your messages, that is, how long they should be available to the receiver. Maximum is the default. You can give your messages a Priority level of Low, Normal (default) or High. You can set a level of Conformance for the multimedia messages that you send to make sure that they will be played back correctly on different products. You can choose one of these levels: • Standard - a warning message is displayed whenever you add non-conformant item to a multimedia message. You have the option to send anyway. • None - non-conformant messages are sent. Select the check boxes to provide the function you want: Hide number prevents the sent message from showing your number. Read report requests a read notification from receivers of your messages. Delivery report requests a delivery notification from receivers of your messages. Reply with history includes the original with your reply.
-------------	---

MMS Advanced settings tabs

Receive	These settings apply to multimedia messages that you receive. Select the check boxes to send a notification message to the sender when a message is: • Delivered to you: Allow delivery notification • Read by you: Allow read notification You can filter reception of incoming messages by message class (Advertisements, Personal, Automatic, Information) as well messages from senders listed in Contacts. Selecting a check box will filter out messages of that category. To receive multimedia messages only from senders listed in your Contacts, select all other check boxes and clear the check box for Contacts.
----------------	--

CBS tab

On the CBS tab you make settings related to CBS (Cell Broadcast Services). CBS services include Area Information and Cell Information. The availability of Cell Broadcast Services (Cell and Area Information) is operator dependent.

Cell information may be used to display the area code below the network name in the flip closed standby view.

Area Information is a type of text message that is sent to all subscribers in a certain network area, for example a local traffic report.

To enable Cell Information

- Select the Cell Information check box

To turn Area Information on

- Check the **Area Information** check box. Received messages will be displayed and automatically stored in the **Area Info Inbox** when dismissed.

The list shows all the channels that you have defined on your P800. The check box for each channel shows if it is on (checked, ready to receive messages) or off (cleared, not active):

To add a new channel

1. Select **New**.
2. Enter the number of the new channel in the New Channel dialogue. Channel numbers can be from 0 to 999. If there are too many channels defined, **New** will be disabled and you will see a message: **Maximum channels on SIM**. Channel numbering is operator dependent. Please consult your network operator for information.

To turn a channel on or off

- Select the channel in the list and check the check box. To turn it off, clear the check box.

To delete a channel

- Select **Delete**. Since deleting a channel cannot be undone, you will be asked to confirm the delete. Deleting the channel will also delete any stored Area Information messages for that channel in your Area Info Inbox.

Alerts

Your P800 can notify you when a new message arrives with a different sound for each type of message that it can receive.

To set up notification, select **Alert**.

If you check the **Display notification message** check box, you will also see a notification message.

For each type of message you can either

- Select the **Default Melody**, or
- Select **Find Melody** to open the **Select audio** dialogue, where you can browse through your folders to pick a melody from those stored on your P800.

Secure tokens

Your P800 supports secure access systems from a number of vendors. You manage secure access by using Secure Tokens. Read more about secure access in “*Secure access*” on page 164.

Preliminary

Each token is associated with one system and with one Internet account, or none, when you use your P800 as a Hard Token (password generator). You can configure as many tokens as needed.

The **Secure tokens** dialogue shows a list of secure access providers. Secure tokens relating to the provider's name are listed under the name in an open tree structure.

Select **Control panel > Connections > Secure tokens** to:

- **Edit**, **Delete**, or **Create** a new token, or
- **Generate** a password.

These options are only displayed as available when a Secure token is highlighted, and greyed out when the vendor's name is highlighted. The sequence of the dialogs they generate will be vendor specific.

A token is associated with an Internet account through the Internet settings for the account. See “*Internet accounts*” on page 130.

Many dialogue details when using secure access are vendor, system and network specific. You should contact the administrator of the network you wish to access to get the correct information.

Storage manager

This dialogue helps you do housekeeping with the storage space on your P800.

The list shows the applications on your P800 and the space they occupy.

Removing information from applications

To remove information from an application: select an application in the list. This application is then displayed. Remove the old or unwanted entries or information.

Here are some housekeeping tips for different applications:

- Remove any unwanted recordings as even short ones occupy a lot of space.
- In  **Messages**, remove any old messages from your Inbox or Sent folders.
- In  **Tasks**, remove all completed entries by selecting **Tasks > Delete completed** in your list of entries.
- In  **Calendar**, remove all entries in a specified time period by selecting **Calendar > Remove entries** in your list of entries.
- Throughout your P800, use folders as you create and receive information to speed up housekeeping later.

Removing unwanted general files

Select **Files** to see a list of all stored general file types on your P800. You can remove unwanted files and launch a viewer for each file.

Uninstalling applications

If you uninstall an application, you will have to reinstall the application if you want to use it later.

To uninstall an entire application, select **Uninstall**.

Note *You cannot uninstall the applications that came with your P800.*

System sounds

To set the sounds given when you press a key on the keypad or tap the screen in your P800 select **System sounds**.

You can choose between the following sounds:

Keypad	Tone, Click or Silent
Touch screen	Click or Silent

Text input

There are several standard ways of entering text in your P800. See “Entering text - Flip open” on page 29 and “Entering text in flip closed mode” on page 25.

Control panel

Use the settings on the **Primary**, **Alternative** and **Flip Closed** tabs to set methods for entering text in your P800.

Primary The method that you select here is activated automatically when you need to enter text into your P800.

Alternative The method that you select here is activated if you tap  at the bottom of the screen.

If you load other text input software, select it and adjust its settings here.

Time & date

Adjusting the time and date here sets these throughout your P800.

The dialogue has three tabs. You can set:

Time & date The current time and date. Here you can also turn Summertime (daylight saving time) on or off for your location.

Format Specify how you want the time and date to be displayed on the screen.

Workdays Specify the days in your working week

Note *These settings are also available in the  Time application.*

Preliminary

Time & date tab

To set the current date

1. On the **Time & date** tab, select the date. A calendar view opens.
Tap the arrows to set the current year and month.
2. Select the current date.

To set the current time

1. On the **Time & date** tab, select the time. Select the upper half of the hour or minute box to increase the number displayed, or the lower half to decrease the number.
2. Select the **am/pm** box > .
This is only possible if you use the 12-hour time format.

If the locations you have set under  **Control panel > International** are in a country that currently has summer time (Daylight Saving Time), you can adjust the time and date.

To turn daylight savings time on

1. On the **Time & date** tab, select **Daylight saving**, select the check boxes for the zones that currently have daylight savings time.
2. Select **Done**.

Format tab

You can specify how you want the time and date to be displayed on the screen, and if you want to use the 12-hour (am/pm) or 24-hour time format.

To set the time and date display format

1. Select **Date format** and choose a format.
2. Select **Date separator** > choose a separator.
3. Select a **Time format**.
4. Select **Time separator** choose a separator.
5. Select **Done**.

Workdays tab

You can specify what days you work, if, for example, you want to set an alarm that sounds only on workdays. You can also specify the first day of your week to customize the display of both Week and Month views in Calendar.

To specify your workdays

1. Select the check boxes next to the days you normally work.
2. Select **First day of week** and choose a day.

User greeting

Your P800 can show a user greeting on the standby screen when you turn it on. Use this dialogue to turn this function on or off. You can define your own user greeting text (up to 32 characters).

WAP accounts

Use these settings to set up and manage WAP accounts (sometimes called WAP profiles) on your P800.

WAP accounts are intended for multimedia message and for accessing the Internet through a WAP gateway. (Such gateways make use of proxy port 9200-9203.) All other proxy settings should be included in your Internet accounts!

For security reasons, some WAP pages and services, for example online banking, can only be accessed from a particular WAP account.

The dialogue has two tabs: **Basic** and **Preferred**.

Basic tab

The dialogue shows a list of all the WAP accounts on your P800. You can add a **New** account to the list and **Edit** or **Delete** an existing account.

Note *You access WAP pages through an Internet Service Provider (ISP) so, when you create a WAP account, you must choose one of your existing Internet accounts or first create a new one.*

To create a new WAP account:

1. Enter the name of the WAP account.
2. Select the Internet account you want to use.

3. If you are going to use a WAP gateway or a proxy, select the **Use proxy** check box.
4. Enter the **IP Address** of the gateway or proxy
5. Enter the **Port address** of the gateway or proxy.
For a WAP gateway use:
 - 9201 for a normal connection
 - 9203 for an encrypted secure connection.
- If the gateway/proxy requires **User name** and **Password**, which is very unusual, fill in the last two fields in the dialogue.

Preferred tab

Select the check box to set a preferred WAP account. It will be used when you use the **Open page** command in the  **Internet** application and when a page is opened from another P800 application.

If you do not set a preferred WAP account, the preferred Internet account will be used when connecting to the Internet.

WIM management

WIM (WAP Identity Module) is used for performing security functions, especially to store and process information needed for user identification and authentication. It is a tamper-resistant store for private keys, certificates and other items that may require a PIN for access or modification.

Preliminary

The **WIM management** dialogue consists of PIN choice list and a WIM items list.

You can select a PIN from the PIN choice list. The WIM items list changes content dynamically, displaying only the keys that are protected by the selected PIN and also have an associated certificate. Other keys that are protected by the selected PIN but do not have an associated certificate are not shown in the WIM item list. This is the case when WIM PIN (PIN-G) is selected.

Note *This is the PIN to access the WIM. The PIN-G applies to the whole WIM and any items that do not have a different PIN, that is, no specific items on the WIM are linked to PIN-G.*

You can change status of a PIN:

- **Enable PIN:** A PIN code that is enabled is requested for authorisation of an operation. To proceed with the operation you must enter the PIN code.
- **Disable PIN:** A PIN code that is disabled is not requested to authorize an operation to proceed.

To change the PIN code:

1. Select the PIN you want to change from the choice list.
2. Select **Change PIN**.

If a PIN code has been blocked, you must unblock it before it can be used again. Select the PIN and select **Change PIN**.

Installing applications

It is possible to install new applications in your P800 either from the PC or directly from the P800. These applications can be obtained in several ways, for example:

- from the Internet
- from a CD
- from a Memory Stick
- as an e-mail attachment.

Applications can also be downloaded directly to your P800 from other devices, the Internet or via e-mail.

There are two types of installation files for applications:

- SIS (Symbian Standard Installation)
- MIDP JAR (Mobile Information Device Profile Java Archive)

Note *SIS and JAR files are installation packages containing several files.*

This chapter also applies to other types of software to install, for example, system components and add-ons.

PC Suite for P800

The PC Suite for P800 CD delivered with your P800 contains a set of useful applications to install applications and manage your P800:

- **Backup and Restore** – Make safety copies of your data.
- **File Manager** – Transfer files (images, documents, music, and so on) between your P800 and PC.
- **Change Language** – Change the system language in the P800.
- **Download Station** – Install applications in the P800.
- **Smartphone Monitor** – Monitors the connection, runs automatically.
- **Sync Station** – Synchronizes data in your PC and P800.
- **Phone Book Manager** – Edit SIM card from your PC.

Refer to the online help for each specific application.

Installation

When inserting the CD in the PC, a start menu is automatically shown. Select language and then start the PC Suite for P800 Setup. Follow the instructions in the installation wizard.

By default the PC Suite for P800 is accessed from **Start menu > Programs > Sony Ericsson > P800**.

Preliminary

The Setup application also can be used later to add or delete components.

Installing applications

Installation file security

Installation files in SIS format are typically used for installation of C++ or PersonalJava applications or other content into the P800 file system. The vendor who prepared the SIS file decides where in the file system the various content of the SIS file will be installed. This means that you need to decide if you trust that the SIS file does not contain harmful content. If you know for sure who produced the SIS file then you can take an installation decision based on what you know about that vendor. Your P800 supports cryptographic verification of vendor identity.

During installation the P800 verifies a digital signature and certificate in the SIS file against a root certificate on the phone. Successful verification means that you can trust who produced the SIS file and that the content has not been modified after it was created. If the SIS file does not contain a digital signature you will be given a warning about the problem but you can still decide to proceed with installation at own risk. In general it is recommended that you install only from SIS files where the vendor identity and file integrity can be verified.

MIDP applications run in a protected environment with no access to sensitive information so no signatures are required for MIDP JAR files.

From a PC

PC Suite for P800 must be installed in your PC and the P800 must be connected to the PC via cable, IR or Bluetooth wireless technology in order to install applications from your PC.

Installing applications from your PC

1. Connect your P800 to the PC via cable, infrared or Bluetooth wireless technology. When connected, an icon is shown in the taskbar on the PC.
2. Start the PC software **P800 Download Station** and select the application (.sis or .jar file) to install. It is also possible to double-click a file in file manager and make the P800 Download Station start automatically.
3. Confirm to install the application in the P800.
4. Select target drive (phone memory or Memory Stick). Download to the P800 begins.
5. Installation starts when download is complete.
6. Installation is complete.

From the P800

Program packages can also be downloaded to your P800 from the Internet or from a Memory Stick. When downloading a file from the Internet, the installation will start automatically when the file is completely downloaded to your P800. The procedure below describes installation of application packages already in the P800 but not yet installed.

Installing applications in the P800

1. Select  > **Applications** > **Install**.
2. Select software in the list.
3. Select **Install**. If the software is certified, an information dialog will be shown with the name of the software, version and supplier. Select **Install** again.
4. Now, depending on the software, you may be prompted to replace a previous installation, select language, memory location and select other installation options.
5. Installation is complete. Select **Done**.

Removing applications in your P800

It is sometimes necessary to remove installed applications and user data to free up memory.

Removing applications in the P800

1. Select  > **Applications** > **Uninstall** and then select software to remove.
2. Confirm selection.
3. Select **Done**.

Note *If you delete an application from your P800, any copy on your PC (including backups) will be deleted the next time you synchronize with your PC.*

Tip *See also **Master Reset** and **Storage Manager** in **Control Panel** for more options regarding removal of applications and user data.*

Connecting to other devices


Your P800 can be connected to other devices with similar interfaces, such as PCs, other P800s and PDAs.

The connection can be made via:

- Cable
- Infrared (IrDA)
- Bluetooth wireless technology

Once it has been connected, you can perform various tasks, depending on what type of connection you have chosen, such as:

- Using a cordless headset (Bluetooth wireless technology)
- Sending and receiving files via (infrared, Bluetooth wireless technology) – ‘beaming’
- Making Backup/Restore and Synchronisation of your data and file transfer. (Cable, infrared and Bluetooth wireless technology)
- Using the P800 as a modem for Dial-Up Networking. (Cable, infrared and Bluetooth wireless technology)

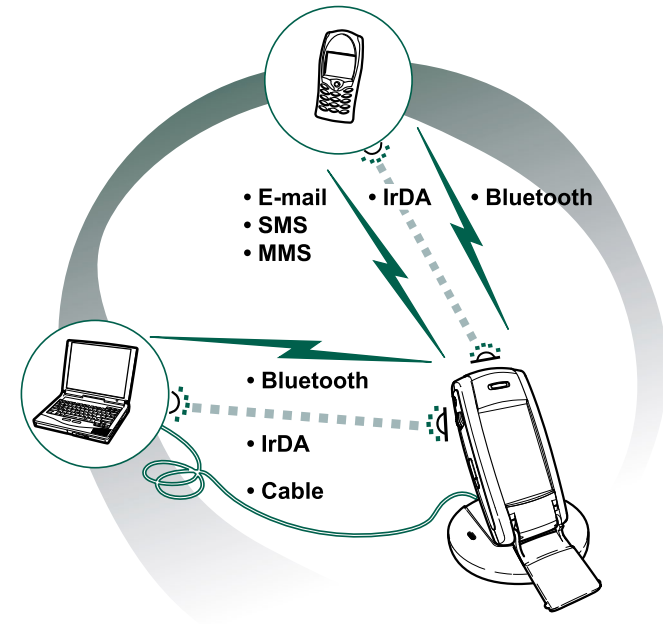

PC connectivity software

Your P800 is delivered with a CD, *PC Suite for P800*. This software must be installed in the PC you want to connect to. See the chapter “*Installing applications*” on page 148 for more information. You do not need to install the *PC Suite for P800* if you only want to perform beaming with the PC or use a cordless headset.

Connection via cable

Put your P800 in the desk stand and connect the cable to an empty USB port on the PC. When connecting via cable, the P800 must be set in PC connect mode or Modem mode, see table below. The setting is made in **Control panel > Connections > Cable**.

PC connect mode	Modem mode
• Synchronization • Installation of software • Backup and restore	• P800 as a modem • Phone Book Manager (PC software)

Serial settings

The default settings for normal use:

Baud rate:	460800
Parity:	None
Stop bits:	1

Connecting to other devices

Character length:	8
Flow control:	CTS/RTS

Connection via infrared port

When connecting via the infrared port, make sure that both devices are placed within one metre from each other and that the infrared ports have a free line of sight between them. The infrared port on your P800 is located on the left-hand side, next to the On/Off button.

Activating the infrared port

The infrared port must be activated before communication can begin. Go to **Control panel > Connections > Infrared port** and set the port state to **On** or **On for 10 minutes**. See the chapter “*Control panel*” on page 124 for more information on infrared settings.

Connection via Bluetooth wireless technology

You can connect your P800 to other products equipped with Bluetooth wireless technology, for example PCs or other mobile phones, and exchange data. Since Bluetooth wireless technology is radio-based, transmitting and receiving devices do not have to be in a free line of sight. This means that your P800 can stay in your pocket while communicating. However, objects between transmitting and receiving units might weaken the signal.

Preliminary

Connection to another device can be made within a range of up to 10 metres. For all tasks, except beaming, it is necessary that you first set up a permanent and trusted relationship between your P800 and the other device. This process is called pairing (other documentation refer to it as bonding). The paired devices are remembered by your P800 also after you have turned it off so you do not need to repeat the process for every connection with those devices. The reason for pairing is to simplify future connections and to make them secure – only paired devices can connect to your P800.

Activating Bluetooth wireless technology

Activate Bluetooth wireless technology on your P800 in **Control panel > Connections > Bluetooth > Settings**. Set **Operation mode** to **Auto**, **On** or **Discoverable** and set **Receiving items** to **Ask first** or **Always receive**. See the chapter “Control panel” on page 124 for more information on Bluetooth wireless technology settings.

Pairing

To let your P800 initiate pairing with another device

1. In **Control panel > Connections > Bluetooth > Settings**, set **Operation mode** to **Discoverable**.
2. In **Control panel > Connections > Bluetooth > Add**. Your P800 searches for all devices in the vicinity and lists them.

3. Select the device you want your P800 to pair with and, enter a passkey when asked for it. When the passkey is accepted, the pairing process is complete, refer to the section *Passkeys* below.
4. If you in the future want to allow a paired device to connect to your P800 without you explicitly approving each connection you should select **Control panel > Connections > Bluetooth > Devices**, then select a device and the check box **Allow to connect without confirmation**.

To let another device initiate pairing with your P800

1. In **Control panel > Connections > Bluetooth > Settings**, set **Operation mode** to **Discoverable**.
2. Follow the other device’s manual to initiate pairing.
3. When asked for a passkey, enter the same on both devices.
4. If you in the future want to allow a paired device to connect to your P800 without you explicitly approving each connection you should select **Control panel > Connections > Bluetooth > Devices** select a device and the check box **Allow to connect without confirmation**.

To remove a paired device from your P800

Select a device in the list and select **Remove**.

Passkeys

Passkeys ensure that the device you pair with really is the device you think it is. A passkey is a set of numbers and/or letters (at least four characters) that you agree to exchange with the owner of the other device. Accessories like headsets often have a default passkey, usually '0000', see the specific user's guide.

Transfer items with Send As

From many applications it is possible to transfer (and receive) items like appointments, contacts and images to other users. The transfer starts by entering the **Send as** menu in the specific application.

Depending on the application and item you can choose between the following transfer methods:

- Infrared
- Bluetooth wireless technology
- Text message
- Multimedia message
- E-mail

Note *To be able to send or receive an item over infrared or Bluetooth wireless technology, these functions must be activated. See "Connection via infrared port" on page 151 and "Activating Bluetooth wireless technology" on page 152.*


Synchronization and backup

With PC Suite for P800 installed in your PC, your P800 can synchronize with the following PC applications, also called Personal Information Managers (PIMs):

- Lotus® Organizer® 5 & 6
- Lotus® Notes® 4.6, 5.0
- Microsoft® Outlook® 98, 2000, 2002

Synchronization is divided into local and remote. Local synchronization is performed directly to a connected PC while remote synchronization is done over the air with a remote server in, for example, a corporate network.

Local synchronization

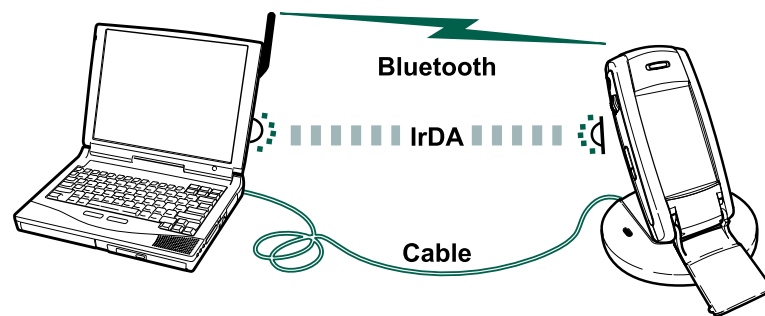

Local synchronization is done with either cable, infrared or Bluetooth wireless technology, the functionality is the same.

The following items can be synchronized locally:

- E-mail
- Contacts
- Calendar
- Tasks
- Jotter notes

Configuration of PC software

Local synchronization is initiated from the PC and all settings are made in the P800 SyncStation PC software (included on the PC Suite for P800 CD). The easiest way is to configure the PC software to automatically make a synchronization every time your P800 is connected. An icon, Smartphone Monitor, is shown on the PC taskbar when connected.

In the PC go to **Start menu > Programs > Sony Ericsson > P800 > SyncStation** and select the items to synchronize and select manual or automatic method. Refer to the online help in P800 SyncStation PC software for more information.

Performing a local synchronization

Making an automatic synchronization


1. Connect your P800 via cable, infrared or Bluetooth wireless technology.
2. Synchronization starts automatically.

Making a manual synchronization

1. Connect your P800 via cable, infrared or Bluetooth wireless technology.
2. In the PC, go to **Start menu > Programs > Sony Ericsson > P800 > SyncStation** and start the synchronization. Alternatively, right click on the SyncStation Monitor and select **Synchronize**.

Remote synchronization

Remote synchronization takes place over the air and is the ideal way to keep the P800 up-to-date while on the move. Using GPRS, the P800 can be continuously connected to the remote synchronization server.

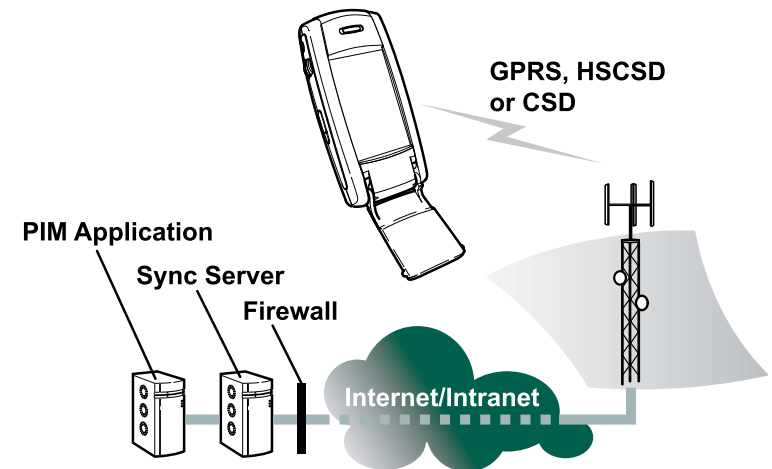

Synchronization services may be offered by mobile operators, third-party service providers and as added capability to corporate PIM applications.

The following items can be synchronized remotely:

- Contacts
- Calendar
- Tasks

Preliminary

Remote sync server configuration

Enter  **Remote Sync** in *Applications*, select **Edit > Settings** and fill in the following parameters:

- Server address
- User name
- Password


You might also need to fill in whether to use *transport login* under the Protocol tab. Contact your corporate IT help desk or your service provider for information on these parameters.

You also need to have at least one configured Internet account that remote sync can use to connect, see “Internet accounts” on page 130.

Remote sync task configuration

Selecting items to synchronize

1. In Remote Sync, select one item in the list you want to be synchronized.
 2. Select the **Enable task** check box.
 3. Fill in the **Task name** or leave default.
 4. Fill in the **Server database** (Contact your corporate IT help desk or your service provider).
 5. The item you selected to be synchronized is now above the divider in the list. (Disabled items are below the divider.)
- Repeat for other items.

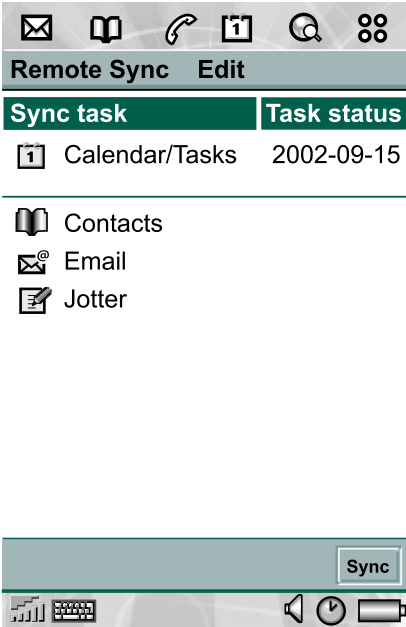

Making a remote synchronization

- Open *Applications > Remote Sync*, select the **Sync** button.

When ready, the **Task status** column shows today's date for all successfully synchronized items.

Backing up data

You can use the **P800 Backup and Restore** PC software to back up the contents stored in your P800 to your computer. Keeping backups of your P800 contents on your computer means that you have a separate copy of the contents of the P800, which can be restored into the P800. Backups should be made on a regular basis. A backup reminder can be set.

See the online help for **P800 Backup and Restore** for more information on how to use the application.

Preconditions

The PC Suite for P800 must be installed in the PC and the P800 must be connected to the PC via cable.

Note *Backup and restore does not work via IR or Bluetooth wireless technology.*

Performing a backup

To make a backup

1. Connect your P800 to the PC via cable.
2. In the PC, go to **Start > Programs > Sony Ericsson > P800 > Backup and Restore**.
3. Select P800; several can be registered.
4. Start **Backup** and select media: P800 and/or Memory Stick. Backup begins, the progress is shown in the P800.

Synchronization and backup

5. Follow the instructions in the P800.
6. Backup is complete.

Restoring data

If you have lost data or accidentally deleted information in your P800 you can restore an earlier backup. A backup from a certain memory type (phone memory or Memory Stick) can only be restored to the same type.

To restore a backup

1. Connect your P800 to the PC via cable.
2. Go to **Start menu > Programs > Sony Ericsson > P800 > P800 Backup and Restore** in the PC.
3. Select P800; several can be registered.
4. Select one of the backups in the list of previously saved backups and click **Restore**.
Restore begins, the progress is shown in the P800.
5. Follow the instructions in the P800.
6. Restore is complete.

Warning! *Everything in your P800 will be overwritten by the chosen backup. Once you have clicked Yes to start the restore, you cannot cancel the procedure.*

Preliminary

Note *If you have used your Secure Tokens (Secure Access files) since you made your backup, you must reconfigure these. If you restore another P800, you must reconfigure your Secure Tokens.*

Getting started with Internet and Messages

Introduction

Before you can use  **Internet** and  **Messages** to access the Internet and send or receive messages you will need to make some user-specific settings in the  **Control Panel**.

Service provider

You will need a service provider to connect your P800 to the network. The service provider could be:

- An Internet service provider (ISP) which connects you to the Internet.
- An access point provided by your network operator.
- A private service provider such as your company or your bank.

You will need to enter specific service provider details into your P800 to set up an Internet account. It can hold the details of multiple service providers, for example, you may have separate Internet and corporate accounts.

Your network operator or retailer may have pre-installed services, check with them.

Connection type

When your P800 connects to a service provider, it will use a GSM or GPRS network provided by a network operator. Many network operators offer both GPRS and GSM services.

The connection type defines which network your account uses to connect to the Internet. GPRS Internet accounts use the GPRS network, and Dial-Up Internet accounts use the GSM network.

GPRS

If your network operator supports GPRS, a GPRS Internet account allows you to:

- Remain permanently connected to the Internet without being charged for connection time. With a GPRS account, you are charged for the amount of information you view, download or send when you are connected to the Internet. Check your operator for details of your subscription.
- Avoid having to reconnect to the Internet if the connection is broken.

Dial-Up

For both Dial-Up and High-Speed Dial-Up accounts, you are charged for the length of time you are connected. If your network operator supports them, you can increase your connection speed (at a cost) by setting up a high-speed account.

Preliminary

Automatically set up service provider and messaging

The easiest way to set up your P800 is automatically, through your service provider.

For  **Messages** settings your P800 supports automatic setup of:

- e-mail accounts
- MMS message (Multimedia Messaging Service) settings.

Check your service provider's website for information or contact their support desk and ask about automatic remote configuration of ISP (Internet Service Provider) settings, e-mail and MMS message settings.

If remote configuration is possible, they will send you the auto configuration messages required by SMS message.

Settings valid for your network operator and one or more of these services may also be available through the phone configurator utility at www.sonyericsson.com

To check that your SMS messaging settings are correct:

- Select  **Control panel > Connections > Messaging accounts > SMS.**

Accepting new Internet or Messages settings

New configuration messages will appear in the **Auto setup** account inbox of  **Messages**. (Configuration messages for e-mail accounts will, however, be found in your **SMS message** inbox.)

When an auto setup message appears, select it.

A dialogue with a brief text and operator message appears on the screen. You can accept the new settings or leave the message in the inbox.

If the name of the new account is the same as that of an existing account you can choose to create a new account with the same name or replace the existing account.

Warning! *Never accept remote configuration messages if you are not expecting them or are unsure where they have come from.*

Manually set up service provider

Alternatively to setting up an Internet account automatically, you can enter the settings manually from **Internet accounts** on the **Connections** tab of the  **Control panel**.

First collect all the information you will need. You can obtain this information from your ISP (Internet Service Provider), or if you are connecting to a corporate network, your IT Manager.

All settings are described in “*Internet accounts*” on page 130.

To set up a new account follow the steps under “*To create a new Internet account*” on page 131.

Manually set up Messages

Alternatively to setting up **Messages** automatically, you can enter the settings for the messaging services you want to use yourself from **Messaging accounts** on the **Connections** tab of the  **Control panel**.

First collect all the information you will need. You can obtain this information from the following sources:

- If your mobile operator offers an e-mail service you can get the necessary details from them.
- Your Internet service provider.
- Your IT Manager in the case of connecting to the corporate network to access your work e-mail account.
- Your network operator in the case of SMS message and CBS services.

The dialogue has four tabs, one for each type of messaging service:

- | | |
|--------------------|---|
| e-mail | The provider of your e-mail service, or for a corporate account, your IT Manager can provide you with the necessary details.
All settings are described in “ <i>Email tab</i> ” on page 137.
To set up a new account follow the steps under “ <i>To create a new e-mail account</i> ” on page 137. |
| SMS message | Short Message Service
The necessary settings are usually provided on your SIM card.
All settings are described in “ <i>SMS tab</i> ” on page 139. |
| MMS message | Multimedia Messaging Service
Your MMS messaging provider will be able to provide you with the necessary information.
Before you set up MMS messaging you need to set up an Internet account in Control panel > Internet accounts and a WAP account in Control panel > WAP Accounts
All settings are described in “ <i>MMS tab</i> ” on page 139. |
| CBS | Cell Broadcast Service: Area and Cell information
Your network operator will be able to inform you if these services are available.
All settings are described in “ <i>CBS tab</i> ” on page 140. |

Preliminary

Setting up WAP accounts

A WAP account defines a service provider and gateway that should be used when making a connection to WAP services. You also need a WAP account when you use MMS message (Multimedia Messaging Service).

The WAP gateway sits between your P800 and the WAP site coding and decoding information. You can set up details of more than one gateway if necessary, for example one for your MMS messaging, one to access corporate data over WAP, and another to access your bank's WAP service.

The easiest way to set up a WAP account on your P800 is automatically, through your service provider. Check your service provider's website for information or contact their support desk and ask about automatic setup.

Note You access WAP pages through an Internet Service Provider (ISP) so, when you create a WAP account, you must choose one of your existing Internet accounts or first create a new one.

Manually set up a WAP account

Alternatively to setting up a WAP account automatically, you can enter the settings manually from **WAP Accounts** on the **Connections** tab of the  **Control panel**.


First collect all the information you will need. You can obtain this information from the WAP service provider, or if you are connecting to a corporate network, your IT Manager.

All settings are described in “*WAP accounts*” on page 145.

To set up a new account follow the steps under “*To create a new WAP account:*” on page 145.

Using your P800 as a modem

Your P800 contains a complete GSM/GPRS modem, so you can use it to connect your PC to the Internet or corporate intranet. Your P800 appears to the laptop like a normal modem.

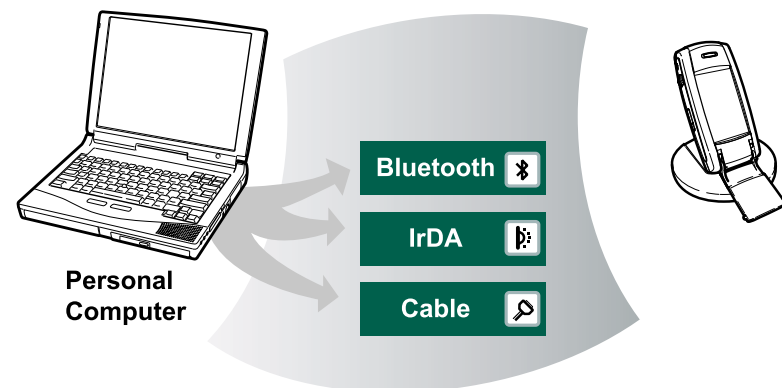

You link the laptop to your P800 using  Bluetooth wireless technology  infrared, or  cable (USB or serial). The connection over the air can be by any of the bearers that your P800 supports:

- GPRS
- HSCSD (High-speed Circuit Switched Data)
- CSD (Circuit Switched Data).

A Windows® modem driver file and a PC utility, the **Dial-Up Networking Wizard** is provided on your **PC suite for P800** CD. The wizard will help you configure DUN (Dial-Up Networking) entries on your PC for GPRS and HSCSD connections.

Once paired with a Bluetooth-enabled laptop, your P800 is ready to make a connection to the Internet or corporate network. Because Bluetooth is wire-free and requires no line-of-sight alignment, you can place the laptop in a comfortable position and let your P800 remain in your pocket, briefcase, or even be placed up to 10 metres away.

If you wish to use an infrared link, the range is typically up to 1 metre. The two infrared 'eyes' must be kept in line of sight, at an angle of no more than approximately 30 degrees.

The Dial-Up Networking Wizard

The wizard simplifies creating GPRS DUN connections by setting the proper values in the PC DUN entry and linking the entry to one of the GPRS configurations in your P800. You can also view and modify the GPRS settings in the P800.

For HSCSD DUN entries, it updates the modem settings such that the specified data rate and type of bearer (ISDN / Analogue) will be used when you make a DUN connection.

You can view or change the DUN entries created with the wizard using the standard Windows® DUN user interface.

The Dial-Up Networking Wizard software included in the **PC suite for P800** must be installed in your PC and your P800 must be connected to the PC via cable, infrared or Bluetooth wireless technology.

You should have any information concerning, for example, phone numbers, names of servers or domains, that the server that you want to connect to may require.

To set up a GPRS or HSCSD (High-Speed Circuit Switched Data) connection using the Dial-Up Networking Wizard

1. Start the **Dial-Up Networking Wizard** from the Sony Ericsson folder of the Start menu on your PC.
2. Choose Create a new Dial-Up connection.
3. Follow the instructions in the Wizard.

Preliminary

To edit a previously created DUN entry

1. Start the **Dial-Up Networking Wizard** from the Sony Ericsson folder of the Start menu on your PC.
2. Modify a Dial-Up connection.
3. Select the desired connection from the list.
4. Follow the instructions in the Wizard.

CSD connections

To set up a CSD (GSM Data) connection you will need to install your P800 as a modem manually.

To set up a Dial-Up entry for CSD

1. On the PC, open the Control Panel.
2. Choose to install a new modem.
3. Choose your P800 as the modem.
4. Select the port where the P800 is connected.
5. Confirm the selection. A new DUN connection has been created.

Connecting

To connect using a DUN entry created by the wizard

1. If you are connecting by cable, set your P800 to **Modem** cable connection mode.

2. Use any conventional method to make a connection:
 - Click the Desktop short-cut created by the wizard.
 - Select the entry from within the system DUN folder.
 - Run an application that has built-in support for using DUN entries (for example a browser or e-mail client).

Secure access

If you need access to a network that requires secure access (often known as “strong authentication”), for example a corporate intranet, you can set up the Internet account you use to log in to that network to use secure access and generate the required one-time password when you make the connection.

Your P800 supports the following secure access systems:

- SecureID from RSA
- DigiPass from Vasco
- SafeWord from Security Computing

If you have a separate device or application that requires one-time passwords according to one of these systems, you do not need a separate hardware token generator (Hard Token). Your P800 can generate passwords that are not associated with an Internet account.

You manage secure access in your P800 using Secure Tokens:

Each token is associated with one vendor/system and may be associated with one or more Internet accounts (or none, when you use your P800 as a Hard Token). You can configure as many tokens as needed.

To edit, delete, create a new token, or generate a one time password, tap: **Control panel > Connections > Secure tokens.**

Note *You should have the flip open when generating a one time password.*

Internet account settings

A token is associated with an Internet account through the Internet settings for the account:

To set up a Dial-Up (CSD or High-Speed CSD) account for Secure access

1. Tap **Control panel > Connections > Internet Accounts.**
2. Create a **New** or **Edit** an existing  Dial-Up account.
3. Tap **Advanced.**
4. On the **Secure** tab for the account select the **Enable secure access** check box.
5. Select the appropriate **Vendor** and **Token.**

To set up a GPRS account for Secure access

1. Tap **Control panel > Connections > Internet Accounts.**
2. Create a **New** or **Edit** an existing  GPRS account.

3. Tap **Advanced**
4. On the **Server** tab for the account select the **User name and password required** check box.
5. Enter your **User name** if desired. If you leave it empty, you will be asked to fill it in at connection time.
6. Leave the **Password** box empty.

Connecting to an Internet account

For Dial-Up accounts there are two possible ways to connect to a secure access account, depending on if the login procedure uses a script and the PCT (Post Connect Terminal) or not.

To connect to a Dial-Up account that does not require the PCT

1. In the login dialogue, enter your vendor specific login information in the **PIN** box.
2. Tap **Done**, the one-time password is generated and passed to the network invisibly.

To connect to a Dial-Up account using the PCT

1. In the PCT tap **Generate.**
2. In the vendor-specific **Generate Passcode** dialogue, generate the one-time password.
3. Tap **Copy.**
4. Return to the PCT, tap **Paste** to enter the one-time password in the script.

Preliminary

5. Tap **Done**.

To connect to a GPRS account

1. In the login dialogue, tap **Generate**.
2. Select the appropriate **Vendor** and **Token**.
3. In the vendor-specific **Generate Passcode** dialogue, generate the one-time password.
4. Tap **Copy**.
5. Return to the login dialogue, enter your user name if required and tap **Paste** to enter the one-time password in the **Pin** box.
6. Tap **Done**.

Tip Many dialogue details when using secure access are vendor, system and network specific. You should contact the administrator of the network you wish to access to get the correct information.

GPRS - data logs

Icons on the status bar let you overview the information on data connection calls.

A combined signal strength and GPRS signal icon provides information on the GPRS service status. The GPRS connection status appears above the signal strength icon. There are three states for the icon, unavailable , available  and active .

The HSCSD/CSD  and GPRS  icons are displayed during a data connection. Where GPRS is suspended, for example, the GPRS suspended state is indicated by a combined icon . There are three states for the GPRS icon: Active , active transferring data (alternates between  and ) and suspended . Any data transfer either received or sent activates the GPRS active icon for 2 seconds.

Connection information

When you select the data connection icon, during an active data connection, a menu appears with the choices **Information** and **Disconnect**.

- Select **Information** to view information on the connection.
- Select **Disconnect** to end the connection.

GPRS status information

When the signal strength icon is selected, network, GPRS status information and, if applicable, GPRS error text appear.

GPRS data log

A new GPRS data log entry is created when a GPRS account establishes a connection for the first time. If there is an existing data log associated with the current GPRS connection, this is updated.

The GPRS data log shows a list of GPRS Internet accounts. Where one account is active or suspended, the relevant status icon is displayed to the left of the account.

To view information on an account

- Select an account in the list.

Information on the account is shown. The data log is updated dynamically.

Buttons allow you to delete or reset the current data. These buttons are disabled during an active or suspended connection.

To delete the log for an account

1. Select an account in the list.
2. Select **Delete**.

To reset the log of an account

1. Select an account in the list.
2. Select **Reset**.

To delete or reset the log of several accounts

1. Select the check boxes of the accounts in the list to be deleted or reset.
2. Select **GPRS data log > Reset** or **GPRS data log > Delete**.

Session data

When the connection is deactivated, for example when the current Internet account is disconnected, the total data sent and received in the last session is displayed.

In both flip open and flip closed the information is displayed for a couple of seconds. In the flip closed mode, the information can be dismissed with the return key .

Troubleshooting

This chapter consists of a selection of suggestions for solving possible problems with your P800.

Start problems

- Hand-held phone: Recharge or replace the battery.
- Vehicle Handsfree: Check that the P800 is properly inserted into the holder and check the fuse in the fuse holder (connected to the battery cable).

SIM card related problems

Insert card

A SIM card has not been inserted into your P800. See “*Getting started*” on page 7 for instructions on inserting the SIM card.

PIN & unblocking PUK code

Contact your dealer if you have forgotten your PIN or unblocking PUK code. By default you need your PIN or PUK code to unlock your P800.

Tip Store PIN and unblocking PUK code information in a safe place.

Wrong PIN

The PIN code has been entered incorrectly. The message is followed by the prompt **Enter PIN**.

Enter the PIN code correctly and press **#** or **OK**.

Note If your PIN is entered incorrectly three times in a row, the SIM card will be blocked. You can unblock it by using your PUK.

Blocked contact card provider

The SIM card is permanently blocked after the Personal Unblocking Key (PUK) has been entered incorrectly ten times in a row. Contact your network operator.

Card blocked unblock?

This message appears if the PIN code has been entered incorrectly three times in a row.

To unblock the SIM card

1. Press **#**
2. Enter your personal unblocking key (PUK) and press **#**.

Note Your PUK is provided by your network operator when you purchase your SIM card.

Enter new PIN appears on the screen.

3. Enter your PIN code and press **#** . You can enter either your current PIN code or a new one. Repeat new PIN appears on the screen.
4. Enter your PIN code again for confirmation and press **#** .

If you entered both your unblocking key and PIN code correctly, the message **New PIN** will appear on the screen.

Alternative method for unblocking the SIM card

To unblock the SIM card, enter the following sequence:

***a/A** **0** **5** ***a/A** unblock key ***a/A**
new PIN ***a/A** repeat new PIN **#**

Lock problems

Device lock

Phone locked is displayed followed by the prompt **Enter lock code**.

Your P800 is locked to prevent unauthorized use.

To unlock the P800:

Enter your personal security code, then press **#** or **OK**.

Key symbol

The keypad is locked to prevent unintentional key action.

- Press **OK** followed by ***a/A** to unlock the keys.

Screen limitations

In all cases where numbers or characters exceed the available screen space, truncation or dots are used to compensate for this.

Numbers are truncated at the beginning, for example
...555666777.

Characters are truncated at the end, for example **Methusel...**

Emergency calls only

A network is within range but you are not allowed to use this network. You may, however, call the emergency number 112.

Fax calls

Your P800 does not support fax transmission. Even if your operator subscription supports fax transmission, fax calls will be rejected. However they can be forwarded to another number such as the office fax number, see “Forward calls” on page 47 for more information.

Preliminary

Note Make sure potential fax callers do not try to send a fax to your P800 as they can experience a number of retries before the fax transmission is stopped.

Indicator light

Blinks red

This indicates that the battery is running low and soon needs recharging or replacing with a spare.

Note With Vehicle Handsfree (VHF) equipment, make sure that the following are inserted or connected: your P800 and its holder; the fuse in the fuse holder; and/or the external antenna.

Does not blink

If the indicator light at the top of your P800 does not blink and no network is displayed there is no network within range. See “No network” on page 170.

Memory/Disk full

Due to memory limitations, your P800 has no more space available to save or store information.

Warning! Make sure regular backups are made with Communications Suite to reduce the risk of lost or corrupted information.

To free up memory, delete unused or old:

- Call logs.
- Contacts.
- Messages.
- Calendar To-Dos or appointments.
- WAP history or bookmarks.
- Notepad notes.

No network

This indicates that no network is within range. The reason for this is either:

1. You are in an area that is not covered by a network.
2. The received signal is too weak, possibly because you are being shielded from the signal. Move to obtain a sufficiently strong signal. Check your display signal strength indicator.

System failure

In case of a system failure, your P800 will flash an animated warning. To recover, please restart the P800 like this:

Preliminary

1. Press and hold the On/Off button *at least 10 seconds* to turn the P800 off.
2. Restart as normal: Press the On/Off button to turn on your smartphone.



Preliminary

Guidelines for safe and efficient use

Please read this information before using your mobile phone.

Important: To avoid hearing impairment, answer call or lower volume before placing this product to the ear.

Recommendations

- Always treat your product with care and keep it in a clean and dust-free place.
- Do not expose your product to liquid or moisture or humidity.
- Do not expose your product to extreme high or low temperatures.
- Do not expose your product to open flames or lit tobacco products.
- Do not drop, throw or try to bend your product.
- Do not paint your product.
- Turn your product off in places where posted notices instruct you to do so and in places where mobile phones are prohibited including aircraft and hospitals.
- Do not place your product or install wireless equipment in the area above your car's air bag.
- Do not attempt to disassemble your product. Only Sony Ericsson authorised personnel should perform service.

- If your mobile phone is equipped with infrared, never direct the infrared ray at anyone's eye and make sure that it does not disturb any other infrared units.

Antenna

Only use an antenna that has been specifically designed by Sony Ericsson for your mobile phone. Use of unauthorised or modified antennas could damage your mobile phone and may violate regulations, causing loss of performance and SAR levels above the recommended limits (see below).

Efficient Use

Hold your mobile phone as you would any other phone. Do not cover the top of the phone when in use, as this affects call quality and may cause the phone to operate at a higher power level than needed, thus shortening talk and standby times.

Radio Frequency (RF) Exposure and SAR

Your mobile phone is a low-power radio transmitter and receiver. When it is turned on, it emits low levels of radio frequency energy (also known as radio waves or radio frequency fields).

Governments around the world have adopted comprehensive international safety guidelines, developed by scientific organizations, e.g. ICNIRP (International Commission on Non-Ionizing Radiation Protection) and IEEE (The Institute of Electrical and Electronics Engineers Inc.), through periodic and thorough evaluation of scientific studies. These guidelines establish permitted levels of radio wave exposure for the general population. The levels include a safety margin designed to assure the safety of all persons, regardless of age and health, and to account for any variations in measurements.

Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a mobile phone. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the mobile phone while operating can be well below this value. This is because the mobile phone is designed to use the minimum power required to reach the network. Therefore, the closer you are to a base station, the more likely it is that the actual SAR level will decrease.

Variations in SAR below the radio frequency exposure guidelines do not mean that there are variations in safety. While there may be differences in SAR levels among mobile phones, all Sony Ericsson mobile phone models are designed to meet radio frequency exposure guidelines.

Accessories can significantly affect a mobile phone's compliance with the radio frequency exposure guidelines. For example, the Federal Communication Commission in the U.S. requires that some manufacturers' accessories shall be tested, and Sony Ericsson has done so with respect to its products. To avoid causing loss of performance or radio frequency exposure levels above the permissible limits it is recommended that you only use Sony Ericsson or Ericsson original accessories intended for use with the mobile phone. If you wear the mobile phone on your body while it is transmitting, and you do not use a Sony Ericsson or Ericsson original body worn accessory, please ensure that you are not using an accessory that contain any metal.

A separate leaflet with SAR information for this mobile phone model is included with the material that comes with this mobile phone. This information can also be found, together with more information on radio frequency exposure and SAR, on www.sonyericsson.com/.

Driving

Please check if local laws/regulations restrict the use of mobile phones while driving or require drivers to use handsfree solutions. We recommend that you use only Ericsson or Sony Ericsson handsfree solutions intended for use with your product.

Preliminary

Always give full attention to driving and pull off the road and park before making or answering a call if driving conditions so require.

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a handsfree kit with an external antenna supports the installation.

Personal Medical Devices

Mobile phones may affect the operation of cardiac pacemakers and other implanted equipment. Please avoid placing the mobile phone over the pacemaker, e.g. in your breast pocket. When using the mobile phone, place it at the ear opposite the pacemaker. If a minimum distance of 15 cm (6 inches) is kept between the mobile phone and the pacemaker, the risk of interference is limited. If you have any reason to suspect that interference is taking place, immediately turn off your mobile phone. Contact your cardiologist for more information.

For other medical devices, please consult the manufacturer of the device.

Children

DO NOT ALLOW CHILDREN TO PLAY WITH YOUR MOBILE PHONE OR ITS ACCESSORIES. THEY COULD HURT THEMSELVES OR OTHERS, OR COULD ACCIDENTALLY DAMAGE THE MOBILE PHONE OR ACCESSORY. YOUR MOBILE PHONE OR ITS ACCESSORY MAY CONTAIN SMALL PARTS THAT COULD BE DETACHED AND CREATE A CHOKING HAZARD.

Disposing of the Product

Your mobile phone should not be placed in municipal waste. Please check local regulations for disposal of electronic products.

Power Supply

Connect the AC power adapter only to designated power sources as marked on the product. Make sure the cord is positioned so that it will not be subjected to damage or stress. To reduce risk of electric shock, unplug the unit from any power source before attempting to clean it. The AC power adapter must not be used outdoors or in damp areas. Never alter the cord or plug. If the plug will not fit into the outlet, have a proper outlet installed by a qualified electrician.

Emergency Calls

Mobile phones operate using radio signals, which cannot guarantee connection under all conditions. Therefore you should never rely solely upon any mobile phone for essential communications (e.g. medical emergencies).

Emergency calls may not be possible on all cellular networks or when certain network services and/or mobile phone features are in use. Check with your local service provider.

Using wireless technology to help find you in case of an emergency is a goal shared by the entire wireless industry, local phone companies and the emergency response centers. Your phone includes technology which represents the first step towards that goal. However, the complexity of mobile communication technology, combined with related implementation technologies means that this locating feature may not work in all cases, even if you are able to speak with an emergency response center. Always review with an emergency response center all location data you have, including intersecting streets, as well as any landmarks, to assist in locating you. Sony Ericsson is committed to continuing to work with the entire communications industry to improve location features for emergency response.

Sony Ericsson is not liable for any service(s) including operation, coverage, or range of the network services provided by network carriers independent of Sony Ericsson.

Battery Information

We recommend that you charge the battery for 4 hours before you use your mobile phone for the first time. The battery can only be charged in temperatures between +5°C (+41°F) and +45°C (+113°F).

A new battery or one that has not been used for a long time could have reduced capacity the first few times it is used.

The talk and standby times depend on usage conditions and network configurations when using the mobile phone. If the mobile phone is used near a base station, less power is required and talk and standby times are prolonged.

Preliminary

- **Warning!** May explode if disposed of in fire.
- Use only Ericsson or Sony Ericsson branded original batteries and chargers intended for use with your mobile phone. Other chargers may not charge sufficiently or may produce excessive heat. Using other batteries and chargers could be dangerous.
- Do not expose the battery to liquid.
- Do not let the metal contacts on the battery touch another metal object. This could short-circuit and damage the battery.
- Do not disassemble or modify the battery.
- Do not expose the battery to extreme temperatures, never above +60°C (+140°F). For maximum battery capacity, use the battery in room temperature.
- Turn off your mobile phone before removing the battery.
- Keep out of children's reach.
- Use the battery for the intended purpose only.
- Do not allow the battery to be put into the mouth. Battery electrolytes may be toxic if swallowed.



Disposing of the battery

The battery should never be placed in municipal waste. Please check local regulations for disposal of batteries or call your local Sony Ericsson Customer Care Center for information.



Limited warranty

Sony Ericsson Mobile Communications AB, S-221 88 Lund, Sweden, (Sony Ericsson), provides this Limited Warranty for your mobile phone and original accessory delivered with your mobile phone (hereinafter referred to as "Product").

Should your Product need warranty service, please return it to the dealer from whom it was purchased, or contact your local Sony Ericsson Customer Care Centre (national rates may apply) or visit www.SonyEricsson.com/ to get further information.

Our warranty

Subject to the conditions of this Limited Warranty, Sony Ericsson warrants this Product to be free from defects in design, material and workmanship at the time of its original purchase by a consumer, and for a subsequent period of one (1) year.

What we will do

If, during the warranty period, this Product fails to operate under normal use and service, due to defects in design, materials or workmanship, Sony Ericsson authorised distributors or service partners, in the country/region* where you purchased the Product, will, at their option, either repair or replace the Product in accordance with the terms and conditions stipulated herein.

Sony Ericsson and its service partners reserve the right to charge a handling fee if a returned Product is found not to be under warranty according to the conditions below.

Conditions

1. The warranty is valid only if the original proof of purchase issued to the original purchaser by the dealer, specifying the date of purchase and serial number**, is presented with the Product to be repaired or replaced. Sony Ericsson reserves the right to refuse warranty service if this information has been removed or changed after the original purchase of the Product from the dealer.
2. If Sony Ericsson repairs or replaces the Product, the repaired or replaced Product shall be warranted for the remaining time of the original warranty period or for ninety (90) days from the date of repair, whichever is longer. Repair or replacement may involve the use of functionally equivalent reconditioned units. Replaced parts or components will become the property of Sony Ericsson.
3. This warranty does not cover any failure of the Product due to normal wear and tear, or due to misuse, including but not limited to use in other than the normal and customary manner, in accordance with the Sony Ericsson instructions for use and maintenance of the Product. Nor does this warranty cover any failure of the Product due to accident, modification or adjustment, acts of God or damage resulting from liquid.
4. Since the cellular system on which the Product is to operate is provided by a carrier independent from Sony Ericsson, Sony Ericsson will not be responsible for the operation, availability, coverage, services or range of that system.
5. This warranty does not cover Product failures caused by installations, modifications, or repair or opening of the Product performed by a non-Sony Ericsson authorised person.
6. The warranty does not cover Product failures which have been caused by use of accessories or other peripheral devices which are not Ericsson or Sony Ericsson branded original accessories intended for use with the Product.
7. Tampering with any of the seals on the Product will void the warranty.

Preliminary

8. THERE ARE NO EXPRESS WARRANTIES, WHETHER WRITTEN OR ORAL, OTHER THAN THIS PRINTED LIMITED WARRANTY. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SONY ERICSSON OR ITS LICENSORS BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL LOSS, TO THE FULL EXTENT THOSE DAMAGES CAN BE DISCLAIMED BY LAW.

Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

The warranty provided does not affect the consumer's statutory rights under applicable legislation in force, nor the consumer's rights against the dealer arising from their sales/ purchase contract.

If you have purchased your Product in an EU country you can have your Product serviced, under the conditions set out above, within the warranty period in any EU country where an identical Product is sold by an authorised Sony Ericsson distributor. To find out if your Product is sold in the EU country you are in, please call the local Sony Ericsson Customer Care Centre. Please observe that certain services may not be possible elsewhere than in the country of original purchase, for example due to the fact that your Product may have an interior or exterior which is different from equivalent models sold in other EU countries. It may not be possible to repair SIM-locked Products.

****** In some countries/regions additional information is requested. If so, this is clearly shown on the valid proof of purchase.

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

* European Union (EU)

Terms and definitions

AU, .au

Format for audio data files.

Bearer

Path over which data flows. Specifically in CSD and HSCSD, the type of telephony link from the GSM network to the server – PSTN or ISDN.

Bluetooth

Bluetooth wireless technology is a secure, fast, point-to-multipoint radio connection technology. It is a computing and telecommunications industry specification that describes how mobile phones, computers, and personal digital assistants (PDAs) can easily interconnect with each other and with home and business phones and computers using a short-range wireless connection.

Bookmark

A URL and header/title stored in the phone, enabling the user to go directly to a Web or WAP page.

bps

Bits per second – rate of data flow.

BMP

Microsoft Windows Bitmap. A graphics format defined by Microsoft supporting 1, 4, 8 or 24 bit colour depth. No compression, so files can be large.

cHTML

A version of HTML optimized for small devices.

CLI

Calling Line Identity. Shows the number of the person calling you in your mobile phone display. Your smartphone will also display the name and photograph of the caller if they are in Contacts. You can then make an informed choice as to whether or not to take the call. Bear in mind that not all numbers can be displayed. To use this service, it must be supported by your network.

COM Port

Defines a serial/RS-232 port within the Windows environment. May be physical (COM1 port on the rear of the PC) or virtual (COM5 port communicating with a PC card modem).

CS

Circuit Switched. Connection from A to B which has a fixed bandwidth and is maintained over a period of time, for example a voice telephone call.

Preliminary

CSD

Circuit Switched Data. CSD is a GSM service providing a CS data connection at a rate of 9.6 or 14.4kbps.

CSS

Cascading Style Sheet. A feature of browsers.

DTMF

Dual Tone Multi Frequency. A method of coding digits as a combination of two audible tones.

DUN

Dial-Up Networking. The dial-up networking capability in Windows.

e-GSM

Extended GSM. New frequencies specified by the European Radio Communications Committee (ERC) for GSM use when additional spectrum is needed (network-dependent). It allows operators to transmit and receive just outside GSM's core 900MHz frequency band. This extension gives increased network capability.

EMS

Enhanced Messaging Service. An extension of SMS enabling pictures, animations, sound and text formatting to be added to text messages.

ESM

Ericsson Smart Messaging. Used for OTA configuration; an enhancement of the Nokia Smart Messaging standard.

FCC

Federal Communications Commission. US government agency which regulates radio communications.

GIF

Graphics Interchange Format. Format for storing images which also supports animated images. Highly compressed by limiting the colour palette to 16 or 256 colours. It is one of the two most common file formats for graphic images on the World Wide Web. The other is JPEG.

GPRS

General Packet Radio Services. A radio technology for GSM networks that adds packet-switching protocols, shorter set-up time for ISP connections, and offer the possibility to charge by amount of data sent rather than connect time. GPRS promises to support flexible data transmission rates typically up to 20 or 30 kbps (with a theoretical maximum of 171.2 kbps), as well as continuous connection to the network.

GSM

Global System for Mobile Communications. GSM is the world's most widely-used digital mobile phone system, now operating in over 160 countries around the world.

GSM 900

The GSM system family includes GSM 900, GSM 1800 and GSM 1900. There are different phases of roll-out for the GSM system and GSM phones are either phase 1 or phase 2 compliant.

GSM 1800

Also known as DCS 1800 or PCN, this is a GSM digital network working on a frequency of 1800 MHz. It is used in Europe and Asia-Pacific.

GSM 1900

Also known as PCS. Refers to a GSM system running in the 1900 MHz band. Used in the USA and Canada, for instance.

HSCSD

High-Speed Circuit-Switched Data (HSCSD) is circuit-switched wireless data transmission for mobile users at data rates up to 38.4 kbps, four times faster than the standard data rates of the Global System for Mobile (GSM) communication standard in 1999.

HTML

Hypertext Markup Language is the set of markup symbols or codes inserted in a file intended for display on a World Wide Web browser page. The markup tells the web browser how to display a web page's words and images.

HTTP

HyperText Transfer Protocol. The communications protocol used to connect to servers on the World Wide Web. Its primary function is to establish a connection with a Web server and transmit HTML pages to the client browser.

IMAP4

Internet Message Access Protocol (the latest version is IMAP4) is a standard client/server protocol for accessing e-mail from your local server. The e-mail is received and held for you by your Internet server. You (or your client e-mail receiver) can view just the heading and the sender of the letter and then decide whether to download the mail.

IrDA

The Infrared Data Association. is dedicated to developing standards for wireless, infrared transmission systems between devices. With IrDA ports, a device such as your smartphone can exchange data with other devices without a cable connection. IrDA requires line-of-sight transmission.

ISDN

Integrated Services Digital Network. Communication protocol offered by telephone companies that permits telephone networks to carry data, voice, and other source traffic. It can provide circuit-switched data connections in multiples of 64 kbps.

Preliminary

ISP

Internet Service Provider. An organization that provides access to the Internet.

JFIF

JPEG File Interchange Format.

JPEG

Joint Photographic Experts Group, best known for the .JPG format for still image compression.

MBM

Multiple Bit Map. Symbian OS bitmap format.

MeT

Mobile Electronic Transactions. An initiative founded by Ericsson, Nokia and Motorola to establish a secure and consistent framework for mobile transactions.

MIDI

MIDI (Musical Instrument Digital Interface) is a protocol designed for recording and playing back music on digital synthesizers that is supported by many makes of personal computer sound cards.

MIME

Multipurpose Internet Mail Extensions. A protocol defining how messages are sent on the internet. For example, MIME is used to describe how attachments are encoded and what type of data they contain.

MMS

Multimedia Messaging Service. Logical extension of SMS and EMS. MMS defines a service enabling sound, images and video to be combined into multimedia messages. It supports photo quality pictures, and sounds in WAV, MIDI, AMR, or Melodies format.

MP3

MPEG-1 Audio Layer-3 is a standard technology and format for compression a sound sequence into a very small file (about one-twelfth the size of the original file) while almost preserving the original level of sound quality when it is played.

MPEG-4

The Moving Picture Experts Group, develops standards for digital video and digital audio compression. It operates under the auspices of the International Organization for Standardization (ISO). MPEG-4 goes far beyond compression methods: Instead of treating the data as continuous streams, MPEG-4 deals with audio/video objects that can be manipulated independently, allowing for interaction with the coded data and providing flexibility in editing. MPEG-4 supports a wide range of audio and video modes and transmission speeds. It also deals with intellectual property and protection issues.

OS

Operating System, such as Symbian OS, Linux, Microsoft Windows.

OTA

Over The Air. A technology for transmission and reception of application related configuration information in a wireless communications system.

PC

Personal Computer.

PCS

Personal Communications Services, often used to describe GSM 1900 networks.

PDF

Portable Document Format. A format created by Adobe for storing and distributing documents.

Phone book

A memory in the SIM card where phone numbers can be stored and accessed by name or position.

PIM

Personal Information Management. Generic term for applications such as Contacts, Calendar, Tasks, and so on.

PIN

A PIN is a personal identification number. PINs are commonly assigned to bank customers for use with automatic cash dispensers. They are also used, sometimes with a security token, for individual access to computer networks or other secure systems.

POP3

Post Office Protocol 3 is a standard client/server protocol for receiving e-mail. The e-mail is received and held for you by your Internet server. Periodically, you (or your client e-mail receiver) can check your mail-box on the server and download any mail.

QQVGA

Quarter Quarter VGA, 160 x 120 pixels.

Preliminary

QVGA

Quarter VGA size, typically refers to a portrait oriented screen 240 pixels wide x 320 pixels high.

PDA

Personal Digital Assistant. A handheld computer having functions such as address book, calendar, and so on.

PNG

Portable Network Graphics. Format for storing images on file with data compression but without lowering of quality (loss of information).

Protocol

In information technology, a protocol is the special set of rules that end points in a telecommunication connection use when they communicate. Protocols exist at several levels in a telecommunication connection.

RS232

A standard for serial transmission between computers and peripheral devices

SGML

A generic markup language for representing documents.

SC

Service Centre (for SMS).

Service Provider

A company that provides services and subscriptions to mobile phone users.

SIM

A SIM (Subscriber Identity Module) card is a “smart card”, inserted into GSM phones, that contains your telephone account information. SIM cards can also be programmed to display custom menus for personalized services, for instance to assist operators in providing mobile commerce applications.

SMIL

Synchronized Multimedia Integration Language. Used by MMS to describe how media objects are to be played.

SMS

Short Message Service. Allows messages of up to 160 characters to be sent and received via the network operator's message centre to a mobile phone.

SMTP

Simple Mail Transfer Protocol. Protocol used to send e-mail from an e-mail client via an SMTP server.

SWIM

A SWIM card is a SIM card containing a WIM.

SyncML

SyncML is a universal protocol for data synchronization, developed by the SyncML initiative Ltd.

TCP/IP

Transmission Control Protocol/Internet Protocol. TCP/IP is the basic communication language or protocol of the Internet. It can also be used as a communications protocol in a private network (either an intranet or an extranet).

TLS

Transport Layer Security. Used by Web browsers, for example.

URL

Uniform Resource Locator. Points to a service or information on the internet, for example: <http://www.sonyericsson.com>

USB

Universal Serial Bus. A plug-and-play interface between a computer and add-on devices (such as audio players, joysticks, keyboards, telephones, scanners, and printers). With USB, a new device can be added to your computer without having to add an adapter card or even having to turn the computer off.

USSD

Unstructured Supplementary Services Data. Narrow-band GSM data service. For example entering M79M1234# might return the stock price for stock 1234.

vCal; vCalendar

vCalendar defines a transport and platform-independent format for exchanging calendar and scheduling information for use in PIMs/PDAs and group schedulers. vCalendar is specified by IETF.

vCard

vCard automates the exchange of personal information typically found on a traditional business card, for use in applications such as internet mail, voice mail, Web browsers, telephony applications, call centres, video conferencing, PIMs /PDAs, pagers, fax, office equipment, and smart cards. vCard is specified by IETF.

VGA

Video Graphics Array. Graphics standard introduced by IBM, having a resolution of 640 x 480 pixels.

VPN

Virtual Private Network. A private network that is configured within a public network. A VPN appear as private national or international network to the customer, but physically shares a backbone trunk with other customers. VPNs enjoy the security of a private network via access control and encryption, while taking advantage of the economies of scale and built-in management facilities of large public networks. Today, there is tremendous interest in VPNs over the Internet, especially due to the constant threat of hacker attacks.

Preliminary

WAP

Wireless Application Protocol is a specification for a set of communication protocols to standardize the way that wireless devices, such as cellular telephones and radio transceivers, can be used for Internet access, including e-mail, the World Wide Web, newsgroups, and Internet Relay Chat (IRC).

Wav

A Wave file is an audio file format, created by Microsoft, that has become a standard PC audio file format for everything from system and game sounds to CD-quality audio. A Wave file is identified by a file name extension of WAV (.wav).

WBXML

Wireless Binary Extensible Markup Language.

WIM

The Wireless Identity Module is a data module for electronic identity certificates. It can contain both trusted and client certificates, private keys and algorithms needed for WTLS handshaking, encryption, decryption, and signature generation. The WIM module can be placed on a SIM card, called a SWIM card.

WML

Wireless Markup Language. A markup language used for authoring services, fulfilling the same purpose as HyperText Markup Language (HTML) does on the World Wide Web (WWW). In contrast to HTML, WML is designed to fit small handheld devices.

WTLS

Wireless Transport Layer Security. Part of WAP, WTLS provides privacy, data integrity and authentication on transport layer level between two applications.

W3C

The main standards body for the WWW.

xHTML

Extensible Hypertext Markup Language. A reformulation of HTML 4.01 in XML. Being XML, means that XHTML can be viewed, edited, and validated with standard XML tools. At the same time, it operates as well as or better than HTML 4 in existing HTML 4 conforming user agents.

XML

Extensible Markup Language. An initiative from the W3C defining an “extremely simple” dialect of SGML suitable for use on the WWW.

Technical data

General

Product name P800	Standard version, latin character set
Size	117 x 59 x 27 mm
Weight	158 grams with battery and flip, 148 grams with battery, flip removed.
System and power class	E-GSM 900 Class 4 GSM 1800 Class 1 GSM 1900 Class 1
SIM Card	Small plug-in card, 3V or 5V type
Operating System	Symbian OS v7.0 with UIQ user interface and applications environment
Processor	ARM 9
User storage	For settings, user data (for example images, contacts, messages) and third party applications: 12Mbyte
Battery life, standard battery	Talk Time: up to 13 hours Stand-by time: up to 400 hours
Operating temperature	-15° to +55° C

Screen

Screen type	TFT
Screen size	Flip closed: 208 x 144 pixels, 40 x 28 mm Flip open: 208 x 320 pixels, 40 x 61 mm
Pixel size	0.192 x 0.192 mm, or 132 ppi (Pixels Per Inch)
Colour resolution	12-bit (4096 colours)
Screen surface	Touch-sensitive
Illumination	Front-light

Integrated CommuniCam

Picture Size	640 x 480 pixels (VGA) 320 x 240 pixels (QVGA) 160 x 120 pixels (QQVGA)
Colour depth	24 bit (16 million colours)
Storage format	JPEG/JFIF, 3 quality (compression) levels, user-selectable.

Preliminary

Picture viewer

Formats	JPEG, BMP, GIF, PNG, WBMP
Sharing via	IR, Bluetooth wireless technology, MMS message, e-mail, PC file transfer

Video player

File Format	.MP4 (MPEG4)
-------------	--------------

Audio player

File Format	.MP3, WAV, AU, G-MIDI and AMR
-------------	-------------------------------

Bluetooth wireless technology

Specification	Version 1.1.
Coverage area	Up to 10 metres (33 feet)

Infrared transceiver

Data transmission rate	Max speed between phone and IrDA device (that is PC, another phone): up to 115,200 bps
------------------------	--

Integrated browser

Markup languages	HTML 3.2 (excluding features not relevant to a small screen device) WML 1.2.1 WBXML xHTML Basic xHTML Mobile Profile cHTML
WAP version	2.0
Scripting	Compiled WML scripts
Style sheets	WCSS
Images	WBMP, GIF (including animated), JPEG
Security	WTLS Class 1, 2, 3 TLS/SSL
WIM	WIM interface including SIM-WIM (SWIM)
Cache	15 - 120kbyte user-configurable; 30kbyte default.

A

- Accented letters 31
- Accepted callers 48
- Accepting new Internet or Messages settings 160
- Accounts tab 130
- Activating Bluetooth wireless technology 152
- Activating the infrared port 151
- Add to contacts 47
- Adding and removing certificates 127
- Adding images to your Contacts 122
- Advice of Charge (AoC) 41
- Alarm tones and sound notification 123
- Alarms 118
- Alerts 141
- AoC - Call meter settings 49
- Application icons 20
- Application shortcuts 23
- Applications - Flip closed 9
- Applications - Flip open 10
- Applications in flip closed mode 24
- Area information 67
- Audio player 188
- Auto retrying 42
- Automatically set up service provider and messaging 160

B

- Background Image 24
- Backing up data 157

- Banking services 44
- Basic tab 145
- Battery 12
- Battery insertion and removal 12
- Beaming 19
- Before using Messages 60
- Blinks red 170
- Blocked contact card provider 168
- Bluetooth 124
- Bluetooth wireless technology 188
- Bookmark view 75
- Browser view 71

C

- Cable 126
- Calibrate 128
- Calibration 28
- Call handling 37, 39
- Call log 41
- Call waiting 48
- Calling cards 49
- Card blocked unblock? 168
- Care instructions 17
- CBS tab 140
- Certificate manager 126
- Change code 35
- Change phone volume 44
- Changing your application shortcuts 121

Preliminary

- Charging the battery 13
- Chess 89
- Closing applications 25
- Common functions 18
- Conference calls 42
- Configuration of PC software 154
- Connecting 164
- Connecting and disconnecting from the Internet 68
- Connecting the accessories 15
- Connecting to an Internet account 165
- Connection information 166
- Connection type 159
- Connection via Bluetooth wireless technology 151
- Connection via cable 151
- Connection via infrared port 151
- Context sensitive menus 72
- Copying/pasting number 40
- Creating and editing notes 87
- CSD connections 164
- Customize the calendar 81

D

- Delay timer 94
- Demo application 16
- Detail view 97, 100, 105, 109
- Detail view - Archive 112
- Detail view - Document 110
- Detail view - Drawing 112

- Detail view - Spreadsheets 111
- Device lock 35, 169
- Dial-Up 159
- Different views 79
- Disconnecting and connecting 66
- Display 127
- Displaying calls 41
- Displaying the Area Code in the Standby Screen 121
- Does not blink 170
- Downloading 65
- Downloading e-mails automatically 66
- Downloading tracks 102
- Draft 60
- Drawing pictures 86

E

- E-mail 64
- Email tab 137
- Emergency calls 43
- Emergency calls only 169
- Ending a call when another call is on hold 42
- Entering text - Flip open 29
- Entering text in flip closed mode 25
- Exchanging sound recordings 93
- Extended characters 32

F

- Fax calls 169
- File list view 100

- Find 18
- Finding messages 68
- First time start-up 16
- Flight mode 45, 47
- Flip closed - overview 22
- Flip closed mode 50
- Flip closed shortcuts 128
- Flip open 27
- Flip open mode 52
- Flip removed 129
- Folders 18
- Folders in Messages 60
- Format 117
- Format disk 129
- Format tab 144
- Forward calls 47
- From a PC 148
- From the smartphone 149
- Functions specific for different document types 109

G

- General 187
- General functions 40, 108
- Get and send 67
- Getting help 20
- GPRS 159
- GPRS - data logs 166
- GPRS data log 166

- GPRS status information 166

- GSM Networks 49

H

- Handsfree 47
- Handwriting recognition 30
- Hints and smart functions 43
- How to use 61

I

- Icon views 18
- Icons 20, 76
- Icons within a page 73
- If your service provider or network is unavailable 68
- Inbox 60
- Incoming call alert 46
- Incoming call picture 46
- Indicator light 170
- Indicators and status bar icons 21
- Infrared 129
- Infrared transceiver 188
- Insert card 168
- Inserting symbols 26
- Inserting text 26
- Installation 147
- Installation file security 148
- Installing applications 148
- Integrated browser 188
- Integrated CommuniCam 187

Preliminary

International 129
Internet account settings 165
Internet accounts 130
Introduction 159
IP security manager 135

J

Jog Dial 11

K

Key functions 92, 120
Key lock 35
Key symbol 169
Keypad buttons 22

L

Language 135
Letters 31
Light 128
List view 96, 99, 104, 108
Local synchronization 154
Locations 118
Lock 128
Lock problems 169
Locks 47
Loop 100

M

Making a call with the flip closed 51
Making a call with the flip open 54

Making a remote synchronization 156
Making and receiving calls 16
Making sound recordings 92
Managing contacts 55
Managing entries 80
Managing notes 87
Managing play lists 100
Managing task entries 84
Managing the SIM phone book 56
Manually set up a WAP account 162
Manually set up Messages 161
Manually set up service provider 160
Master reset 123, 136
Memory Stick Duo 14
Memory Stick Duo Adapter 14
Memory/Disk full 170
Menu options in detail view 51
Menu options in detail view and edit view 54
Menu options in list view 50, 53
Menu options in SIM phone book 51
Menu options in SIM phone book list view 53
Menus 50, 52, 72, 76
Messaging accounts 136
Methods for storing data 19
Missed calls 41
MMS tab 139
Mobile music 99
Multimedia messages 62

N

- Navigation 28
- Network indication 41
- New Dial-Up or High-Speed Dial-Up account 132
- New GPRS account 131
- No network 170
- Numbers 31, 118

O

- On-screen keyboard 29
- Options in flip closed mode 36
- Options in flip open mode 38
- Options menu 23
- Other tab 135
- Outbox 60

P

- Pairing 152
- Passkeys 153
- PC connectivity software 151
- PC Suite for P800 147
- Performing a backup 157
- Performing a local synchronization 155
- Personal details 54
- Phone book manager 57
- Picture viewer 188
- Pictures 95
- PIN & unblocking PUK code 168
- PIN2 34

- Play list view 99
- Play Solitaire 90
- Power save 128
- Preconditions 157
- Preferences 45, 95, 100, 105
- Preferred Mode (bearer preference) 135
- Preferred tab 145

R

- Receiving a call when another call is on hold 42
- Receiving attachments 65
- Remote party notifications 42
- Remote sync server configuration 156
- Remote sync task configuration 156
- Remote synchronization 155
- Removing and attaching the flip keypad 32
- Removing applications in your smartphone 149
- Removing information from applications 142
- Removing unwanted general files 143
- Restoring data 157
- Restrict calls 48
- Ring signals 122
- Rules 90

S

- Saving changes 82
- Saving contact details 68
- Saving video clips 106
- Screen 71, 75, 187

Preliminary

- Screen areas 27
- Screen limitations 169
- Screen saver 128
- Secure access 164
- Secure tokens 141
- Security 125
- Security information 127
- Selecting and starting applications 25
- Sending a contact 57
- Sending a note 87
- Sending and moving task entries 84
- Sending and receiving pictures 97
- Sending attachments 65
- Sending e-mail 64
- Sent 60
- Serial settings 151
- Service provider 159
- Services 15
- Session data 167
- Setting a background picture 121
- Setting a Screen Saver 121
- Setting up WAP accounts 162
- Settings 57, 77, 85, 90
- Set-up 44
- Signing documents 74
- Silent mode 43
- SIM card lock 34
- SIM card related problems 168

- Smartphone locks 33
- Smartphone outline 8
- SMS tab 139
- Solitaire 90
- Sony Image Station 98
- Sorting your files 19
- Speakerphone 43
- Special characters 44
- Speed dial numbers 44
- Standby view 23
- Start problems 168
- Status bar 24
- Storage manager 142
- Synchronized e-mails 66
- System sounds 143

T

- Text input 143
- Text messages including EMS features 61
- The accounts in Messages 61
- The Dial-Up Networking Wizard 163
- The SIM card 12
- The smartphone package 7
- Time & date 143
- Time & date tab 144
- Time and date 116
- To delete a contact 52
- Transfer items with Send As 153

Type of certificate 127

U

Understand the game 90

Uninstalling applications 143

User authentication request 74

User greeting 144

Using sound recordings as ring signals 93

Using Tasks 83

Using the calendar 79

Using the camera 94

Using your smartphone as a modem 162

V

Video player 188

Virtual flip 26

Virtual flip open mode 33

Voice control 46

Voice mail 43, 49

W

Wallpaper 127

WAP accounts 145

WAP and OTA provisioning messages 77

WIM Access 74

WIM management 145

Workdays 117

Workdays tab 144

Writing e-mails 64

Writing text notes 86

Wrong PIN 168

Z

Zooming 18