my
machine
NESPRESSO

Nespresso, an exclusive system creating the perfect Espresso, time after time.
All *Nespresso* machines are equipped with a patented extraction system that guarantees up to 19 bar pressure. Each parameter has been calculated with great precision to ensure that all the aromas from each Grand Cru can be extracted, to give the coffee body and create an exceptionally thick and smooth crema.

CONTENT

Please read the instructions and safety precautions before operating the appliance.

Safety precautions	**4– 5**
Overview	**6**
First use	**7**
Coffee preparation	**8**
Energy saving concept and water level detection	**9**
Programming the water volume	**9**
Emptying the system before a period of non-use and for frost protection, or before a repair	**10**
Reset to factory settings	**10**
Cleaning	**10**
Descaling	**11–12**
Troubleshooting	**13**
Specifications	**13**
Contact the *Nespresso* Club	**13**
Disposal and environmental protection	**14**
Ecolaboration: www.ecolaboration.com	**14**
Warranty	**15**

K-FEE SYSTEM GMBH, EX2008, page 2
NESPRESSO USA, INC. v. K-FEE SYSTEM GMBH
IPR2024-00257, U.S. PATENT 11,548,722

K-FEE SYSTEM GMBH, EX2008, page 3
NESPRESSO USA, INC. v. K-FEE SYSTEM GMBH
IPR2024-00257, U.S. PATENT 11,548,722

⚠ CAUTION: the safety precautions are part of the appliance. Read them carefully before using your new appliance for the first time. Keep them in a place where you can find and refer to them later on.

⚠ CAUTION: when you see this sign, please refer to the safety precautions to avoid possible harm and damage.

INFORMATION: when you see this sign, please take note of the advice for the correct and safe usage of your appliance.

- The appliance is intended to prepare beverages according to these instructions.
- Do not use the appliance for other than its intended use.
- This appliance has been designed for indoor and non-extreme temperature conditions use only.
- Protect the appliance from direct sunlight effect, prolonged water splash and humidity.
- This appliance is intended to be used in households and similar applications only such as: staff kitchen areas in shops, offices and other working environments, farm houses; by clients in hotels, motels and other residential environments; bed and breakfast type environments.
- This appliance may be used by children of at least 8 years of age, as long as they are supervised and have been given instructions about using the appliance safely and are fully aware of the dangers involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and they are supervised by an adult.
- Keep the appliance and its cord out of reach of children under 8 years of age.
- This appliance may be used by persons with reduced physical, sensory or mental capabilities, or whose experience or knowledge is not sufficient, provided they are supervised or have received instruction to use the appliance safely and understand the dangers.
- Children shall not use the device as a toy.
- The manufacturer accepts no responsibility and the guarantee will not apply for any commercial use, inappropriate handling or use of the appliance, any damage resulting from use for other purposes, faulty operation, non-professionals' repair or failure to comply with the instructions.

Avoid risk of fatal electric shock and fire

- In case of an emergency: immediately remove the plug from the power socket.
- Only plug the appliance into suitable, easily accessible, earthed mains connections. Make sure that the voltage of the power source is the same as that specified on the rating plate. The use of an incorrect connection voids the guarantee.

The appliance must only be connected after installation

- Do not pull the cord over sharp edges, clamp it or allow it to hang down.
- Keep the cord away from heat and damp.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons, in order to avoid all risks.
- If the cord is damaged, do not operate the appliance.
- Return the appliance to the *Nespresso* Club or to a *Nespresso* authorized representative.
- If an extension cord is required, use only an earthed cord with a conductor cross-section of at least 1.5 mm^2 or matching input power.
- To avoid hazardous damage, never place the appliance on or beside hot surfaces such as radiators, stoves, ovens, gas burners, open flame, or similar.
- Always place it on a horizontal, stable

K-FEE SYSTEM GMBH, EX2008, page 4
NESPRESSO USA, INC. v. K-FEE SYSTEM GMBH
IPR2024-00257, U.S. PATENT 11,548,722

and even surface. The surface must be resistant to heat and fluids, like water, coffee, descaler or similar.
- Disconnect the appliance from the mains when not in use for a long period. Disconnect by pulling out the plug and not by pulling the cord itself or the cord may become damaged.
- Before cleaning and servicing, remove the plug from the mains socket and let the appliance cool down.
- Never touch the cord with wet hands.
- Never immerse the appliance or part of it in water or other liquid.
- Never put the appliance or part of it in a dishwasher.
- Electricity and water together is dangerous and can lead to fatal electrical shocks.
- Do not open the appliance. Hazardous voltage inside!
- Do not put anything into any openings. Doing so may cause fire or electrical shock!

Avoid possible harm when operating the appliance

- Never leave the appliance unattended during operation.
- Do not use the appliance if it is damaged or not operating perfectly. Immediately remove the plug from the power socket. Contact the *Nespresso* Club or *Nespresso* authorized representative for examination, repair or adjustment.
- A damaged appliance can cause electrical shocks, burns and fire.
- Always completely close the lever and never lift it during operation. Scalding may occur.
- Do not put fingers under coffee outlet, risk of scalding.
- Do not put fingers into capsule compartment or the capsule shaft. Danger of injury!
- Water could flow around a capsule when not perforated by the blades and damage the appliance.
- Never use a damaged or deformed capsule. If a capsule is blocked in the capsule compartment, turn the machine off and unplug it before any operation. Call the *Nespresso* Club or *Nespresso* authorized representative.
- Always fill the water tank with cold, fresh drinking water.
- Empty water tank if the appliance will not be used for an extended time (holidays, etc.).
- Replace water in water tank when the appliance is not operated for a weekend or a similar period of time.
- Do not use the appliance without the drip tray and drip grid to avoid spilling any liquid on surrounding surfaces.
- Do not use any strong cleaning agent or solvent cleaner. Use a damp cloth and mild cleaning agent to clean the surface of the appliance.
- To clean machine, use only clean cleaning tools.
- When unpacking the machine, remove the plastic film and dispose.
- This appliance is designed for *Nespresso* coffee capsules available exclusively through the *Nespresso* Club or your *Nespresso* authorized representative. *Nespresso* quality is only guaranteed when *Nespresso* capsules are used in *Nespresso* appliances.
- All *Nespresso* appliances pass stringent controls. Reliability tests under practical conditions are performed randomly on selected units. This can show traces of any previous use.
- *Nespresso* reserves the right to change instructions without prior notice.

Descaling

- *Nespresso* descaling agent, when used correctly, helps ensure the proper functioning of your machine over its lifetime and that your coffee experience is as perfect as the first day. For the correct amount and procedure to follow, consult the user manual included in the *Nespresso* descaling kit.

SAVE THESE INSTRUCTIONS
Pass them on to any subsequent user.
This instruction manual is also available as a PDF at nespresso.com

K-FEE SYSTEM GMBH, EX2008, page 5
NESPRESSO USA, INC. v. K-FEE SYSTEM GMBH
IPR2024-00257, U.S. PATENT 11,548,722

OVERVIEW

Packaging content

Coffee machine

16 capsule set

«Welcome to *Nespresso*» folder

Quick Start Guide

Warranty card

1 Drip tray
2 Drip grid + cup support
3 Capsule container for 9 – 11 used capsules
4 Coffee outlet
5 Lever
6 Espresso button (small cup)
7 Lungo button (large cup)
8 ⏻ ON/OFF button
9 Water tank lid
10 Water tank

K-FEE SYSTEM GMBH, EX2008, page 6
NESPRESSO USA, INC. v. K-FEE SYSTEM GMBH
IPR2024-00257, U.S. PATENT 11,548,722

EN

FIRST USE

⚠ First read the safety precautions to avoid risks of fatal electrical shock and fire

1

Remove the plastic film from the drip grid.

2

Remove the water tank and capsule container. Adjust the cable length and store the excess under the machine.

3

Insert the remaining cable in the cable guide under the machine and put the machine in the upright position.

4

Plug the machine into the mains.

5

The water tank can be carried by its cover.

6

Rinse the water tank before filling with potable water.

7

Switch the machine on. Blinking light of both coffee buttons and the capsule container: heating up for approximately 25 seconds. Steady light: ready.

8

Place a container under coffee outlet and press the Lungo button to rinse the machine. Repeat three times.

K-FEE SYSTEM GMBH, EX2008, page 7
NESPRESSO USA, INC. v. K-FEE SYSTEM GMBH
IPR2024-00257, U.S. PATENT 11,548,722

COFFEE PREPARATION

Rinse then fill the water tank with potable water. The water tank can be carried by its cover.

Switch the machine on. Blinking light: heating up for approximately 25 seconds. Steady light: ready.

Lift the lever completely and insert a *Nespresso* capsule.

Close the lever and place a cup under the coffee outlet.

⚠ Never lift lever during operation and refer to the safety precautions to avoid possible harm when operating the appliance

During heat up, you can press the coffee button when it's still blinking. The coffee will then flow automatically when the machine is ready.

For a Latte Macchiato glass fold the cup support into the upright position. It will automatically fall down again when removing the glass to avoid any drips falling on to your kitchen surfaces.

ℹ Press the Espresso (40 ml) or the Lungo (110 ml) button. Preparation will stop automatically. To stop the coffee flow or top up your coffee, press again.

Take the cup. Lift and close the lever to eject the capsule into the used capsule container.

K-FEE SYSTEM GMBH, EX2008, page 8
NESPRESSO USA, INC. v. K-FEE SYSTEM GMBH
IPR2024-00257, U.S. PATENT 11,548,722

ENERGY SAVING CONCEPT AND WATER LEVEL DETECTION

To save energy, switch the machine off when not in use. Automatic power off: the machine will stop automatically after 9 minutes of non use.

To increase automatic power off from 9 to 30 minutes: switch the machine off, press the Espresso and Lungo buttons simultaneously then press the ON/OFF button.

Red backlight lights up: water tank is empty. Refill the water tank with potable water. Empty and rinse the used capsule container and the drip tray.

PROGRAMMING THE WATER VOLUME

Fill the water tank and insert a *Nespresso* capsule.

Press and hold the Espresso or Lungo button.

Release the button once the desired volume is served.

Water volume level is now stored.

K-FEE SYSTEM GMBH, EX2008, page 9
NESPRESSO USA, INC. v. K-FEE SYSTEM GMBH
IPR2024-00257, U.S. PATENT 11,548,722

EMPTYING THE SYSTEM BEFORE A PERIOD OF NON-USE, FOR FROST PROTECTION OR BEFORE A REPAIR

Switch the machine off.

Remove the water tank. Close the Lever. Place a container under the coffee outlet.

Press and hold the Espresso button and switch the machine on. Wait until no more water comes out.

Machine switches off automatically.

RESET TO FACTORY SETTINGS

Switch the machine off.

ℹ Espresso cup: 40 ml; Lungo cup: 110 ml.

Press and hold the Lungo button and switch the machine on.

CLEANING

ℹ Do not use any strong cleaning agent or solvent cleaner. Do not put in a dishwasher.

⚠ Never immerse the appliance or part of it in water

Clean the coffee outlet regularly with a damp cloth.

To assemble the cup support and the drip tray: take off the grid, place them side by side and clip the drip tray to the cup support.

K-FEE SYSTEM GMBH, EX2008, page 10
NESPRESSO USA, INC. v. K-FEE SYSTEM GMBH
IPR2024-00257, U.S. PATENT 11,548,722

EN

DESCALING

ⓘ Duration approximately 15 minutes

⚠ Read the safety precautions on the descaling package and refer to the table for the frequency of use (see page 12)

1

Remove the capsule and close the lever.

2

Empty the drip tray and the used capsule container.

3

Fill the water tank with 0.5 L of water and add the *Nespresso* descaling liquid.

4

Place a container (minimum volume: 0.6 L) under the coffee outlet.

5

Switch the machine on.

6

Blinking light: heating up. Steady light: ready.

7

Press both coffee buttons simultaneously for three seconds. They will start blinking.

8

Press the Lungo button and wait until the water tank is empty.

K-FEE SYSTEM GMBH, EX2008, page 11
NESPRESSO USA, INC. v. K-FEE SYSTEM GMBH
IPR2024-00257, U.S. PATENT 11,548,722

Refill the water tank with the used descaling solution collected in the container and repeat step 8.

Empty and rinse the water tank. Fill it with potable water.

When ready, press the Lungo button to rinse machine.

To exit the descaling mode, press both buttons simultaneously for one second. The machine is now ready for use.

⚠ CAUTION

The descaling solution can be harmful. Avoid contact with eyes, skin and surfaces. We recommend the *Nespresso* descaling kit available from the *Nespresso* Club as it is specifically adapted to your machine. Do not use other products (such as vinegar) that would affect the taste of the coffee. The following table will indicate the descaling frequency required for the optimum performance of your machine, based on water hardness. For any additional questions you may have regarding descaling, please contact your *Nespresso* Club.

Water hardness:			Descale after:
fH	dH	$CaCO_3$	Cups (40ml)
36	20	360 mg/l	1000
18	10	180 mg/l	2000
0	0	0 mg/l	4000

fh	French grade
dh	German grade
$CaCO_3$	calcium carbonate

Nespresso descaling kit:
Ref. 3035/CBU-2

K-FEE SYSTEM GMBH, EX2008, page 12
NESPRESSO USA, INC. v. K-FEE SYSTEM GMBH
IPR2024-00257, U.S. PATENT 11,548,722

EN

TROUBLESHOOTING

No light.	➔ The machine has switched off automatically; press ON/OFF button. ➔ Check the mains: plug, voltage, fuse.
No coffee, no water.	➔ Check the water tank, if empty, fill with potable water. Descale it if necessary. ➔ Lift the lever. Press one coffee button and wait until water comes out.
Coffee is not hot enough.	➔ Preheat cup. Descale the machine if necessary.
The lever cannot be closed completely.	➔ Empty the capsule container/Check that there is not a capsule blocked inside the machine.
Leakage or unusual coffee flow.	➔ Check that the water tank is in position.
Lights flash irregularly.	➔ Call the *Nespresso* Club. ➔ Exit descaling procedure (see paragraph on descaling).
No coffee, water just comes out (despite inserted capsule).	➔ In case of difficulties, call the *Nespresso* Club.
Machine switches itself off.	➔ To save energy the machine will turn itself off after 9 minutes of non use. See paragraph on «Energy saving concept».
Front light is red.	➔ Water tank is empty or needs to be cleaned.

SPECIFICATIONS

∿	220-240 V, 50-60 Hz, < 1260 W
Pmax	19 bar
kg	~ 3 kg
	0.7 L
	11.1 cm 23.5 cm 32.6 cm

CONTACT THE *NESPRESSO* CLUB

For any additional information, in case of problems or simply to seek advise, call the *Nespresso* Club. Contact details of the *Nespresso* Club can be found in the «Welcome to *Nespresso*» folder in your machine box or at nespresso.com

K-FEE SYSTEM GMBH, EX2008, page 13
NESPRESSO USA, INC. v. K-FEE SYSTEM GMBH
IPR2024-00257, U.S. PATENT 11,548,722

DISPOSAL AND ENVIRONMENTAL PROTECTION

This appliance complies with the EU Directive 2002/96/EC. Packaging materials and appliance contain recyclable materials. Your appliance contains valuable materials that can be recovered or can be recyclable. Separation of the remaining waste materials into different types facilitates the recycling of valuable raw materials. Leave the appliance at a collection point. You can obtain information on disposal from your local authorities.

ECOLABORATION: WWW.ECOLABORATION.COM

We have committed to buy coffee of the very highest quality grown in a way that is respectful of the environment and farming communities. Since 2003 we have been working together with the Rainforest Alliance developing our *Nespresso* AAA Sustainable Quality™ Coffee Program.

We chose aluminium as the material for our capsules because it protects the coffee and aromas of the *Nespresso* Grand Cru. Aluminium is also infinitely recyclable, without losing any of its qualities.

Nespresso is committed to designing and making appliances that are innovative, high-performing and user friendly. Now we are engineering environmental benefits into the design of our new and future machine ranges.

K-FEE SYSTEM GMBH, EX2008, page 14
NESPRESSO USA, INC. v. K-FEE SYSTEM GMBH
IPR2024-00257, U.S. PATENT 11,548,722

WARRANTY

Nespresso guarantees this product against defects in materials and workmanship for a period of 2 years. The warranty period begins on the date of purchase and *Nespresso* requires presentation of the original proof of purchase to ascertain the date. During the warranty period, *Nespresso* will either repair or replace, at its discretion, any defective product at no charge to the owner. Replacement products or repaired parts will be warranted only for the unexpired portion of the original warranty or six months, whichever is greater. This limited warranty does not apply to any defect resulting from negligence, accident, misuse, or any other reason beyond *Nespresso*'s reasonable control, including but not limited to: normal wear and tear, negligence or failure to follow the product instructions, improper or inadequate maintenance, calcium deposits or descaling, connection to improper power supply, unauthorized product modification or repair, use for commercial purposes, fire, lightning, flood or other external causes. This warranty is valid only in the country of purchase or in such other countries where *Nespresso* sells and services the same model with identical technical specifications. Warranty service outside the country of purchase is limited to the terms and conditions of the corresponding warranty in the country of service. Should the cost of repairs or replacement not be covered by this warranty, *Nespresso* will advise the owner and the cost shall be charged to the owner. This limited warranty shall be the full extent of *Nespresso*'s liability however caused. Except to the extent allowed by applicable law, the terms of this limited warranty do not exclude, restrict or modify the mandatory statutory rights applicable to the sale of this product and are in addition to those rights. The limited warranty applies only to this single-branded *Nespresso* products. Products marked with both the *Nespresso* Brand and another producer are governed exclusively by the warranty provided by that other producer. If you believe your product is defective, contact *Nespresso* for instructions on how to proceed with a repair. Any defect or dysfunction resulting from the use of non-genuine *Nespresso* capsules will be not covered by this warranty. Please visit our website at www.nespresso.com for contact details.

K-FEE SYSTEM GMBH, EX2008, page 15
NESPRESSO USA, INC. v. K-FEE SYSTEM GMBH
IPR2024-00257, U.S. PATENT 11,548,722

K-FEE SYSTEM GMBH, EX2008, page 17
NESPRESSO USA, INC. v. K-FEE SYSTEM GMBH
IPR2024-00257, U.S. PATENT 11,548,722

IL

אחריות

Nespresso תהיה אחראית לכל פגם בחומר ובטיב המכונה למשך שנה אחת מתאריך הרכישה. בתקופת האחריות *Nespresso* תתקן או תחליף כל מוצר פגום על פי שיקול דעתה וללא תשלום הרוכש. האחריות על מוצרים שהוחלפו או חלקים מתוקנים, תהיה למשך הזמן הנותר לתקופת האחריות המקורית או שישה חודשים, הזמן הארוך מבינם.

אחריות מוגבלת זו, אינה מכסה פגם הנוצר עקב תאונה, הזנחה, שימוש שגוי, אי הקפדה על הוראות ההפעלה, בלאי ושבר, שימוש מסחרי, שימוש במתח או בזרם החורג מהנקוב על המוצר, שינוי תוואי המוצר ללא אישור, שריפה, ברק, שיטפון או סיבות חיצוניות אחרות.

פרט להיקף שמתיר החוק, התנאים לאחריות מוגבלת זו, אינם שוללים, אינם מגבילים או משנים את הזכויות החוקיות התקפות בעת מכירת מוצר זה והם נוספים לזכויות אלו. אם הנך סבור שהמוצר פגום, צור קשר בהקדם עם מועדון *Nespresso* על מנת לעדכן את דרכי ההתקשרות לאיסוף ולהחזרת המכשיר.

אחריות זו תקפה גם לגבי שימוש בקפסולות שאינן של *Nespresso*. למעט מקרים בהם התקלה או הפגם אשר נגרמו למכונה נוצרו בשל שימוש בקפסולות מסוג זה.

K-FEE SYSTEM GMBH, EX2008, page 18
NESPRESSO USA, INC. v. K-FEE SYSTEM GMBH
IPR2024-00257, U.S. PATENT 11,548,722

פינוי והגנה על הסביבה

מכשיר זה תואם את התקן האירופאי EU Directive CE 2002/96/EC. חומרי האריזה של המכשיר מכילים חומרים הניתנים למיחזור. מוצר זה מכיל חומרים בעלי ערך היכולים לשמש למיחזור נוסף. ההפרדה של החומרים הנותרים מאפשרת מיחזור של חומרי גלם יקרי ערך. אנא העבירו את המכונה לאתר פסולת ייעודי. ניתן לקבל מידע על סילוק ממועדון *Nespresso*.

ECOLABORATION : WWW.ECOLABORATION.COM

אנו מתחייבים לקנות את הקפה המשובח ביותר שגודל בתנאים השומרים על הסביבה, מגוון החי והצומח והקהילות החקלאיות. מאז שנת 2003 אנו עובדים בשיתוף עם ברית ההגנה על יערות הגשם ומפתחים את תוכנית AAA SUSTAINABLE QUALITY *Nespresso*.

בחרנו באלומיניום כחומר העיטוף לקפסולות שלנו משום שהוא מגן על הקפה ועל הארומות שבכל קפסולה. בנוסף, אלומיניום הוא חומר הניתן למיחזור אינסופי ולמרות זאת הוא אינו מאבד מאיכותו.

מתחייבת לעצב ולייצר מכונות בעיצוב חדשני המשלבות ביצוע מצטיין לצד ידידותיות למשתמש, כיום אנו מקפידים להכניס יתרונות סביבתיים לצד עיצוב מתקדם של מגוון מכונות העתיד *Nespresso*.

K-FEE SYSTEM GMBH, EX2008, page 19
NESPRESSO USA, INC. v. K-FEE SYSTEM GMBH
IPR2024-00257, U.S. PATENT 11,548,722

מפרט טכני

∿	< 1260 W, 50-60 Hz, 220-240 V
Pmax	19 bar
kg	~ 3 kg
	0.7 l
	11.1 cm, 32.6 cm, 23.5 cm

איתור תקלות

נוריות הבקרה אינן דולקות.	← לחצו על כפתור הפעל/הפסק. ← בידקו את כבל הכוח ואת מקור החשמל.
אין זרימת קפה, אין זרימת מים.	← בידקו האם מיכל המים ריק, במידת הצורך מלאו אותו במים טריים.
הקפה אינו חם דיו.	← חממו מראש את הספל או נקו אבנית במידת הצורך.
מנוף הנעילה אינו נסגר כהלכה.	← רוקנו את מיכל הקפסולות המשומשות / וודאו שאין קפסולה תקועה בתוך המכונה.
דליפה באזור הקפסולה.	← בדקו שמיכל המים מונח במקומו.
הבהוב לא סדיר.	← צרו קשר עם מועדון *Nespresso*. ← יש להסיר אבנית לפי הצורך (ראו סעיף הסרת אבנית).
אין יציאה של קפה, אלא רק של מים (למרות שהוכנסה קפסולה).	← יש ליצור קשר עם מועדון *Nespresso*.
המכונה נכבת באופן עצמאי.	← בכדי לחסוך בחשמל המכונה מכבה את עצמה באופן עצמאי לאחר 9 דקות. ראו בפרק "מצב חיסכון חשמל".
האור האדום הקידמי דולק.	← מיכל המים ריק או שיש צורך לנקותו.

צרו קשר עם מועדון *NESPRESSO*

לקבלת מידע נוסף, במקרה של תקלה או לייעוץ, נא להתקשר למועדון *Nespresso*. את פרטי ההתקשרות ניתן למצוא בערכת "ברוך הבא ל *Nespresso*" שבתוך אריזת המכונה ובאתר www.nespresso.co.il.

K-FEE SYSTEM GMBH, EX2008, page 20
NESPRESSO USA, INC. v. K-FEE SYSTEM GMBH
IPR2024-00257, U.S. PATENT 11,548,722

מלאו מחדש את מיכל המים בחומר להסרת האבנית המשומש וחזרו על שלב 8.

רוקנו, שטפו ומלאו מחדש את המיכל במי שתייה.

הניחו מיכל גדול מתחת לפתח יציאת הקפה ולחצו על כפתור האספרסו הארוך לשטיפתה.

כשהתהליך הושלם, לחצו על שני הלחצנים בו זמנית למשך שניה אחת. כעת המכונה מוכנה לשימוש.

⚠ התראה

החומר להסרת אבנית עלול להזיק. הימנעו ממגע עם העיניים, העור ומשטח הציפוי של המכונה. אין להשתמש בחומר אחר להסרת אבנית (עלול להזיק למכונה) פרט לזה הנמכר בערכה להסרת אבנית של *Nespresso* וניתן להשגה במועדון לקוחות. הטבלה הבאה תציג את תדירות ניקוי האבנית הדרושה למכונה שבידך, בהתבסס על קשיות המים. לקבלת פרטים נוספים בנוגע להסרת אבנית יש ליצור קשר עם מועדון *Nespresso*.

ערכת הסרת אבנית של נספרסו. מספר קטלוגי CBU-2/3035

צרפת	fh				קשיות המים:
גרמניה	dh				יש להסיר אבנית אחרי:
סידן פחמתי	$CaCO_3$		ספלים (40 ml)	$CaCO_3$	dH	fH
			1000	360 mg/l	20	36
			2000	180 mg/l	10	18
			4000	0 mg/l	0	0

K-FEE SYSTEM GMBH, EX2008, page 21
NESPRESSO USA, INC. v. K-FEE SYSTEM GMBH
IPR2024-00257, U.S. PATENT 11,548,722

ניקוי אבנית

משך התהליך כ 15 דקות.
אנא קראו בעיון את הוראות הבטיחות המופיעות על האריזה להסרת אבנית וחזרו על הטבלה לתדירות השימוש (עמוד 12).

הוציאו את הקפסולה וסיגרו את מנוף נעילת הקפסולה.

רוקנו את אגן הניקוז ואת מיכל הקפסולות המשומשות.

מלאו את מיכל המים בחומר להסרת אבנית של *Nespresso* ובחצי ליטר מים.

מקמו מיכל גדול (לפחות 0.6 ליטר) מתחת לפתח יציאת הקפה.

לחצו על כפתור ההפעלה.

הנורית מהבהבת: המכונה מתחממת.
הנורית קבועה: המכונה מוכנה להפעלה.

לחצו על שני הלחצנים בו זמנית בו זמנית למשך 3 שניות. הנוריות יתחילו להבהב.

הניחו מיכל גדול מתחת לפתח יציאת הקפה ולחצו על כפתור האספרסו הארוך לשטיפתה.

K-FEE SYSTEM GMBH, EX2008, page 22
NESPRESSO USA, INC. v. K-FEE SYSTEM GMBH
IPR2024-00257, U.S. PATENT 11,548,722

ריקון המערכת לפני תקופה ארוכה של חוסר שימוש, להגנה מפני כפור ולפני תיקון

כבו את המכונה.

יש לנתק את מיכל המים ולסגור את מנוף נעילת הקפסולות. הניחו מיכל מים גדול מתחת לפתח יציאת הקפה.

יש ללחוץ ולהחזיק את כפתור האספרסו ובמקביל להפעיל את המכונה. יש להמתין עד ליציאת כל המים.

המכונה תכבה באופן אוטומטי.

החזרה להגדרות היצרן

יש לכבות את המכונה.

ספל אספרסו: 40 מ״ל. ספל אספרסו ארוך: 110 מ״ל.

יש ללחוץ ולהחזיק את כפתור האספרסו הארוך ובמקביל להדליק את המכונה.

ניקוי

אין להשתמש בחומר ניקוי חזק או בחומרים ממיסים. אין לשים במדיח כלים. יש להשתמש בערכת ניקוי האבנית של *Nespresso*.

⚠ אין לטבול את המכשיר או חלק ממנו במים.

נקו בקביעות את פתח יציאת הקפה עם מטלית לחה.

בכדי לחבר בין אגן הניקוז ומעמד הספל, יש למקמם זה לצד זה במאונך ולחבר את אגן הניקוז למעמד הספל.

K-FEE SYSTEM GMBH, EX2008, page 23
NESPRESSO USA, INC. v. K-FEE SYSTEM GMBH
IPR2024-00257, U.S. PATENT 11,548,722

מצב חיסכון בחשמל וסמן כמות הקפה

לחיסכון בחשמל, כבו את המכונה בגמר השימוש. המכונה תכבה באופן אוטומטי לאחר 9 דקות שאינה בשימוש.

כדי לתכנת את הכיבוי האוטומטי ל 30 דקות במקום 9 דקות, וודאו כי המכונה כבויה ולחצו על כפתורי האספרסו והאספרסו והארוך בו זמנית, ומיד לאחר מכן לחצו על כפתור הפעל/כבה.

כאשר התאורה האדומה מהבהבת, מיכל המים ריק ויש למלאו במי שתייה. רוקנו ושטפו את מיכל הקפסולות המשומשות ואת אגן הניקוז באותה הזדמנות.

תכנות כמות הקפה

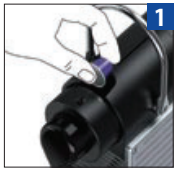

מלאו את מיכל המים והכניסו קפסולה *Nespresso*.

לחצו והחזיקו את כפתור האספרסו או את כפתור האספרסו ארוך.

עם קבלת כמות הקפה הרצוי בספל הסירו את האצבע.

כמות הקפה מתוכנתת כעת.

K-FEE SYSTEM GMBH, EX2008, page 24
NESPRESSO USA, INC. v. K-FEE SYSTEM GMBH
IPR2024-00257, U.S. PATENT 11,548,722

הכנת הקפה

יש לשטוף ולמלא את מיכל המים במים טריים (מומלץ להשתמש במים מסוננים ולא במים מינראליים).

הפעילו את המכונה. הנורית מהבהבת: המכונה מתחממת כ 25 שניות. הנורית קבועה: המכונה מוכנה להפעלה.

הרימו את מנוף נעילת הקפסולות והכניסו קפסולת *Nespresso*.

סגרו את המנוף והניחו ספל על הסבכה.

⚠ לעולם אין להרים את המנוף במהלך הכנת הקפה, עיינו בהוראות הבטיחות כדי למנוע נזק אפשרי בעת הפעלת המכשיר.

כעת שהמכונה התחממה, ניתן ללחוץ על כפתורי הקפה כאשר הם עדין מהבהבים, הקפה יתחיל לזרום החוצה באופן אוטומטי כאשר המכונה תהיה מוכנה.

כאשר משתמשים בספל זכוכית גבוה, ניתן לקפל את הסבכה למצב מאונך, היא תשוב למקומה באופן אוטומטי לאחר השימוש כדי למנוע טפטוף על משטח המטבח.

לחצו לספל אספרסו (40 מ"ל) או לספל אספרסו ארוך (110 מ"ל). פעולת הוצאת הקפה תיפסק באופן אוטומטי. כדי להפסיק באופן ידני יש ללחוץ שוב על הכפתור.

הרחיקו את ספל הקפה מהסבכה לפני פתיחת וסגירת המנוף לפליטה אוטומטית של הקפסולה המשומשת לתוך מיכל האגירה הפנימי.

K-FEE SYSTEM GMBH, EX2008, page 25
NESPRESSO USA, INC. v. K-FEE SYSTEM GMBH
IPR2024-00257, U.S. PATENT 11,548,722

לפני ההפעלה הראשונה

⚠ יש לקרוא את הוראות הבטיחות כדי למנוע סיכון למכת חשמל קטלנית ולשריפה.

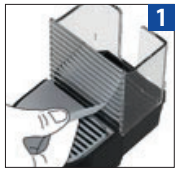

הסירו את ציפוי המגן מהסבכה.

הסירו את מיכל המים ואת מיכל אגירת הקפסולות. התאימו את אורך הכבל באמצעות מיקום האיחסון שמתחת למכונה.

הכניסו את הכבל הנותר למקום האיחסון שמתחת למכונה והחזירו אותה למצב יציב.

הכניסו את התקע לחשמל.

ניתן להחזיק את מיכל המים באמצעות המכסה.

יש לשטוף את מיכל המים לפני מילויו במים טריים.

הפעילו את המכשיר. כאשר הנוריות מהבהבות, כ 25 שניות, המכונה מתחממת. כאשר הנוריות מפסיקות להבהב המכונה חמה ומוכנה לשימוש.

הניחו מיכל גדול מתחת לפתח יציאת הקפה ולחצו על כפתור אספרסו ארוך לשטיפת המכונה. חזרו על הפעולה 3 פעמים.

K-FEE SYSTEM GMBH, EX2008, page 26
NESPRESSO USA, INC. v. K-FEE SYSTEM GMBH
IPR2024-00257, U.S. PATENT 11,548,722

סקירה כללית

תוכן האריזה

מכונת הקפה

ערכת 16 קפסולות

ערכת "ברוך הבא ל-*Nespresso*"

הוראות הפעלה

תעודת אחריות

1 אגן הניקוז
2 סבכה + מעמד לספל
3 מיכל לקפסולות משומשות מכיל 9-11 קפסולות
4 פתח יציאת הקפה
5 מנוף לנעילת הקפסולה
6 לחצן להכנת אספרסו (ספל קטן)
7 לחצן להכנת אספרסו ארוך (ספל גדול)
8 ⏻ לחצני הפעל/הפסק
9 מכסה מיכל המים
10 מיכל מים הניתן לשליפה

K-FEE SYSTEM GMBH, EX2008, page 27
NESPRESSO USA, INC. v. K-FEE SYSTEM GMBH
IPR2024-00257, U.S. PATENT 11,548,722

Nespresso בהקדם.

- מלאו את מיכל המים במי שתיה בטמפרטורת החדר.
- יש לרוקן את מיכל המים במידה ולא מתבצע שימוש במשך זמן ממושך במכונה (למשל בעת יציאה לחופשה).
- יש להחליף את המים במיכל המים כאשר לא בוצע שימוש במכונה לפרק זמן ארוך ,למשל בסופי שבוע.
- אין להשתמש במכשיר ללא אגן הניקוז והסבכה המכסה אותו על מנת למנוע שפיכת נוזלים על המשטחים שסביב לו.
- אין להשתמש בחומר ניקוי חזק או בחומרים ממיסים. לצורך ניקוי פני המכונה, יש להשתמש במטלית לחה ובחומר ניקוי עדין.
- לניקוי המכונה.
- בהוצאת המכונה מהאריזה יש להסיר את כיסוי הפלסטיק מהסבכה ומהרשתות הצדדיות.
- מכונה זו פועלת עם קפסולות *Nespresso* שזמינות באופן בלעדי דרך מועדון *Nespresso*. התפקוד הנאות ואורך החיים של מכונת *Nespresso* שברשותכם מובטחים אך ורק בעת שימוש בקפסולות *Nespresso*.
- כל מכונות *Nespresso* עוברות בדיקות מחמירות וחלקן אף נלקח לבדיקות מעשיות. על כן יתכן ובחלק מהמכונות ייראו סימנים של שימוש, הנובעים מאותן בדיקות.
- *Nespresso* שומרת לעצמה את הזכות לשנות את הוראות השימוש ללא הודעה מוקדמת.

הסרת אבנית

- שימוש בערכת ניקוי אבנית של *Nespresso*, יסייע לכם בתחזוקה נכונה של המכונה שבידכם ובכך להאריך את חיי המכונה וליהנות מקפה מושלם כמו ביום הראשון.לשימוש נכון בערכה לניקוי אבנית אנא קראו את ההוראות המצורפות לערכת ניקוי האבנית.

יש לשמור הוראות אלו יש להעבירן למשתמש הבא.
ניתן למצוא את הוראות ההפעלה גם באתר האינטרנט
www.nespresso.com

K-FEE SYSTEM GMBH, EX2008, page 28
NESPRESSO USA, INC. v. K-FEE SYSTEM GMBH
IPR2024-00257, U.S. PATENT 11,548,722

המאושרת על ידי היצרן/היבואן.
- במידה ופתיל הזינה ניזוק, אין להשתמש במכשיר.
- יש להחזיר את המכשיר הפגום למועדון *Nespresso* או למעבדת השירות של החברה.
- במידה ויש צורך בכבל מאריך, יש להשתמש אך ורק בכבל מוארק עם חתך מוליך של 1.5 ממ״ר לפחות.
- כדי למנוע נזק וסכנה, אין למקם את המכשיר על גבי משטחים חמים כגון רדיאטורים, כיריים, מבערי גז, להבה פתוחה וכדומה, או בקרבתם.
- יש להניח את המכשיר על משטח יציב ומאוזן. המשטח חייב להיות חסין אש ונוזלים, כגון: מים, קפה, אבנית וכדומה.
- כאשר המכשיר אינו בשימוש למשך פרקי זמן ארוכים, יש לנתקו מן החשמל. יש לנתק את המכשיר על ידי הוצאת התקע ולא על ידי משיכת הכבל עצמו, אחרת הכבל עלול להינזק.
- לפני ניקוי המכשיר יש לנתקו מהחשמל ולהניח לו להתקרר.
- לעולם אין לגעת בכבל החשמל עם ידיים רטובות.
- אין לטבול את המכשיר או כל חלק של המכשיר במים או בנוזל אחר.
- אין להכניס את המכשיר או את חלקיו למדיח כלים (אלא אם כן בפירוש צוין אחרת בהוראות ההפעלה).
- שילוב של חשמל ומים הוא מסוכן ועלול לגרום להתחשמלות קטלנית.
- אין לפתוח את המכשיר. מתח מסוכן בפנים!
- אין להכניס דבר כלשהו לתוך הפתחים. הדבר עלול לגרום לשריפה או למכת חשמל!

יש למנוע נזק אפשרי בזמן הפעלת המכשיר.
- אין להשאיר את המכשיר ללא השגחה בזמן שהוא עובד.
- אין להשתמש במכשיר אם הוא פגום או אינו פועל בצורה מושלמת. יש להוציא מיד את התקע משקע החשמל. יש להחזיר את המכשיר למועדון *Nespresso* לבדיקה, תיקון או כוונון.
- מכשיר פגום עלול לגרום למכת חשמל, כוויות או שריפה.
- יש לסגור תמיד את הידית ולעולם אין להרימה בזמן ההפעלה. קיימת סכנה לכוויות.
- אין להניח את האצבעות מתחת לפתח יציאת הקפה, סכנת כוויות.
- אין להכניס אצבעות לתוך תא הקפסולות או לחלל הקפסולות. סכנת פציעה!
- מים עלולים לזרום מסביב לקפסולה במקרה שהיא אינה מנוקבת על ידי הלהבים ולגרום נזק למכשיר.
- לעולם אין להשתמש בקפסולה פגומה או מעוותת. במקרה שקפסולה נתקעה במכונה, יש לכבות את המכונה ולא לבצע בה שום שימוש. יש להתקשר למועדון

K-FEE SYSTEM GMBH, EX2008, page 29
NESPRESSO USA, INC. v. K-FEE SYSTEM GMBH
IPR2024-00257, U.S. PATENT 11,548,722

⚠ זהירות - הוראות בטיחות אלו הן חלק מהמכשיר. קראו את הוראות הבטיחות במלואן לפני שימוש ראשון במכשיר. שימרו את הוראות הבטיחות במקום נגיש.

⚠ זהירות - יש לקרוא ולמלא אחר הוראות הבטיחות במלואן כדי למנוע פגיעה ונזק אפשריים.

מידע - כאשר מופיע סימן זה יש לקרוא את העצות לשימוש בטוח ונכון במכשיר.

- המכשיר נועד להכין משקאות קפה בהתאם להוראות הפעלה אלו.
- אין להשתמש במכשיר לשימושים אחרים מלבד אלו שהמכשיר נועד עבורם.
- המכשיר מיועד לשימוש בסביבה ביתית (לא חיצונית) ויש להישמר משימוש בסביבה של טמפרטורות קיצוניות.
- יש להגן על המכשיר מאור שמש ישיר, מגע מים ממושך ולחות.
- המכשיר מיועד להכנת משקאות בהתאם להוראות אלו. הוא נועד לשימוש במרחב פרטי ולשימוש פנימי בלבד. אין להשתמש במכשיר לכל שימוש שאינו השימוש המיועד.
- המכשיר אינו מיועד לשימוש על ידי ילדים מתחת לגיל 8 או אנשים בעלי מוגבלויות או על ידי אנשים שאינם בעלי ניסיון וידע ללא השגחה או הדרכה מתאימה. אין לתת לילדים לנקות את המכונה או לתחזקה ללא השגחה.
- יש להשגיח על ילדים כדי להבטיח שהם אינם משחקים עם המכשיר.
- היצרן לא ישא באחריות בגין שימוש מסחרי, שימוש לא נכון, אי ציות להוראות, שימוש בלתי הולם במכשיר או שימוש למטרות אחרות, תפעול לקוי או תיקון שלא במעבדת השירות המאושרת ע״י היצרן/יבואן.

יש למנוע כל סיכון למכת חשמל קטלנית ולשריפה.

- במקרה חרום יש לנתק באופן מיידי את הכבל מהחשמל.
- יש לחבר את המכשיר לשקע חשמל מתאים ומוארק בלבד. יש להפעיל את המכשיר רק לאחר החיבור לחשמל. ודאו כי סיווג המתח של מקור אספקת המתח זהה לזה המצוין על גבי לוחית הסיווג. שימוש בחיבור שאינו מתאים יגרום לפקיעת תוקף האחריות.

יש לחבר את המכשיר לשקע החשמל רק לאחר הצבתו במקום בטוח.

- אין למשוך את הכבל על פני שוליים חדים. יש להדק אותו או להניח לו להיות תלוי.
- יש להרחיק את הכבל מחום ולחות.
- במידה ופתיל הזינה ניזוק, כדי למנוע סיכון, יש להחליפו אך ורק במעבדת שירות

K-FEE SYSTEM GMBH, EX2008, page 30
NESPRESSO USA, INC. v. K-FEE SYSTEM GMBH
IPR2024-00257, U.S. PATENT 11,548,722

Nespresso, הינה מערכת אקסקלוסיבית להפקת אספרסו מושלם, פעם אחר פעם. כל מכונות *Nespresso* בעלות מערכת מיצוי ייחודית הפועלת על לחץ מיצוי גבוה ביותר (עד 19 בר). כל פרמטר במערכת תוכנן בזהירות רבה ובדיוק נרחב על מנת להבטיח כי כל הניחוחות, בכל תערובות הקפה, יתבטאו במלוא עוצמתן ויעניקו גוף, מרקם סמיך וקרמה קטיפתית וחלקה.

תוכן עניינים

אנא קראו את הוראות ההפעלה והבטיחות לפני ההפעלה הראשונה של המכשיר.

הוראות בטיחות	3
סקירה כללית	6
לפני ההפעלה הראשונה	7
הכנת הקפה	8
מצב חיסכון בחשמל וסמן כמות הקפה	9
תכנות כמות הקפה	9
ריקון המערכת לפני תקופה ארוכה של חוסר שימוש, להגנה מפני כפור ולפני תיקון	10
החזרה להגדרות היצרן	10
ניקוי	10
ניקוי אבנית	11–12
איתור תקלות	13
מפרט טכני	13
צרו קשר עם מועדון *Nespresso*	13
פינוי והגנה על הסביבה	14
Ecolaboration	14
אחריות	15

K-FEE SYSTEM GMBH, EX2008, page 31
NESPRESSO USA, INC. v. K-FEE SYSTEM GMBH
IPR2024-00257, U.S. PATENT 11,548,722

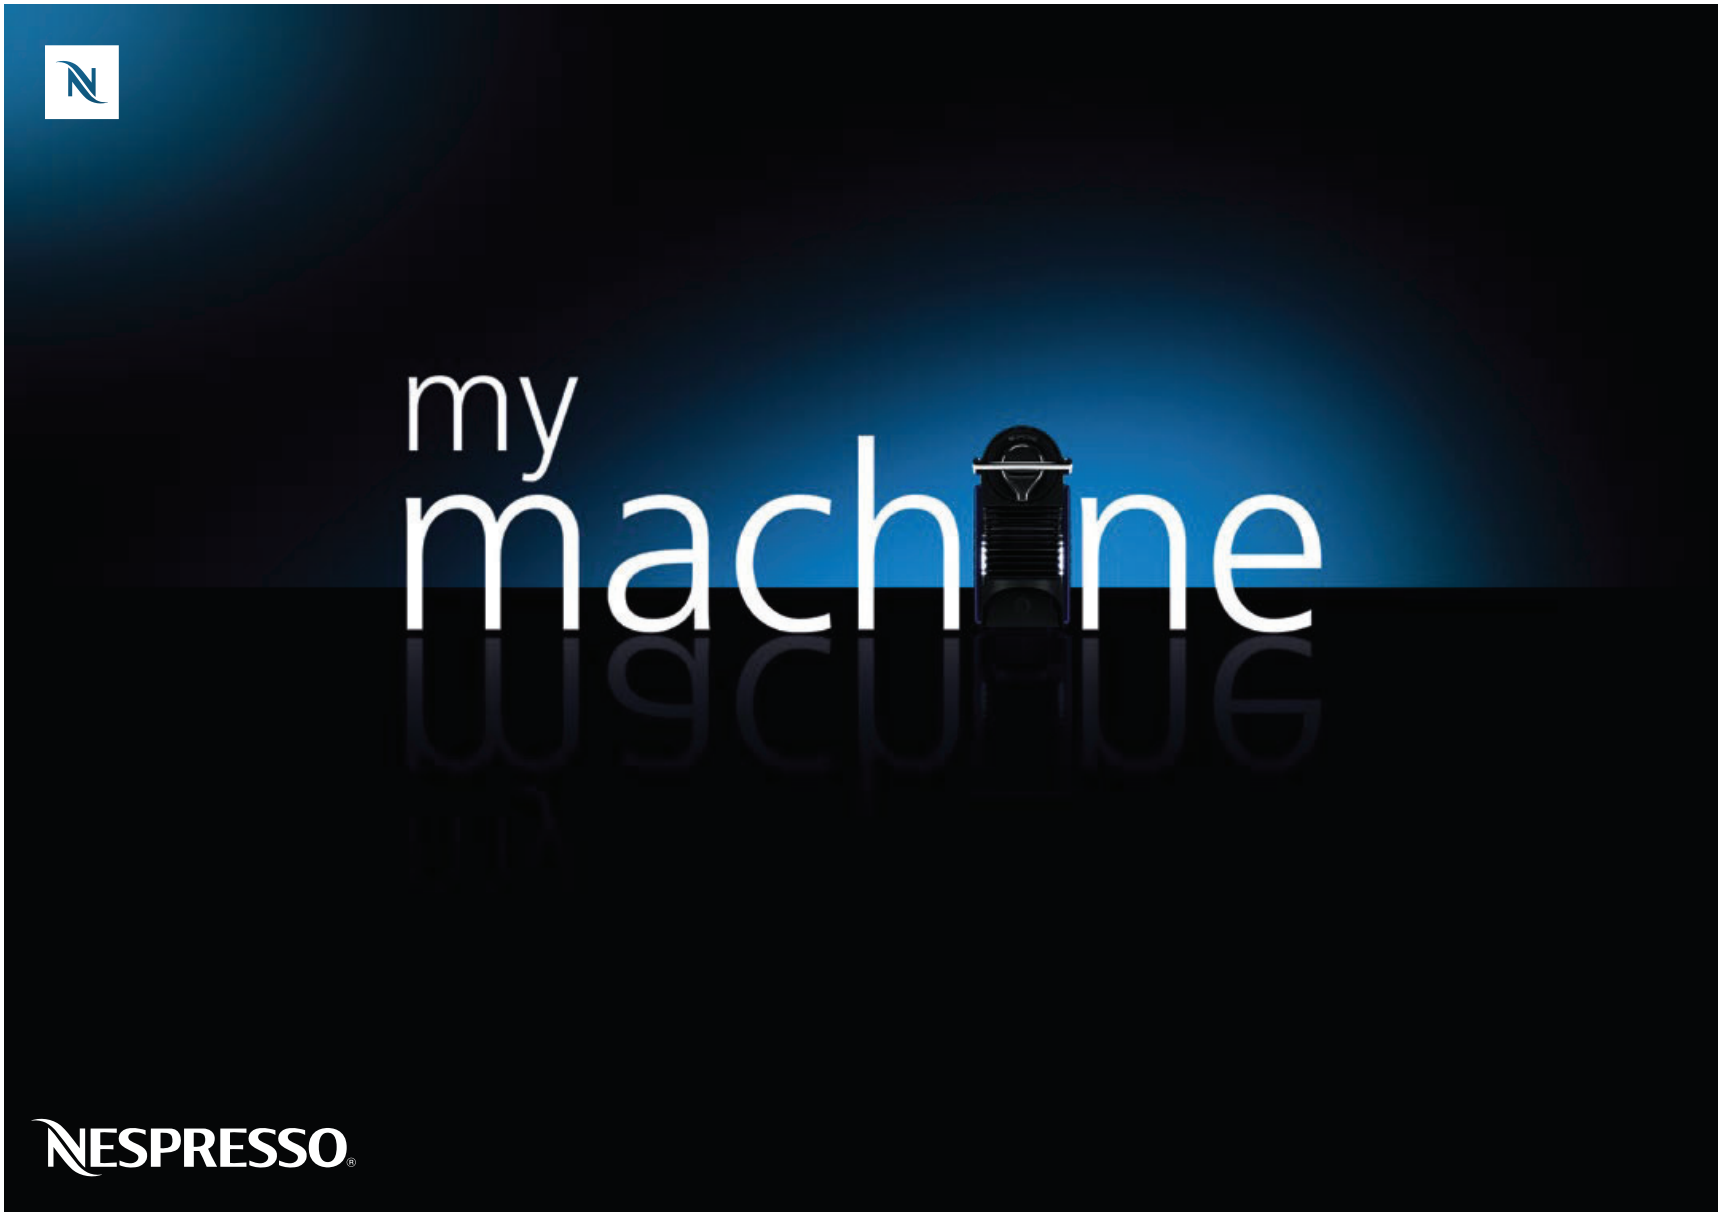
my
machine
NESPRESSO