UNITED STATES PATENT AND TRADEMARK OFFICE

BEFORE THE PATENT TRIAL AND APPEAL BOARD

ARRI AG,

Petitioner,

v.

ROTOLIGHT LIMITED,

Patent Owner.

DECLARATION OF SIMON CANINS REGARDING AX10 SPOTMAX™ MANUAL

I, Simon Canins, hereby declare:

1. My name is Simon Canins. I am an employee of Astera LED Technology GmbH ("**Astera**"). I am over the age of eighteen and otherwise competent to make this declaration. I have personal knowledge of the facts herein, and, if called as a witness, can competently testify to these facts.

2. I am the R&D Director at Astera. I have been continuously employed by Astera since 1 March 2013. Through my role as R&D Director, I have personal knowledge about (a) Astera's past and current production lighting products, including the Astera AX10 Spotmax™ (the "**AX10 Product**"), and (b) the preparation, and physical and electronic provision, of user documentation to customers who purchase such products, including the AX10 "User Manual" dated 7 May 2015, attached as Exhibit A (the "**AX10 Manual**"), and the AX10 "Quick Start Guide" dated 16 June 2015, attached as Exhibit B (the "**AX10 Quick Start Guide**").

3. Astera's documentation, like the AX10 Quick Start Guide and AX10 Manual, are written by the relevant product manager and approved by me, in my role as R&D Director. I was personally involved in the preparation, and provisioning to customers and the public, of the AX10 Quick Start Guide and AX10 Manual.

4. Astera includes a "Quick Start Guide" in the box of the products it sells. These Quick Start Guides contain safety instructions and basic usage and specifications. They also includes a link and a QR code that leads to an Astera webpage, where the full "User Manual" for the product, like the AX10 Manual, can be viewed, printed, and downloaded. Information required for the full operation of the AX10 Product is only provided in the full User Manual (not the Quick Start Guide). For environmental reasons, however, Astera does not print and include a physical copy of the full User Manual in the box of each product.

5. The AX10 Product was shown to the public at the Prolight and Sound Exhibition in Frankfurt, Germany, around 12 March 2014. The first units of AX10 Products were shipped to customers in late 2014, mostly in Germany, and the first orders from customers in the United States were in March 2015. Sales and shipments of the AX10 Products to U.S. customers continued throughout the rest of 2015 and thereafter. Such sales and shipments were made through a distributor called "Astera-LEDs." In total, in 2015 alone, Astera sold over 150 AX10 Product units to customers in the United States. Globally, more than 600 AX10 Product units were sold that same year.

6. The AX10 Manual bears a date of 7 May 2015, and the AX10 Quick Start Guide bears a date of 16 June 2015. Based on my personal knowledge, the AX10 Manual (attached as Exhibit A) is a true and correct copy of what Astera

distributed to customers from at least June 2015 through at least June 2017 (the date of the next version of the AX10 User Manual). Based on my personal knowledge, the AX10 Quick Start Guide (attached as Exhibit B) is a true correct copy of what Astera distributed to customers from at least June 2015 through at least April 2016 (the date of the next version of the AX10 Quick Start Guide, which next version was distributed to customers until at least October 2017, when it was again updated).

7. The attached AX10 Quick Start Guide (Exhibit B) was included in the box of each AX10 Product sold and shipped to customers from June 2015 through April 2016. Scores of customers received a copy of the Quick Start Guide with the AX10 Product in 2015, as mentioned above. These same customers were also provided with a copy of the AX10 Manual bearing the 7 May 2015 date (Exhibit A) through the link and QR code in the AX10 Quick Start Guide. Providing customers with easy access to the full AX10 Manual in this way was important; this enabled them to get information required for the operation of the AX10 Product, which was not included in the AX10 Quick Start Guide itself.

8. From at least June 2015 through 2017, customers and other interested members of the public could also obtain information about the AX10 Product, and copies of the AX10 Manual (Exhibit A), at our website at www.astera-led.com. Astera posted the AX10 Manual to its website for customers to view, access, and

download at least as of June 2015. Indeed, as I just explained, and as can be readily seen in Exhibit B, multiple links by which one could access information about the AX10 Product (including the AX10 Manual) from Astera's website were provided in the Quick Start Guide dated June 2015. More specifically, our website in June 2015 (and still now) has a section titled "Products," which includes the AX10 Product. The AX10 Product page then (and now) has various sub-sections, including product descriptions, technical specifications, and data sheets, along with links to download materials related to the AX10 Product, including the AX10 Manual (labeled "Manual").

9. I declare that all statements made herein of my own knowledge are true and that all statements made on information and belief are believed to be true and, further, that these statements were made with the knowledge that willful false statements and the like are punishable by fine, imprisonment, or both, under the laws of the United States, including Section 1001 of Title 18 of the U.S. Code.

// Signature Page Follows //

Executed on 10 August 2021

Simon Canins

Heinrich-Böll-Str. 97

81829 Munich, Germany

EXHIBIT A

ASTERA

AX10

SPOTMAX™

User Manual

1 CONTENTS

2 Package Contents 3
3 Safety and Handling 3
3.1 Bracket 4
3.2 Battery 4
3.3 Battery Icon and Status LED 4
3.4 Charging 5
3.5 AC Wiring 5
3.6 Diffusors 6
4 Specification 7
5 Troubleshooting 7
6 Operation 8
6.1 AsteraRGB Color Space 8
6.2 Ways to Control 9
6.3 Control By Infrared with ARC1 9
6.4 Control by the AsteraApp™ 10
6.5 Control by Wireless DMX 10
6.6 Control Panel 11
6.7 Status Screen 11
6.8 Main Menu Options 12
6.9 Menu Shortcuts 12
6.10 INPUT SELECT 13
6.11 Select a Static Color 14
6.12 DMX Settings 15
6.13 DMX FAIL 18
6.14 RUNTIME 18
6.15 UNPAIR CRMX 19
6.16 STANDALONE 20
6.17 AC FAILURE (EMERGENCY LIGHT) 21
6.18 INFO 22
6.19 RESET SETTINGS 22
7 Using the Light with the AsteraApp™ 23
7.1 Pair your Light with the AsteraApp™ 23
7.2 Powerful Light Control 24
7.3 Change the Color 24
7.4 Create a Set 25
7.5 Targeting Lights 26
7.6 Changing The Effect 27
7.7 List of Effects 28
7.8 Chaser Effects in Deep 29
7.9 The Main Screen 30
7.10 Brightness 31
7.11 RUNTIME 32
7.12 Anti-Flicker 32
7.13 Theft Alarm 33
7.14 Enter and Leave Standby 34
7.15 DMX Settings 35
8 Menu Overview 36

Petitioners' Ex. 1007
Exhibit 1012
Aputure v. Rotolight - IPR2024-01423
Page 9 of 47

This instruction manual is part of the device and persons operating the device must have access to it at any time.
Safety precautions mentioned in the instruction manual have to be observed.
If the device is being sold, this instruction manual has to be included.

This manual is valid for lights with firmware version 5.2.20 and up.

Translations

If the device is being sold, this instruction manual has to be translated into the national language of the destination country.

If discrepancies occur in the translated text, the original instruction manual has to be used to solve them for the manufacturer has to be contacted.

Contact Information

Astera LED Technology GmbH

Karl-Schmid-Str. 14
81829 Munich
Germany

+49 89 2155253-0

Technical support

Europe: +49 89 21552253-1

America: +1 774 247-0437

Asia: +86 755 28237295

Email: service@astera-led.com

©2015, Astera LED Technology GmbH
All rights reserved

Petitioners' Ex. 1007
Exhibit 1012
Aputure v. Rotolight - IPR2024-01423
Page 10 of 47

2 Package Contents

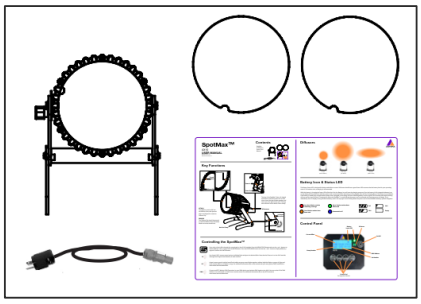

- SpotMax™
- Wide Angle Diffusor (32°)
- Wallwash Diffusor (17° x 46°)
- Powercon True1 Power Cord
- Quickstart Manual

3 Safety and Handling

Before you operate this unit read the manual carefully. Always make sure to include the manual if you pass/rent/sell the unit to another user. Keep in mind that this manual cannot address all possible dangers and environments. Please use your own caution when operating. This product is for professional use only. It is not for household use.

Do not operate the unit in areas of high temperature conditions or under direct sunlight. It will cause abnormal function or damage the product.

Only qualified personnel may repair this product. Do not open the product housing.

Do not directly look into the light beam. It can cause harm to your eyes. Do not look at the LEDs with a magnifying glass or any other optical instrument that may concentrate the light output.
Use only Astera approved accessories to diffuse or modify the light beam.

The exterior surfaces of the light can become hot, up to 70°C (158°F) during normal operation. Ensure that accidental physical contact with the device is impossible. Allow all lights to cool before servicing.

A rechargeable lithium ion battery is built into this unit. Please avoid bumping or plunging, it may cause fire or explosion. Never store the battery when fully drained. Always recharge immediately when empty. Make sure to fully charge all units before storing them. Partially charged batteries will lose capacity. Fully recharge every 6 months if not used.

Always charge with the flight case open.
It is recommended to charge at a temperature between 0°C and 35°C

The light contains a lithium ion battery. Don't throw the unit into the garbage at the end of its lifetime. Make sure to dispose is according to your local ordinances and/or regulations, to avoid polluting the environment!
The packaging is recyclable and can be disposed.

Petitioners' Ex. 1007
Exhibit 1012
Aputure v. Rotolight - IPR2024-01423
Page 11 of 47

3.1 Bracket

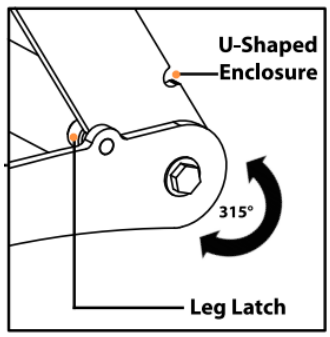

The AX10 SpotMax™ is fitted with a foldable bracket. This is beneficial for storage, transportation, and charging as the legs fold parallel to each other. It allows easy carrying, too, with the ergonomic handle.

The handle also contains a W 1/2" thread to attach the Super Bolt (which then can be attached to Manfrotto Super Clamps). The bolt can be ordered separately.

3.2 Battery

While running on battery, the light adjusts its output to meet the required minimum runtime. It can be set by the control panel (6.14 R) or the AsteraApp™ between one and twenty hours.

The battery is specified to last for 300 full discharge cycles. Its runtime will have decreased to 70% by then. To increase the battery life it is recommended to recharge as early as possible and not let the light run until the battery is depleted.

If operated below 20°C, the battery runtime may be slightly shorter than predicted. This is also true if the lights are stored for a long time at cold temperature right before they are used.

The light is constantly monitoring the LED temperature and dims down the brightness if it exceeds 65°C. That ensures a save and long-live operation but in a hot environment the brightness might be slightly lower.

NOTE:

Always store the lights with full battery.
Depleted batteries must be recharged immediately, otherwise their performance will suffer.

ATTENTION:

The battery may be only replaced with an original Astera replacement battery.

3.2.1 STANDBY

By using the AsteraApp™, the light can be set to a special standby mode.

In that mode, its ouput is switched off, the CRMX receiver is powered down and it enters a state of low power consumption.

A full battery will supply the SpotMax™ roughly 20 days in standby mode.

To light leaves the standby mode if the ENTER key is pressed or the standby mode is left by the AsteraApp™.

3.3 Battery Icon and Status LED

The Battery Status LED is designed for being used before an event. All fixtures should have a green Status LED to ensure that the battery lasts for your upcoming event. If it is another color, recharging is recommended.

While the light is connected to AC, the Status LED will be blue. While it is charging, the Battery Icon will start the charging sequence. Once the battery is fully charged the battery icon on the display will show all 3 bars (as below). If the battery is already fully charged and the power cord is plugged in, the display will show a battery with moving bars for approx. 30-60 seconds after which it will stop and the icon will show a full battery.

Petitioners' Ex. 1007
Exhibit 1012
Aputure v. Rotolight - IPR2024-01423
Page 12 of 47

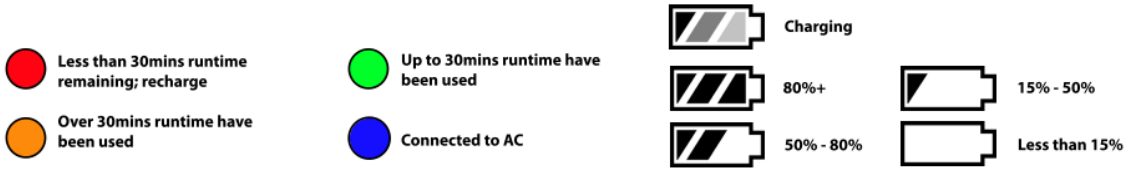

3.4 Charging

Charge the light immediately after use.

If charged in a flight case, make sure it is open. It is recommended to charge the lights at an ambient temperature between 0°C and 35°C. A normal charge cycle will take five to seven hours, but may take much longer if the light is hot.

The light is designed to be charged while powered off. If it is connected to AC and powered on, it may charge at reduced current if enough power is available and the battery temperature is below 45°C.

The light has an automatic battery bypass switch, so it can safely be used wired, this will not cause wear to the battery.

3.5 AC Wiring

The light is equipped with Neutrik True1 Powercon input and output connectors. They are rated IP65 even while a connector is plugged in.

Petitioners' Ex. 1007
Exhibit 1012
Aputure v. Rotolight - IPR2024-01423
Page 13 of 47

3.6 Diffusors

The effect of the diffusors can be seen below:

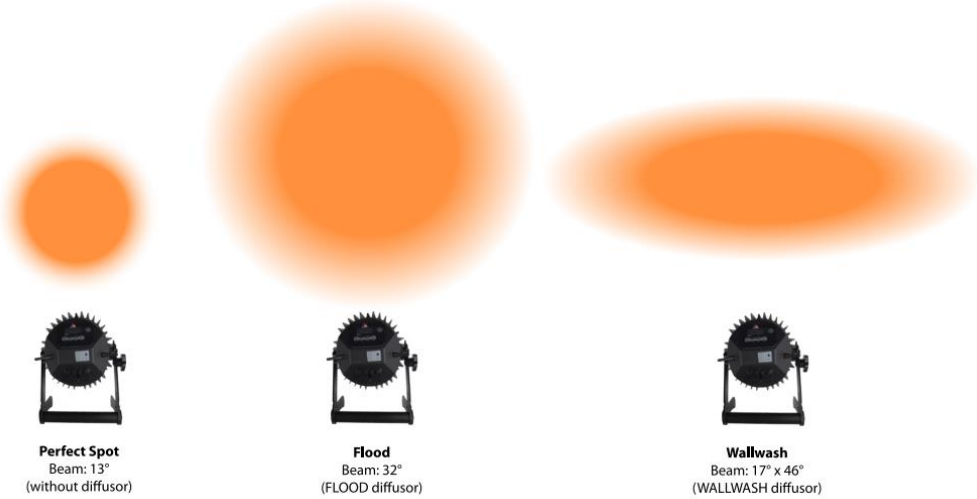

NOTE: *Each diffusor has its name inscribed on the edge (FLOOD or WALLWASH).*

In order to **attach the diffusor**, the diffusor must be slid into the Diffusor Slots, then pressed down firmly and clipped in under the Diffusor Clip.

In order to **remove the diffusor**, the Diffusor Clip should be pressed in and the diffusor sheet should be lifted out via the Thumb Hole.

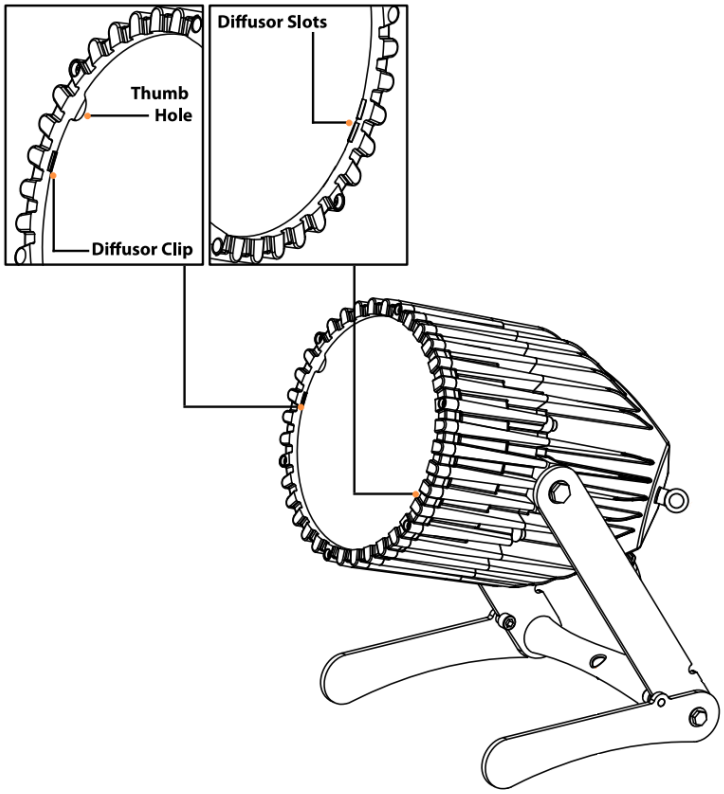

Petitioners' Ex. 1007
Exhibit 1012
Aputure v. Rotolight - IPR2024-01423
Page 14 of 47

4 SPECIFICATION

LED power:	135W
Illuminants:	9 x 15W RGBAW Philips LEDs
Luminous Flux*:	3,350lm (at White 4000K)
Emittance*:	10,350lx (at 2m; White 4000K)
CRI*:	up to 92
Beam Angle:	13°
Input Voltage:	90-264V 47-63Hz 1.8A/115VAC 1.0A/230VAC
Inrush Current:	COLD START 70A/230VAC
Battery Runtime:	up to 20hrs (seamless runtime)
Wireless Module:	EU: 868.0-869.7 MHz US: 902-928 MHz 2.4 GHz
Operating Temperature:	0°C – 40°C 32°F – 104°F
Relative Humidity:	0%-100%
Size:	L279mm x W253mm x H296mm 10.9" x 11.6" x 9.9"
Weight:	7.98 kg 17.5lbs
IP Rating:	IP65

* Typical Values

5 TROUBLESHOOTING

The fixture does not turn on.
The battery may be empty. Connect it to the AC and try again.

T**he fixture turns on and the display is on, but the LEDs do not emit light.**
The fixture could be set to BLACKOUT mode, set to display black color or is operating in DMX mode and doesn't receive a valid signal. It is good practice to do a RESET SETTINGS (Chapter 6.19) between setups.

The fixture is not working correctly - it does not display the color or effect chosen.
The fixture may still be operating under a previous setting. It is good practice to do a RESET SETTINGS (Chapter 6.19) between setups.

After completing a RESET SETTINGS, the fixture still cannot be controlled by AsteraApp™.
Make sure the RADIO PIN (Chapter 6.18) of the fixture and AsteraApp™ is the same.

The fixture does not run long enough on battery.
The required RUNTIME can be set. It defaults to 5h. To achieve a greater battery runtime, set the RUNTIME to the required value. Alternatively, program the fixture to only display colors that use less power, such as Red, Green and Blue.
If the runtime is still too short, consider that it is reduced slightly if the battery is very cold.

The power cable is connected but the fixture is not charging.
The battery may be fully charged. Refer to chapter 3.2.1 for more details. The fixture will only commence charging when its battery has a temperature of 45° or less. Turn the fixture off and let it cool down; once cold enough, it will start charging. If it still not charging, consult our website.

Petitioners' Ex. 1007
Exhibit 1012
Aputure v. Rotolight - IPR2024-01423
Page 15 of 47

6 Operation

6.1 AsteraRGB Color Space

The lights work with a specially optimized RGB color space, the AsteraRGB color space. It is designed to eliminate the need to control each color individually to display a certain color. Instead, the light calculates the optimum combination of all colors based on an RGB value. It considers each LED chip's temperature as well as an optimal color rendering.

Due to this, it is possible to reproduce colors with high accuracy. It is possible to calculate an AsteraRGB representation for any CIE color. The easiest way to do this is with the AsteraApp™:

- Go to the color picker and add a new favorite color
- Go to favorite colors and edit it

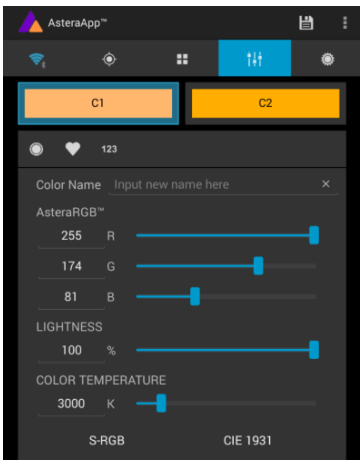

The dialog on the right will open.

It allows you to find AsteraRGB values for a certain color temperature. S-RGB or CIE1931 values can be calculated to AsteraRGB by pressing the corresponding buttons.

The primaries of the AsteraRGB are defined as:

Red		Green		Blue	
x_R	y_R	x_G	y_G	x_B	y_B
0.7079	0.2920	0.1750	0.7200	0.1566	0.0177

White Point	
x	y
0.4917	0.4878

The light also includes the Dynamic Powerboost feature. It ensures that colors that consume less electrical power are boosted slightly, while power power-consuming colors are slightly compressed.
This maximizes the brightness while maintaining the desired battery runtime.

While controlling with the AsteraApp™ or by the Control Panel, only RGB values can be set.

By DMX control, it is possible to control all colors separately. But it should be noted, that then temperature compensation is only available for Red, Green and Blue; all other colors will experience temperature drift, their brightness will not be constant.

Petitioners' Ex. 1007
Exhibit 1012
Aputure v. Rotolight - IPR2024-01423
Page 16 of 47

6.2 Ways to Control

The light can be controlled in several ways:

IR

Use Astera's ARC1 infrared remote control, point it at individual lights and press the desired effect. Note that the IR sensor is on the AX10's rear side.

App

The AsteraApp™ is an efficient way to quickly create a customized light show. It can group several lights together, address individual lights or groups of lights, and send complex effects with a user defined color palette to all lights in range. For additional information refer to chapter 7.
Alternatively, the Astera ARC2 remote control can be used.

DMX

LumenRadio

The light can also be controlled by CRMX wireless DMX, the built in receiver is compatible with all LumenRadio CRMX transmitters as well as W-DMX™ G2, G3, G4 and G4S transmitters (G4 and G4S in 2.4 GHz mode only).
You can also use an Astera ART3 Wireless DMX Transmitter to send DMX in the UHF frequency band, although CRMX is the recommended method.

Power the light on/off, set a static color or change its settings.

CRMX is a trademark of LumenRadio AB
W-DMX is a trademark of Wireless Solution Sweden AB

6.3 Control By Infrared with ARC1

The light can be controlled by the infrared remote control if:

- INPUT SELECT is set to AUTO or REMOTE CONTROL (refer to chapter 6.10).
- The light is currently NOT operated by DMX. If it is, only ON and OFF will work while INPUT SELECT is set to AUTO.

The ARC1 is very handy to switch several lights on or off at a time.

Petitioners' Ex. 1007
Exhibit 1012
Aputure v. Rotolight - IPR2024-01423
Page 17 of 47

6.4 Control by the AsteraApp™

Your light has a built in standalone engine. It can display static colors or replay a number of predefined effect patterns with a customizable color palette.

With the AsteraApp™ these effects can be created and be sent to the light by the built in UHF receiver. The effects are just triggered and then each light replays it autonomously until it receives a new effect.

Lights can be grouped into sets. This way they can be controlled separately and also effects can stretch over up to 32 lights.

Also, you can remotely adjust your lights settings, this eases DMX setup for example.

For more details refer to chapter 7.

6.5 Control by Wireless DMX

To pair your light to a CRMX or W-DMX™ transmitter, make sure that:

- Your light is not currently paired to a transmitter. To unpair it refer to chapter 6.15.
- INPUT SELECT is either set to AUTO and the light is still in detect mode –or- INPUT SELECT is set to CRMX wireless DMX; for details refer to chapter 6.10.

Then press the button on your transmitter. After 10 seconds the light should be paired and show the appropriate status screen (chapter 6.7).

If you prefer to use an Astera ART3 wireless transmitter, set INPUT SELECT to Astera wireless DMX and refer to the ART3's user manual for details.

NOTE:

If you experience difficulties pairing your light, it is recommended to set INPUT SELECT to CRMX wireless DMX first. This will make sure that the CRMX status screen is displayed.

Petitioners' Ex. 1007
Exhibit 1012
Aputure v. Rotolight - IPR2024-01423
Page 18 of 47

6.6 Control Panel

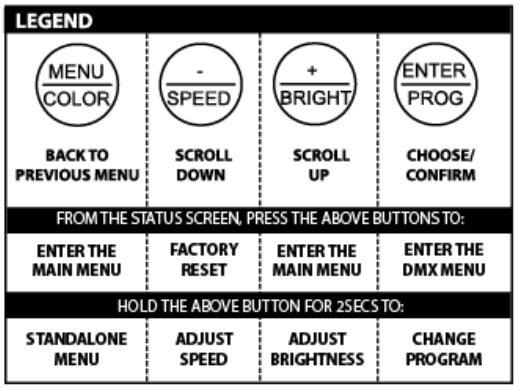

6.6.1 Blue Mode

Blue mode is an easy way to pair your light with the AsteraApp. To enter Blue Mode, hold down the POWER button for 3 seconds while the light is switched on. It will start to flicker blue.

6.7 Status Screen

The status screen is shown after power up. The light also returns to the status screen if no keys are pressed for three minutes.

It shows:

- In the FIRST line what input is currently active
- In the SECOND line the current DMX and SET address

INPUT: DETECTING SET:001 DMX:001	INPUT SELECT is set to AUTO and the light did not yet latch to one input source.
REMOTE CONTROL SET:001 DMX:001	The light is latched to REMOTE CONTROL mode.
STANDALONE SET:001 DMX:001	INPUT SELECT is set to STANDALONE. The light can no longer be controlled by any wireless signal.
CRMX: SIGNAL 99% SET:001 DMX:001	The light is latched to CRMX mode.
WLDMX: NO LINK SET:001 DMX:001	The light is latched to Astera wireless DMX mode.
EMERGENCY LIGHT SET:001 DMX:001	Emergency light mode can be active because either AC FAIL or DMX FAIL being set to EMERGENCY LIGHT.
STANDBY SET:001 DMX:001	The standby mode saves power; the light is off and waiting for a "leave standby" command received by the AsteraApp™.
ALARM DO NOT STEAL THI	Theft alarm is active.
ACCEPT CONFIG ? SET:001 DMX:001	If the AsteraApp is asking to "tap a light" and this is shown, press the ENTER key shortly to accept.

Petitioners' Ex. 1007
Exhibit 1012
Aputure v. Rotolight - IPR2024-01423
Page 19 of 47

6.8 Main Menu Options

The main menu can be entered from the status screen by pressing MENU or +. To cycle between the main menu entries, press the + or – keys. Pressing MENU again will go back to the status screen.

Main menu: INPUT SELECT	Used to change the input source or set it to AUTO.
Main menu: STATIC COLOR	Entering this menu resets all STANDALONE settings to default and makes the light display a static color.
Main menu: DMX ADDRESS	Set the DMX address.
Main menu: DMX SETTINGS	Set the DMX parameters.
Main menu: UNPAIR CRMX	Unpair from a CRMX or W-DMX™ transmitter.
Main menu: RUNTIME	Set the lights runtime on battery in hours.
Main menu: STANDALONE	Set parameters of the standalone engine.
Main menu: AC FAILURE	The light can react to the loss of AC power input.
Main menu: INFO	Information about the light: radio pin, firmware version, battery status, ect.
Main menu: RESET SETTINGS	Reset all user settings to default. Should be done after each usage to ensure consistent behavior. The RADIO PIN is NOT reset.

6.9 Menu Shortcuts

To get to the DMX address setting, press the ENTER key twice from the status screen.

To open the DMX settings menu, press ENTER, then the + key and ENTER again.

To reset the light to default settings, press the – key, then ENTER and again ENTER.

Petitioners' Ex. 1007
Exhibit 1012
Aputure v. Rotolight - IPR2024-01423
Page 20 of 47

6.10 INPUT SELECT

The light accepts several input sources. By default, it is set to AUTO. In this mode, it listens to all sources, and the first source that becomes active is latched. Once a source is latched, the light will not listen to any other source anymore.

This latched source is cleared by powering down the light or changing the INPUT SELECT manually.

```
Main menu:
INPUT SELECT
```

→

```
INPUT SELECT
AUTO
```

Auto mode; the lights waits for any input signal and latches the first detected source.

```
INPUT SELECT
STANDALONE
```

In standalone mode, neither wireless DMX nor remote control is accepted.

```
INPUT SELECT
REMOTE CONTROL
```

The light can be control by the AsteraApp™, but any DMX signal is ignored.

```
INPUT SELECT
Astera wirel.DMX
```

Only Astera wireless DMX is accepted, all other sources are ignored.

```
INPUT SELECT
CRMX wirel. DMX
```

Only CRMX/W-DMX wireless DMX is accepted, all other sources are ignored.

The following table shows what sources are accepted for each setting:

Source \ INPUT SELECT	AUTO, none latched	AUTO, STANDALONE latched	AUTO, REMOTE CONTROL latched	AUTO, Astera wirel. DMX latched	AUTO, CRMX wirel. DMX latched	STANDALONE	REMOTE CONTROL	Astera wirel. DMX	CRMX wirel. DMX
AsteraApp™: change colors	●		●				●		
AsteraApp™: STANDBY, RUNTIME, ALARM	●	●	●	●	●		●		
AsteraApp™: DMX Settings	●	●	●	●	●		●	●	●
Astera Wireless DMX	●			●				●	
CRMX Wireless DMX	●				●				●
Infrared Remote	●	●	●	●	●		●		
The Light's Control Panel	●	●	●	●	●	●	●	●	●

HINT:
To avoid the light automatically latching onto CRMX while you want to control it by remote control, please do UNPAIR CRMX (chapter 6.15). As soon as the remote control is latched, the CRMX receiver will no longer accept pairing requests.

Petitioners' Ex. 1007
Exhibit 1012
Aputure v. Rotolight - IPR2024-01423
Page 21 of 47

6.11 Select a Static Color

To make the light show a static color, enter this menu. Immediately when it's entered, all previous STANDALONE settings are cleared to default and the INPUT SELECT is latched to STANDALONE. This is valid until the next power-up only. To make sure the light also shows a static color after the next power up, set INPUT SELECT to STANDALONE and not AUTO.

```
Main menu:
STATIC COLOR
```

→

```
Static Color:
RED
```

A number of predefined colors are available while scrolling through the menu. See below for a full table.

•
•
•

```
Static Color:
6500K
```

```
Static Color:
INDEX COLOR
```

By entering the INDEX COLOR menu, a number of predefined colors similar to those of common gels are available for selection.

```
Static Color:
CUSTOM COLOR
```

To set a color by its red, green and blue value, enter here.

6.11.1 Predefined Colors

Color	Red	Green	Blue
RED	255	0	0
ORANGE	255	107	0
YELLOW	255	160	18
GREEN	0	255	0
CYAN	0	255	224
BLUE	0	0	255
VIOLET	127	84	255
PINK	255	53	119
BLACK	0	0	0
2700K	255	166	70
3200K	255	178	89
4000K	255	193	115
5500K	255	211	150
6500K	255	219	167

Petitioners' Ex. 1007
Exhibit 1012
Aputure v. Rotolight - IPR2024-01423
Page 22 of 47

6.12 DMX SETTINGS

```
Main menu:
DMX SETTINGS
```

→

```
DMX Settings:
DMX TAB
```

A number of DMX tables are available, see below for details.

```
DMX Settings:
STROBE
```

For each of the tables, the strobe channel can be enabled or disabled.

```
DMX Settings:
DMX FAIL
```

If the DMX signal is lost, the light can either HOLD the current output, switch to STANDALONE operation, to BLACK or EMERGENCY LIGHT, which means white 4000K. See chapter 5.12

6.12.1 DMX Tables

Each of the tables can optionally contain a strobe channel. It can be switched on or off by the STROBE menu. The tables below list it, but in case it is set to OFF, the DMX-channels are unused.

6.12.1.1 RGB S

CHANNEL	VALUE	FUNCTION
1	0..255	RED
2	0..255	GREEN
3	0..255	BLUE
4		STROBE (only if STROBE is ON)
	0..3	OFF
	4	RANDOM FAST
	5	RANDOM MEDIUM
	6	RANDOM SLOW
	7..255	Variable strobe

6.12.1.2 RGBW S

CHANNEL	VALUE	FUNCTION
1	0..255	RED
2	0..255	GREEN
3	0..255	BLUE
4	0..255	WHITE
5		STROBE (only if STROBE is ON)
	0..3	OFF
	4	RANDOM FAST
	5	RANDOM MEDIUM
	6	RANDOM SLOW
	7..255	Variable strobe

6.12.1.3 RGBAW S

CHANNEL	VALUE	FUNCTION
1	0..255	RED
2	0..255	GREEN
3	0..255	BLUE
4	0..255	AMBER
5	0..255	WHITE
6		STROBE (only if STROBE is ON)
	0..3	OFF
	4	RANDOM FAST
	5	RANDOM MEDIUM
	6	RANDOM SLOW
	7..255	Variable strobe

Petitioners' Ex. 1007
Exhibit 1012
Aputure v. Rotolight - IPR2024-01423
Page 23 of 47

6.12.1.4 RGB CCT DIM IND S

CHANNEL	VALUE	FUNCTION
1	0..255	**RED**
2	0..255	**GREEN**
3	0..255	**BLUE**
4		**COLOR TEMPERATURE (CCT)**
	0..4	no effect
	4..255	display color temperature; CCT overwrites the RGB setting
		Formular: CCT = 2000 + 20*DMX-Value
		Example: 50 -> 3000K
		100 -> 4000K
		150 -> 5000K
5	0..255	**Dimmer**
6		**INDEX COLOR**
	0..4	no effect
	4..255	display index color (common gels); INDEX COLOR overwrites both, RGB and CCT.
7		**STROBE (only if STROBE is ON)**
	0..3	OFF
	4	RANDOM FAST
	5	RANDOM MEDIUM
	6	RANDOM SLOW
	7..255	Variable strobe

6.12.1.5 DIM RGB S

CHANNEL	VALUE	FUNCTION
1	0..255	**Dimmer**
2	0..255	**RED**
3	0..255	**GREEN**
4	0..255	**BLUE**
5		**STROBE (only if STROBE is ON)**
	0..3	**OFF**
	4	**RANDOM FAST**
	5	**RANDOM MEDIUM**
	6	**RANDOM SLOW**
	7..255	**Variable strobe**

6.12.1.6 DIM RGBW S

CHANNEL	VALUE	FUNCTION
1	0..255	**Dimmer**
2	0..255	**RED**
3	0..255	**GREEN**
4	0..255	**BLUE**
5	0..255	**WHITE**
6		**STROBE (only if STROBE is ON)**
	0..3	**OFF**
	4	**RANDOM FAST**
	5	**RANDOM MEDIUM**
	6	**RANDOM SLOW**
	7..255	**Variable strobe**

6.12.1.7 DIM RGBAW S

CHANNEL	VALUE	FUNCTION
1	0..255	**Dimmer**
2	0..255	**RED**
3	0..255	**GREEN**
4	0..255	**BLUE**
5	0..255	**AMBER**
6	0..255	**WHITE**
7		**STROBE (only if STROBE is ON)**
	0..3	**OFF**
	4	**RANDOM FAST**
	5	**RANDOM MEDIUM**
	6	**RANDOM SLOW**
	7..255	**Variable strobe**

Petitioners' Ex. 1007
Exhibit 1012
Aputure v. Rotolight - IPR2024-01423
Page 24 of 47

6.12.1.8 Effect Modes

There are two effect modes available. They offer a comprehensive control of the built in standalone engine. Settings that can otherwise only be changed on the LCD menu or by the AsteraApp™ can be directly adjusted by DMX. The two effect modes only differ in the way the color palette of four colors is set: either by RGB or by a single channel, like a color wheel. In that case, common gels can be selected directly. Strobe is always enabled for the effect modes.

CHANNEL		VALUE	FUNCTION
EFFECT MODE FIX	EFFECT MODE RGB		
1	1	0..255	INTENSITY
2	2		STROBE
		0..3	OFF
		4	RANDOM FAST
		5	RANDOM MEDIUM
		6	RANDOM SLOW
		7..255	Variable strobe
3	3		PROGRAM:
		0..7	ONE COLOR STATIC
		8..15	TWO COLOR STATIC
		16..23	THREE COLOR STATIC
		24..31	FOUR COLOR STATIC
		32..39	ONE COLOR FADE
		40..47	TWO COLOR FADE
		48..55	THREE COLOR FADE
		56..63	FOUR COLOR FADE
		64..71	SIMPLE RUNNING
		72..79	DOUBLE RUNNING
		80..87	TWO COL RUNNING
		88..95	FLAG RUNNING
		96..101	DOUBLE FLAG RUNNING
		102..109	SPIRAL 4 COLOR
		110..117	SPIRAL 2 COLOR
		118..125	RAINBOW
		126..133	FIRE
		134..141	ROTOR
		142..149	ROTOR SPLIT 2
		150..157	ROTOR SPLIT 4
4	4	0..255	SPEED
5	5	0..255	FADE
6	6		DIRECTION:
		0..63	FFW+LOOP
		64..127	FFW
		128..190	REW
		191..255	REW+LOOP
7	7		SIZE:
			Defines the virtual size of the program in groups. For example if SIZE is set to 2 groups, only half of the program is shown on the unit.
		0..63	1 Group
		64..127	2 Groups
		128..190	3 Groups
		191..255	4 Groups
8	8		OFFSET:
		0..255	If SIZE is set to >1 group, the units pixels can be shifted within the virtually larger program. Increasing the OFFSET parameter scrolls the position of the unit within the virtual large program.
9	9	0..255	RESTART PROGRAM
			if value is changed, the program starts again from the beginning (useful if DIRECTION is not set to loop)
10			INDEX COLOR 1
11			INDEX COLOR 2
12			INDEX COLOR 3
13			INDEX COLOR 4
	10		RED 1
	11		GREEN 1
	12		BLUE 1
	13		RED 2
	14		GREEN 2
	15		BLUE 2
	16		RED 3
	17		GREEN 3
	18		BLUE 3
	19		RED 4
	20		GREEN 4
	21		BLUE 4

Petitioners' Ex. 1007
Exhibit 1012
Aputure v. Rotolight - IPR2024-01423
Page 25 of 47

6.13 DMX FAIL

It can be set what the lights should do when the DMX signal is lost.

DMX Settings: DMX FAIL	→ DMX FAIL HOLD	The last DMX input is still shown, even if the DMX signal is lost.
	DMX FAIL EMERGENCY LIGHT	The light will show a 4000K white as soon as the DMX signal is lost.
	DMX FAIL BLACKOUT	The light will go dark if DMX signal is lost.
	DMX FAIL STANDALONE	The light will switch temporarily to standalone mode if the DMX signal is lost and show for example a preset static color.

6.14 RUNTIME

Main menu: RUNTIME	→ RUNTIME 1h	The light is able to adjust its power to meet a certain runtime on battery. The runtime is always calculated for a full battery.
	• • •	
	RUNTIME 20h	

EXAMPLE:

If the light is required to light during an eight hour event, and one hour of setup time is scheduled, then the runtime should be set to nine hours immediately after the first power up.

Please note, that the light should not be stored below 20°C before an event, otherwise the runtime might be shorter than calculated.

More details on the built in battery can be found at chapter 3.2.

For additional power-savings refer to the AsteraApp™ manual.

Petitioners' Ex. 1007
Exhibit 1012
Aputure v. Rotolight - IPR2024-01423
Page 26 of 47

6.15 UNPAIR CRMX

```
Main menu:
UNPAIR CRMX
```

Once your light is paired to a CRMX or W-DMX™ transmitter, it cannot be paired to another one until it is unpaired. This can be either done by using the button on the transmitter that is currently paired or on the light directly.

If you wish to unpair your CRMX wireless DMX receiver from a Lumen Radio or W-DMX™ transmitter, go to UNPAIR CRMX and press enter.

NOTE:

The CRMX receiver is only powered while INPUT SELECT is:

- *set to CRMX wireless DMX*
- *or AUTO and either CRMX is latched or no source is latched yet.*

For details in INPUT SELECT refer to chapter 6.10.

Petitioners' Ex. 1007
Exhibit 1012
Aputure v. Rotolight - IPR2024-01423
Page 27 of 47

6.16 STANDALONE

Main menu: STANDALONE	→ Standalone: PROGRAM	Select one of the predefined patters, see table below.
	Standalone: INTENSITY	Sets the dimmer level.
	Standalone: SPEED	The time that one cycle of the program takes to complete.
	Standalone: FADE	The fade behavior between each step of the program. 0% means, no fading 100% means full fading, fade-is directly followed by fade-out.
	Standalone: COLOR C1 • • • Standalone: COLOR C4	The color palette of the programs consist of up to four colors. They can be set individually. See chapter 6.11 for details on how to set a color.
	Standalone: SET ADDRESS	The AsteraApp™ can control sets of lights individually. The set address can be 1 to 254. This setting is normally done by the set-wizard in the AsteraApp™.
	Standalone: SET SIZE	Several lights can form a virtual "big" light. Programs like running light will then run over all those lights one by one. This parameter tells how many lights should form that virtual light; up to 32.
	Standalone: POS IN SET	Tells the lights position in the big virtual light, 1..32.
	Standalone: GROUP ADDRESS	Group addressing is supported by the ARC2, please refer to the ARC2 manual.

Petitioners' Ex. 1007
Exhibit 1012
Aputure v. Rotolight - IPR2024-01423
Page 28 of 47

6.16.1 Predefined Programs

The predefined programs may use more than one pixel. To display these effects properly with your light, it is first necessary to group them into Flow-Sets and control them by the AsteraApp™ (see chapter 7.4).

If several lights are grouped into a Flow-Set, they form a virtual big light with several pixels.

Name	Pattern
ONE COLOR STATIC	A static color is displayed on the whole virtual light.
TWO COLOR STATIC	The virtual light is split into two halfs and two colors are displayed.
THREE COLOR STATIC	The virtual light is split into three parts and three colors are displayed.
FOUR COLOR STATIC	The virtual light is split into four parts and four colors are displayed.
ONE COLOR FADE	For all FADE programs, the whole color palette of four colors is used. Those colors are faded in and out one by one. Here, the whole virtual light shows the same color.
TWO COLOR FADE	The virtual light is split and shows two colors at a time.
THREE COLOR FADE	The virtual light is split and shows three colors at a time.
FOUR COLOR FADE	The virtual light is split and shows four colors at a time.
SIMPLE RUNNING	A running light; the background and the running pixels color can be set.
DOUBLE RUNNING	Two pixels are running in opposite direction.
TWO COL RUNNING	The two pixels are of different color even.
FLAG RUNNING	A three color flag is running over the background color.
DOUBLE FLAG RUNNING	Two flags are running over background in opposite direction.
SPIRAL 4 COLORS	The color is changed pixel by pixel. All four colors are used one after the other.
SPIRAL 2 COLORS	The color changes between color 1 and 2 from the outside to the inside, pixel by pixel.
RAINBOW	A rainbow effect is displayed.
FIRE	The fire effect is a random flicker between two colors, background and flickering color.

NOTE:

It is highly recommended to check out the effects editor of the AsteraApp™ to get a better understanding of how those programs work. Also, many programs look similar if the lamp is NOT grouped into a Flow-Set.

6.17 AC FAILURE (EMERGENCY LIGHT)

The light can react to the loss of AC power in several ways. As soon as AC is present again, the light resumes normal operation.

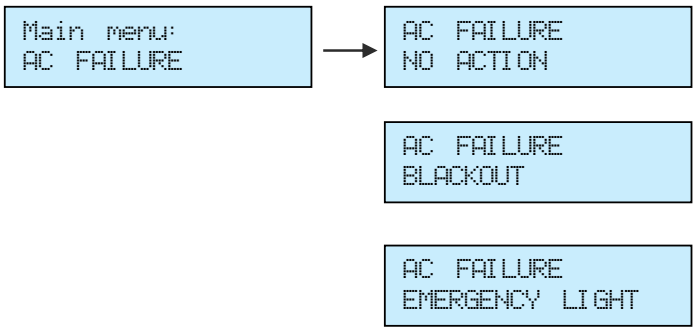

No special behavior on AC loss.

The light will turn dark if AC is lost.

The light will switch to a 4000K white as soon as the AC is lost.

Petitioners' Ex. 1007
Exhibit 1012
Aputure v. Rotolight - IPR2024-01423
Page 29 of 47

6.18 INFO

```
Main menu:
INFO
```

→

```
Radio PIN:
      0000
```

Read/set the RADIO PIN. To change the pin, press ENTER. Adjust each digit with the + and – keys, cycle through the digits with the MENU key. When finished, press ENTER again.

```
Serial number:
000-00000 43xx
```

Tells the serial number of the light and the CPU type (43xx).

```
Firmware version
5.2.20.U    HW001
```

The firmware version and hardware version of the light.

```
Power-on hours:
00001h
```

The hour-counter is counting up as long as the light is powered up. It does not count if the light is powered off and charging.

```
RF link:
-36.0dBm -0.0ppm
```

While the light is receiving an UHF signal, this tells the signal strength and deviation.

```
Battery state:
100%
```

The current charging state of the battery in percent.

```
Calibration:
2015-04-20-0001
```

Gives information about the LED calibration stored in the light, for service reference only.

6.19 RESET SETTINGS

```
Main menu:
RESET SETTINGS
```

→

```
ARE YOU SURE?
NO          YES
```

Return the light to the default settings. This may be done before each use to start from a known point. The RADIO PIN and the CRMX pairing stay.

HINT

It is highly recommended to reset the light's settings after each event to ensure a clear start for the next usage.

Petitioners' Ex. 1007
Exhibit 1012
Aputure v. Rotolight - IPR2024-01423
Page 30 of 47

7 Using the Light with the AsteraApp™

The buttons of the AX10 only allow a basic operation of the light. To gain full control over all features, the AsteraApp™ should be used.

The AsteraApp™ is an efficient way to quickly create a customized light show. It can group several lights together, address individual lights or groups of lights, and send complex effects with a user defined color palette to all lights in range.

Additionally, it can be used to adjust the lights settings remotely.

The AsteraBox™ is needed to interface your Android device with the lights. It communicates to the Android device by Bluetooth and controls the lights by UHF.

7.1 Pair your Light with the AsteraApp™

The connection is secured by a 4 digit Radio Pin. Only if the lights pin matches the AsteraApp™ pin, lights are controllable.

The pairing process transmits the radio pin from the app to the light and stores it there.

1. Choose a unique Radio Pin in the app.
2. Switch the light into blue mode, see chapter 6.6.
3. Press the "Pair with Lights" button in the AsteraApp™.

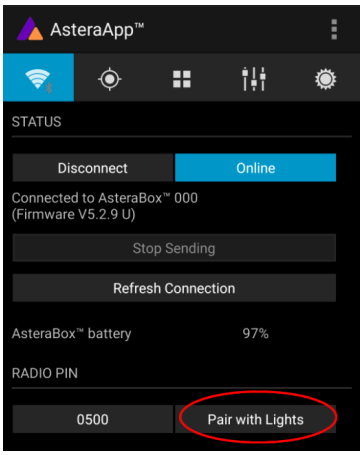

NOTE:

Alternatively, you can set the Radio Pin manually at the Control Panel of the light. Refer to chapter 6.18 for details.

Petitioners' Ex. 1007
Exhibit 1012
Aputure v. Rotolight - IPR2024-01423
Page 31 of 47

7.2 Powerful Light Control

Your light has a built in standalone engine. It can display static colors or replay a number of predefined effect patterns with a customizable color palette.

With the AsteraApp™ these effects can be created and be sent to the light by the built in UHF receiver. The effects are just triggered and then each light replays them autonomously until a new effect is sent.

Lights can be grouped into sets. This way they can be controlled separately and also effects can stretch over up to 32 lights.

7.3 Change the Color

On the AsteraApp™ main screen, press "Just Red".

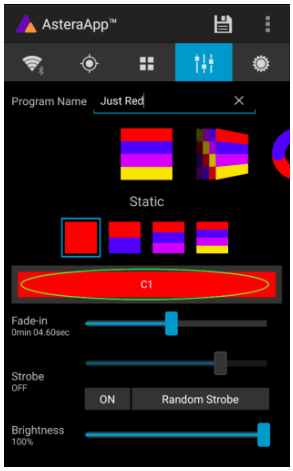

Once in the editor, press "C1".

Now the lights color can be changed.

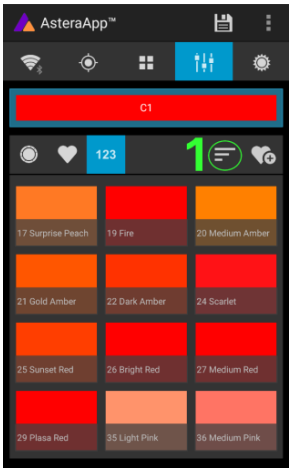

The "123" button offers common color gels. Hit the sort button to sort by color or number (1).

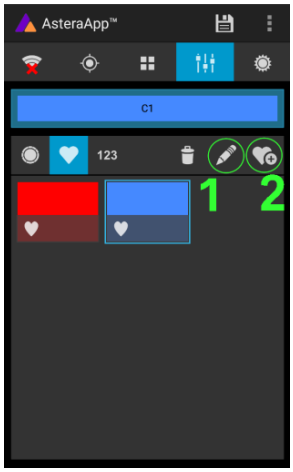

To add a color to the favorites, press (2).
To edit an existing favorite color, select it and press the pen (1).

The editor will open. RGB values can be adjusted directly. Also a color temperature can be converted to RGB.

Petitioners' Ex. 1007
Exhibit 1012
Aputure v. Rotolight - IPR2024-01423
Page 32 of 47

7.4 Create a Set

Before the more powerful effects can be reviewed, it is recommended to create a Flow-Set first.

Each light can be assigned to one set. Two types of sets are available:

7.4.1 SYNC SET

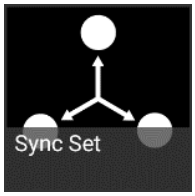

All lights that are assigned to a Sync-Set can be controlled together. They will do exactly the same.

CREATE A SYNC-SET:

On the AsteraApp™ main screen, first press the Targets button (1) and then the "+" sign (2) to add a new target.

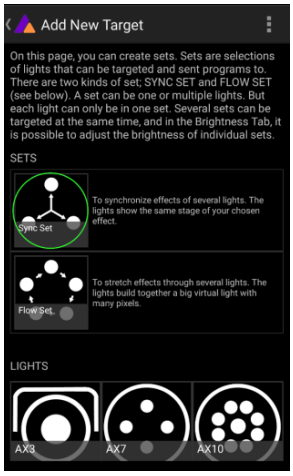

Choose "Sync-Set".

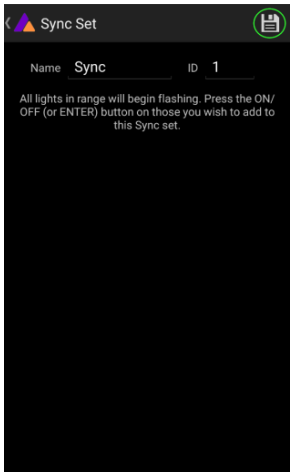

Now all lights will flicker every two seconds. Tap your light to add it to the set (chapter 6.7**Error! Reference source not found.**). Additionally, the name of the set can be customized. When finished, press the save button.

Petitioners' Ex. 1007
Exhibit 1012
Aputure v. Rotolight - IPR2024-01423
Page 33 of 47

7.4.2 FLOW SET

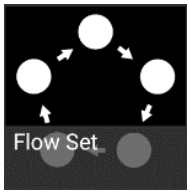

By using a Flow-Set, lights can also be controlled together. But additionally, they are assigned to positions inside the Flow-Set and so form a virtual light with several pixels. All effects, like a running light, are stretched over this virtual light.

CREAT A FLOW-SET:

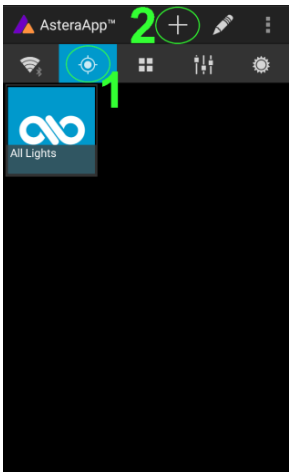

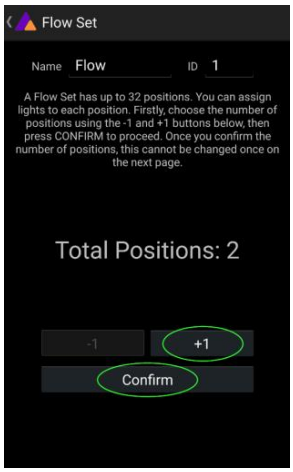

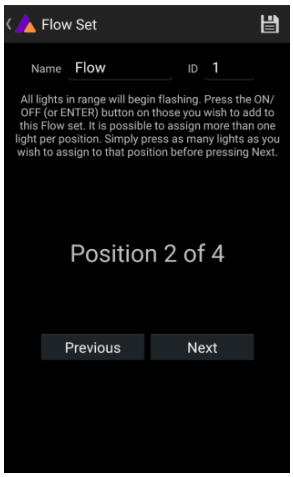

On the AsteraApp™ main screen, first press the Targets button (1) and then the "+" sign (2) to add a new target.

Then choose "Flow-Set".

Each flow set can have up to 32 positions. Once the correct number is entered, press "Confirm".

Now your lights will flicker every two seconds. To add a light to the currently shown positon of this set, press its button. Walk through the positions by "Previous" and "Next" and assign your lights. When finished, press the save button on top.

7.5 TARGETING LIGHTS

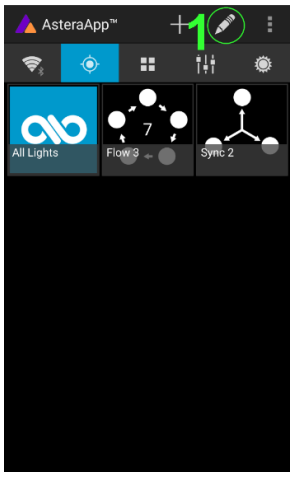

Once you have created a set, you may now choose to control it. By default "All lights" are targeted. That includes all sets.

It is possible to target more than one set at a time.

NOTE:
Even while targeting „All Lights" the Flow-Sets position arrangements persist. The lights still form a virtual big light of several positions.

To modify, delete or arrange targets, use the pen button (1).

Petitioners' Ex. 1007
Exhibit 1012
Aputure v. Rotolight - IPR2024-01423
Page 34 of 47

7.6 Changing The Effect

On the AsteraApp™ main screen, press "Wedding" (1), then enter the editor (2).

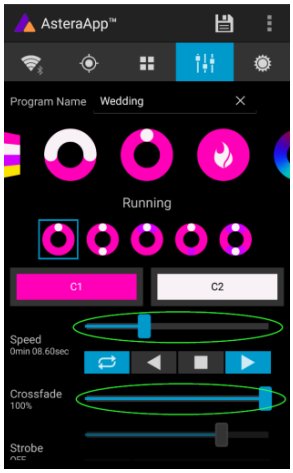

Set "Crossfade" to 0% and "Speed" to around 2 seconds. You should see a clean running light now. The White light will run over a pink background.

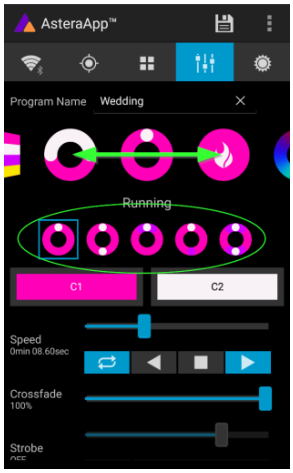

The effect can be changed by sliding the effect picker and choosing a sub-effect below it. Again the colors can be adjusted, too.

After the effect is adjusted, it may be saved back to the main screen by pressing the save button.

AN EFFECT CAN BE HIGHLY CUSTOMIZED:



The speed tells how long it will take for the effect to complete one cycle.

The crossfade tells if the light will fade from step to step. If it is set to 0% an immediate change is visible. If set to 100% the changes will be soft.



Stroboscope effect can be enabled and seamlessly adjusted in speed. Additionally, three random stroboscope options are available: slow, medium and fast.

Each effect can be adjusted in brightness as well.

Petitioners' Ex. 1007
Exhibit 1012
Aputure v. Rotolight - IPR2024-01423
Page 35 of 47

7.7 List of Effects

The effects' patterns are pre-defined and cannot be modified by the user. They are pre-programmed inside of each light. Still they can be parameterized. These effects are:

	A static color is displayed. There are also options that show two, three or four static colors at a time. The Flow-Set is then divided into several parts of equal length: 
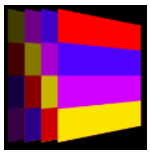	Fading colors. The four defined colors are displayed one after the other. The setup fade is applied between them. Again, the Flow-Set can be split in up to four segments.
	From both sides of a Flow-Set, the color changes position by position from C1 to C2. Once the whole Set is C2, it changes back to C1 in the same way.
	The color of the Flow-Set changes position by position. After all positions show the same color, a new cycle is started.
	Several variations of running lights are available.
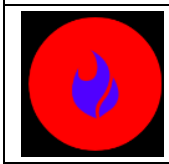	The Fire effect shows a random flickering effect. The background color and the color of the flickering effect can be adjusted.
	The rainbow effect shows a color change through all colors. Only its speed can be adjusted.
	Chaser effects provide an efficient means to create dancefloor lighting. The static chaser exchanges the color of the lights according to the tapped-in beat. The colors are randomly chosen. The effect can be adjusted to show up to 4 different colors at a time.
	The Moving Chasers overlay the static chaser by a second movement of the four displayed colors over the available positions of a Flow-Set. This gets mostly interesting of the Moving Strobe is chosen. Then, only some of the positions strobe and they are moving. So the strobe effect moves over the Flow-Set.
	When using the Chaser With Background, additionally a color can be selected that is mostly used, the background color.

Petitioners' Ex. 1007
Exhibit 1012
Aputure v. Rotolight - IPR2024-01423
Page 36 of 47

7.8 Chaser Effects in Deep

To display chaser effects it is recommended to setup a Flow-Set with a multiple of four positions. This is the way they will be shown best. Those four positions could then be arranged in the corners of a dance floor for example.
Use the tap-sync button to tap the beat of the music; the Chaser Effects will base their color changing on that beat then.

The Chaser Effects offer additional controls

The Emphasis adjusts the way the colors are exchanged by the chaser:

Emphasis	Effect
-2	The four colors of the palette are exchanged one by one. Every beat changes only one color.
-1	Same as "-2", but the color change is animated with the color-wheel effect; it mimics the color change of a traditional color wheel, showing intermediate colors during the change.
0	All four colors are exchanged on every beat.
1	Same as "0", but the color wheel effect is added.
2	Same as "0", but on the fourth beat, all colors go black. They come on again on the next beat.
3	Same as "0", but all colors go black on every second beat. This setting produces a strong on-off effect in sync with the beat.

The softness influences the fading between colors that happens on every beat. 0% will generate a hard change of the colors, while 100% makes them fade very slowly.

A random button is added to the color bar. If it is latched, random colors are chosen on every beat. If not (like in the above picture), then the colors are always chosen randomly from the color pallet of four. This is useful to intentionally narrow down the color choice. Nice effect can be generated by setting some of them to black.

Petitioners' Ex. 1007
Exhibit 1012
Aputure v. Rotolight - IPR2024-01423
Page 37 of 47

7.9 The Main Screen

Here each program is represented by a tile. Those tiles can be edited and freely positioned. Several pages of tiles are available.

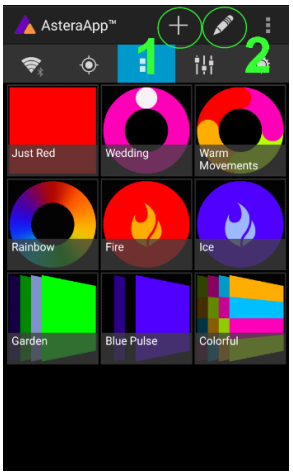

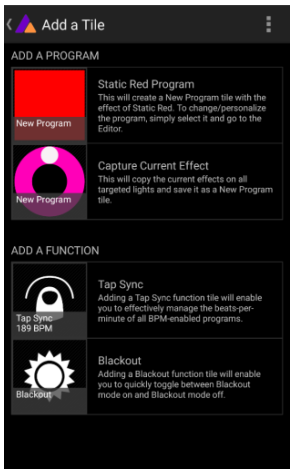

To move or delete a tile, press the pen icon (2). A popup will show the available actions.
To add a new program tile, press the "+" icon (1).

While adding a tile, either a default "Static Red" or the currently running program can be selected.
Additionally, special function tiles are available.

7.9.1 Function Tiles

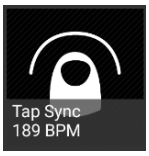

Tapping this tile several times to the beat will let the Chaser Effects change their colors to the beat. A chaser effect has a dancer symbol on the tile.

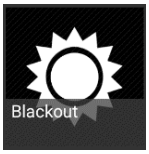

This button can be used to quickly blackout lights. The currently set target must be observed, as the blackout function will only affect the currently targeted lights.

Petitioners' Ex. 1007
Exhibit 1012
Aputure v. Rotolight - IPR2024-01423
Page 38 of 47

7.10 Brightness

Additionally to each programs brightness slider mentioned in chapter 7.6, a master brightness control is available.

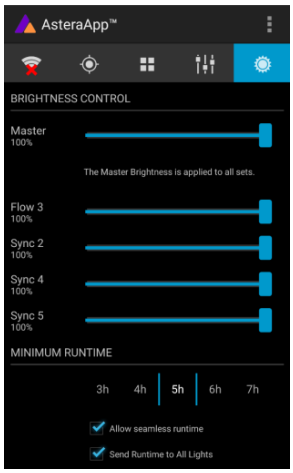

As soon as more than one Set is created and at least one set is currently targeted, a sub-master for each Set is shown.

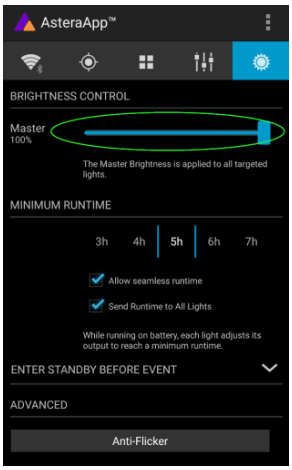

Otherwise, only one slider is available. It controls the brightness of all currently targeted lights.

7.10.1 Set Sub-Masters

Each Set has its own brightness slider. Additionally, there is a master slider that controls the brightness of all Sets simultaneously. This is very similar to the group brightness control of common lighting desks.

NOTE:

The Set-Masters are only shown if:

a) *More than one Set has been created before*
b) *Only Set-Targets are currently selected. Selecting any other type of target, like "All Lights" will hide the Set-Masters. This is necessary to avoid that one lights gets redundant brightness information; it would flicker constantly between different brightness levels.*

Petitioners' Ex. 1007
Exhibit 1012
Aputure v. Rotolight - IPR2024-01423
Page 39 of 47

7.11 RUNTIME

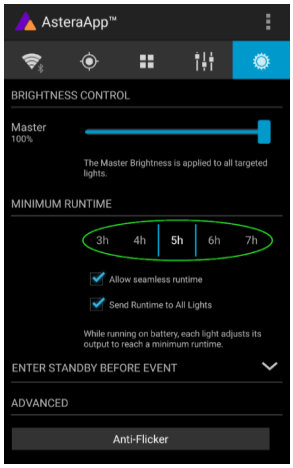

The light is able to adjust its power to meet a certain runtime on battery. The runtime is always calculated for a full battery.

Example:

> *If the light is required to light during an eight hour event, and one hour of setup time is scheduled, then the runtime should be set to nine hours immediately after the first power up.*

Please note, that the light should not be stored below 20°C before an event, otherwise the runtime might be shorter than calculated.

More details on the built in battery can be found at chapter 3.2.

7.12 ANTI-FLICKER

The PWM refresh rate of this light is 599.4 Hz by default. This frequency can be freely adjusted between 200 Hz and 1205 Hz to fit different camera's frame rates.

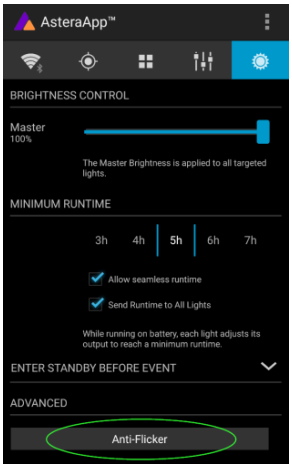

Make sure you have targeted the lights you wish to adjust (chapter 7.5). Then press the "Anti-Flicker".

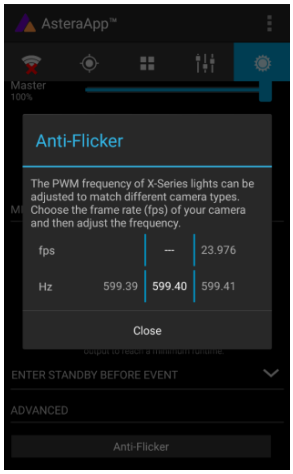

Slide the "fps" to adjust to default values for a framerate.
Slide the "Hz" to fine-adjust.

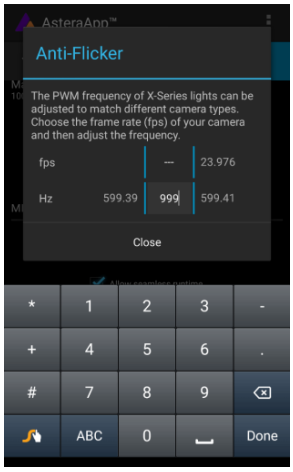

Press the highlighted frequency to enter a custom value between 200 and 1205 Hz.

NOTE:

The Anti-Flicker adjustment is preserved in case the lamp is powered off.
It is set back to the default 599.4Hz once a Reset Settings (chapter 6.19) is done.
The adjusted frequency is used no matter what input source is currently active. Also during DMX operation.

Petitioners' Ex. 1007
Exhibit 1012
Aputure v. Rotolight - IPR2024-01423
Page 40 of 47

7.13 Theft Alarm

Your light is equipped with a theft alarm. A motion sensor in the light detects when it is moved/taken away and a small siren will sound to deter potential thieves.

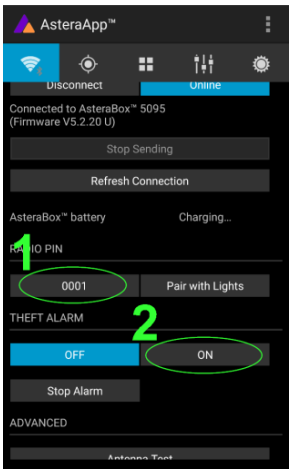

First make sure your Radio Pin is different from 0000. See chapter 7.1 how to change it. Then press the "ON" button.

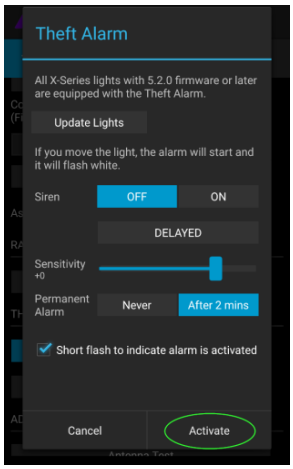

Press "Activate". All targeted lights will flash shortly to indicate that they are now armed.

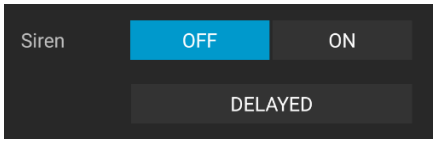

If the siren is set to DELAYED, it sounds only if the alarm persists for more than 6 seconds. The ON setting makes it sound immediately, while the OFF setting mutes it always.

The sensitivity can be adjusted to meet your environment. A lower value makes a false alarm more unlikely.



In case a potential thief is taking the light away while ignoring the alarm, he will most likely cause alarm events for more than 2 minutes in a row. In that case, the alarm can be set to become permanent. Then it won't stop, even if the light is placed down again. It will run until the battery is empty, rendering the light useless for the thief.



In some applications it is not desirable to have the lights flashing while the alarm is enabled or disabled. It can be disabled by this option easily.



The alarm can be silenced without turning it off by pressing this button.

NOTE:

To turn the alarm off again, an AsteraApp™ with the same Radio Pin must be used. Do not forget your Radio Pin! Otherwise, your light cannot be used normally anymore.

Petitioners' Ex. 1007
Exhibit 1012
Aputure v. Rotolight - IPR2024-01423
Page 41 of 47

7.14 Enter and Leave Standby

The standby is intended to be used between setup and event (see chapter 3.2.1 **Error! Reference source not found.**). After setup is completed, all lights may be switched to standby mode and woken up later when the event starts. This ensures that no battery runtime is wasted. This can be either done manually or automated.

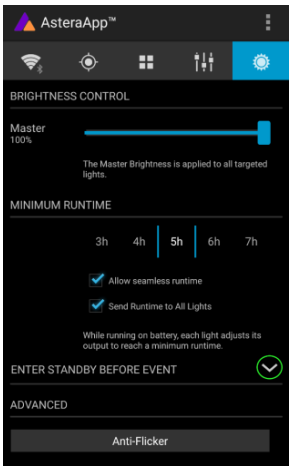

Press the small arrow to open the standby menu.

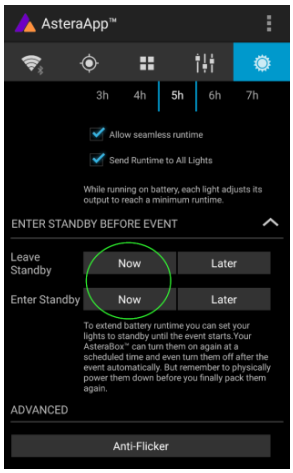

By pressing the "Now" buttons, standby can be switched on or off for all currently targeted lights.

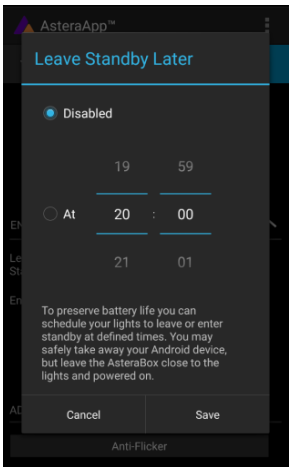

Any of the "Later" buttons will require a time to be set. The standby will be scheduled to the specified time.

NOTE:

While you are using the "Now" function, only those lights that are currently targeted are addressed (see chapter 7.5 how to target lights).
The "Later" function always sends to the "All Lights" target!

Petitioners' Ex. 1007
Exhibit 1012
Aputure v. Rotolight - IPR2024-01423
Page 42 of 47

7.15 DMX Settings

In order to efficiently use the light with DMX, some setting can be adjusted by the AsteraApp™.

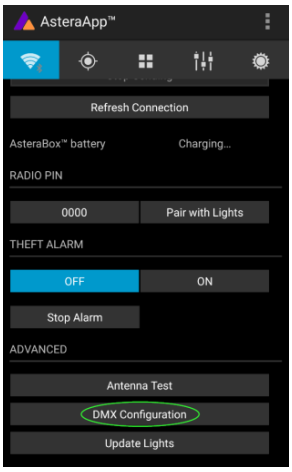

Press the "DMX Configuration" button.

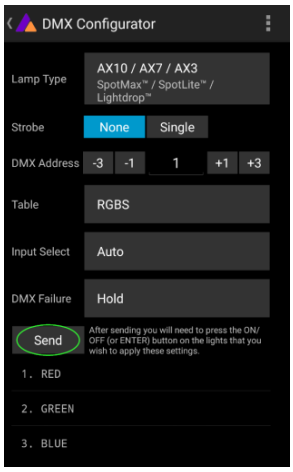

Adjust all settings to your requirements, then press "Send".

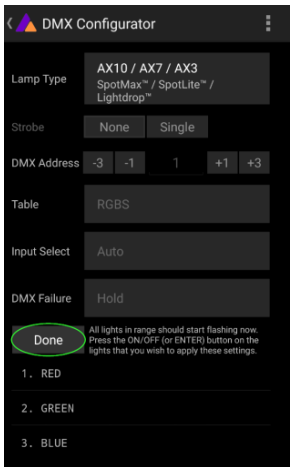

Your lights will start to flicker. Tap the lights you wish to setup (chapter 6.7). Then press "Done".

Please refer to chapter 6.10, *INPUT SELECT*, and chapter 6.12, *DMX Settings*, for details on the available settings.

7.15.1 DMX Channel Assignment

The current channel assignment can be always reviewed in the lower part of the screen. It is automatically calculated based on the setting of Table and Strobe.

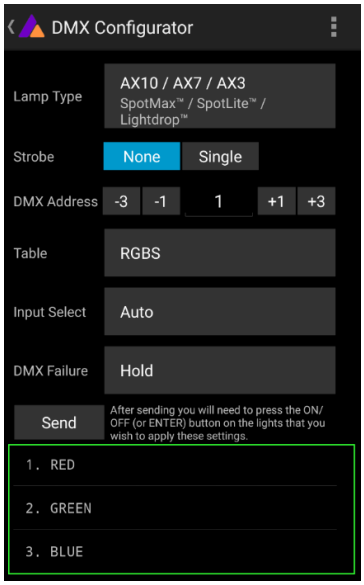

Petitioners' Ex. 1007
Exhibit 1012
Aputure v. Rotolight - IPR2024-01423
Page 43 of 47

8 Menu Overview

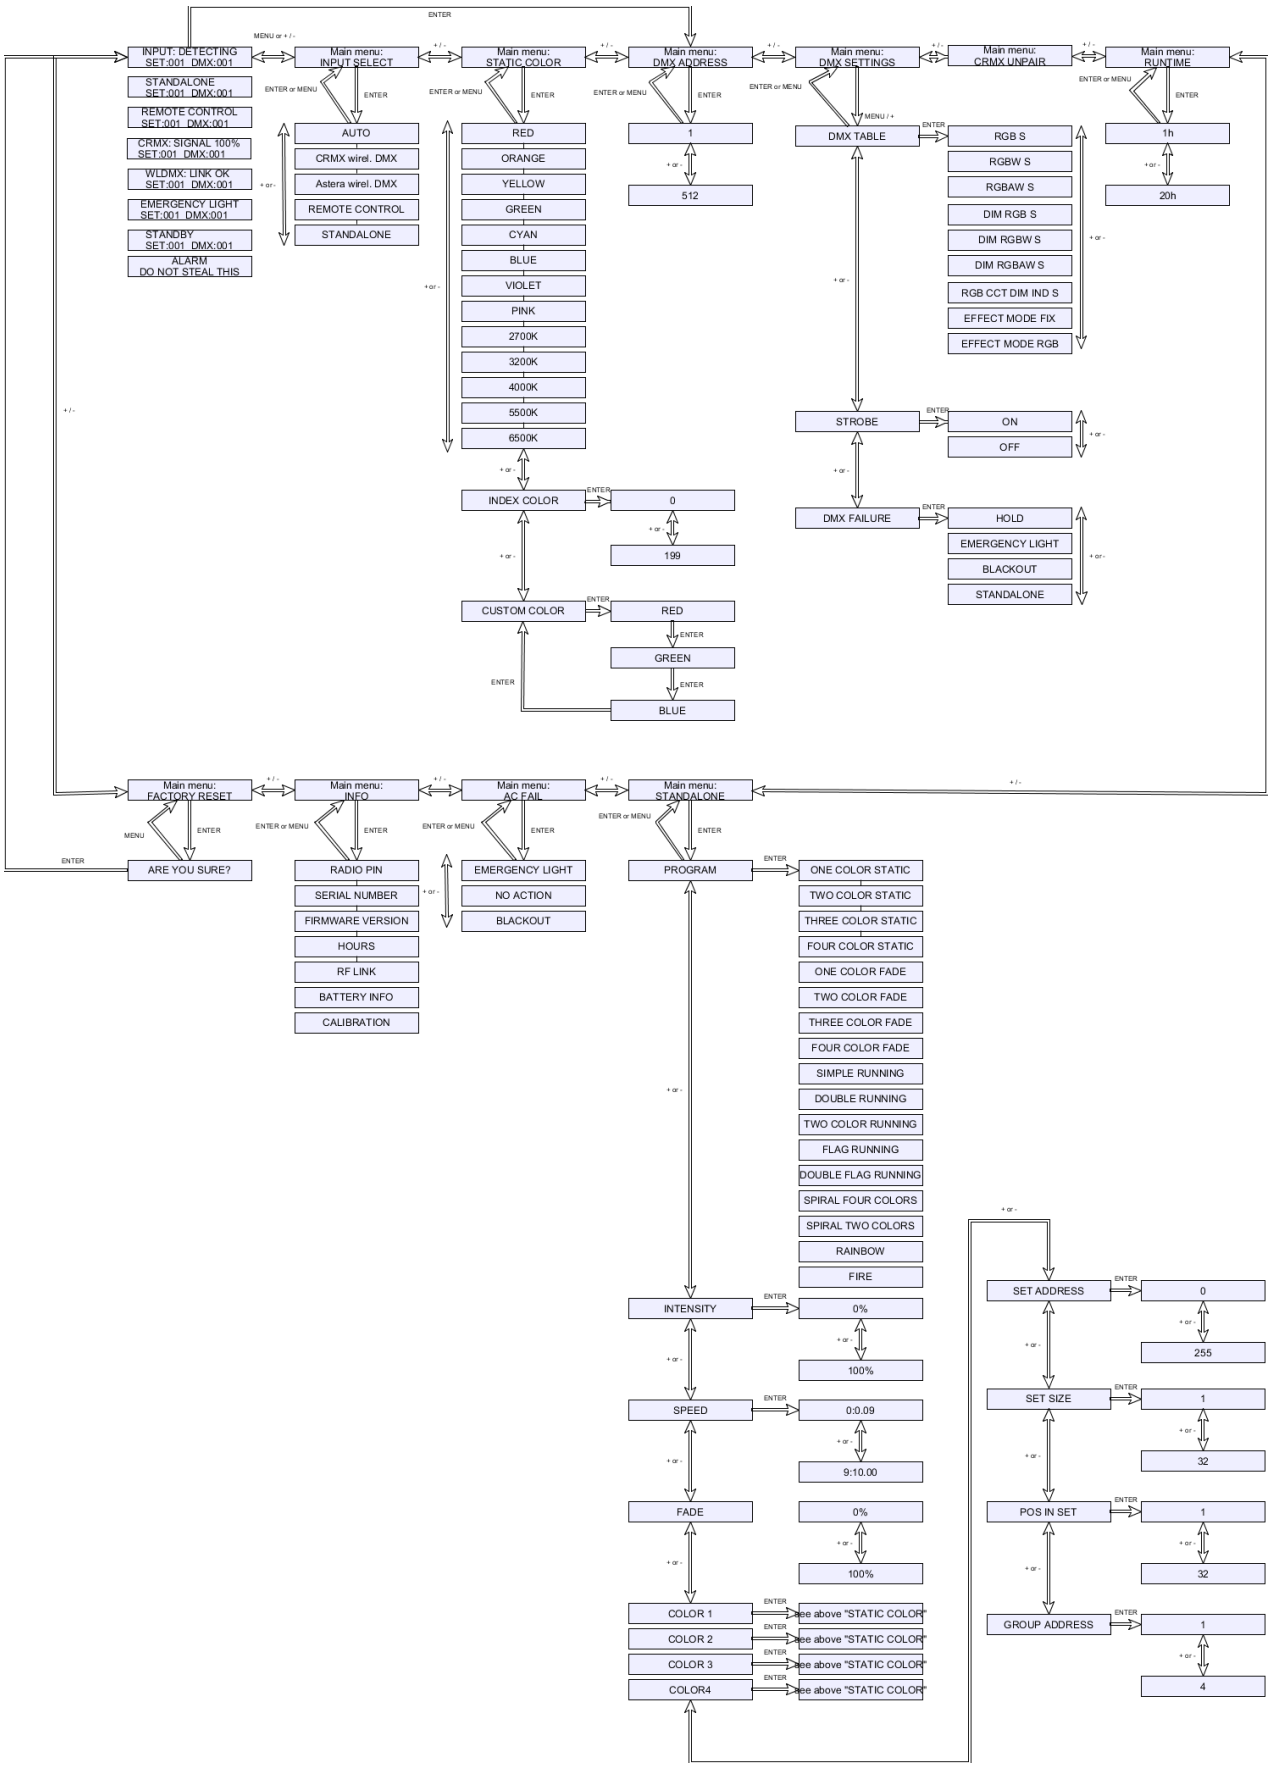

EXHIBIT B

SpotMax™

AX10

QUICK-START / KURZANLEITUNG

Manual Version: 1.7
Date of Issue: 16/06/15

Contents / Lieferumfang

- SpotMax™
- Flood Diffuser
- Wallwash Diffuser
- Powercon True1 Power Cord
- User Manual / Bedienungsanleitung

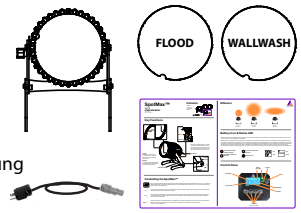

Control Methods EN

Power the light on/off, set a static color or change its settings.

Point the ARC1 at individual lights and press the desired effect. The ARC1 is very handy to switch several lights on or off. Note that the IR sensor is on the AX10's rear side.

The light can be controlled by the infrared remote control if:
- INPUT SELECT is set to AUTO or REMOTE CONTROL.
- The light is currently NOT operated by DMX. If it is, only ON and OFF will work while INPUT SELECT is set to AUTO.

Your light has a built in standalone engine. It can display static colors or replay a number of predefined effect patterns with a customizable color palette.

The AsteraApp™ can group several lights together, address individual lights or groups of lights, and send complex effects with a user defined color palette to all lights in range. Alternatively, the Astera ARC2 remote control can be used.

With the AsteraApp™ these effects can be created and be sent to the light by the built in UHF receiver. The effects are just triggered and then each light replays it autonomously until it receives a new effect. Lights can be grouped into sets. This way they can be controlled separately and also effects can stretch over up to 32 lights. Also, you can remotely adjust your lights settings, this eases DMX setup for example.

The light can also be controlled by CRMX wireless DMX, the built in receiver is compatible with all LumenRadio CRMX transmitters as well as W-DMX™ G2, G3, G4 and G4S transmitters (G4 and G4S in 2.4 GHz mode only). You can also use an Astera ART3 Wireless DMX Transmitter to send DMX in the UHF frequency, though we recommend CRMX.

To pair your light to a CRMX or W-DMX™ transmitter, make sure that:
- Your light is not currently paired to a transmitter.
- INPUT SELECT is either set to AUTO and the light is still in detect mode –or- INPUT SELECT is set to CRMX wireless DMX.

Then press the button on your transmitter. After 10 seconds the light should be paired and show the appropriate status screen. If you prefer to use an Astera ART3 wireless transmitter, set INPUT SELECT to Astera wireless DMX and refer to the ART3's user manual for details.

NOTE:
If you experience difficulties pairing your light, it is recommended to set INPUT SELECT to CRMX wireless DMX first. This will make sure that the CRMX status screen is displayed.

Full manual available online at www.astera-led.com/pax10.php

Möglichkeiten zur Steuerung DE

Power the light on/off, set a static color or change its settings.

Verwenden Sie die Infrarotfernbedienung (ARC1), richten sie auf die Lampe und drücken die gewünschte Funktion bzw. den gewünschten Effekt.

Die Lampe kann mit der Infrarotfernbedienung bedient werden, wenn:
- Eingangswahlschalter (INPUT SELECT) steht auf AUTO oder REMOTE CONTROL
- Die Lampe befindet sich NICHT im DMX-Modus. Im DMX-Modus bei Eingangswahl AUTO lässt sich die Lampe per Infrarotfernbedienung nur AN-u. AUSSCHALTEN.

Ihre Lampe verfügt über einen eingebauten Effektgenerator (Standalone Engine). Sie kann konstante Farben oder eine Reihe vorinstallierter Effekte mit einer durch den Kunden anpassbaren Farbpalette anzeigen.

Mit der AsteraApp™ können diese Effekte erstellt und durch den eingebauten UHF-Empfänger drahtlos zur Lampe übertragen werden. Die Effekte werden in der Lampe ausgelöst und gestartet, jede Lampe wiederholt das Programm selbständig bis ein neuer Effekt übertragen wird.

Lampen können zu Gruppen zusammengefasst werden. So können sie einzeln gesteuert oder Effekte an bis zu 32 Lampen gesendet werden. Mit der AsteraApp™ lassen sich alle Einstellungen komfortabel vornehmen, das erleichtert z.B. das DMX Setup.

Die Lampe kann ebenfalls per CRMX (drahtloses DMX) gesteuert werden, der eingebaute Funkempfänger ist sowohl kompatibel zu allen LumenRadio CRMX Sendern, als auch zu W-DMX™ G2, G3, G4 und G4S Sendern (G4 und G4S nur im 2.4 GHz Modus). Sie können auch einen Astera ART3 Wireless DMX Transmitter verwenden, um DMX Signale im UHF Frequenzband zu übertragen, empfohlen wird der CRMX-Betrieb.

Um Ihre Lampe mit einem CRMX oder W-DMX™ Sender zu paaren, stellen Sie sicher:
- Ihre Lampe ist momentan nicht mit einem Sender gepaart. Um eine bestehende Paarung aufzulösen, führen Sie einen Reset durch.
- die Eingangswahl steht auf AUTO und die Lampe befindet sich im Erkennungsmodus (detect mode) oder die Eingangswahl steht auf „CRMX wireless DMX".

Dann drücken Sie die Pairing-Taste an Ihrem Sender. Nach 10 Sekunden sollte die Lampe gepaart sein und den korrekten Status anzeigen. Wenn Sie die Lampe mit dem Astera ART3 Wireless Transmitter steuern möchten, setzen Sie die Eingangswahl auf „Astera wireless DMX". Weitere Details entnehmen Sie bitte der Bedienungsanleitung der Astera Box ART3.

Vollständige Bedienungsanleitung: www.astera-led.com/pax10.php

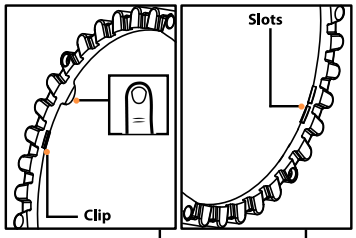

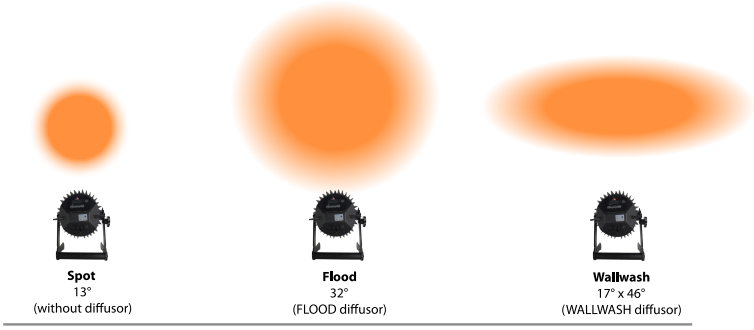

EN Turn clock-wise to tighten the legs of the SpotMax.
DE Im Uhrzeigersinn drehen um die Füße zu arretieren.

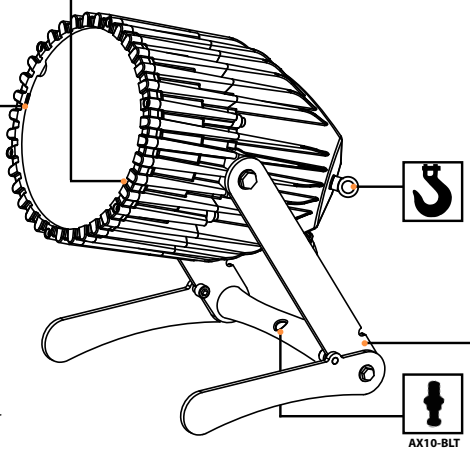

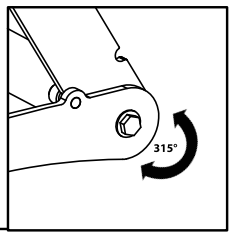

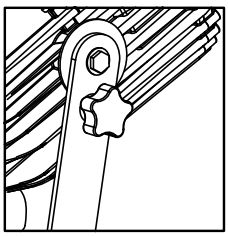

EN ATTACH
The Diffuser must be slid into the Slots, then pressed down firmly and clipped in under the Clip.
REMOVE
The Clip should be pressed in, and the Diffuser Sheet should be lifted out via the thumb hole.

DE EINSCHIEBEN
Zuerst den Diffusor in die Slots einschieben, dann mit Hilfe des Clips arretieren.
ENTFERNEN
Den Clip eindrücken und den Diffusor mithilfe eines Fingers wieder herausheben.

ASTERA

www.astera-led.com

Astera LED Technology
Karl Schmid Str. 14
81829 Munich
Germany
+49 (0)89 215522530
contact@astera-led.com

Technical Data

EN

LED Power:	135W
Illuminants:	9 x 15W RGBAW Philips LEDs
Luminous Flux*:	3,350 lm (at White 4000K)
Emittance*:	10,350 lx (at 2m; White 4000K)
CRI*:	up to 92
Beam Angle:	13°
Input Voltage:	90-264V 47-63Hz 1.8A/115VAC 1.0A/230VAC
Inrush Current:	COLD START 70A/230VAC
Battery Runtime:	up to 20hrs (seamless runtime)
Wireless Module:	EU: 868.0-869.7 MHz US: 902-928 MHz 2.4GHz
Operating Temperature:	0°C - 40°C 32°F - 104°F
Relative Humidity:	0%-100%
Size:	L279mm x W253mm x H296mm 10.9" x 11.6" x 9.9"
Weight:	7.98 kg 17.5 lbs
IP Rating:	IP65

Technische Daten

DE

LED Leistung:	135W
Leuchtmittel:	9 x 15W RGBAW Philips LEDs
Lichtstrom*:	3,350 lm (at White 4000K)
Beleuchtungsstärke*:	10,350 lx (at 2m; White 4000K)
CRI*:	bis zu 92
Abstrahlwinkel:	13°
Eingangsspannung:	90-264V 47-63Hz 1.8A/115VAC 1.0A/230VAC
Einschaltstrom:	COLD START 70A/230VAC
Akkulaufzeit:	Bis zu 20 Stunden (stufenlos einstellbar)
Drahtlosmodul:	EU: 868.0-869.7 MHz US: 902-928 MHz 2.4GHz
Betriebstemperatur:	0°C - 40°C 32°F - 104°F
Relative Luftfeuchte:	0%-100%
Abmessungen:	279mm x 253mm x 296mm
Gewicht:	7.98 kg 17.5 lbs
IP Schutzklasse:	IP65

*Typical Values / Typische Werte

FULL MANUAL IS AVAILABLE ONLINE
VOLLSTÄNDIGE BEDIENUNGSANLEITUNG

DOWNLOAD NOW / JETZT HERUNTERLADEN

OR GO HERE: www.astera-led.com/pax10.php

Astera is environmentally-friendly, therefore does not print a full manual for each fixture. Please consider the environment before printing the full manual.

Der Umwelt zuliebe drucken wir nicht zu jeder Lampe eine vollständige Bedienungsanleitung aus.

Safety

EN

Before you operate this unit, read the manual carefully. Always make sure to include the manual if you rent/sell the unit to another user. Keep in mind that this manual cannot address all possible dangers and environments. Please use your own caution when operating. This product is for professional use only. It is not for household use.

Do not operate the unit in areas of high temperature conditions or under direct sunlight. It will cause abnormal function or damage the product.

Only qualified personnel may repair this product. Do not open its housing.

Do not directly look into the light beam. It can cause harm to your eyes. Do not look at the LEDs with a magnifying glass or any other optical instrument that may concentrate the light output. Only use Astera approved accessories to diffuse or modify the light beam.

The exterior surfaces of the light can become hot, up to 70°C (158°F) during normal operation. Ensure that accidental physical contact with the device is impossible. Allow all lights to cool before servicing.

A rechargeable lithium ion battery is built into this unit. Please avoid bumping or plunging, it may cause fire or explosion. Never store the battery when fully drained. Always recharge immediately when empty. Make sure to fully charge all units before storing them. Partially charged batteries will lose capacity. Fully recharge every 6 months if not used.

Always charge with the flight case open. It is recommended to charge at a temperature between 0°C and 35°C.

The light contains a lithium ion battery. Don't throw the unit into the garbage at the end of its lifetime. Make sure to dispose is according to your local ordinances and/or regulations, to avoid polluting the environment!

The packaging is recyclable and can be disposed.

Sicherheit

DE

Lesen Sie vor Inbetriebnahme die Anleitung sorgfältig durch. Stellen Sie sicher, dass im Falle einer Weitergabe, eines Verleihs oder Verkaufs, die Anleitung an den Benutzer ausgehändigt wird. Denken Sie daran, dass diese Anleitung nicht alle Gefahren und Betriebsbedingungen erfassen kann. Dieses Produkt ist ausschließlich für die professionelle Nutzung vorgesehen und nicht für den Heimgebrauch.

Betreiben Sie das Gerät nicht in hoher Umgebungstemperatur oder unter direkter Sonneneinstrahlung. Das verursacht Fehlfunktionen oder Beschädigungen am Gerät.

Service und Reparaturen nur durch qualifiziertes Fachpersonal. Das Gehäuse darf nicht geöffnet werden.

Sehen Sie nicht direkt in den Lichtstrahl. Das kann zu Verletzungen Ihrer Augen führen. Betrachten Sie die LEDs nicht durch ein Vergrößerungsglas oder eine Linse, die das Licht bündeln könnte. Verwenden Sie nur von Astera genehmigtes Zubehör, um den Lichtstrahl zu zerstreuen oder zu verändern.

Die Gehäuseoberfläche der Lampe kann sich im regulären Betrieb auf bis zu 70°C (158°F) erwärmen. Stellen Sie sicher, dass ein versehentliches. Berühren des Gehäuses ausgeschlossen ist. Lassen Sie die Lampen vor Wartungsarbeiten, vor dem Aufladen etc. immer abkühlen.

Diese Lampe besitzt einen wiederaufladbaren Lithium-Ionen Akkumulator. Bitte vermeiden Sie starke Stöße, Stürze und Erschütterungen, das kann zu Feuer oder Explosion führen. Lagern Sie das Gerät niemals mit vollständig entladenem Akku, laden Sie diesen sofort nach Entladung wieder auf. Laden Sie vor Lagerung alle Lampen vollständig auf, unvollständig geladene Akkus verlieren an Kapazität und Haltbarkeit. Laden Sie die Akkus alle 6 Monate vollständig auf, wenn die Lampen nicht verwendet werden.

Laden Sie die Lampen nur bei geöffnetem Ladekoffer. Empfohlen ist eine Ladung der Akkus bei einer Umgebungstemperatur zwischen 0°C und 35°C.

Die Lampe enthält einen Lithium-Ionen Akku. Entsorgen Sie das Gerät am Ende seiner Lebenszeit nicht im Hausmüll! Stellen Sie eine Entsorgung gemäß der lokalen Verordnungen und Gesetze sicher, um eine Verschmutzung der Umwelt auszuschließen!

Die Verpackung ist wiederverwendbar und kann entsorgt werden.