


2. Mid-pier Kit – various part numbers



Standard System



Integrated Grounding System

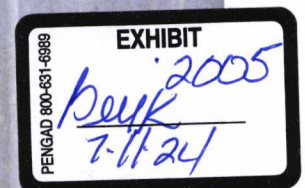

- 2.1. The mid-pier kit installs flush against pier with long leg of mid-pier kit L-bracket extending out from pier with **messenger wire retainer clamp ON TOP OF BRACKET.**
- 2.2. Remove flat washer, lock washer & nut and reassemble in same order on opposite side of pier or bracket. Orient the bracket to be level with the ground.
 - 2.2.1. **Important:** On level terrain use level on bracket in the same direction as the messenger wire run to keep bracket level with ground when tightening in final position. On uneven terrain, adjust level of the bracket to match the ground incline/decline. The hole under the top mounting hole is to be used if a customer supplied

CONFIDENTIAL & PROPRIETARY

CAB, EX2005

Case No. IPR2024-00139