


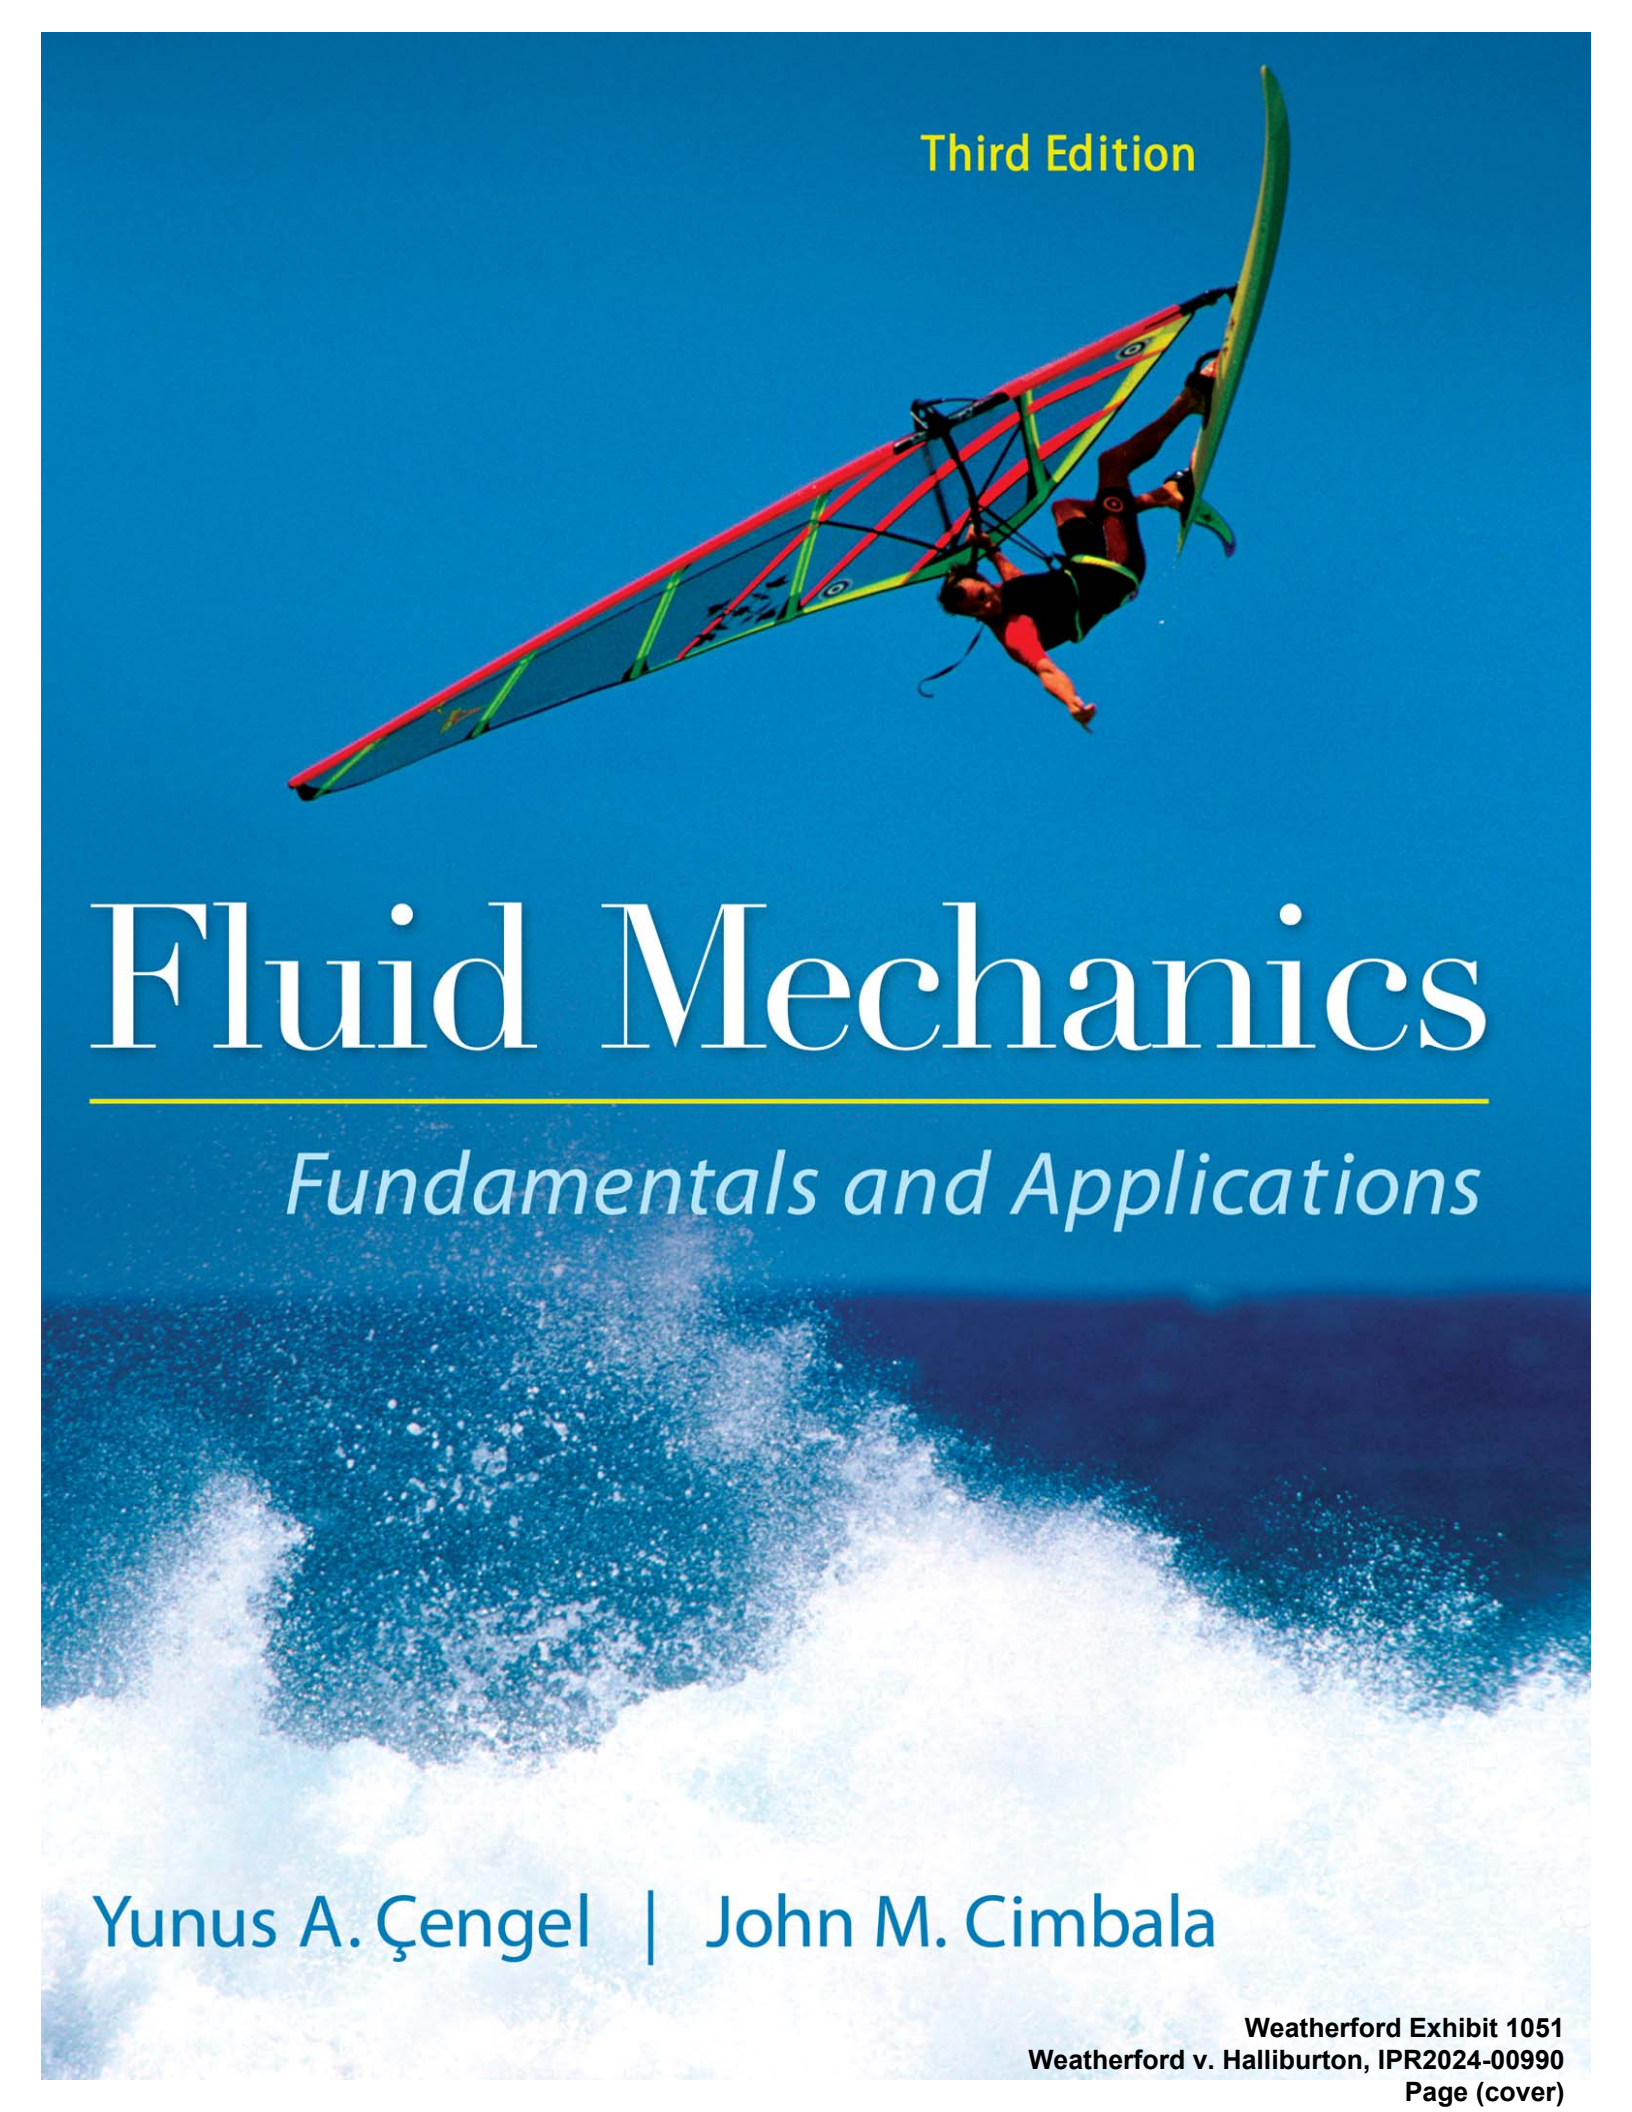

Third Edition

# Fluid Mechanics

---

*Fundamentals and Applications*

Yunus A. Çengel | John M. Cimbala

# FLUID MECHANICS

FUNDAMENTALS AND APPLICATIONS

Third Edition

*This page intentionally left blank*

# FLUID MECHANICS

FUNDAMENTALS AND APPLICATIONS

THIRD EDITION

**YUNUS A.  
ÇENGEL**

*Department of  
Mechanical  
Engineering  
University of Nevada,  
Reno*

**JOHN M.  
CIMBALA**

*Department of  
Mechanical and  
Nuclear Engineering  
The Pennsylvania  
State University*





## FLUID MECHANICS: FUNDAMENTALS AND APPLICATIONS, THIRD EDITION

Published by McGraw-Hill, a business unit of The McGraw-Hill Companies, Inc., 1221 Avenue of the Americas, New York, NY 10020. Copyright © 2014 by The McGraw-Hill Companies, Inc. All rights reserved. Printed in the United States of America. Previous editions © 2006 and 2010. No part of this publication may be reproduced or distributed in any form or by any means, or stored in a database or retrieval system, without the prior written consent of The McGraw-Hill Companies, Inc., including, but not limited to, in any network or other electronic storage or transmission, or broadcast for distance learning.

Some ancillaries, including electronic and print components, may not be available to customers outside the United States.

This book is printed on acid-free paper.

1 2 3 4 5 6 7 8 9 0 DOW/DOW 1 0 9 8 7 6 5 4 3

ISBN 978-0-07-338032-2

MHID 0-07-338032-6

Senior Vice President, Products & Markets: *Kurt L. Strand*

Vice President, General Manager: *Marty Lange*

Vice President, Content Production & Technology Services: *Kimberly Meriwether David*

Managing Director: *Michael Lange*

Executive Editor: *Bill Stenquist*

Marketing Manager: *Curt Reynolds*

Development Editor: *Lorraine Buczek*

Director, Content Production: *Terri Schiesl*

Project Manager: *Melissa M. Leick*

Buyer: *Susan K. Culbertson*

Media Project Manager: *Prashanthi Nadipalli*

Cover Image: *Purestock/SuperStock*

Cover Designer: *Studio Montage, St. Louis, MO*

Typeface: *10.5/12 Times Roman*

Compositor: *RPK Editorial Services*

Printer: *R. R. Donnelly—Willard*

All credits appearing on page or at the end of the book are considered to be an extension of the copyright page.

### Library of Congress Cataloging-in-Publication Data on File

The Internet addresses listed in the text were accurate at the time of publication. The inclusion of a website does not indicate an endorsement by the authors or McGraw-Hill, and McGraw-Hill does not guarantee the accuracy of the information presented at these sites.

## ***Dedication***

*To all students, with the hope of stimulating their desire to explore our marvelous world, of which fluid mechanics is a small but fascinating part. And to our wives Zehra and Suzy for their unending support.*

# ABOUT THE AUTHORS

**Yunus A. Çengel** is Professor Emeritus of Mechanical Engineering at the University of Nevada, Reno. He received his B.S. in mechanical engineering from Istanbul Technical University and his M.S. and Ph.D. in mechanical engineering from North Carolina State University. His research areas are renewable energy, desalination, exergy analysis, heat transfer enhancement, radiation heat transfer, and energy conservation. He served as the director of the Industrial Assessment Center (IAC) at the University of Nevada, Reno, from 1996 to 2000. He has led teams of engineering students to numerous manufacturing facilities in Northern Nevada and California to do industrial assessments, and has prepared energy conservation, waste minimization, and productivity enhancement reports for them.

Dr. Çengel is the coauthor of the widely adopted textbook *Thermodynamics: An Engineering Approach*, 7th edition (2011), published by McGraw-Hill. He is also the co-author of the textbook *Heat and Mass Transfer: Fundamentals & Applications*, 4th Edition (2011), and the coauthor of the textbook *Fundamentals of Thermal-Fluid Sciences*, 4th edition (2012), both published by McGraw-Hill. Some of his textbooks have been translated to Chinese, Japanese, Korean, Spanish, Turkish, Italian, and Greek.

Dr. Çengel is the recipient of several outstanding teacher awards, and he has received the ASEE Meriam/Wiley Distinguished Author Award for excellence in authorship in 1992 and again in 2000.

Dr. Çengel is a registered Professional Engineer in the State of Nevada, and is a member of the American Society of Mechanical Engineers (ASME) and the American Society for Engineering Education (ASEE).

**John M. Cimbala** is Professor of Mechanical Engineering at The Pennsylvania State University, University Park. He received his B.S. in Aerospace Engineering from Penn State and his M.S. in Aeronautics from the California Institute of Technology (CalTech). He received his Ph.D. in Aeronautics from CalTech in 1984 under the supervision of Professor Anatol Roshko, to whom he will be forever grateful. His research areas include experimental and computational fluid mechanics and heat transfer, turbulence, turbulence modeling, turbomachinery, indoor air quality, and air pollution control. Professor Cimbala completed sabbatical leaves at NASA Langley Research Center (1993-94), where he advanced his knowledge of computational fluid dynamics (CFD), and at Weir American Hydro (2010-11), where he performed CFD analyses to assist in the design of hydroturbines.

Dr. Cimbala is the coauthor of three other textbooks: *Indoor Air Quality Engineering: Environmental Health and Control of Indoor Pollutants* (2003), published by Marcel-Dekker, Inc.; *Essentials of Fluid Mechanics: Fundamentals and Applications* (2008); and *Fundamentals of Thermal-Fluid Sciences*, 4th edition (2012), both published by McGraw-Hill. He has also contributed to parts of other books, and is the author or co-author of dozens of journal and conference papers. More information can be found at [www.mne.psu.edu/cimbala](http://www.mne.psu.edu/cimbala).

Professor Cimbala is the recipient of several outstanding teaching awards and views his book writing as an extension of his love of teaching. He is a member of the American Institute of Aeronautics and Astronautics (AIAA), the American Society of Mechanical Engineers (ASME), the American Society for Engineering Education (ASEE), and the American Physical Society (APS).

# BRIEF CONTENTS

|                                                            |            |
|------------------------------------------------------------|------------|
| <b>CHAPTER ONE</b>                                         |            |
| <b>INTRODUCTION AND BASIC CONCEPTS</b>                     | <b>1</b>   |
| <b>CHAPTER TWO</b>                                         |            |
| <b>PROPERTIES OF FLUIDS</b>                                | <b>37</b>  |
| <b>CHAPTER THREE</b>                                       |            |
| <b>PRESSURE AND FLUID STATICS</b>                          | <b>75</b>  |
| <b>CHAPTER FOUR</b>                                        |            |
| <b>FLUID KINEMATICS</b>                                    | <b>133</b> |
| <b>CHAPTER FIVE</b>                                        |            |
| <b>BERNOULLI AND ENERGY EQUATIONS</b>                      | <b>185</b> |
| <b>CHAPTER SIX</b>                                         |            |
| <b>MOMENTUM ANALYSIS OF FLOW SYSTEMS</b>                   | <b>243</b> |
| <b>CHAPTER SEVEN</b>                                       |            |
| <b>DIMENSIONAL ANALYSIS AND MODELING</b>                   | <b>291</b> |
| <b>CHAPTER EIGHT</b>                                       |            |
| <b>INTERNAL FLOW</b>                                       | <b>347</b> |
| <b>CHAPTER NINE</b>                                        |            |
| <b>DIFFERENTIAL ANALYSIS OF FLUID FLOW</b>                 | <b>437</b> |
| <b>CHAPTER TEN</b>                                         |            |
| <b>APPROXIMATE SOLUTIONS OF THE NAVIER–STOKES EQUATION</b> | <b>515</b> |
| <b>CHAPTER ELEVEN</b>                                      |            |
| <b>EXTERNAL FLOW: DRAG AND LIFT</b>                        | <b>607</b> |
| <b>CHAPTER TWELVE</b>                                      |            |
| <b>COMPRESSIBLE FLOW</b>                                   | <b>659</b> |
| <b>CHAPTER THIRTEEN</b>                                    |            |
| <b>OPEN-CHANNEL FLOW</b>                                   | <b>725</b> |
| <b>CHAPTER FOURTEEN</b>                                    |            |
| <b>TURBOMACHINERY</b>                                      | <b>787</b> |
| <b>CHAPTER FIFTEEN</b>                                     |            |
| <b>INTRODUCTION TO COMPUTATIONAL FLUID DYNAMICS</b>        | <b>879</b> |

# CONTENTS

Preface xv

## CHAPTER ONE

### INTRODUCTION AND BASIC CONCEPTS 1

- 1-1** Introduction 2
  - What Is a Fluid? 2
  - Application Areas of Fluid Mechanics 4
- 1-2** A Brief History of Fluid Mechanics 6
- 1-3** The No-Slip Condition 8
- 1-4** Classification of Fluid Flows 9
  - Viscous versus Inviscid Regions of Flow 10
  - Internal versus External Flow 10
  - Compressible versus Incompressible Flow 10
  - Laminar versus Turbulent Flow 11
  - Natural (or Unforced) versus Forced Flow 11
  - Steady versus Unsteady Flow 12
  - One-, Two-, and Three-Dimensional Flows 13
- 1-5** System and Control Volume 14
- 1-6** Importance of Dimensions and Units 15
  - Some SI and English Units 17
  - Dimensional Homogeneity 19
  - Unity Conversion Ratios 20
- 1-7** Modeling in Engineering 21
- 1-8** Problem-Solving Technique 23
  - Step 1: Problem Statement 24
  - Step 2: Schematic 24
  - Step 3: Assumptions and Approximations 24
  - Step 4: Physical Laws 24
  - Step 5: Properties 24
  - Step 6: Calculations 24
  - Step 7: Reasoning, Verification, and Discussion 25
- 1-9** Engineering Software Packages 25
  - Engineering Equation Solver (EES) 26
  - CFD Software 27
- 1-10** Accuracy, Precision, and Significant Digits 28
  - Summary 31
  - References and Suggested Reading 31
  - Application Spotlight: What Nuclear Blasts and Raindrops Have in Common* 32
  - Problems 33

## CHAPTER TWO

### PROPERTIES OF FLUIDS 37

- 2-1** Introduction 38
  - Continuum 38
- 2-2** Density and Specific Gravity 39
  - Density of Ideal Gases 40
- 2-3** Vapor Pressure and Cavitation 41
- 2-4** Energy and Specific Heats 43
- 2-5** Compressibility and Speed of Sound 44
  - Coefficient of Compressibility 44
  - Coefficient of Volume Expansion 46
  - Speed of Sound and Mach Number 48
- 2-6** Viscosity 50
- 2-7** Surface Tension and Capillary Effect 55
  - Capillary Effect 58
  - Summary 61
  - Application Spotlight: Cavitation* 62
  - References and Suggested Reading 63
  - Problems 63

## CHAPTER THREE

### PRESSURE AND FLUID STATICS 75

- 3-1** Pressure 76
  - Pressure at a Point 77
  - Variation of Pressure with Depth 78
- 3-2** Pressure Measurement Devices 81
  - The Barometer 81
  - The Manometer 84
  - Other Pressure Measurement Devices 88
- 3-3** Introduction to Fluid Statics 89
- 3-4** Hydrostatic Forces on Submerged Plane Surfaces 89
  - Special Case: Submerged Rectangular Plate 92
- 3-5** Hydrostatic Forces on Submerged Curved Surfaces 95

- 3–6** Buoyancy and Stability 98  
Stability of Immersed and Floating Bodies 101
- 3–7** Fluids in Rigid-Body Motion 103  
Special Case 1: Fluids at Rest 105  
Special Case 2: Free Fall of a Fluid Body 105  
Acceleration on a Straight Path 106  
Rotation in a Cylindrical Container 107
- Summary 111  
References and Suggested Reading 112  
Problems 112

## CHAPTER FOUR

### FLUID KINEMATICS 133

- 4–1** Lagrangian and Eulerian Descriptions 134  
Acceleration Field 136  
Material Derivative 139
- 4–2** Flow Patterns and Flow Visualization 141  
Streamlines and Streamtubes 141  
Pathlines 142  
Streaklines 144  
Timelines 146  
Refractive Flow Visualization Techniques 147  
Surface Flow Visualization Techniques 148
- 4–3** Plots of Fluid Flow Data 148  
Profile Plots 149  
Vector Plots 149  
Contour Plots 150
- 4–4** Other Kinematic Descriptions 151  
Types of Motion or Deformation of Fluid Elements 151
- 4–5** Vorticity and Rotationality 156  
Comparison of Two Circular Flows 159
- 4–6** The Reynolds Transport Theorem 160  
Alternate Derivation of the Reynolds Transport Theorem 165  
Relationship between Material Derivative and RTT 167
- Summary 168  
*Application Spotlight: Fluidic Actuators* 169  
References and Suggested Reading 170  
Problems 170

## CHAPTER FIVE

### BERNOULLI AND ENERGY EQUATIONS 185

- 5–1** Introduction 186  
Conservation of Mass 186

The Linear Momentum Equation 186  
Conservation of Energy 186

- 5–2** Conservation of Mass 187  
Mass and Volume Flow Rates 187  
Conservation of Mass Principle 189  
Moving or Deforming Control Volumes 191  
Mass Balance for Steady-Flow Processes 191  
Special Case: Incompressible Flow 192
- 5–3** Mechanical Energy and Efficiency 194
- 5–4** The Bernoulli Equation 199  
Acceleration of a Fluid Particle 199  
Derivation of the Bernoulli Equation 200  
Force Balance across Streamlines 202  
Unsteady, Compressible Flow 202  
Static, Dynamic, and Stagnation Pressures 202  
Limitations on the Use of the Bernoulli Equation 204  
Hydraulic Grade Line (HGL) and Energy Grade Line (EGL) 205  
Applications of the Bernoulli Equation 207
- 5–5** General Energy Equation 214  
Energy Transfer by Heat,  $Q$  215  
Energy Transfer by Work,  $W$  215
- 5–6** Energy Analysis of Steady Flows 219  
Special Case: Incompressible Flow with No Mechanical Work Devices and Negligible Friction 221  
Kinetic Energy Correction Factor,  $\alpha$  221
- Summary 228  
References and Suggested Reading 229  
Problems 230

## CHAPTER SIX

### MOMENTUM ANALYSIS OF FLOW SYSTEMS 243

- 6–1** Newton's Laws 244
- 6–2** Choosing a Control Volume 245
- 6–3** Forces Acting on a Control Volume 246
- 6–4** The Linear Momentum Equation 249  
Special Cases 251  
Momentum-Flux Correction Factor,  $\beta$  251  
Steady Flow 253  
Flow with No External Forces 254
- 6–5** Review of Rotational Motion and Angular Momentum 263

- 6–6** The Angular Momentum Equation 265  
Special Cases 267  
Flow with No External Moments 268  
Radial-Flow Devices 269  
*Application Spotlight: Manta Ray Swimming* 273  
Summary 275  
References and Suggested Reading 275  
Problems 276

## CHAPTER SEVEN DIMENSIONAL ANALYSIS AND MODELING 291

- 7–1** Dimensions and Units 292  
**7–2** Dimensional Homogeneity 293  
Nondimensionalization of Equations 294  
**7–3** Dimensional Analysis and Similarity 299  
**7–4** The Method of Repeating Variables  
and The Buckingham Pi Theorem 303  
*Historical Spotlight: Persons Honored  
by Nondimensional Parameters* 311  
**7–5** Experimental Testing, Modeling,  
and Incomplete Similarity 319  
Setup of an Experiment and Correlation of  
Experimental Data 319  
Incomplete Similarity 320  
Wind Tunnel Testing 320  
Flows with Free Surfaces 323  
*Application Spotlight: How a Fly Flies* 326  
Summary 327  
References and Suggested Reading 327  
Problems 327

## CHAPTER EIGHT INTERNAL FLOW 347

- 8–1** Introduction 348  
**8–2** Laminar and Turbulent Flows 349  
Reynolds Number 350  
**8–3** The Entrance Region 351  
Entry Lengths 352

- 8–4** Laminar Flow in Pipes 353  
Pressure Drop and Head Loss 355  
Effect of Gravity on Velocity and Flow Rate  
in Laminar Flow 357  
Laminar Flow in Noncircular Pipes 358  
**8–5** Turbulent Flow in Pipes 361  
Turbulent Shear Stress 363  
Turbulent Velocity Profile 364  
The Moody Chart and the Colebrook Equation 367  
Types of Fluid Flow Problems 369  
**8–6** Minor Losses 374  
**8–7** Piping Networks and Pump Selection 381  
Series and Parallel Pipes 381  
Piping Systems with Pumps and Turbines 383  
**8–8** Flow Rate and Velocity Measurement 391  
Pitot and Pitot-Static Probes 391  
Obstruction Flowmeters: Orifice, Venturi,  
and Nozzle Meters 392  
Positive Displacement Flowmeters 396  
Turbine Flowmeters 397  
Variable-Area Flowmeters (Rotameters) 398  
Ultrasonic Flowmeters 399  
Electromagnetic Flowmeters 401  
Vortex Flowmeters 402  
Thermal (Hot-Wire and Hot-Film) Anemometers 402  
Laser Doppler Velocimetry 404  
Particle Image Velocimetry 406  
Introduction to Biofluid Mechanics 408  
*Application Spotlight: PIV Applied to Cardiac  
Flow* 416  
Summary 417  
References and Suggested Reading 418  
Problems 419

## CHAPTER NINE DIFFERENTIAL ANALYSIS OF FLUID FLOW 437

- 9–1** Introduction 438  
**9–2** Conservation of Mass—The Continuity  
Equation 438  
Derivation Using the Divergence Theorem 439  
Derivation Using an Infinitesimal Control Volume 440  
Alternative Form of the Continuity Equation 443  
Continuity Equation in Cylindrical Coordinates 444  
Special Cases of the Continuity Equation 444  
**9–3** The Stream Function 450  
The Stream Function in Cartesian Coordinates 450  
The Stream Function in Cylindrical Coordinates 457  
The Compressible Stream Function 458

- 9-4 The Differential Linear Momentum Equation—Cauchy’s Equation 459**  
 Derivation Using the Divergence Theorem 459  
 Derivation Using an Infinitesimal Control Volume 460  
 Alternative Form of Cauchy’s Equation 463  
 Derivation Using Newton’s Second Law 463
- 9-5 The Navier–Stokes Equation 464**  
 Introduction 464  
 Newtonian versus Non-Newtonian Fluids 465  
 Derivation of the Navier–Stokes Equation for Incompressible, Isothermal Flow 466  
 Continuity and Navier–Stokes Equations in Cartesian Coordinates 468  
 Continuity and Navier–Stokes Equations in Cylindrical Coordinates 469
- 9-6 Differential Analysis of Fluid Flow Problems 470**  
 Calculation of the Pressure Field for a Known Velocity Field 470  
 Exact Solutions of the Continuity and Navier–Stokes Equations 475  
 Differential Analysis of Biofluid Mechanics Flows 493
- Application Spotlight: The No-Slip Boundary Condition 498*  
 Summary 499  
 References and Suggested Reading 499  
 Problems 499

## CHAPTER TEN

### APPROXIMATE SOLUTIONS OF THE NAVIER–STOKES EQUATION 515

- 10-1 Introduction 516**
- 10-2 Nondimensionalized Equations of Motion 517**
- 10-3 The Creeping Flow Approximation 520**  
 Drag on a Sphere in Creeping Flow 523
- 10-4 Approximation for Inviscid Regions of Flow 525**  
 Derivation of the Bernoulli Equation in Inviscid Regions of Flow 526
- 10-5 The Irrotational Flow Approximation 529**  
 Continuity Equation 529  
 Momentum Equation 531  
 Derivation of the Bernoulli Equation in Irrotational Regions of Flow 531  
 Two-Dimensional Irrotational Regions of Flow 534  
 Superposition in Irrotational Regions of Flow 538  
 Elementary Planar Irrotational Flows 538  
 Irrotational Flows Formed by Superposition 545

- 10-6 The Boundary Layer Approximation 554**  
 The Boundary Layer Equations 559  
 The Boundary Layer Procedure 564  
 Displacement Thickness 568  
 Momentum Thickness 571  
 Turbulent Flat Plate Boundary Layer 572  
 Boundary Layers with Pressure Gradients 578  
 The Momentum Integral Technique for Boundary Layers 583
- Summary 591  
 References and Suggested Reading 592
- Application Spotlight: Droplet Formation 593*  
 Problems 594

## CHAPTER ELEVEN

### EXTERNAL FLOW: DRAG AND LIFT 607

- 11-1 Introduction 608**
- 11-2 Drag and Lift 610**
- 11-3 Friction and Pressure Drag 614**  
 Reducing Drag by Streamlining 615  
 Flow Separation 616
- 11-4 Drag Coefficients of Common Geometries 617**  
 Biological Systems and Drag 618  
 Drag Coefficients of Vehicles 621  
 Superposition 623
- 11-5 Parallel Flow Over Flat Plates 625**  
 Friction Coefficient 627
- 11-6 Flow Over Cylinders And Spheres 629**  
 Effect of Surface Roughness 632
- 11-7 Lift 634**  
 Finite-Span Wings and Induced Drag 638  
 Lift Generated by Spinning 639
- Summary 643  
 References and Suggested Reading 644
- Application Spotlight: Drag Reduction 645*  
 Problems 646

## CHAPTER TWELVE

### COMPRESSIBLE FLOW 659

- 12-1 Stagnation Properties 660**
- 12-2 One-Dimensional Isentropic Flow 663**  
 Variation of Fluid Velocity with Flow Area 665  
 Property Relations for Isentropic Flow of Ideal Gases 667

- 12-3** Isentropic Flow Through Nozzles 669  
     Converging Nozzles 670  
     Converging–Diverging Nozzles 674
- 12-4** Shock Waves and Expansion Waves 678  
     Normal Shocks 678  
     Oblique Shocks 684  
     Prandtl–Meyer Expansion Waves 688
- 12-5** Duct Flow With Heat Transfer and Negligible Friction (Rayleigh Flow) 693  
     Property Relations for Rayleigh Flow 699  
     Choked Rayleigh Flow 700
- 12-6** Adiabatic Duct Flow With Friction (Fanno Flow) 702  
     Property Relations for Fanno Flow 705  
     Choked Fanno Flow 708
- Application Spotlight: Shock-Wave/  
     Boundary-Layer Interactions* 712
- Summary 713  
 References and Suggested Reading 714  
 Problems 714

## CHAPTER THIRTEEN

### OPEN-CHANNEL FLOW 725

- 13-1** Classification of Open-Channel Flows 726  
     Uniform and Varied Flows 726  
     Laminar and Turbulent Flows in Channels 727
- 13-2** Froude Number and Wave Speed 729  
     Speed of Surface Waves 731
- 13-3** Specific Energy 733
- 13-4** Conservation of Mass and Energy Equations 736
- 13-5** Uniform Flow in Channels 737  
     Critical Uniform Flow 739  
     Superposition Method for Nonuniform Perimeters 740
- 13-6** Best Hydraulic Cross Sections 743  
     Rectangular Channels 745  
     Trapezoidal Channels 745
- 13-7** Gradually Varied Flow 747  
     Liquid Surface Profiles in Open Channels,  $y(x)$  749  
     Some Representative Surface Profiles 752  
     Numerical Solution of Surface Profile 754
- 13-8** Rapidly Varied Flow and The Hydraulic Jump 757

- 13-9** Flow Control and Measurement 761  
     Underflow Gates 762  
     Overflow Gates 764
- Application Spotlight: Bridge Scour* 771
- Summary 772  
 References and Suggested Reading 773  
 Problems 773

## CHAPTER FOURTEEN

### TURBOMACHINERY 787

- 14-1** Classifications and Terminology 788
- 14-2** Pumps 790  
     Pump Performance Curves and Matching a Pump to a Piping System 791  
     Pump Cavitation and Net Positive Suction Head 797  
     Pumps in Series and Parallel 800  
     Positive-Displacement Pumps 803  
     Dynamic Pumps 806  
     Centrifugal Pumps 806  
     Axial Pumps 816
- 14-3** Pump Scaling Laws 824  
     Dimensional Analysis 824  
     Pump Specific Speed 827  
     Affinity Laws 829
- 14-4** Turbines 833  
     Positive-Displacement Turbines 834  
     Dynamic Turbines 834  
     Impulse Turbines 835  
     Reaction Turbines 837  
     Gas and Steam Turbines 847  
     Wind Turbines 847
- 14-5** Turbine Scaling Laws 855  
     Dimensionless Turbine Parameters 855  
     Turbine Specific Speed 857
- Application Spotlight: Rotary Fuel  
     Atomizers* 861
- Summary 862  
 References and Suggested Reading 862  
 Problems 863

## CHAPTER FIFTEEN

### INTRODUCTION TO COMPUTATIONAL FLUID DYNAMICS 879

- 15-1** Introduction and Fundamentals 880  
     Motivation 880  
     Equations of Motion 880

|             |                                                         |     |
|-------------|---------------------------------------------------------|-----|
|             | Solution Procedure                                      | 881 |
|             | Additional Equations of Motion                          | 883 |
|             | Grid Generation and Grid Independence                   | 883 |
|             | Boundary Conditions                                     | 888 |
|             | Practice Makes Perfect                                  | 893 |
| <b>15-2</b> | Laminar CFD Calculations                                | 893 |
|             | Pipe Flow Entrance Region at $Re = 500$                 | 893 |
|             | Flow around a Circular Cylinder at $Re = 150$           | 897 |
| <b>15-3</b> | Turbulent CFD Calculations                              | 902 |
|             | Flow around a Circular Cylinder at $Re = 10,000$        | 905 |
|             | Flow around a Circular Cylinder at $Re = 10^7$          | 907 |
|             | Design of the Stator for a Vane-Axial Flow Fan          | 907 |
| <b>15-4</b> | CFD With Heat Transfer                                  | 915 |
|             | Temperature Rise through a Cross-Flow Heat Exchanger    | 915 |
|             | Cooling of an Array of Integrated Circuit Chips         | 917 |
| <b>15-5</b> | Compressible Flow CFD Calculations                      | 922 |
|             | Compressible Flow through a Converging–Diverging Nozzle | 923 |
|             | Oblique Shocks over a Wedge                             | 927 |
| <b>15-6</b> | Open-Channel Flow CFD Calculations                      | 928 |
|             | Flow over a Bump on the Bottom of a Channel             | 929 |
|             | Flow through a Sluice Gate (Hydraulic Jump)             | 930 |
|             | <i>Application Spotlight: A Virtual Stomach</i>         | 931 |
|             | Summary                                                 | 932 |
|             | References and Suggested Reading                        | 932 |
|             | Problems                                                | 933 |

## APPENDIX 1

### PROPERTY TABLES AND CHARTS (SI UNITS) 939

|                  |                                                                           |     |
|------------------|---------------------------------------------------------------------------|-----|
| <b>TABLE A-1</b> | Molar Mass, Gas Constant, and Ideal-Gas Specific Heats of Some Substances | 940 |
| <b>TABLE A-2</b> | Boiling and Freezing Point Properties                                     | 941 |
| <b>TABLE A-3</b> | Properties of Saturated Water                                             | 942 |
| <b>TABLE A-4</b> | Properties of Saturated Refrigerant-134a                                  | 943 |
| <b>TABLE A-5</b> | Properties of Saturated Ammonia                                           | 944 |
| <b>TABLE A-6</b> | Properties of Saturated Propane                                           | 945 |
| <b>TABLE A-7</b> | Properties of Liquids                                                     | 946 |
| <b>TABLE A-8</b> | Properties of Liquid Metals                                               | 947 |
| <b>TABLE A-9</b> | Properties of Air at 1 atm Pressure                                       | 948 |

|                    |                                                                                        |     |
|--------------------|----------------------------------------------------------------------------------------|-----|
| <b>TABLE A-10</b>  | Properties of Gases at 1 atm Pressure                                                  | 949 |
| <b>TABLE A-11</b>  | Properties of the Atmosphere at High Altitude                                          | 951 |
| <b>FIGURE A-12</b> | The Moody Chart for the Friction Factor for Fully Developed Flow in Circular Pipes     | 952 |
| <b>TABLE A-13</b>  | One-Dimensional Isentropic Compressible Flow Functions for an Ideal Gas with $k = 1.4$ | 953 |
| <b>TABLE A-14</b>  | One-Dimensional Normal Shock Functions for an Ideal Gas with $k = 1.4$                 | 954 |
| <b>TABLE A-15</b>  | Rayleigh Flow Functions for an Ideal Gas with $k = 1.4$                                | 955 |
| <b>TABLE A-16</b>  | Fanno Flow Functions for an Ideal Gas with $k = 1.4$                                   | 956 |

## APPENDIX 2

### PROPERTY TABLES AND CHARTS (ENGLISH UNITS) 957

|                    |                                                                           |     |
|--------------------|---------------------------------------------------------------------------|-----|
| <b>TABLE A-1E</b>  | Molar Mass, Gas Constant, and Ideal-Gas Specific Heats of Some Substances | 958 |
| <b>TABLE A-2E</b>  | Boiling and Freezing Point Properties                                     | 959 |
| <b>TABLE A-3E</b>  | Properties of Saturated Water                                             | 960 |
| <b>TABLE A-4E</b>  | Properties of Saturated Refrigerant-134a                                  | 961 |
| <b>TABLE A-5E</b>  | Properties of Saturated Ammonia                                           | 962 |
| <b>TABLE A-6E</b>  | Properties of Saturated Propane                                           | 963 |
| <b>TABLE A-7E</b>  | Properties of Liquids                                                     | 964 |
| <b>TABLE A-8E</b>  | Properties of Liquid Metals                                               | 965 |
| <b>TABLE A-9E</b>  | Properties of Air at 1 atm Pressure                                       | 966 |
| <b>TABLE A-10E</b> | Properties of Gases at 1 atm Pressure                                     | 967 |
| <b>TABLE A-11E</b> | Properties of the Atmosphere at High Altitude                             | 969 |

|          |     |
|----------|-----|
| Glossary | 971 |
| Index    | 983 |

# BERNOULLI AND ENERGY EQUATIONS

This chapter deals with three equations commonly used in fluid mechanics: the mass, Bernoulli, and energy equations. The *mass equation* is an expression of the conservation of mass principle. The *Bernoulli equation* is concerned with the conservation of kinetic, potential, and flow energies of a fluid stream and their conversion to each other in regions of flow where net viscous forces are negligible and where other restrictive conditions apply. The *energy equation* is a statement of the conservation of energy principle. In fluid mechanics, it is convenient to separate *mechanical energy* from *thermal energy* and to consider the conversion of mechanical energy to thermal energy as a result of frictional effects as *mechanical energy loss*. Then the energy equation becomes the *mechanical energy balance*.

We start this chapter with an overview of conservation principles and the conservation of mass relation. This is followed by a discussion of various forms of mechanical energy and the efficiency of mechanical work devices such as pumps and turbines. Then we derive the Bernoulli equation by applying Newton's second law to a fluid element along a streamline and demonstrate its use in a variety of applications. We continue with the development of the energy equation in a form suitable for use in fluid mechanics and introduce the concept of *head loss*. Finally, we apply the energy equation to various engineering systems.



## OBJECTIVES

When you finish reading this chapter, you should be able to

- Apply the conservation of mass equation to balance the incoming and outgoing flow rates in a flow system
- Recognize various forms of mechanical energy, and work with energy conversion efficiencies
- Understand the use and limitations of the Bernoulli equation, and apply it to solve a variety of fluid flow problems
- Work with the energy equation expressed in terms of heads, and use it to determine turbine power output and pumping power requirements

Wind turbine “farms” are being constructed all over the world to extract kinetic energy from the wind and convert it to electrical energy.

The mass, energy, momentum, and angular momentum balances are utilized in the design of a wind turbine. The Bernoulli equation is also useful in the preliminary design stage.

© J. Luke/PhotoLink/Getty RF



**FIGURE 5–1**

Many fluid flow devices such as this Pelton wheel hydraulic turbine are analyzed by applying the conservation of mass and energy principles, along with the linear momentum equation.

Courtesy of Hydro Tasmania, [www.hydro.com.au](http://www.hydro.com.au).  
Used by permission.

## 5–1 ■ INTRODUCTION

You are already familiar with numerous **conservation laws** such as the laws of conservation of mass, conservation of energy, and conservation of momentum. Historically, the conservation laws are first applied to a fixed quantity of matter called a *closed system* or just a *system*, and then extended to regions in space called *control volumes*. The conservation relations are also called *balance equations* since any conserved quantity must balance during a process. We now give a brief description of the conservation of mass and energy relations, and the linear momentum equation (Fig. 5–1).

### Conservation of Mass

The conservation of mass relation for a closed system undergoing a change is expressed as  $m_{\text{sys}} = \text{constant}$  or  $dm_{\text{sys}}/dt = 0$ , which is the statement that the mass of the system remains constant during a process. For a control volume (CV), mass balance is expressed in rate form as

$$\text{Conservation of mass:} \quad \dot{m}_{\text{in}} - \dot{m}_{\text{out}} = \frac{dm_{\text{CV}}}{dt} \quad (5-1)$$

where  $\dot{m}_{\text{in}}$  and  $\dot{m}_{\text{out}}$  are the total rates of mass flow into and out of the control volume, respectively, and  $dm_{\text{CV}}/dt$  is the rate of change of mass within the control volume boundaries. In fluid mechanics, the conservation of mass relation written for a differential control volume is usually called the *continuity equation*. Conservation of mass is discussed in Section 5–2.

### The Linear Momentum Equation

The product of the mass and the velocity of a body is called the *linear momentum* or just the *momentum* of the body, and the momentum of a rigid body of mass  $m$  moving with a velocity  $\vec{V}$  is  $m\vec{V}$ . Newton's second law states that the acceleration of a body is proportional to the net force acting on it and is inversely proportional to its mass, and that the rate of change of the momentum of a body is equal to the net force acting on the body. Therefore, the momentum of a system remains constant only when the net force acting on it is zero, and thus the momentum of such systems is conserved. This is known as the *conservation of momentum principle*. In fluid mechanics, Newton's second law is usually referred to as the *linear momentum equation*, which is discussed in Chap. 6 together with the *angular momentum equation*.

### Conservation of Energy

Energy can be transferred to or from a closed system by heat or work, and the conservation of energy principle requires that the net energy transfer to or from a system during a process be equal to the change in the energy content of the system. Control volumes involve energy transfer via mass flow also, and the *conservation of energy principle*, also called the *energy balance*, is expressed as

$$\text{Conservation of energy:} \quad \dot{E}_{\text{in}} - \dot{E}_{\text{out}} = \frac{dE_{\text{CV}}}{dt} \quad (5-2)$$

where  $\dot{E}_{\text{in}}$  and  $\dot{E}_{\text{out}}$  are the total rates of energy transfer into and out of the control volume, respectively, and  $dE_{\text{CV}}/dt$  is the rate of change of energy within the control volume boundaries. In fluid mechanics, we usually limit

our consideration to mechanical forms of energy only. Conservation of energy is discussed in Section 5–6.

## 5–2 ■ CONSERVATION OF MASS

The conservation of mass principle is one of the most fundamental principles in nature. We are all familiar with this principle, and it is not difficult to understand. A person does not have to be a rocket scientist to figure out how much vinegar-and-oil dressing will be obtained by mixing 100 g of oil with 25 g of vinegar. Even chemical equations are balanced on the basis of the conservation of mass principle. When 16 kg of oxygen reacts with 2 kg of hydrogen, 18 kg of water is formed (Fig. 5–2). In an electrolysis process, the water separates back to 2 kg of hydrogen and 16 kg of oxygen.

Technically, mass is not exactly conserved. It turns out that mass  $m$  and energy  $E$  can be converted to each other according to the well-known formula proposed by Albert Einstein (1879–1955):

$$E = mc^2 \quad (5-3)$$

where  $c$  is the speed of light in a vacuum, which is  $c = 2.9979 \times 10^8$  m/s. This equation suggests that there is equivalence between mass and energy. All physical and chemical systems exhibit energy interactions with their surroundings, but the amount of energy involved is equivalent to an extremely small mass compared to the system's total mass. For example, when 1 kg of liquid water is formed from oxygen and hydrogen at normal atmospheric conditions, the amount of energy released is 15.8 MJ, which corresponds to a mass of only  $1.76 \times 10^{-10}$  kg. However, in nuclear reactions, the mass equivalence of the amount of energy interacted is a significant fraction of the total mass involved. Therefore, in most engineering analyses, we consider both mass and energy as conserved quantities.

For *closed systems*, the conservation of mass principle is implicitly used by requiring that the mass of the system remain constant during a process. For *control volumes*, however, mass can cross the boundaries, and so we must keep track of the amount of mass entering and leaving the control volume.

### Mass and Volume Flow Rates

The amount of mass flowing through a cross section per unit time is called the **mass flow rate** and is denoted by  $\dot{m}$ . The dot over a symbol is used to indicate *time rate of change*.

A fluid flows into or out of a control volume, usually through pipes or ducts. The differential mass flow rate of fluid flowing across a small area element  $dA_c$  in a cross section of a pipe is proportional to  $dA_c$  itself, the fluid density  $\rho$ , and the component of the flow velocity normal to  $dA_c$ , which we denote as  $V_n$ , and is expressed as (Fig. 5–3)

$$\delta \dot{m} = \rho V_n dA_c \quad (5-4)$$

Note that both  $\delta$  and  $d$  are used to indicate differential quantities, but  $\delta$  is typically used for quantities (such as heat, work, and mass transfer) that are *path functions* and have *inexact differentials*, while  $d$  is used for quantities




FIGURE 5–2

Mass is conserved even during chemical reactions.

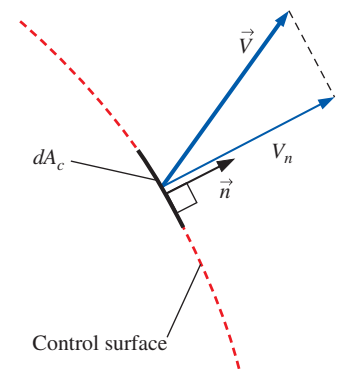
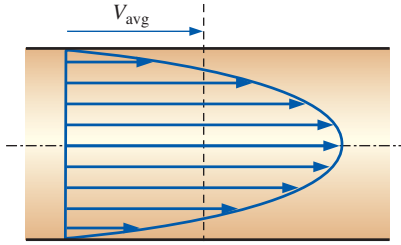
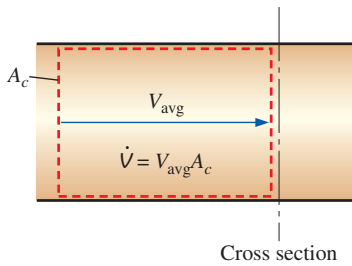


FIGURE 5–3

The normal velocity  $V_n$  for a surface is the component of velocity perpendicular to the surface.

**FIGURE 5-4**

Average velocity  $V_{\text{avg}}$  is defined as the average speed through a cross section.

**FIGURE 5-5**

The volume flow rate is the volume of fluid flowing through a cross section per unit time.

(such as properties) that are *point functions* and have *exact differentials*. For flow through an annulus of inner radius  $r_1$  and outer radius  $r_2$ , for example,  $\int_1^2 dA_c = A_{c2} - A_{c1} = \pi(r_2^2 - r_1^2)$  but  $\int_1^2 \delta \dot{m} = \dot{m}_{\text{total}}$  (total mass flow rate through the annulus), not  $\dot{m}_2 - \dot{m}_1$ . For specified values of  $r_1$  and  $r_2$ , the value of the integral of  $dA_c$  is fixed (thus the names *point function* and *exact differential*), but this is not the case for the integral of  $\delta \dot{m}$  (thus the names *path function* and *inexact differential*).

The mass flow rate through the entire cross-sectional area of a pipe or duct is obtained by integration:

$$\dot{m} = \int_{A_c} \delta \dot{m} = \int_{A_c} \rho V_n dA_c \quad (\text{kg/s}) \quad (5-5)$$

While Eq. 5-5 is always valid (in fact it is *exact*), it is not always practical for engineering analyses because of the integral. We would like instead to express mass flow rate in terms of average values over a cross section of the pipe. In a general compressible flow, both  $\rho$  and  $V_n$  vary across the pipe. In many practical applications, however, the density is essentially uniform over the pipe cross section, and we can take  $\rho$  outside the integral of Eq. 5-5. Velocity, however, is *never* uniform over a cross section of a pipe because of the no-slip condition at the walls. Rather, the velocity varies from zero at the walls to some maximum value at or near the centerline of the pipe. We define the **average velocity**  $V_{\text{avg}}$  as the average value of  $V_n$  across the entire cross section of the pipe (Fig. 5-4),

$$\text{Average velocity:} \quad V_{\text{avg}} = \frac{1}{A_c} \int_{A_c} V_n dA_c \quad (5-6)$$

where  $A_c$  is the area of the cross section normal to the flow direction. Note that if the speed were  $V_{\text{avg}}$  all through the cross section, the mass flow rate would be identical to that obtained by integrating the actual velocity profile. Thus for incompressible flow or even for compressible flow where  $\rho$  is approximated as uniform across  $A_c$ , Eq. 5-5 becomes

$$\dot{m} = \rho V_{\text{avg}} A_c \quad (\text{kg/s}) \quad (5-7)$$

For compressible flow, we can think of  $\rho$  as the bulk average density over the cross section, and then Eq. 5-7 can be used as a reasonable approximation. For simplicity, we drop the subscript on the average velocity. Unless otherwise stated,  $V$  denotes the average velocity in the flow direction. Also,  $A_c$  denotes the cross-sectional area normal to the flow direction.

The volume of the fluid flowing through a cross section per unit time is called the **volume flow rate**  $\dot{V}$  (Fig. 5-5) and is given by

$$\dot{V} = \int_{A_c} V_n dA_c = V_{\text{avg}} A_c = V A_c \quad (\text{m}^3/\text{s}) \quad (5-8)$$

An early form of Eq. 5-8 was published in 1628 by the Italian monk Benedetto Castelli (circa 1577–1644). Note that many fluid mechanics textbooks use  $Q$  instead of  $\dot{V}$  for volume flow rate. We use  $\dot{V}$  to avoid confusion with heat transfer.

The mass and volume flow rates are related by

$$\dot{m} = \rho \dot{V} = \frac{\dot{V}}{v} \quad (5-9)$$

where  $\nu$  is the specific volume. This relation is analogous to  $m = \rho V = V/\nu$ , which is the relation between the mass and the volume of a fluid in a container.

## Conservation of Mass Principle

The **conservation of mass principle** for a control volume can be expressed as: *The net mass transfer to or from a control volume during a time interval  $\Delta t$  is equal to the net change (increase or decrease) of the total mass within the control volume during  $\Delta t$ .* That is,

$$\left( \begin{array}{c} \text{Total mass entering} \\ \text{the CV during } \Delta t \end{array} \right) - \left( \begin{array}{c} \text{Total mass leaving} \\ \text{the CV during } \Delta t \end{array} \right) = \left( \begin{array}{c} \text{Net change of mass} \\ \text{within the CV during } \Delta t \end{array} \right)$$

or

$$m_{\text{in}} - m_{\text{out}} = \Delta m_{\text{CV}} \quad (\text{kg}) \quad (5-10)$$

where  $\Delta m_{\text{CV}} = m_{\text{final}} - m_{\text{initial}}$  is the change in the mass of the control volume during the process (Fig. 5-6). It can also be expressed in *rate form* as

$$\dot{m}_{\text{in}} - \dot{m}_{\text{out}} = dm_{\text{CV}}/dt \quad (\text{kg/s}) \quad (5-11)$$

where  $\dot{m}_{\text{in}}$  and  $\dot{m}_{\text{out}}$  are the total rates of mass flow into and out of the control volume, and  $dm_{\text{CV}}/dt$  is the rate of change of mass within the control volume boundaries. Equations 5-10 and 5-11 are often referred to as the **mass balance** and are applicable to any control volume undergoing any kind of process.

Consider a control volume of arbitrary shape, as shown in Fig. 5-7. The mass of a differential volume  $dV$  within the control volume is  $dm = \rho dV$ . The total mass within the control volume at any instant in time  $t$  is determined by integration to be

$$\text{Total mass within the CV:} \quad m_{\text{CV}} = \int_{\text{CV}} \rho dV \quad (5-12)$$

Then the time rate of change of the amount of mass within the control volume is expressed as

$$\text{Rate of change of mass within the CV:} \quad \frac{dm_{\text{CV}}}{dt} = \frac{d}{dt} \int_{\text{CV}} \rho dV \quad (5-13)$$

For the special case of no mass crossing the control surface (i.e., the control volume is a closed system), the conservation of mass principle reduces to  $dm_{\text{CV}}/dt = 0$ . This relation is valid whether the control volume is fixed, moving, or deforming.

Now consider mass flow into or out of the control volume through a differential area  $dA$  on the control surface of a fixed control volume. Let  $\vec{n}$  be the outward unit vector of  $dA$  normal to  $dA$  and  $\vec{V}$  be the flow velocity at  $dA$  relative to a fixed coordinate system, as shown in Fig. 5-7. In general, the velocity may cross  $dA$  at an angle  $\theta$  off the normal of  $dA$ , and the mass flow rate is proportional to the normal component of velocity  $\vec{V}_n = \vec{V} \cos \theta$  ranging from a maximum outflow of  $\vec{V}$  for  $\theta = 0$  (flow is normal to  $dA$ ) to a minimum of zero for  $\theta = 90^\circ$  (flow is tangent to  $dA$ ) to a maximum inflow of  $\vec{V}$  for  $\theta = 180^\circ$  (flow is normal to  $dA$  but in the opposite direction).

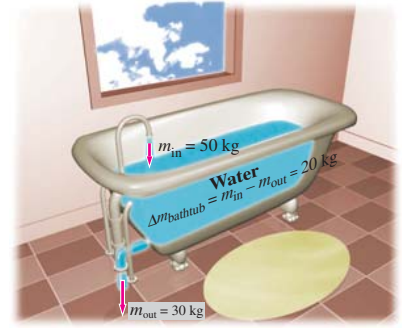


FIGURE 5-6

Conservation of mass principle for an ordinary bathtub.

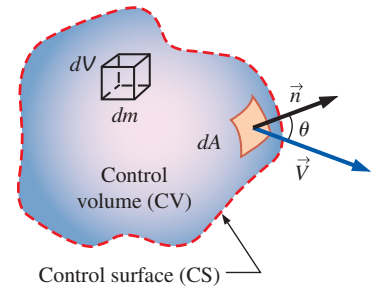


FIGURE 5-7

The differential control volume  $dV$  and the differential control surface  $dA$  used in the derivation of the conservation of mass relation.

Making use of the concept of dot product of two vectors, the magnitude of the normal component of velocity is

$$\text{Normal component of velocity:} \quad V_n = V \cos \theta = \vec{V} \cdot \vec{n} \quad (5-14)$$

The mass flow rate through  $dA$  is proportional to the fluid density  $\rho$ , normal velocity  $V_n$ , and the flow area  $dA$ , and is expressed as

$$\text{Differential mass flow rate:} \quad \delta \dot{m} = \rho V_n dA = \rho (V \cos \theta) dA = \rho (\vec{V} \cdot \vec{n}) dA \quad (5-15)$$

The net flow rate into or out of the control volume through the entire control surface is obtained by integrating  $\delta \dot{m}$  over the entire control surface,

$$\text{Net mass flow rate:} \quad \dot{m}_{\text{net}} = \int_{\text{CS}} \delta \dot{m} = \int_{\text{CS}} \rho V_n dA = \int_{\text{CS}} \rho (\vec{V} \cdot \vec{n}) dA \quad (5-16)$$

Note that  $V_n = \vec{V} \cdot \vec{n} = V \cos \theta$  is positive for  $\theta < 90^\circ$  (outflow) and negative for  $\theta > 90^\circ$  (inflow). Therefore, the direction of flow is automatically accounted for, and the surface integral in Eq. 5-16 directly gives the *net* mass flow rate. A positive value for  $\dot{m}_{\text{net}}$  indicates a net outflow of mass and a negative value indicates a net inflow of mass.

Rearranging Eq. 5-11 as  $dm_{\text{CV}}/dt + \dot{m}_{\text{out}} - \dot{m}_{\text{in}} = 0$ , the conservation of mass relation for a fixed control volume is then expressed as

$$\text{General conservation of mass:} \quad \frac{d}{dt} \int_{\text{CV}} \rho dV + \int_{\text{CS}} \rho (\vec{V} \cdot \vec{n}) dA = 0 \quad (5-17)$$

It states that *the time rate of change of mass within the control volume plus the net mass flow rate through the control surface is equal to zero.*

The general conservation of mass relation for a control volume can also be derived using the Reynolds transport theorem (RTT) by taking the property  $B$  to be the mass  $m$  (Chap. 4). Then we have  $b = 1$  since dividing mass by mass to get the property per unit mass gives unity. Also, the mass of a closed system is constant, and thus its time derivative is zero. That is,  $dm_{\text{sys}}/dt = 0$ . Then the Reynolds transport equation reduces immediately to Eq. 5-17, as shown in Fig. 5-8, and thus illustrates that the Reynolds transport theorem is a very powerful tool indeed.

Splitting the surface integral in Eq. 5-17 into two parts—one for the outgoing flow streams (positive) and one for the incoming flow streams (negative)—the general conservation of mass relation can also be expressed as

$$\frac{d}{dt} \int_{\text{CV}} \rho dV + \sum_{\text{out}} \rho |V_n| A - \sum_{\text{in}} \rho |V_n| A = 0 \quad (5-18)$$

where  $A$  represents the area for an inlet or outlet, and the summation signs are used to emphasize that *all* the inlets and outlets are to be considered. Using the definition of mass flow rate, Eq. 5-18 can also be expressed as

$$\frac{d}{dt} \int_{\text{CV}} \rho dV = \sum_{\text{in}} \dot{m} - \sum_{\text{out}} \dot{m} \quad \text{or} \quad \frac{dm_{\text{CV}}}{dt} = \sum_{\text{in}} \dot{m} - \sum_{\text{out}} \dot{m} \quad (5-19)$$

There is considerable flexibility in the selection of a control volume when solving a problem. Many control volume choices are available, but some are more convenient to work with. A control volume should not introduce any unnecessary complications. A wise choice of a control volume can make the solution of a seemingly complicated problem rather easy. A simple rule in selecting a control volume is to make the control surface *normal to the flow*

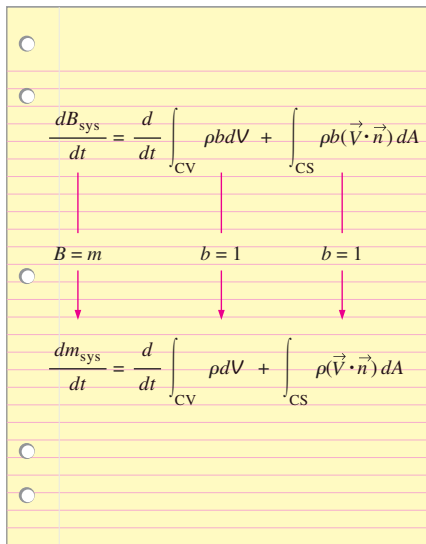


**FIGURE 5-8**

The conservation of mass equation is obtained by replacing  $B$  in the Reynolds transport theorem by mass  $m$ , and  $b$  by 1 ( $m$  per unit mass =  $m/m = 1$ ).

at all locations where it crosses the fluid flow, whenever possible. This way the dot product  $\vec{V} \cdot \vec{n}$  simply becomes the magnitude of the velocity, and the integral  $\int_A \rho(\vec{V} \cdot \vec{n}) dA$  becomes simply  $\rho VA$  (Fig. 5–9).

## Moving or Deforming Control Volumes

Equations 5–17 and 5–19 are also valid for moving control volumes provided that the *absolute velocity*  $\vec{V}$  is replaced by the *relative velocity*  $\vec{V}_r$ , which is the fluid velocity relative to the control surface (Chap. 4). In the case of a moving but nondeforming control volume, relative velocity is the fluid velocity observed by a person moving with the control volume and is expressed as  $\vec{V}_r = \vec{V} - \vec{V}_{CS}$ , where  $\vec{V}$  is the fluid velocity and  $\vec{V}_{CS}$  is the velocity of the control surface, both relative to a fixed point outside. Note that this is a *vector* subtraction.

Some practical problems (such as the injection of medication through the needle of a syringe by the forced motion of the plunger) involve *deforming* control volumes. The conservation of mass relations developed can still be used for such deforming control volumes provided that the velocity of the fluid crossing a deforming part of the control surface is expressed relative to the control surface (that is, the fluid velocity should be expressed relative to a reference frame attached to the deforming part of the control surface). The relative velocity in this case at any point on the control surface is expressed again as  $\vec{V}_r = \vec{V} - \vec{V}_{CS}$ , where  $\vec{V}_{CS}$  is the local velocity of the control surface at that point relative to a fixed point outside the control volume.

## Mass Balance for Steady-Flow Processes

During a steady-flow process, the total amount of mass contained within a control volume does not change with time ( $m_{CV} = \text{constant}$ ). Then the conservation of mass principle requires that the total amount of mass entering a control volume equal the total amount of mass leaving it. For a garden hose nozzle in steady operation, for example, the amount of water entering the nozzle per unit time is equal to the amount of water leaving it per unit time.

When dealing with steady-flow processes, we are not interested in the amount of mass that flows in or out of a device over time; instead, we are interested in the amount of mass flowing per unit time, that is, the *mass flow rate*  $\dot{m}$ . The *conservation of mass principle* for a general steady-flow system with multiple inlets and outlets is expressed in rate form as (Fig. 5–10)

*Steady flow:* 
$$\sum_{\text{in}} \dot{m} = \sum_{\text{out}} \dot{m} \quad (\text{kg/s}) \quad (5-20)$$

It states that the *total rate of mass entering a control volume is equal to the total rate of mass leaving it*.

Many engineering devices such as nozzles, diffusers, turbines, compressors, and pumps involve a single stream (only one inlet and one outlet). For these cases, we typically denote the inlet state by the subscript 1 and the outlet state by the subscript 2, and drop the summation signs. Then Eq. 5–20 reduces, for *single-stream steady-flow systems*, to

*Steady flow (single stream):* 
$$\dot{m}_1 = \dot{m}_2 \rightarrow \rho_1 V_1 A_1 = \rho_2 V_2 A_2 \quad (5-21)$$

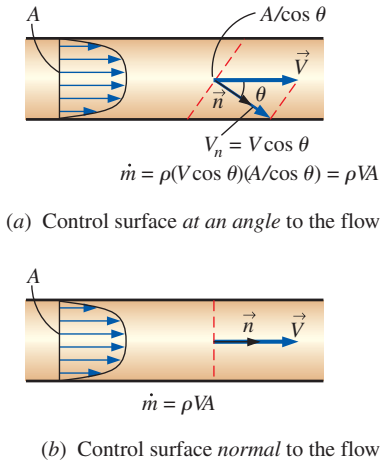


FIGURE 5–9

A control surface should always be selected *normal to the flow* at all locations where it crosses the fluid flow to avoid complications, even though the result is the same.

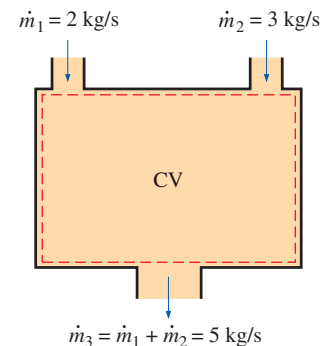
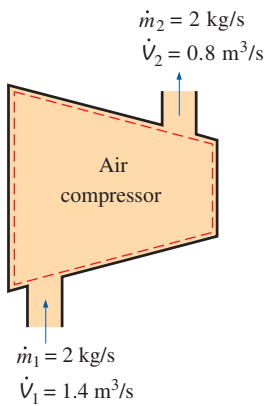


FIGURE 5–10

Conservation of mass principle for a two-inlet-one-outlet steady-flow system.

**FIGURE 5–11**

During a steady-flow process, volume flow rates are not necessarily conserved although mass flow rates are.

## Special Case: Incompressible Flow

The conservation of mass relations can be simplified even further when the fluid is incompressible, which is usually the case for liquids. Canceling the density from both sides of the general steady-flow relation gives

$$\text{Steady, incompressible flow: } \sum_{\text{in}} \dot{V} = \sum_{\text{out}} \dot{V} \quad (\text{m}^3/\text{s}) \quad (5-22)$$

For single-stream steady-flow systems Eq. 5–22 becomes

$$\text{Steady, incompressible flow (single stream): } \dot{V}_1 = \dot{V}_2 \rightarrow V_1 A_1 = V_2 A_2 \quad (5-23)$$

It should always be kept in mind that there is no such thing as a “conservation of volume” principle. Therefore, the volume flow rates into and out of a steady-flow device may be different. The volume flow rate at the outlet of an air compressor is much less than that at the inlet even though the mass flow rate of air through the compressor is constant (Fig. 5–11). This is due to the higher density of air at the compressor exit. For steady flow of liquids, however, the volume flow rates remain nearly constant since liquids are essentially incompressible (constant-density) substances. Water flow through the nozzle of a garden hose is an example of the latter case.

The conservation of mass principle requires every bit of mass to be accounted for during a process. If you can balance your checkbook (by keeping track of deposits and withdrawals, or by simply observing the “conservation of money” principle), you should have no difficulty applying the conservation of mass principle to engineering systems.

**FIGURE 5–12**

Schematic for Example 5–1.

Photo by John M. Cimbala.

### EXAMPLE 5–1 Water Flow through a Garden Hose Nozzle

A garden hose attached with a nozzle is used to fill a 10-gal bucket. The inner diameter of the hose is 2 cm, and it reduces to 0.8 cm at the nozzle exit (Fig. 5–12). If it takes 50 s to fill the bucket with water, determine (a) the volume and mass flow rates of water through the hose, and (b) the average velocity of water at the nozzle exit.

**SOLUTION** A garden hose is used to fill a water bucket. The volume and mass flow rates of water and the exit velocity are to be determined.

**Assumptions** 1 Water is a nearly incompressible substance. 2 Flow through the hose is steady. 3 There is no waste of water by splashing.

**Properties** We take the density of water to be  $1000 \text{ kg/m}^3 = 1 \text{ kg/L}$ .

**Analysis** (a) Noting that 10 gal of water are discharged in 50 s, the volume and mass flow rates of water are

$$\dot{V} = \frac{V}{\Delta t} = \frac{10 \text{ gal}}{50 \text{ s}} \left( \frac{3.7854 \text{ L}}{1 \text{ gal}} \right) = \mathbf{0.757 \text{ L/s}}$$

$$\dot{m} = \rho \dot{V} = (1 \text{ kg/L})(0.757 \text{ L/s}) = \mathbf{0.757 \text{ kg/s}}$$

(b) The cross-sectional area of the nozzle exit is

$$A_e = \pi r_e^2 = \pi (0.4 \text{ cm})^2 = 0.5027 \text{ cm}^2 = 0.5027 \times 10^{-4} \text{ m}^2$$

The volume flow rate through the hose and the nozzle is constant. Then the average velocity of water at the nozzle exit becomes

$$V_e = \frac{\dot{V}}{A_e} = \frac{0.757 \text{ L/s}}{0.5027 \times 10^{-4} \text{ m}^2} \left( \frac{1 \text{ m}^3}{1000 \text{ L}} \right) = \mathbf{15.1 \text{ m/s}}$$

**Discussion** It can be shown that the average velocity in the hose is 2.4 m/s. Therefore, the nozzle increases the water velocity by over six times.

### EXAMPLE 5-2 Discharge of Water from a Tank

A 4-ft-high, 3-ft-diameter cylindrical water tank whose top is open to the atmosphere is initially filled with water. Now the discharge plug near the bottom of the tank is pulled out, and a water jet whose diameter is 0.5 in streams out (Fig. 5–13). The average velocity of the jet is approximated as  $V = \sqrt{2gh}$ , where  $h$  is the height of water in the tank measured from the center of the hole (a variable) and  $g$  is the gravitational acceleration. Determine how long it takes for the water level in the tank to drop to 2 ft from the bottom.

**SOLUTION** The plug near the bottom of a water tank is pulled out. The time it takes for half of the water in the tank to empty is to be determined.

**Assumptions** 1 Water is a nearly incompressible substance. 2 The distance between the bottom of the tank and the center of the hole is negligible compared to the total water height. 3 The gravitational acceleration is  $32.2 \text{ ft/s}^2$ .

**Analysis** We take the volume occupied by water as the control volume. The size of the control volume decreases in this case as the water level drops, and thus this is a variable control volume. (We could also treat this as a fixed control volume that consists of the interior volume of the tank by disregarding the air that replaces the space vacated by the water.) This is obviously an unsteady-flow problem since the properties (such as the amount of mass) within the control volume change with time.

The conservation of mass relation for a control volume undergoing any process is given in rate form as

$$\dot{m}_{\text{in}} - \dot{m}_{\text{out}} = \frac{dm_{\text{CV}}}{dt} \quad (1)$$

During this process no mass enters the control volume ( $\dot{m}_{\text{in}} = 0$ ), and the mass flow rate of discharged water is

$$\dot{m}_{\text{out}} = (\rho VA)_{\text{out}} = \rho \sqrt{2gh} A_{\text{jet}} \quad (2)$$

where  $A_{\text{jet}} = \pi D_{\text{jet}}^2/4$  is the cross-sectional area of the jet, which is constant. Noting that the density of water is constant, the mass of water in the tank at any time is

$$m_{\text{CV}} = \rho V = \rho A_{\text{tank}} h \quad (3)$$

where  $A_{\text{tank}} = \pi D_{\text{tank}}^2/4$  is the base area of the cylindrical tank. Substituting Eqs. 2 and 3 into the mass balance relation (Eq. 1) gives

$$-\rho \sqrt{2gh} A_{\text{jet}} = \frac{d(\rho A_{\text{tank}} h)}{dt} \rightarrow -\rho \sqrt{2gh} (\pi D_{\text{jet}}^2/4) = \frac{\rho (\pi D_{\text{tank}}^2/4) dh}{dt}$$

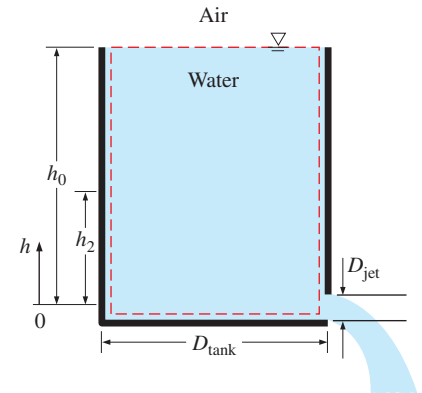


**FIGURE 5-13**  
Schematic for Example 5-2.

Canceling the densities and other common terms and separating the variables give

$$dt = -\frac{D_{\text{tank}}^2}{D_{\text{jet}}^2} \frac{dh}{\sqrt{2gh}}$$

Integrating from  $t = 0$  at which  $h = h_0$  to  $t = t$  at which  $h = h_2$  gives

$$\int_0^t dt = -\frac{D_{\text{tank}}^2}{D_{\text{jet}}^2 \sqrt{2g}} \int_{h_0}^{h_2} \frac{dh}{\sqrt{h}} \rightarrow t = \frac{\sqrt{h_0} - \sqrt{h_2}}{\sqrt{g/2}} \left( \frac{D_{\text{tank}}}{D_{\text{jet}}} \right)^2$$

Substituting, the time of discharge is determined to be

$$t = \frac{\sqrt{4 \text{ ft}} - \sqrt{2 \text{ ft}}}{\sqrt{32.2/2 \text{ ft/s}^2}} \left( \frac{3 \times 12 \text{ in}}{0.5 \text{ in}} \right)^2 = 757 \text{ s} = \mathbf{12.6 \text{ min}}$$

Therefore, it takes 12.6 min after the discharge hole is unplugged for half of the tank to be emptied.

**Discussion** Using the same relation with  $h_2 = 0$  gives  $t = 43.1 \text{ min}$  for the discharge of the entire amount of water in the tank. Therefore, emptying the bottom half of the tank takes much longer than emptying the top half. This is due to the decrease in the average discharge velocity of water with decreasing  $h$ .

### 5-3 ■ MECHANICAL ENERGY AND EFFICIENCY



**FIGURE 5-14**

Mechanical energy is a useful concept for flows that do not involve significant heat transfer or energy conversion, such as the flow of gasoline from an underground tank into a car.

*Royalty-Free/CORBIS*

Many fluid systems are designed to transport a fluid from one location to another at a specified flow rate, velocity, and elevation difference, and the system may generate mechanical work in a turbine or it may consume mechanical work in a pump or fan during this process (Fig. 5-14). These systems do not involve the conversion of nuclear, chemical, or thermal energy to mechanical energy. Also, they do not involve heat transfer in any significant amount, and they operate essentially at constant temperature. Such systems can be analyzed conveniently by considering only the *mechanical forms of energy* and the frictional effects that cause the mechanical energy to be lost (i.e., to be converted to thermal energy that usually cannot be used for any useful purpose).

The **mechanical energy** is defined as *the form of energy that can be converted to mechanical work completely and directly by an ideal mechanical device such as an ideal turbine*. Kinetic and potential energies are the familiar forms of mechanical energy. Thermal energy is not mechanical energy, however, since it cannot be converted to work directly and completely (the second law of thermodynamics).

A pump transfers mechanical energy to a fluid by raising its pressure, and a turbine extracts mechanical energy from a fluid by dropping its pressure. Therefore, the pressure of a flowing fluid is also associated with its mechanical energy. In fact, the pressure unit Pa is equivalent to  $\text{Pa} = \text{N/m}^2 = \text{N} \cdot \text{m/m}^3 = \text{J/m}^3$ , which is energy per unit volume, and the product  $PV$  or its equivalent  $P/\rho$  has the unit J/kg, which is energy per unit mass. Note that pressure itself is not a form of energy. But a pressure force acting on a fluid through a distance produces work, called *flow work*, in the amount of  $P/\rho$  per unit mass. Flow work is expressed in terms of fluid properties, and it is convenient to view it as part of the energy of a flowing fluid and call

it *flow energy*. Therefore, the mechanical energy of a flowing fluid can be expressed on a unit-mass basis as

$$e_{\text{mech}} = \frac{P}{\rho} + \frac{V^2}{2} + gz$$

where  $P/\rho$  is the *flow energy*,  $V^2/2$  is the *kinetic energy*, and  $gz$  is the *potential energy* of the fluid, all per unit mass. Then the mechanical energy change of a fluid during incompressible flow becomes

$$\Delta e_{\text{mech}} = \frac{P_2 - P_1}{\rho} + \frac{V_2^2 - V_1^2}{2} + g(z_2 - z_1) \quad (\text{kJ/kg}) \quad (5-24)$$

Therefore, the mechanical energy of a fluid does not change during flow if its pressure, density, velocity, and elevation remain constant. In the absence of any irreversible losses, the mechanical energy change represents the mechanical work supplied to the fluid (if  $\Delta e_{\text{mech}} > 0$ ) or extracted from the fluid (if  $\Delta e_{\text{mech}} < 0$ ). The maximum (ideal) power generated by a turbine, for example, is  $\dot{W}_{\text{max}} = \dot{m}\Delta e_{\text{mech}}$ , as shown in Fig. 5–15.


Consider a container of height  $h$  filled with water, as shown in Fig. 5–16, with the reference level selected at the bottom surface. The gage pressure and the potential energy per unit mass are, respectively,  $P_{\text{gage}, A} = 0$  and  $pe_A = gh$  at point  $A$  at the free surface, and  $P_{\text{gage}, B} = \rho gh$  and  $pe_B = 0$  at point  $B$  at the bottom of the container. An ideal hydraulic turbine at the bottom elevation would produce the same work per unit mass  $w_{\text{turbine}} = gh$  whether it receives water (or any other fluid with constant density) from the top or from the bottom of the container. Note that we are assuming ideal flow (no irreversible losses) through the pipe leading from the tank to the turbine and negligible kinetic energy at the turbine outlet. Therefore, the total available mechanical energy of water at the bottom is equivalent to that at the top.

The transfer of mechanical energy is usually accomplished by a rotating shaft, and thus mechanical work is often referred to as *shaft work*. A pump or a fan receives shaft work (usually from an electric motor) and transfers it to the fluid as mechanical energy (less frictional losses). A turbine, on the other hand, converts the mechanical energy of a fluid to shaft work. Because of irreversibilities such as friction, mechanical energy cannot be converted entirely from one mechanical form to another, and the **mechanical efficiency** of a device or process is defined as

$$\eta_{\text{mech}} = \frac{\text{Mechanical energy output}}{\text{Mechanical energy input}} = \frac{E_{\text{mech, out}}}{E_{\text{mech, in}}} = 1 - \frac{E_{\text{mech, loss}}}{E_{\text{mech, in}}} \quad (5-25)$$


A conversion efficiency of less than 100 percent indicates that conversion is less than perfect and some losses have occurred during conversion. A mechanical efficiency of 74 percent indicates that 26 percent of the mechanical energy input is converted to thermal energy as a result of frictional heating (Fig 5–17), and this manifests itself as a slight rise in the temperature of the fluid.

In fluid systems, we are usually interested in increasing the pressure, velocity, and/or elevation of a fluid. This is done by *supplying mechanical energy* to the fluid by a pump, a fan, or a compressor (we refer to all of them as pumps). Or we are interested in the reverse process of *extracting mechanical*

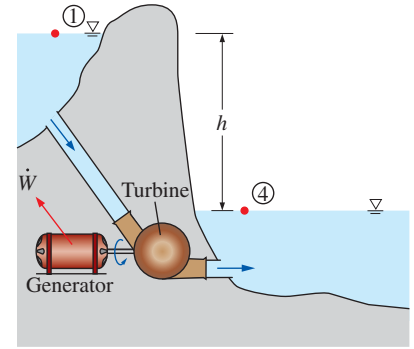

$$\dot{W}_{\text{max}} = \dot{m}\Delta e_{\text{mech}} = \dot{m}g(z_1 - z_4) = \dot{m}gh$$

since  $P_1 \approx P_4 = P_{\text{atm}}$  and  $V_1 = V_4 \approx 0$   
(a)

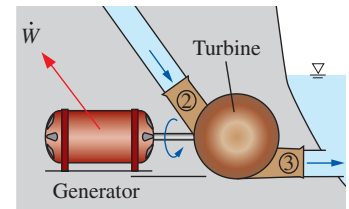

$$\dot{W}_{\text{max}} = \dot{m}\Delta e_{\text{mech}} = \dot{m} \frac{P_2 - P_3}{\rho} = \dot{m} \frac{\Delta P}{\rho}$$

since  $V_2 \approx V_3$  and  $z_2 \approx z_3$   
(b)

**FIGURE 5–15**

Mechanical energy is illustrated by an ideal hydraulic turbine coupled with an ideal generator. In the absence of irreversible losses, the maximum produced power is proportional to (a) the change in water surface elevation from the upstream to the downstream reservoir or (b) (close-up view) the drop in water pressure from just upstream to just downstream of the turbine.

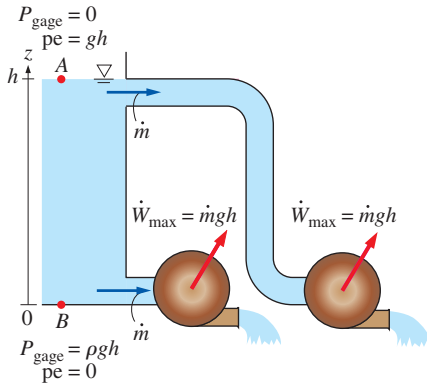


FIGURE 5-16

The available mechanical energy of water at the bottom of a container is equal to the available mechanical energy at any depth including the free surface of the container.

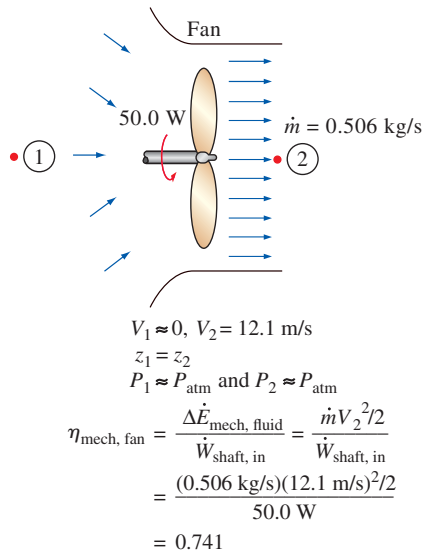


FIGURE 5-17

The mechanical efficiency of a fan is the ratio of the rate of increase of the mechanical energy of the air to the mechanical power input.

energy from a fluid by a turbine and producing mechanical power in the form of a rotating shaft that can drive a generator or any other rotary device. The degree of perfection of the conversion process between the mechanical work supplied or extracted and the mechanical energy of the fluid is expressed by the **pump efficiency** and **turbine efficiency**. In rate form, these are defined as

$$\eta_{\text{pump}} = \frac{\text{Mechanical power increase of the fluid}}{\text{Mechanical power input}} = \frac{\Delta \dot{E}_{\text{mech, fluid}}}{\dot{W}_{\text{shaft, in}}} = \frac{\dot{W}_{\text{pump, u}}}{\dot{W}_{\text{pump}}} \quad (5-26)$$

where  $\Delta \dot{E}_{\text{mech, fluid}} = \dot{E}_{\text{mech, out}} - \dot{E}_{\text{mech, in}}$  is the rate of increase in the mechanical energy of the fluid, which is equivalent to the **useful pumping power**  $\dot{W}_{\text{pump, u}}$  supplied to the fluid, and

$$\eta_{\text{turbine}} = \frac{\text{Mechanical power output}}{\text{Mechanical power decrease of the fluid}} = \frac{\dot{W}_{\text{shaft, out}}}{|\Delta \dot{E}_{\text{mech, fluid}}|} = \frac{\dot{W}_{\text{turbine}}}{\dot{W}_{\text{turbine, e}}} \quad (5-27)$$

where  $|\Delta \dot{E}_{\text{mech, fluid}}| = \dot{E}_{\text{mech, in}} - \dot{E}_{\text{mech, out}}$  is the rate of decrease in the mechanical energy of the fluid, which is equivalent to the mechanical power extracted from the fluid by the turbine  $\dot{W}_{\text{turbine, e}}$ , and we use the absolute value sign to avoid negative values for efficiencies. A pump or turbine efficiency of 100 percent indicates perfect conversion between the shaft work and the mechanical energy of the fluid, and this value can be approached (but never attained) as the frictional effects are minimized.

The mechanical efficiency should not be confused with the **motor efficiency** and the **generator efficiency**, which are defined as

**Motor:** 
$$\eta_{\text{motor}} = \frac{\text{Mechanical power output}}{\text{Electric power input}} = \frac{\dot{W}_{\text{shaft, out}}}{\dot{W}_{\text{elect, in}}} \quad (5-28)$$

and

**Generator:** 
$$\eta_{\text{generator}} = \frac{\text{Electric power output}}{\text{Mechanical power input}} = \frac{\dot{W}_{\text{elect, out}}}{\dot{W}_{\text{shaft, in}}} \quad (5-29)$$

A pump is usually packaged together with its motor, and a turbine with its generator. Therefore, we are usually interested in the **combined** or **overall efficiency** of pump–motor and turbine–generator combinations (Fig. 5-18), which are defined as

$$\eta_{\text{pump-motor}} = \eta_{\text{pump}} \eta_{\text{motor}} = \frac{\dot{W}_{\text{pump, u}}}{\dot{W}_{\text{elect, in}}} = \frac{\Delta \dot{E}_{\text{mech, fluid}}}{\dot{W}_{\text{elect, in}}} \quad (5-30)$$

and

$$\eta_{\text{turbine-gen}} = \eta_{\text{turbine}} \eta_{\text{generator}} = \frac{\dot{W}_{\text{elect, out}}}{\dot{W}_{\text{turbine, e}}} = \frac{\dot{W}_{\text{elect, out}}}{|\Delta \dot{E}_{\text{mech, fluid}}|} \quad (5-31)$$

All the efficiencies just defined range between 0 and 100 percent. The lower limit of 0 percent corresponds to the conversion of the entire mechanical or electric energy input to thermal energy, and the device in this case functions like a resistance heater. The upper limit of 100 percent corresponds to the case of perfect conversion with no friction or other irreversibilities, and thus no conversion of mechanical or electric energy to thermal energy (no losses).

**EXAMPLE 5-3 Performance of a Hydraulic Turbine–Generator**

The water in a large lake is to be used to generate electricity by the installation of a hydraulic turbine–generator. The elevation difference between the free surfaces upstream and downstream of the dam is 50 m (Fig. 5–19). Water is to be supplied at a rate of 5000 kg/s. If the electric power generated is measured to be 1862 kW and the generator efficiency is 95 percent, determine (a) the overall efficiency of the turbine–generator, (b) the mechanical efficiency of the turbine, and (c) the shaft power supplied by the turbine to the generator.

**SOLUTION** A hydraulic turbine–generator is to generate electricity from the water of a lake. The overall efficiency, the turbine efficiency, and the shaft power are to be determined.

**Assumptions** 1 The elevation of the lake and that of the discharge site remain constant. 2 Irreversible losses in the pipes are negligible.

**Properties** The density of water is taken to be  $\rho = 1000 \text{ kg/m}^3$ .

**Analysis** (a) We perform our analysis from inlet (1) at the free surface of the lake to outlet (2) at the free surface of the downstream discharge site. At both free surfaces the pressure is atmospheric and the velocity is negligibly small. The change in the water's mechanical energy per unit mass is then

$$\begin{aligned} e_{\text{mech, in}} - e_{\text{mech, out}} &= \underbrace{\frac{P_{\text{in}} - P_{\text{out}}}{\rho}}_0 + \underbrace{\frac{V_{\text{in}}^2 - V_{\text{out}}^2}{2}}_0 + g(z_{\text{in}} - z_{\text{out}}) \\ &= gh \\ &= (9.81 \text{ m/s}^2)(50 \text{ m}) \left( \frac{1 \text{ kJ/kg}}{1000 \text{ m}^2/\text{s}^2} \right) = 0.491 \frac{\text{kJ}}{\text{kg}} \end{aligned}$$

Then the rate at which mechanical energy is supplied to the turbine by the fluid and the overall efficiency become

$$|\Delta \dot{E}_{\text{mech, fluid}}| = \dot{m}(e_{\text{mech, in}} - e_{\text{mech, out}}) = (5000 \text{ kg/s})(0.491 \text{ kJ/kg}) = 2455 \text{ kW}$$

$$\eta_{\text{overall}} = \eta_{\text{turbine-gen}} = \frac{\dot{W}_{\text{elect, out}}}{|\Delta \dot{E}_{\text{mech, fluid}}|} = \frac{1862 \text{ kW}}{2455 \text{ kW}} = \mathbf{0.760}$$


(b) Knowing the overall and generator efficiencies, the mechanical efficiency of the turbine is determined from

$$\eta_{\text{turbine-gen}} = \eta_{\text{turbine}} \eta_{\text{generator}} \rightarrow \eta_{\text{turbine}} = \frac{\eta_{\text{turbine-gen}}}{\eta_{\text{generator}}} = \frac{0.76}{0.95} = \mathbf{0.800}$$


(c) The shaft power output is determined from the definition of mechanical efficiency,

$$\dot{W}_{\text{shaft, out}} = \eta_{\text{turbine}} |\Delta \dot{E}_{\text{mech, fluid}}| = (0.800)(2455 \text{ kW}) = 1964 \text{ kW} \approx \mathbf{1960 \text{ kW}}$$

**Discussion** Note that the lake supplies 2455 kW of mechanical power to the turbine, which converts 1964 kW of it to shaft power that drives the generator, which generates 1862 kW of electric power. There are irreversible losses through each component. Irreversible losses in the pipes are ignored here; you will learn how to account for these in Chap. 8.

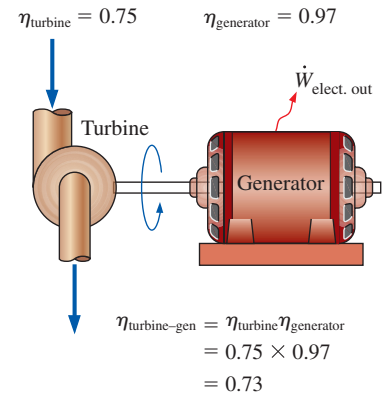**FIGURE 5-18**

The overall efficiency of a turbine–generator is the product of the efficiency of the turbine and the efficiency of the generator, and represents the fraction of the mechanical power of the fluid converted to electrical power.

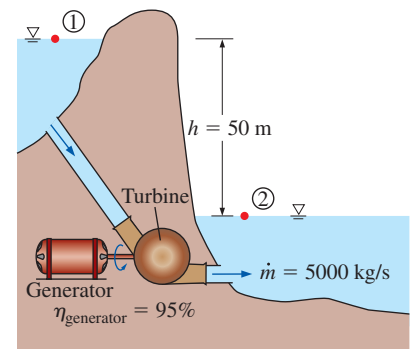**FIGURE 5-19**

Schematic for Example 5-3.

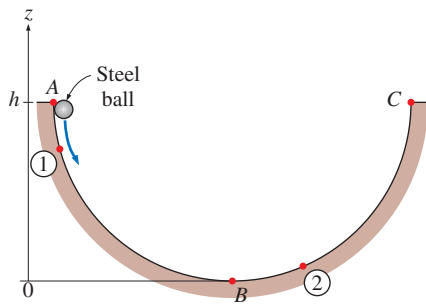


FIGURE 5-20

Schematic for Example 5-4.

**EXAMPLE 5-4** Conservation of Energy for an Oscillating Steel Ball

The motion of a steel ball in a hemispherical bowl of radius  $h$  shown in Fig. 5-20 is to be analyzed. The ball is initially held at the highest location at point A, and then it is released. Obtain relations for the conservation of energy of the ball for the cases of frictionless and actual motions.

**SOLUTION** A steel ball is released in a bowl. Relations for the energy balance are to be obtained.

**Assumptions** For the frictionless case, friction between the ball, the bowl, and the air is negligible.

**Analysis** When the ball is released, it accelerates under the influence of gravity, reaches a maximum velocity (and minimum elevation) at point B at the bottom of the bowl, and moves up toward point C on the opposite side. In the ideal case of frictionless motion, the ball will oscillate between points A and C. The actual motion involves the conversion of the kinetic and potential energies of the ball to each other, together with overcoming resistance to motion due to friction (doing frictional work). The general energy balance for any system undergoing any process is

$$\underbrace{E_{\text{in}} - E_{\text{out}}}_{\text{Net energy transfer by heat, work, and mass}} = \underbrace{\Delta E_{\text{system}}}_{\text{Change in internal, kinetic, potential, etc., energies}}$$

Then the energy balance (per unit mass) for the ball for a process from point 1 to point 2 becomes

$$-w_{\text{friction}} = (ke_2 + pe_2) - (ke_1 + pe_1)$$

or

$$\frac{V_1^2}{2} + gz_1 = \frac{V_2^2}{2} + gz_2 + w_{\text{friction}}$$

since there is no energy transfer by heat or mass and no change in the internal energy of the ball (the heat generated by frictional heating is dissipated to the surrounding air). The frictional work term  $w_{\text{friction}}$  is often expressed as  $e_{\text{loss}}$  to represent the loss (conversion) of mechanical energy into thermal energy.

For the idealized case of frictionless motion, the last relation reduces to

$$\frac{V_1^2}{2} + gz_1 = \frac{V_2^2}{2} + gz_2 \quad \text{or} \quad \frac{V^2}{2} + gz = C = \text{constant}$$

where the value of the constant is  $C = gh$ . That is, *when the frictional effects are negligible, the sum of the kinetic and potential energies of the ball remains constant.*

**Discussion** This is certainly a more intuitive and convenient form of the conservation of energy equation for this and other similar processes such as the swinging motion of a pendulum. The relation obtained is analogous to the Bernoulli equation derived in Section 5-4.

Most processes encountered in practice involve only certain forms of energy, and in such cases it is more convenient to work with the simplified versions of the energy balance. For systems that involve only *mechanical*

forms of energy and its transfer as *shaft work*, the conservation of energy principle can be expressed conveniently as

$$E_{\text{mech, in}} - E_{\text{mech, out}} = \Delta E_{\text{mech, system}} + E_{\text{mech, loss}} \quad (5-32)$$

where  $E_{\text{mech, loss}}$  represents the conversion of mechanical energy to thermal energy due to irreversibilities such as friction. For a system in steady operation, the rate of mechanical energy balance becomes  $\dot{E}_{\text{mech, in}} = \dot{E}_{\text{mech, out}} + \dot{E}_{\text{mech, loss}}$  (Fig. 5–21).

## 5–4 ■ THE BERNOULLI EQUATION

The **Bernoulli equation** is an approximate relation between pressure, velocity, and elevation, and is valid in regions of steady, incompressible flow where net frictional forces are negligible (Fig. 5–22). Despite its simplicity, it has proven to be a very powerful tool in fluid mechanics. In this section, we derive the Bernoulli equation by applying the conservation of linear momentum principle, and we demonstrate both its usefulness and its limitations.


The key approximation in the derivation of the Bernoulli equation is that *viscous effects are negligibly small compared to inertial, gravitational, and pressure effects*. Since all fluids have viscosity (there is no such thing as an “inviscid fluid”), this approximation cannot be valid for an entire flow field of practical interest. In other words, we cannot apply the Bernoulli equation *everywhere* in a flow, no matter how small the fluid’s viscosity. However, it turns out that the approximation is reasonable in certain *regions* of many practical flows. We refer to such regions as *inviscid regions of flow*, and we stress that they are *not* regions where the fluid itself is inviscid or frictionless, but rather they are regions where net viscous or frictional forces are negligibly small compared to other forces acting on fluid particles.

Care must be exercised when applying the Bernoulli equation since it is an approximation that applies only to inviscid regions of flow. In general, frictional effects are always important very close to solid walls (*boundary layers*) and directly downstream of bodies (*wakes*). Thus, the Bernoulli approximation is typically useful in flow regions outside of boundary layers and wakes, where the fluid motion is governed by the combined effects of pressure and gravity forces.

### Acceleration of a Fluid Particle

The motion of a particle and the path it follows are described by the *velocity vector* as a function of time and space coordinates and the initial position of the particle. When the flow is *steady* (no change with time at a specified location), all particles that pass through the same point follow the same path (which is the *streamline*), and the velocity vectors remain tangent to the path at every point.

Often it is convenient to describe the motion of a particle in terms of its distance  $s$  along a streamline together with the radius of curvature along the streamline. The speed of the particle is related to the distance by  $V = ds/dt$ , which may vary along the streamline. In two-dimensional flow, the acceleration can be decomposed into two components: *streamwise acceleration*  $a_s$  along the streamline and *normal acceleration*  $a_n$  in the direction normal to the streamline, which is given as  $a_n = V^2/R$ . Note that streamwise

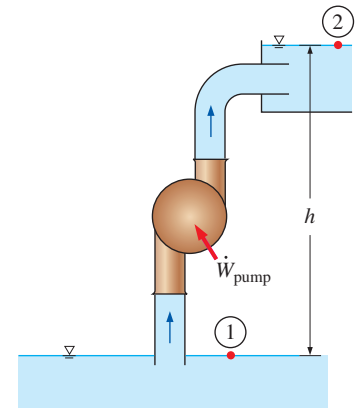

$$\begin{aligned} \text{Steady flow} \\ V_1 = V_2 \approx 0 \\ z_2 = z_1 + h \\ P_1 = P_2 = P_{\text{atm}} \\ \dot{E}_{\text{mech, in}} = \dot{E}_{\text{mech, out}} + \dot{E}_{\text{mech, loss}} \\ \dot{W}_{\text{pump}} + \dot{m}gz_1 = \dot{m}gz_2 + \dot{E}_{\text{mech, loss}} \\ \dot{W}_{\text{pump}} = \dot{m}gh + \dot{E}_{\text{mech, loss}} \end{aligned}$$

FIGURE 5–21

Many fluid flow problems involve mechanical forms of energy only, and such problems are conveniently solved by using a rate of *mechanical energy balance*.

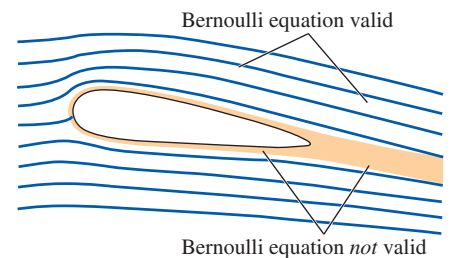
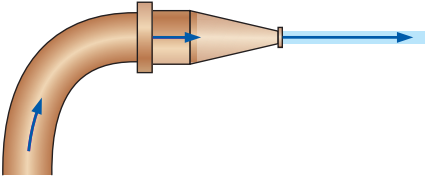


FIGURE 5–22

The *Bernoulli equation* is an approximate equation that is valid only in *inviscid regions of flow* where net viscous forces are negligibly small compared to inertial, gravitational, or pressure forces. Such regions occur outside of *boundary layers* and *wakes*.

**FIGURE 5-23**

During steady flow, a fluid may not accelerate in time at a fixed point, but it may accelerate in space.

acceleration is due to a change in speed along a streamline, and normal acceleration is due to a change in direction. For particles that move along a *straight path*,  $a_n = 0$  since the radius of curvature is infinity and thus there is no change in direction. The Bernoulli equation results from a force balance along a streamline.

One may be tempted to think that acceleration is zero in steady flow since acceleration is the rate of change of velocity with time, and in steady flow there is no change with time. Well, a garden hose nozzle tells us that this understanding is not correct. Even in steady flow and thus constant mass flow rate, water accelerates through the nozzle (Fig. 5–23 as discussed in Chap. 4). *Steady* simply means *no change with time at a specified location*, but the value of a quantity may change from one location to another. In the case of a nozzle, the velocity of water remains constant at a specified point, but it changes from the inlet to the exit (water accelerates along the nozzle).


Mathematically, this can be expressed as follows: We take the velocity  $V$  of a fluid particle to be a function of  $s$  and  $t$ . Taking the total differential of  $V(s, t)$  and dividing both sides by  $dt$  yield

$$dV = \frac{\partial V}{\partial s} ds + \frac{\partial V}{\partial t} dt \quad \text{and} \quad \frac{dV}{dt} = \frac{\partial V}{\partial s} \frac{ds}{dt} + \frac{\partial V}{\partial t} \quad (5-33)$$

In steady flow  $\partial V / \partial t = 0$  and thus  $V = V(s)$ , and the acceleration in the  $s$ -direction becomes

$$a_s = \frac{dV}{dt} = \frac{\partial V}{\partial s} \frac{ds}{dt} = \frac{\partial V}{\partial s} V = V \frac{dV}{ds} \quad (5-34)$$

where  $V = ds/dt$  if we are following a fluid particle as it moves along a streamline. Therefore, acceleration in steady flow is due to the change of velocity with position.

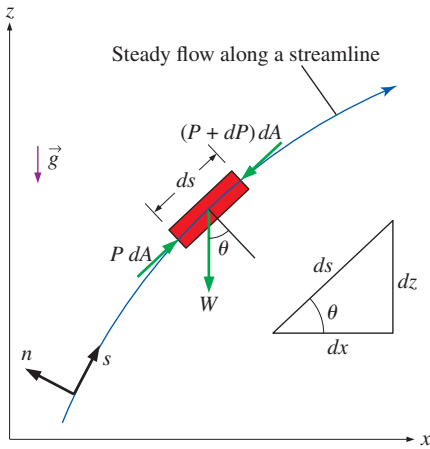**FIGURE 5-24**

The forces acting on a fluid particle along a streamline.

## Derivation of the Bernoulli Equation

Consider the motion of a fluid particle in a flow field in steady flow. Applying Newton's second law (which is referred to as the *linear momentum equation* in fluid mechanics) in the  $s$ -direction on a particle moving along a streamline gives

$$\sum F_s = ma_s \quad (5-35)$$

In regions of flow where net frictional forces are negligible, there is no pump or turbine, and there is no heat transfer along the streamline, the significant forces acting in the  $s$ -direction are the pressure (acting on both sides) and the component of the weight of the particle in the  $s$ -direction (Fig. 5–24). Therefore, Eq. 5–35 becomes

$$P dA - (P + dP) dA - W \sin \theta = mV \frac{dV}{ds} \quad (5-36)$$

where  $\theta$  is the angle between the normal of the streamline and the vertical  $z$ -axis at that point,  $m = \rho V = \rho dA ds$  is the mass,  $W = mg = \rho g dA ds$  is the weight of the fluid particle, and  $\sin \theta = dz/ds$ . Substituting,

$$-dP dA - \rho g dA ds \frac{dz}{ds} = \rho dA ds V \frac{dV}{ds} \quad (5-37)$$

Canceling  $dA$  from each term and simplifying,

$$-dP - \rho g dz = \rho V dV \quad (5-38)$$

Noting that  $V dV = \frac{1}{2} d(V^2)$  and dividing each term by  $\rho$  gives

$$\frac{dP}{\rho} + \frac{1}{2} d(V^2) + g dz = 0 \quad (5-39)$$

Integrating,

*Steady flow:*  $\int \frac{dP}{\rho} + \frac{V^2}{2} + gz = \text{constant (along a streamline)} \quad (5-40)$

since the last two terms are exact differentials. In the case of incompressible flow, the first term also becomes an exact differential, and integration gives

*Steady, incompressible flow:*  $\frac{P}{\rho} + \frac{V^2}{2} + gz = \text{constant (along a streamline)} \quad (5-41)$

This is the famous **Bernoulli equation** (Fig. 5–25), which is commonly used in fluid mechanics for steady, incompressible flow along a streamline in inviscid regions of flow. The Bernoulli equation was first stated in words by the Swiss mathematician Daniel Bernoulli (1700–1782) in a text written in 1738 when he was working in St. Petersburg, Russia. It was later derived in equation form by his associate Leonhard Euler (1707–1783) in 1755.

The value of the constant in Eq. 5–41 can be evaluated at any point on the streamline where the pressure, density, velocity, and elevation are known. The Bernoulli equation can also be written between any two points on the same streamline as

*Steady, incompressible flow:*  $\frac{P_1}{\rho} + \frac{V_1^2}{2} + gz_1 = \frac{P_2}{\rho} + \frac{V_2^2}{2} + gz_2 \quad (5-42)$

We recognize  $V^2/2$  as *kinetic energy*,  $gz$  as *potential energy*, and  $P/\rho$  as *flow energy*, all per unit mass. Therefore, the Bernoulli equation can be viewed as an expression of *mechanical energy balance* and can be stated as follows (Fig. 5–26):

The sum of the kinetic, potential, and flow energies of a fluid particle is constant along a streamline during steady flow when compressibility and frictional effects are negligible.

The kinetic, potential, and flow energies are the mechanical forms of energy, as discussed in Section 5–3, and the Bernoulli equation can be viewed as the “conservation of mechanical energy principle.” This is equivalent to the general conservation of energy principle for systems that do not involve any conversion of mechanical energy and thermal energy to each other, and thus the mechanical energy and thermal energy are conserved separately. The Bernoulli equation states that during steady, incompressible flow with negligible friction, the various forms of mechanical energy are converted to each other, but their sum remains constant. In other words, there is no dissipation of mechanical energy during such flows since there is no friction that converts mechanical energy to sensible thermal (internal) energy.

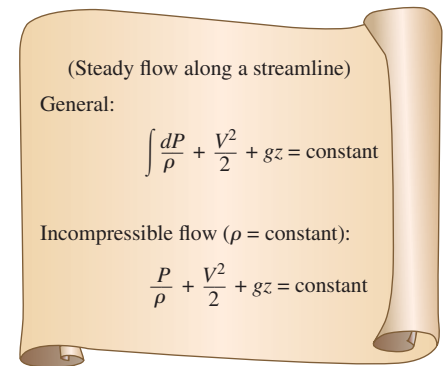


**FIGURE 5–25**

The incompressible Bernoulli equation is derived assuming incompressible flow, and thus it should not be used for flows with significant compressibility effects.

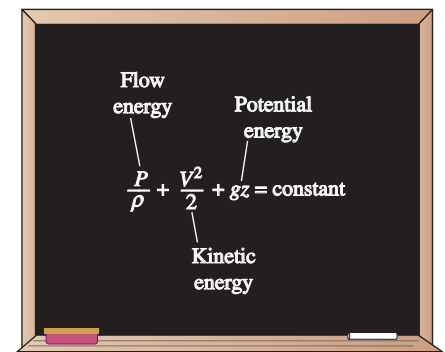
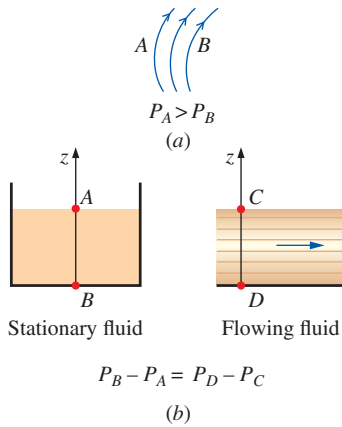


**FIGURE 5–26**

The Bernoulli equation states that the sum of the kinetic, potential, and flow energies (all per unit mass) of a fluid particle is constant along a streamline during steady flow.

**FIGURE 5-27**

Pressure decreases towards the center of curvature when streamlines are curved (a), but the variation of pressure with elevation in steady, incompressible flow along a straight line (b) is the same as that in stationary fluid.

Recall that energy is transferred to a system as work when a force is applied to the system through a distance. In the light of Newton's second law of motion, the Bernoulli equation can also be viewed as: *The work done by the pressure and gravity forces on the fluid particle is equal to the increase in the kinetic energy of the particle.*

The Bernoulli equation is obtained from Newton's second law for a fluid particle moving along a streamline. It can also be obtained from the *first law of thermodynamics* applied to a steady-flow system, as shown in Section 5–6.

Despite the highly restrictive approximations used in its derivation, the Bernoulli equation is commonly used in practice since a variety of practical fluid flow problems can be analyzed to reasonable accuracy with it. This is because many flows of practical engineering interest are steady (or at least steady in the mean), compressibility effects are relatively small, and net frictional forces are negligible in some regions of interest in the flow.

### Force Balance across Streamlines

It is left as an exercise to show that a force balance in the direction  $n$  normal to the streamline yields the following relation applicable *across* the streamlines for steady, incompressible flow:

$$\frac{P}{\rho} + \int \frac{V^2}{R} dn + gz = \text{constant} \quad (\text{across streamlines}) \quad (5-43)$$

where  $R$  is the local radius of curvature of the streamline. For flow along curved streamlines (Fig 5–27a), the pressure *decreases* towards the center of curvature, and fluid particles experience a corresponding centripetal force and centripetal acceleration due to this pressure gradient.

For flow along a straight line,  $R \rightarrow \infty$  and Eq. 5–43 reduces to  $P/\rho + gz = \text{constant}$  or  $P = -\rho gz + \text{constant}$ , which is an expression for the variation of hydrostatic pressure with vertical distance for a stationary fluid body. Therefore, the variation of pressure with elevation in steady, incompressible flow along a straight line in an inviscid region of flow is the same as that in the stationary fluid (Fig. 5–27b).

### Unsteady, Compressible Flow

Similarly, using both terms in the acceleration expression (Eq. 5–33), it can be shown that the Bernoulli equation for *unsteady, compressible flow* is

$$\text{Unsteady, compressible flow:} \quad \int \frac{dP}{\rho} + \int \frac{\partial V}{\partial t} ds + \frac{V^2}{2} + gz = \text{constant} \quad (5-44)$$

### Static, Dynamic, and Stagnation Pressures

The Bernoulli equation states that the sum of the flow, kinetic, and potential energies of a fluid particle along a streamline is constant. Therefore, the kinetic and potential energies of the fluid can be converted to flow energy (and vice versa) during flow, causing the pressure to change. This phenomenon can be made more visible by multiplying the Bernoulli equation by the density  $\rho$ ,

$$P + \rho \frac{V^2}{2} + \rho gz = \text{constant (along a streamline)} \quad (5-45)$$

Each term in this equation has pressure units, and thus each term represents some kind of pressure:

- $P$  is the **static pressure** (it does not incorporate any dynamic effects); it represents the actual thermodynamic pressure of the fluid. This is the same as the pressure used in thermodynamics and property tables.
- $\rho V^2/2$  is the **dynamic pressure**; it represents the pressure rise when the fluid in motion is brought to a stop isentropically.
- $\rho g z$  is the **hydrostatic pressure** term, which is not pressure in a real sense since its value depends on the reference level selected; it accounts for the elevation effects, i.e., fluid weight on pressure. (Be careful of the sign—unlike hydrostatic pressure  $\rho g h$  which *increases* with fluid depth  $h$ , the hydrostatic pressure term  $\rho g z$  *decreases* with fluid depth.)

The sum of the static, dynamic, and hydrostatic pressures is called the **total pressure**. Therefore, the Bernoulli equation states that *the total pressure along a streamline is constant*.

The sum of the static and dynamic pressures is called the **stagnation pressure**, and it is expressed as

$$P_{\text{stag}} = P + \rho \frac{V^2}{2} \quad (\text{kPa}) \quad (5-46)$$

The stagnation pressure represents the pressure at a point where the fluid is brought to a complete stop isentropically. The static, dynamic, and stagnation pressures are shown in Fig. 5–28. When static and stagnation pressures are measured at a specified location, the fluid velocity at that location is calculated from

$$V = \sqrt{\frac{2(P_{\text{stag}} - P)}{\rho}} \quad (5-47)$$

Equation 5–47 is useful in the measurement of flow velocity when a combination of a static pressure tap and a Pitot tube is used, as illustrated in Fig. 5–28. A **static pressure tap** is simply a small hole drilled into a wall such that the plane of the hole is parallel to the flow direction. It measures the static pressure. A **Pitot tube** is a small tube with its open end aligned *into* the flow so as to sense the full impact pressure of the flowing fluid. It measures the stagnation pressure. In situations in which the static and stagnation pressure of a flowing *liquid* are greater than atmospheric pressure, a vertical transparent tube called a **piezometer tube** (or simply a **piezometer**) can be attached to the pressure tap and to the Pitot tube, as sketched in Fig. 5–28. The liquid rises in the piezometer tube to a column height (*head*) that is proportional to the pressure being measured. If the pressures to be measured are below atmospheric, or if measuring pressures in *gases*, piezometer tubes do not work. However, the static pressure tap and Pitot tube can still be used, but they must be connected to some other kind of pressure measurement device such as a U-tube manometer or a pressure transducer (Chap. 3). Sometimes it is convenient to integrate static pressure holes on a Pitot probe. The result is a **Pitot-static probe** (also called a **Pitot-Darcy probe**), as shown in Fig. 5–29 and discussed in more detail in Chap. 8. A Pitot-static probe connected to a pressure transducer or a manometer measures the dynamic pressure (and thus infers the fluid velocity) directly.

When the static pressure is measured by drilling a hole in the tube wall, care must be exercised to ensure that the opening of the hole is flush with the wall surface, with no extrusions before or after the hole (Fig. 5–30). Otherwise the reading would incorporate some dynamic effects, and thus it would be in error.

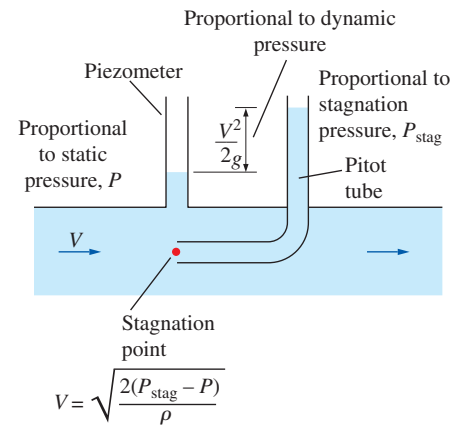


**FIGURE 5–28**

The static, dynamic, and stagnation pressures measured using piezometer tubes.

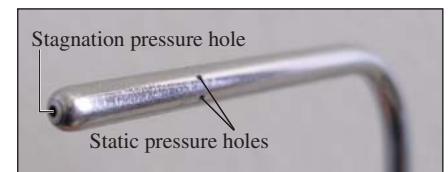


**FIGURE 5–29**

Close-up of a Pitot-static probe, showing the stagnation pressure hole and two of the five static circumferential pressure holes.

Photo by Po-Ya Abel Chuang. Used by permission.

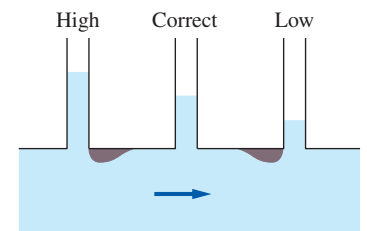
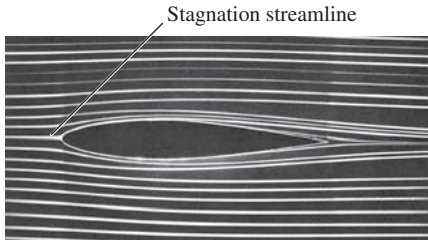


**FIGURE 5–30**

Careless drilling of the static pressure tap may result in an erroneous reading of the static pressure head.

**FIGURE 5-31**

Streaklines produced by colored fluid introduced upstream of an airfoil; since the flow is steady, the streaklines are the same as streamlines and pathlines. The stagnation streamline is marked.

*Courtesy ONERA. Photograph by Werlé.*

When a stationary body is immersed in a flowing stream, the fluid is brought to a stop at the nose of the body (the **stagnation point**). The flow streamline that extends from far upstream to the stagnation point is called the **stagnation streamline** (Fig. 5-31). For a two-dimensional flow in the  $xy$ -plane, the stagnation point is actually a *line* parallel to the  $z$ -axis, and the stagnation streamline is actually a *surface* that separates fluid that flows *over* the body from fluid that flows *under* the body. In an incompressible flow, the fluid decelerates nearly isentropically from its free-stream velocity to zero at the stagnation point, and the pressure at the stagnation point is thus the stagnation pressure.

## Limitations on the Use of the Bernoulli Equation

The Bernoulli equation (Eq. 5-41) is one of the most frequently used and *misused* equations in fluid mechanics. Its versatility, simplicity, and ease of use make it a very valuable tool for use in analysis, but the same attributes also make it very tempting to misuse. Therefore, it is important to understand the restrictions on its applicability and observe the limitations on its use, as explained here:

1. **Steady flow** The first limitation on the Bernoulli equation is that it is applicable to *steady flow*. Therefore, it should not be used during the transient start-up and shut-down periods, or during periods of change in the flow conditions. Note that there is an unsteady form of the Bernoulli equation (Eq. 5-44), discussion of which is beyond the scope of the present text (see Panton, 2005).
2. **Negligible viscous effects** Every flow involves some friction, no matter how small, and *frictional effects* may or may not be negligible. The situation is complicated even more by the amount of error that can be tolerated. In general, frictional effects are negligible for short flow sections with large cross sections, especially at low flow velocities. Frictional effects are usually significant in long and narrow flow passages, in the wake region downstream of an object, and in *diverging flow sections* such as diffusers because of the increased possibility of the fluid separating from the walls in such geometries. Frictional effects are also significant near solid surfaces, and thus the Bernoulli equation is usually applicable along a streamline in the core region of the flow, but not along a streamline close to the surface (Fig. 5-32).  
A component that disturbs the streamlined structure of flow and thus causes considerable mixing and backflow such as a sharp entrance of a tube or a partially closed valve in a flow section can make the Bernoulli equation inapplicable.
3. **No shaft work** The Bernoulli equation was derived from a force balance on a particle moving along a streamline. Therefore, the Bernoulli equation is not applicable in a flow section that involves a pump, turbine, fan, or any other machine or impeller since such devices disrupt the streamlines and carry out energy interactions with the fluid particles. When the flow section considered involves any of these devices, the energy equation should be used instead to account for the shaft work input or output. However, the Bernoulli equation can still be applied to a flow section prior to or past a machine (assuming, of course, that the other

restrictions on its use are satisfied). In such cases, the Bernoulli constant changes from upstream to downstream of the device.

4. **Incompressible flow** One of the approximations used in the derivation of the Bernoulli equation is that  $\rho = \text{constant}$  and thus the flow is incompressible. This condition is satisfied by liquids and also by gases at Mach numbers less than about 0.3 since compressibility effects and thus density variations of gases are negligible at such relatively low velocities. Note that there is a compressible form of the Bernoulli equation (Eqs. 5–40 and 5–44).
5. **Negligible heat transfer** The density of a gas is inversely proportional to temperature, and thus the Bernoulli equation should not be used for flow sections that involve significant temperature change such as heating or cooling sections.
6. **Flow along a streamline** Strictly speaking, the Bernoulli equation  $P/\rho + V^2/2 + gz = C$  is applicable along a streamline, and the value of the constant  $C$  is generally different for different streamlines. However, when a region of the flow is *irrotational* and there is no *vorticity* in the flow field, the value of the constant  $C$  remains the same for all streamlines, and the Bernoulli equation becomes applicable *across* streamlines as well (Fig. 5–33). Therefore, we do not need to be concerned about the streamlines when the flow is irrotational, and we can apply the Bernoulli equation between any two points in the irrotational region of the flow (Chap. 10).

We derived the Bernoulli equation by considering two-dimensional flow in the  $xz$ -plane for simplicity, but the equation is valid for general three-dimensional flow as well, as long as it is applied along the same streamline. We should always keep in mind the approximations used in the derivation of the Bernoulli equation and make sure that they are valid before applying it.

## Hydraulic Grade Line (HGL) and Energy Grade Line (EGL)

It is often convenient to represent the level of mechanical energy graphically using *heights* to facilitate visualization of the various terms of the Bernoulli equation. This is done by dividing each term of the Bernoulli equation by  $g$  to give

$$\frac{P}{\rho g} + \frac{V^2}{2g} + z = H = \text{constant} \quad (\text{along a streamline}) \quad (5-48)$$

Each term in this equation has the dimension of length and represents some kind of “head” of a flowing fluid as follows:

- $P/\rho g$  is the **pressure head**; it represents the height of a fluid column that produces the static pressure  $P$ .
- $V^2/2g$  is the **velocity head**; it represents the elevation needed for a fluid to reach the velocity  $V$  during frictionless free fall.
- $z$  is the **elevation head**; it represents the potential energy of the fluid.

Also,  $H$  is the **total head** for the flow. Therefore, the Bernoulli equation is expressed in terms of heads as: *The sum of the pressure, velocity, and elevation heads along a streamline is constant during steady flow when compressibility and frictional effects are negligible* (Fig. 5–34).


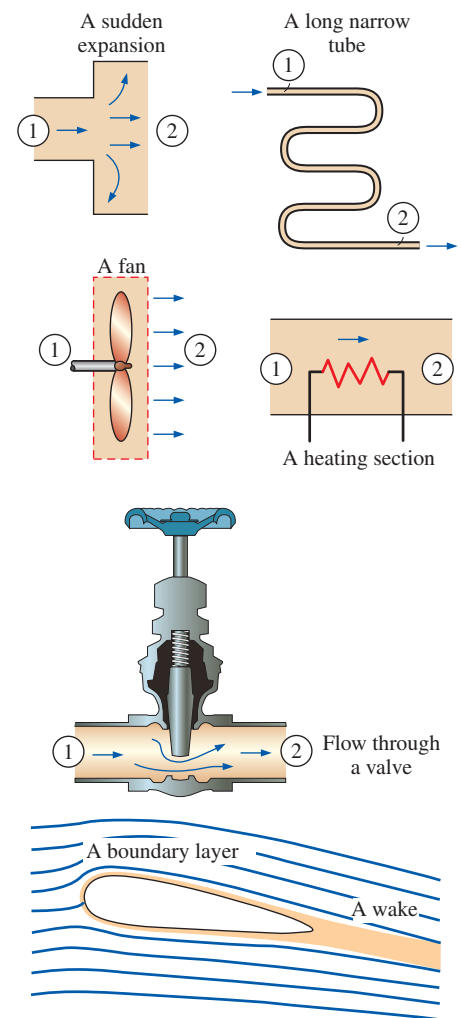


**FIGURE 5–32**


Frictional effects, heat transfer, and components that disturb the streamlined structure of flow make the Bernoulli equation invalid. It should *not* be used in any of the flows shown here.

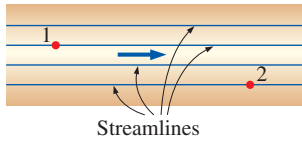

$$\frac{P_1}{\rho} + \frac{V_1^2}{2} + gz_1 = \frac{P_2}{\rho} + \frac{V_2^2}{2} + gz_2$$

**FIGURE 5-33**

When the flow is irrotational, the Bernoulli equation becomes applicable between any two points along the flow (not just on the same streamline).

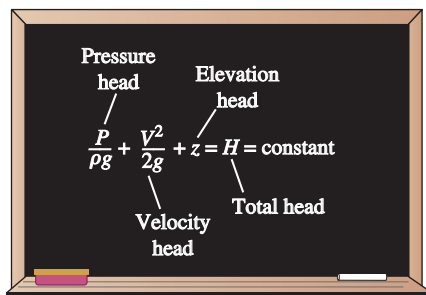
**FIGURE 5-34**

An alternative form of the Bernoulli equation is expressed in terms of heads as: *The sum of the pressure, velocity, and elevation heads is constant along a streamline.*

If a piezometer (which measures static pressure) is tapped into a pressurized pipe, as shown in Fig. 5–35, the liquid would rise to a height of  $P/\rho g$  above the pipe center. The *hydraulic grade line* (HGL) is obtained by doing this at several locations along the pipe and drawing a curve through the liquid levels in the piezometers. The vertical distance above the pipe center is a measure of pressure within the pipe. Similarly, if a Pitot tube (measures static + dynamic pressure) is tapped into a pipe, the liquid would rise to a height of  $P/\rho g + V^2/2g$  above the pipe center, or a distance of  $V^2/2g$  above the HGL. The *energy grade line* (EGL) is obtained by doing this at several locations along the pipe and drawing a curve through the liquid levels in the Pitot tubes.

Noting that the fluid also has elevation head  $z$  (unless the reference level is taken to be the centerline of the pipe), the HGL and EGL are defined as follows: The line that represents the sum of the static pressure and the elevation heads,  $P/\rho g + z$ , is called the **hydraulic grade line**. The line that represents the total head of the fluid,  $P/\rho g + V^2/2g + z$ , is called the **energy grade line**. The difference between the heights of EGL and HGL is equal to the dynamic head,  $V^2/2g$ . We note the following about the HGL and EGL:

- For *stationary bodies* such as reservoirs or lakes, the EGL and HGL coincide with the free surface of the liquid. The elevation of the free surface  $z$  in such cases represents both the EGL and the HGL since the velocity is zero and the static (gage) pressure is zero.
- The EGL is always a distance  $V^2/2g$  above the HGL. These two curves approach each other as the velocity decreases, and they diverge as the velocity increases. The height of the HGL decreases as the velocity increases, and vice versa.
- In an *idealized Bernoulli-type flow*, EGL is horizontal and its height remains constant. This would also be the case for HGL when the flow velocity is constant (Fig. 5–36).
- For *open-channel flow*, the HGL coincides with the free surface of the liquid, and the EGL is a distance  $V^2/2g$  above the free surface.
- At a *pipe exit*, the pressure head is zero (atmospheric pressure) and thus the HGL coincides with the pipe outlet (location 3 on Fig. 5–35).
- The *mechanical energy loss* due to frictional effects (conversion to thermal energy) causes the EGL and HGL to slope downward in the direction of flow. The slope is a measure of the head loss in the pipe.

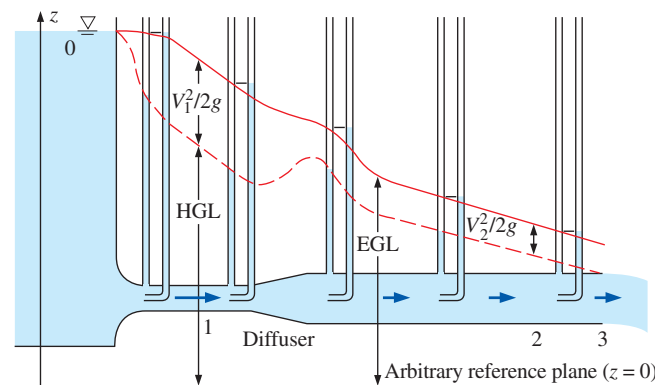**FIGURE 5-35**

The *hydraulic grade line* (HGL) and the *energy grade line* (EGL) for free discharge from a reservoir through a horizontal pipe with a diffuser.

(discussed in detail in Chap. 8). A component that generates significant frictional effects such as a valve causes a sudden drop in both EGL and HGL at that location.

- A *steep jump* occurs in EGL and HGL whenever mechanical energy is added to the fluid (by a pump, for example). Likewise, a *steep drop* occurs in EGL and HGL whenever mechanical energy is removed from the fluid (by a turbine, for example), as shown in Fig. 5–37.
- The gage pressure of a fluid is zero at locations where the HGL intersects the fluid. The pressure in a flow section that lies above the HGL is negative, and the pressure in a section that lies below the HGL is positive (Fig. 5–38). Therefore, an accurate drawing of a piping system overlaid with the HGL can be used to determine the regions where the gage pressure in the pipe is negative (below atmospheric pressure).

The last remark enables us to avoid situations in which the pressure drops below the vapor pressure of the liquid (which may cause *cavitation*, as discussed in Chap. 2). Proper consideration is necessary in the placement of a liquid pump to ensure that the suction side pressure does not fall too low, especially at elevated temperatures where vapor pressure is higher than it is at low temperatures.

Now we examine Fig. 5–35 more closely. At point 0 (at the liquid surface), EGL and HGL are even with the liquid surface since there is no flow there. HGL decreases rapidly as the liquid accelerates into the pipe; however, EGL decreases very slowly through the well-rounded pipe inlet. EGL declines continually along the flow direction due to friction and other irreversible losses in the flow. EGL cannot increase in the flow direction unless energy is supplied to the fluid. HGL can rise or fall in the flow direction, but can never exceed EGL. HGL rises in the diffuser section as the velocity decreases, and the static pressure recovers somewhat; the total pressure does *not* recover, however, and EGL decreases through the diffuser. The difference between EGL and HGL is  $V_1^2/2g$  at point 1, and  $V_2^2/2g$  at point 2. Since  $V_1 > V_2$ , the difference between the two grade lines is larger at point 1 than at point 2. The downward slope of both grade lines is larger for the smaller diameter section of pipe since the frictional head loss is greater. Finally, HGL decays to the liquid surface at the outlet since the pressure there is atmospheric. However, EGL is still higher than HGL by the amount  $V_3^2/2g$  since  $V_3 = V_2$  at the outlet.

## Applications of the Bernoulli Equation

So far, we have discussed the fundamental aspects of the Bernoulli equation. Now, we demonstrate its use in a wide range of applications through examples.

### EXAMPLE 5–5 Spraying Water into the Air

Water is flowing from a garden hose (Fig. 5–39). A child places his thumb to cover most of the hose outlet, causing a thin jet of high-speed water to emerge. The pressure in the hose just upstream of his thumb is 400 kPa. If the hose is held upward, what is the maximum height that the jet could achieve?

**SOLUTION** Water from a hose attached to the water main is sprayed into the air. The maximum height the water jet can rise is to be determined.

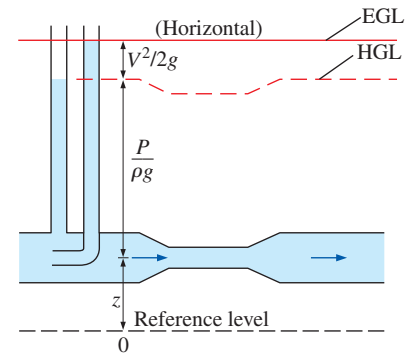


FIGURE 5–36

In an idealized Bernoulli-type flow, EGL is horizontal and its height remains constant. But this is not the case for HGL when the flow velocity varies along the flow.

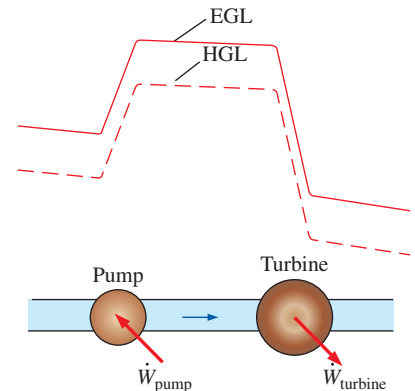


FIGURE 5–37

A *steep jump* occurs in EGL and HGL whenever mechanical energy is added to the fluid by a pump, and a *steep drop* occurs whenever mechanical energy is removed from the fluid by a turbine.

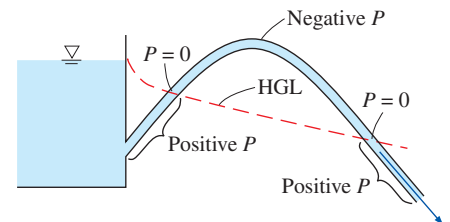
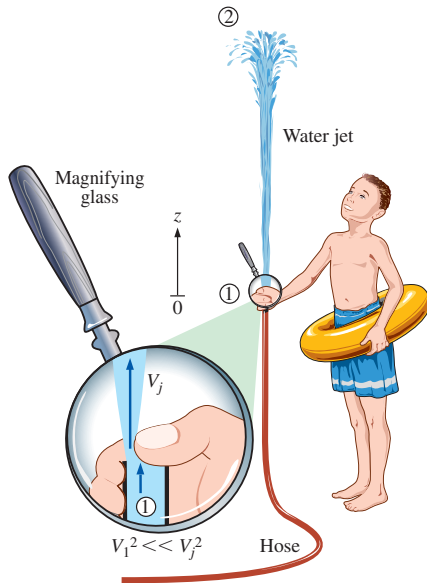


FIGURE 5–38

The gage pressure of a fluid is zero at locations where the HGL intersects the fluid, and the gage pressure is negative (vacuum) in a flow section that lies above the HGL.

**FIGURE 5-39**

Schematic for Example 5-5. Inset shows a magnified view of the hose outlet region.

**Assumptions** 1 The flow exiting into the air is steady, incompressible, and irrotational (so that the Bernoulli equation is applicable). 2 The surface tension effects are negligible. 3 The friction between the water and air is negligible. 4 The irreversibilities that occur at the outlet of the hose due to abrupt contraction are not taken into account.

**Properties** We take the density of water to be  $1000 \text{ kg/m}^3$ .

**Analysis** This problem involves the conversion of flow, kinetic, and potential energies to each other without involving any pumps, turbines, and wasteful components with large frictional losses, and thus it is suitable for the use of the Bernoulli equation. The water height will be maximum under the stated assumptions. The velocity inside the hose is relatively low ( $V_1^2 \ll V_j^2$ , and thus  $V_1 \approx 0$  compared to  $V_j$ ) and we take the elevation just below the hose outlet as the reference level ( $z_1 = 0$ ). At the top of the water trajectory  $V_2 = 0$ , and atmospheric pressure pertains. Then the Bernoulli equation along a streamline from 1 to 2 simplifies to


$$\frac{P_1}{\rho g} + \frac{V_1^2}{2g} + z_1 = \frac{P_2}{\rho g} + \frac{V_2^2}{2g} + z_2 \rightarrow \frac{P_1}{\rho g} = \frac{P_{\text{atm}}}{\rho g} + z_2$$

Solving for  $z_2$  and substituting,

$$z_2 = \frac{P_1 - P_{\text{atm}}}{\rho g} = \frac{P_{1, \text{gage}}}{\rho g} = \frac{400 \text{ kPa}}{(1000 \text{ kg/m}^3)(9.81 \text{ m/s}^2)} \left( \frac{1000 \text{ N/m}^2}{1 \text{ kPa}} \right) \left( \frac{1 \text{ kg} \cdot \text{m/s}^2}{1 \text{ N}} \right) = 40.8 \text{ m}$$

Therefore, the water jet can rise as high as 40.8 m into the sky in this case.

**Discussion** The result obtained by the Bernoulli equation represents the upper limit and should be interpreted accordingly. It tells us that the water cannot possibly rise more than 40.8 m, and, in all likelihood, the rise will be much less than 40.8 m due to irreversible losses that we neglected.

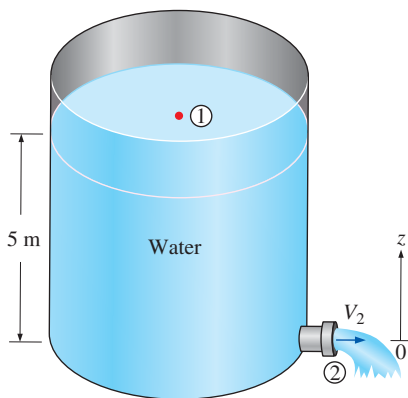**FIGURE 5-40**

Schematic for Example 5-6.

### EXAMPLE 5-6 Water Discharge from a Large Tank

A large tank open to the atmosphere is filled with water to a height of 5 m from the outlet tap (Fig. 5-40). A tap near the bottom of the tank is now opened, and water flows out from the smooth and rounded outlet. Determine the maximum water velocity at the outlet.

**SOLUTION** A tap near the bottom of a tank is opened. The maximum exit velocity of water from the tank is to be determined.

**Assumptions** 1 The flow is incompressible and irrotational (except very close to the walls). 2 The water drains slowly enough that the flow can be approximated as steady (actually quasi-steady when the tank begins to drain). 3 Irreversible losses in the tap region are neglected.

**Analysis** This problem involves the conversion of flow, kinetic, and potential energies to each other without involving any pumps, turbines, and wasteful components with large frictional losses, and thus it is suitable for the use of the Bernoulli equation. We take point 1 to be at the free surface of water so that  $P_1 = P_{\text{atm}}$  (open to the atmosphere),  $V_1^2 \ll V_2^2$  and thus  $V_1 \approx 0$  compared to  $V_2$  (the tank is very large relative to the outlet),  $z_1 = 5 \text{ m}$  and  $z_2 = 0$  (we take the reference level at the center of the outlet). Also,  $P_2 = P_{\text{atm}}$  (water discharges into the atmosphere). For flow along a streamline from 1 to 2, the Bernoulli equation simplifies to

$$\frac{P_1}{\rho g} + \frac{V_1^2}{2g} + z_1 = \frac{P_2}{\rho g} + \frac{V_2^2}{2g} + z_2 \rightarrow z_1 = \frac{V_2^2}{2g}$$

Solving for  $V_2$  and substituting,

$$V_2 = \sqrt{2gz_1} = \sqrt{2(9.81 \text{ m/s}^2)(5 \text{ m})} = \mathbf{9.9 \text{ m/s}}$$

The relation  $V = \sqrt{2gz}$  is called the **Torricelli equation**.

Therefore, the water leaves the tank with an initial maximum velocity of 9.9 m/s. This is the same velocity that would manifest if a solid were dropped a distance of 5 m in the absence of air friction drag. (What would the velocity be if the tap were at the bottom of the tank instead of on the side?)

**Discussion** If the orifice were sharp-edged instead of rounded, then the flow would be disturbed, and the average exit velocity would be less than 9.9 m/s. Care must be exercised when attempting to apply the Bernoulli equation to situations where abrupt expansions or contractions occur since the friction and flow disturbance in such cases may not be negligible. From conservation of mass,  $(V_1/V_2)^2 = (D_2/D_1)^4$ . So, for example, if  $D_2/D_1 = 0.1$ , then  $(V_1/V_2)^2 = 0.0001$ , and our approximation that  $V_1^2 \ll V_2^2$  is justified.

### EXAMPLE 5-7 Siphoning Out Gasoline from a Fuel Tank

During a trip to the beach ( $P_{\text{atm}} = 1 \text{ atm} = 101.3 \text{ kPa}$ ), a car runs out of gasoline, and it becomes necessary to siphon gas out of the car of a Good Samaritan (Fig. 5-41). The siphon is a small-diameter hose, and to start the siphon it is necessary to insert one siphon end in the full gas tank, fill the hose with gasoline via suction, and then place the other end in a gas can below the level of the gas tank. The difference in pressure between point 1 (at the free surface of the gasoline in the tank) and point 2 (at the outlet of the tube) causes the liquid to flow from the higher to the lower elevation. Point 2 is located 0.75 m below point 1 in this case, and point 3 is located 2 m above point 1. The siphon diameter is 5 mm, and frictional losses in the siphon are to be disregarded. Determine (a) the minimum time to withdraw 4 L of gasoline from the tank to the can and (b) the pressure at point 3. The density of gasoline is  $750 \text{ kg/m}^3$ .

**SOLUTION** Gasoline is to be siphoned from a tank. The minimum time it takes to withdraw 4 L of gasoline and the pressure at the highest point in the system are to be determined.

**Assumptions** **1** The flow is steady and incompressible. **2** Even though the Bernoulli equation is not valid through the pipe because of frictional losses, we employ the Bernoulli equation anyway in order to obtain a *best-case estimate*. **3** The change in the gasoline surface level inside the tank is negligible compared to elevations  $z_1$  and  $z_2$  during the siphoning period.

**Properties** The density of gasoline is given to be  $750 \text{ kg/m}^3$ .

**Analysis** (a) We take point 1 to be at the free surface of gasoline in the tank so that  $P_1 = P_{\text{atm}}$  (open to the atmosphere),  $V_1 \cong 0$  (the tank is large relative to the tube diameter), and  $z_2 = 0$  (point 2 is taken as the reference level). Also,  $P_2 = P_{\text{atm}}$  (gasoline discharges into the atmosphere). Then the Bernoulli equation simplifies to

$$\frac{P_1}{\rho g} + \frac{V_1^2}{2g} + z_1 = \frac{P_2}{\rho g} + \frac{V_2^2}{2g} + z_2 \rightarrow z_1 = \frac{V_2^2}{2g}$$

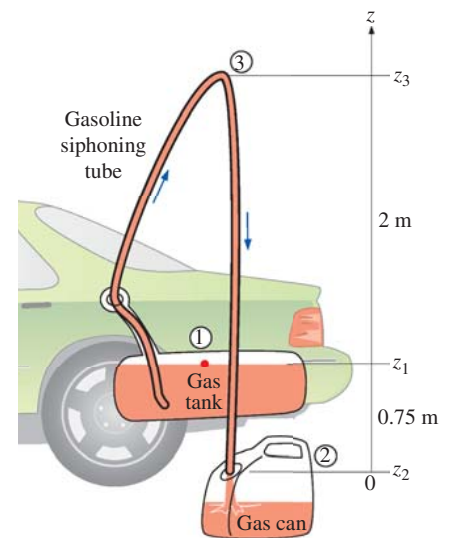


**FIGURE 5-41**  
Schematic for Example 5-7.

Solving for  $V_2$  and substituting,

$$V_2 = \sqrt{2gz_1} = \sqrt{2(9.81 \text{ m/s}^2)(0.75 \text{ m})} = 3.84 \text{ m/s}$$

The cross-sectional area of the tube and the flow rate of gasoline are

$$A = \pi D^2/4 = \pi(5 \times 10^{-3} \text{ m})^2/4 = 1.96 \times 10^{-5} \text{ m}^2$$

$$\dot{V} = V_2 A = (3.84 \text{ m/s})(1.96 \times 10^{-5} \text{ m}^2) = 7.53 \times 10^{-5} \text{ m}^3/\text{s} = 0.0753 \text{ L/s}$$

Then the time needed to siphon 4 L of gasoline becomes

$$\Delta t = \frac{V}{\dot{V}} = \frac{4 \text{ L}}{0.0753 \text{ L/s}} = \mathbf{53.1 \text{ s}}$$

(b) The pressure at point 3 is determined by writing the Bernoulli equation along a streamline between points 3 and 2. Noting that  $V_2 = V_3$  (conservation of mass),  $z_2 = 0$ , and  $P_2 = P_{\text{atm}}$ ,

$$\frac{P_2}{\rho g} + \frac{V_2^2}{2g} + z_2 = \frac{P_3}{\rho g} + \frac{V_3^2}{2g} + z_3 \rightarrow \frac{P_{\text{atm}}}{\rho g} = \frac{P_3}{\rho g} + z_3$$

Solving for  $P_3$  and substituting,

$$\begin{aligned} P_3 &= P_{\text{atm}} - \rho g z_3 \\ &= 101.3 \text{ kPa} - (750 \text{ kg/m}^3)(9.81 \text{ m/s}^2)(2.75 \text{ m}) \left( \frac{1 \text{ N}}{1 \text{ kg} \cdot \text{m/s}^2} \right) \left( \frac{1 \text{ kPa}}{1000 \text{ N/m}^2} \right) \\ &= \mathbf{81.1 \text{ kPa}} \end{aligned}$$

**Discussion** The siphoning time is determined by neglecting frictional effects, and thus this is the *minimum time* required. In reality, the time will be longer than 53.1 s because of friction between the gasoline and the tube surface, along with other irreversible losses, as discussed in Chap. 8. Also, the pressure at point 3 is below the atmospheric pressure. If the elevation difference between points 1 and 3 is too high, the pressure at point 3 may drop below the vapor pressure of gasoline at the gasoline temperature, and some gasoline may evaporate (cavitate). The vapor then may form a pocket at the top and halt the flow of gasoline.

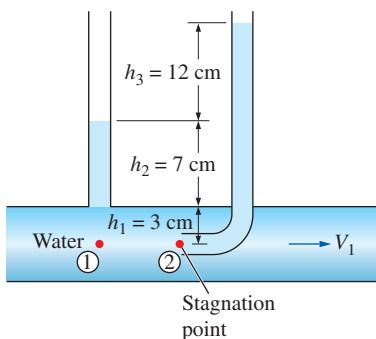


FIGURE 5-42

Schematic for Example 5-8.

### EXAMPLE 5-8 Velocity Measurement by a Pitot Tube

A piezometer and a Pitot tube are tapped into a horizontal water pipe, as shown in Fig. 5-42, to measure static and stagnation (static + dynamic) pressures. For the indicated water column heights, determine the velocity at the center of the pipe.

**SOLUTION** The static and stagnation pressures in a horizontal pipe are measured. The velocity at the center of the pipe is to be determined.

**Assumptions** 1 The flow is steady and incompressible. 2 Points 1 and 2 are close enough together that the irreversible energy loss between these two points is negligible, and thus we can use the Bernoulli equation.

**Analysis** We take points 1 and 2 along the streamline at the centerline of the pipe, with point 1 directly under the piezometer and point 2 at the tip of

the Pitot tube. This is a steady flow with straight and parallel streamlines, and the gage pressures at points 1 and 2 can be expressed as

$$P_1 = \rho g(h_1 + h_2)$$

$$P_2 = \rho g(h_1 + h_2 + h_3)$$

Noting that  $z_1 = z_2$ , and point 2 is a stagnation point and thus  $V_2 = 0$ , the application of the Bernoulli equation between points 1 and 2 gives

$$\frac{P_1}{\rho g} + \frac{V_1^2}{2g} + z_1 = \frac{P_2}{\rho g} + \frac{V_2^2}{2g} + z_2 \rightarrow \frac{V_1^2}{2g} = \frac{P_2 - P_1}{\rho g}$$

Substituting the  $P_1$  and  $P_2$  expressions gives

$$\frac{V_1^2}{2g} = \frac{P_2 - P_1}{\rho g} = \frac{\rho g(h_1 + h_2 + h_3) - \rho g(h_1 + h_2)}{\rho g} = h_3$$

Solving for  $V_1$  and substituting,

$$V_1 = \sqrt{2gh_3} = \sqrt{2(9.81 \text{ m/s}^2)(0.12 \text{ m})} = 1.53 \text{ m/s}$$

**Discussion** Note that to determine the flow velocity, all we need is to measure the height of the excess fluid column in the Pitot tube compared to that in the piezometer tube.

### EXAMPLE 5–9 The Rise of the Ocean Due to a Hurricane

A hurricane is a tropical storm formed over the ocean by low atmospheric pressures. As a hurricane approaches land, inordinate ocean swells (very high tides) accompany the hurricane. A Class-5 hurricane features winds in excess of 155 mph, although the wind velocity at the center “eye” is very low.

Figure 5–43 depicts a hurricane hovering over the ocean swell below. The atmospheric pressure 200 mi from the eye is 30.0 in Hg (at point 1, generally normal for the ocean) and the winds are calm. The atmospheric pressure at the eye of the storm is 22.0 in Hg. Estimate the ocean swell at (a) the eye of the hurricane at point 3 and (b) point 2, where the wind velocity is 155 mph. Take the density of seawater and mercury to be 64 lbm/ft<sup>3</sup> and 848 lbm/ft<sup>3</sup>, respectively, and the density of air at normal sea-level temperature and pressure to be 0.076 lbm/ft<sup>3</sup>.

**SOLUTION** A hurricane is moving over the ocean. The amount of ocean swell at the eye and at active regions of the hurricane are to be determined.

**Assumptions** 1 The airflow within the hurricane is steady, incompressible, and irrotational (so that the Bernoulli equation is applicable). (This is certainly a very questionable assumption for a highly turbulent flow, but it is justified in the discussion.) 2 The effect of water sucked into the air is negligible.

**Properties** The densities of air at normal conditions, seawater, and mercury are given to be 0.076 lbm/ft<sup>3</sup>, 64.0 lbm/ft<sup>3</sup>, and 848 lbm/ft<sup>3</sup>, respectively.

**Analysis** (a) Reduced atmospheric pressure over the water causes the water to rise. Thus, decreased pressure at point 2 relative to point 1 causes the ocean water to rise at point 2. The same is true at point 3, where the storm air

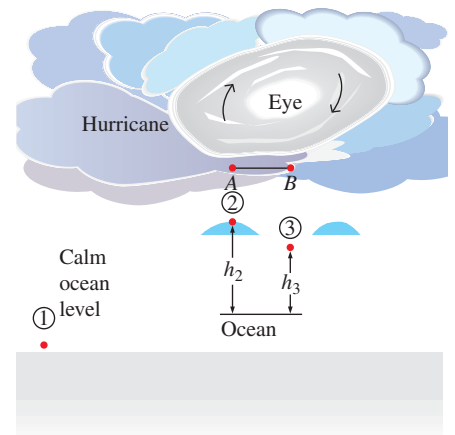


FIGURE 5–43

Schematic for Example 5–9. The vertical scale is greatly exaggerated.

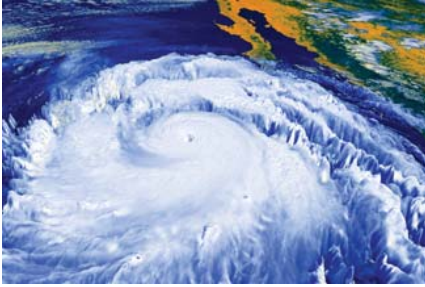


FIGURE 5–44

The eye of hurricane Linda (1997 in the Pacific Ocean near Baja California) is clearly visible in this satellite photo.

© Brand X Pictures/PunchStock RF

velocity is negligible. The pressure difference given in terms of the mercury column height is expressed in terms of the seawater column height by

$$\Delta P = (\rho g h)_{\text{Hg}} = (\rho g h)_{\text{sw}} \rightarrow h_{\text{sw}} = \frac{\rho_{\text{Hg}}}{\rho_{\text{sw}}} h_{\text{Hg}}$$

Then the pressure difference between points 1 and 3 in terms of the seawater column height becomes

$$h_3 = \frac{\rho_{\text{Hg}}}{\rho_{\text{sw}}} h_{\text{Hg}} = \left( \frac{848 \text{ lbm/ft}^3}{64.0 \text{ lbm/ft}^3} \right) [(30 - 22) \text{ in Hg}] \left( \frac{1 \text{ ft}}{12 \text{ in}} \right) = \mathbf{8.83 \text{ ft}}$$

which is equivalent to the storm surge at the *eye of the hurricane* (Fig. 5–44) since the wind velocity there is negligible and there are no dynamic effects.

(b) To determine the additional rise of ocean water at point 2 due to the high winds at that point, we write the Bernoulli equation between points *A* and *B*, which are on top of points 2 and 3, respectively. Noting that  $V_B \cong 0$  (the eye region of the hurricane is relatively calm) and  $z_A = z_B$  (both points are on the same horizontal line), the Bernoulli equation simplifies to

$$\frac{P_A}{\rho g} + \frac{V_A^2}{2g} + z_A = \frac{P_B}{\rho g} + \frac{V_B^2}{2g} + z_B \rightarrow \frac{P_B - P_A}{\rho g} = \frac{V_A^2}{2g}$$

Substituting,

$$\frac{P_B - P_A}{\rho g} = \frac{V_A^2}{2g} = \frac{(155 \text{ mph})^2}{2(32.2 \text{ ft/s}^2)} \left( \frac{1.4667 \text{ ft/s}}{1 \text{ mph}} \right)^2 = 803 \text{ ft}$$

where  $\rho$  is the density of air in the hurricane. Noting that the density of an ideal gas at constant temperature is proportional to absolute pressure and the density of air at the normal atmospheric pressure of 14.7 psia  $\cong 30$  in Hg is 0.076 lbm/ft<sup>3</sup>, the density of air in the hurricane is

$$\rho_{\text{air}} = \frac{P_{\text{air}}}{P_{\text{atm air}}} \rho_{\text{atm air}} = \left( \frac{22 \text{ in Hg}}{30 \text{ in Hg}} \right) (0.076 \text{ lbm/ft}^3) = 0.056 \text{ lbm/ft}^3$$

Using the relation developed above in part (a), the seawater column height equivalent to 803 ft of air column height is determined to be

$$h_{\text{dynamic}} = \frac{\rho_{\text{air}}}{\rho_{\text{sw}}} h_{\text{air}} = \left( \frac{0.056 \text{ lbm/ft}^3}{64 \text{ lbm/ft}^3} \right) (803 \text{ ft}) = 0.70 \text{ ft}$$

Therefore, the pressure at point 2 is 0.70 ft seawater column lower than the pressure at point 3 due to the high wind velocities, causing the ocean to rise an additional 0.70 ft. Then the total storm surge at point 2 becomes

$$h_2 = h_3 + h_{\text{dynamic}} = 8.83 + 0.70 = \mathbf{9.53 \text{ ft}}$$

**Discussion** This problem involves highly turbulent flow and the intense breakdown of the streamlines, and thus the applicability of the Bernoulli equation in part (b) is questionable. Furthermore, the flow in the eye of the storm is *not* irrotational, and the Bernoulli equation constant changes across streamlines (see Chap. 10). The Bernoulli analysis can be thought of as the

limiting, ideal case, and shows that the rise of seawater due to high-velocity winds cannot be more than 0.70 ft.

The wind power of hurricanes is not the only cause of damage to coastal areas. Ocean flooding and erosion from excessive tides is just as serious, as are high waves generated by the storm turbulence and energy.

### EXAMPLE 5–10 Bernoulli Equation for Compressible Flow

Derive the Bernoulli equation when the compressibility effects are not negligible for an ideal gas undergoing (a) an isothermal process and (b) an isentropic process.

**SOLUTION** The Bernoulli equation for compressible flow is to be obtained for an ideal gas for isothermal and isentropic processes.

**Assumptions** 1 The flow is steady and frictional effects are negligible. 2 The fluid is an ideal gas, so the relation  $P = \rho RT$  is applicable. 3 The specific heats are constant so that  $P/\rho^k = \text{constant}$  during an isentropic process.

**Analysis** (a) When the compressibility effects are significant and the flow cannot be assumed to be incompressible, the Bernoulli equation is given by Eq. 5–40 as

$$\int \frac{dP}{\rho} + \frac{V^2}{2} + gz = \text{constant} \quad (\text{along a streamline}) \quad (1)$$

The compressibility effects can be properly accounted for by performing the integration  $\int dP/\rho$  in Eq. 1. But this requires a relation between  $P$  and  $\rho$  for the process. For the *isothermal* expansion or compression of an ideal gas, the integral in Eq. 1 is performed easily by noting that  $T = \text{constant}$  and substituting  $\rho = P/RT$ ,

$$\int \frac{dP}{\rho} = \int \frac{dP}{P/RT} = RT \ln P$$

Substituting into Eq. 1 gives the desired relation,

$$\text{Isothermal process:} \quad RT \ln P + \frac{V^2}{2} + gz = \text{constant} \quad (2)$$

(b) A more practical case of compressible flow is the *isentropic flow of ideal gases* through equipment that involves high-speed fluid flow such as nozzles, diffusers, and the passages between turbine blades (Fig. 5–45). Isentropic (i.e., reversible and adiabatic) flow is closely approximated by these devices, and it is characterized by the relation  $P/\rho^k = C = \text{constant}$ , where  $k$  is the specific heat ratio of the gas. Solving for  $\rho$  from  $P/\rho^k = C$  gives  $\rho = C^{-1/k} P^{1/k}$ . Performing the integration,

$$\int \frac{dP}{\rho} = \int C^{1/k} P^{-1/k} dP = C^{1/k} \frac{P^{-1/k+1}}{-1/k+1} = \frac{P^{1/k}}{\rho} \frac{P^{-1/k+1}}{-1/k+1} = \left( \frac{k}{k-1} \right) \frac{P}{\rho} \quad (3)$$

Substituting, the Bernoulli equation for steady, isentropic, compressible flow of an ideal gas becomes

$$\text{Isentropic flow:} \quad \left( \frac{k}{k-1} \right) \frac{P}{\rho} + \frac{V^2}{2} + gz = \text{constant} \quad (4a)$$



FIGURE 5–45

Compressible flow of a gas through turbine blades is often modeled as isentropic, and the compressible form of the Bernoulli equation is a reasonable approximation.

Royalty-Free/CORBIS

or

$$\left(\frac{k}{k-1}\right)\frac{P_1}{\rho_1} + \frac{V_1^2}{2} + gz_1 = \left(\frac{k}{k-1}\right)\frac{P_2}{\rho_2} + \frac{V_2^2}{2} + gz_2 \quad (4b)$$

A common practical situation involves the acceleration of a gas from rest (stagnation conditions at state 1) with negligible change in elevation. In that case we have  $z_1 = z_2$  and  $V_1 = 0$ . Noting that  $\rho = P/RT$  for ideal gases,  $P/\rho^k = \text{constant}$  for isentropic flow, and the Mach number is defined as  $\text{Ma} = V/c$  where  $c = \sqrt{kRT}$  is the local speed of sound for ideal gases, Eq. 4b simplifies to

$$\frac{P_1}{P_2} = \left[1 + \left(\frac{k-1}{2}\right)\text{Ma}_2^2\right]^{k/(k-1)} \quad (4c)$$

where state 1 is the stagnation state and state 2 is any state along the flow.

**Discussion** It can be shown that the results obtained using the compressible and incompressible equations deviate no more than 2 percent when the Mach number is less than 0.3. Therefore, the flow of an ideal gas can be considered to be incompressible when  $\text{Ma} \leq 0.3$ . For atmospheric air at normal conditions, this corresponds to a flow speed of about 100 m/s or 360 km/h.

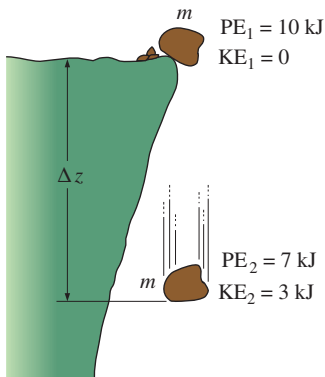


**FIGURE 5-46**

Energy cannot be created or destroyed during a process; it can only change forms.

## 5-5 ■ GENERAL ENERGY EQUATION

One of the most fundamental laws in nature is the **first law of thermodynamics**, also known as the **conservation of energy principle**, which provides a sound basis for studying the relationships among the various forms of energy and energy interactions. It states that *energy can be neither created nor destroyed during a process; it can only change forms*. Therefore, every bit of energy must be accounted for during a process.

A rock falling off a cliff, for example, picks up speed as a result of its potential energy being converted to kinetic energy (Fig. 5-46). Experimental data show that the decrease in potential energy equals the increase in kinetic energy when the air resistance is negligible, thus confirming the conservation of energy principle. The conservation of energy principle also forms the backbone of the diet industry: a person who has a greater energy input (food) than energy output (exercise) will gain weight (store energy in the form of fat), and a person who has a smaller energy input than output will lose weight. The change in the energy content of a system is equal to the difference between the energy input and the energy output, and the conservation of energy principle for any system can be expressed simply as  $E_{\text{in}} - E_{\text{out}} = \Delta E$ .

The transfer of any quantity (such as mass, momentum, and energy) is recognized *at the boundary* as the quantity *crosses the boundary*. A quantity is said to *enter* a system (or control volume) if it crosses the boundary from the outside to the inside, and to *exit* the system if it moves in the reverse direction. A quantity that moves from one location to another within a system is not considered as a transferred quantity in an analysis since it does not enter or exit the system. Therefore, it is important to specify the system and thus clearly identify its boundaries before an engineering analysis is performed.

The energy content of a fixed quantity of mass (a closed system) can be changed by two mechanisms: *heat transfer*  $Q$  and *work transfer*  $W$ . Then the conservation of energy for a fixed quantity of mass can be expressed in rate form as (Fig. 5–47)

$$\dot{Q}_{\text{net in}} + \dot{W}_{\text{net in}} = \frac{dE_{\text{sys}}}{dt} \quad \text{or} \quad \dot{Q}_{\text{net in}} + \dot{W}_{\text{net in}} = \frac{d}{dt} \int_{\text{sys}} \rho e dV \quad (5-49)$$

where the overdot stands for time rate of change, and  $\dot{Q}_{\text{net in}} = \dot{Q}_{\text{in}} - \dot{Q}_{\text{out}}$  is the net rate of heat transfer to the system (negative, if from the system),  $\dot{W}_{\text{net in}} = \dot{W}_{\text{in}} - \dot{W}_{\text{out}}$  is the net power input to the system in all forms (negative, if power output), and  $dE_{\text{sys}}/dt$  is the rate of change of the total energy content of the system. For simple compressible systems, total energy consists of internal, kinetic, and potential energies, and it is expressed on a unit-mass basis as (see Chap. 2)

$$e = u + ke + pe = u + \frac{V^2}{2} + gz \quad (5-50)$$

Note that total energy is a property, and its value does not change unless the state of the system changes.

## Energy Transfer by Heat, $Q$

In daily life, we frequently refer to the sensible and latent forms of internal energy as *heat*, and talk about the heat content of bodies. Scientifically the more correct name for these forms of energy is *thermal energy*. For single-phase substances, a change in the thermal energy of a given mass results in a change in temperature, and thus temperature is a good representative of thermal energy. Thermal energy tends to move naturally in the direction of decreasing temperature. The transfer of energy from one system to another as a result of a temperature difference is called **heat transfer**. The warming up of a canned drink in a warmer room, for example, is due to heat transfer (Fig. 5–48). The time rate of heat transfer is called **heat transfer rate** and is denoted by  $\dot{Q}$ .

The direction of heat transfer is always from the higher-temperature body to the lower-temperature one. Once temperature equality is established, heat transfer stops. There cannot be any net heat transfer between two systems (or a system and its surroundings) that are at the same temperature.

A process during which there is no heat transfer is called an **adiabatic process**. There are two ways a process can be adiabatic: Either the system is well insulated so that only a negligible amount of heat can pass through the system boundary, or both the system and the surroundings are at the same temperature and therefore there is no driving force (temperature difference) for net heat transfer. An adiabatic process should not be confused with an isothermal process. Even though there is no net heat transfer during an adiabatic process, the energy content and thus the temperature of a system can still be changed by other means such as work transfer.

## Energy Transfer by Work, $W$

An energy interaction is **work** if it is associated with a force acting through a distance. A rising piston, a rotating shaft, and an electric wire crossing the system boundary are all associated with work interactions. The time rate of doing work is called **power** and is denoted by  $\dot{W}$ . Car engines and hydraulic,

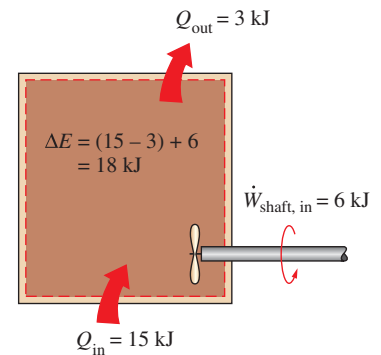


FIGURE 5–47

The energy change of a system during a process is equal to the *net* work and heat transfer between the system and its surroundings.

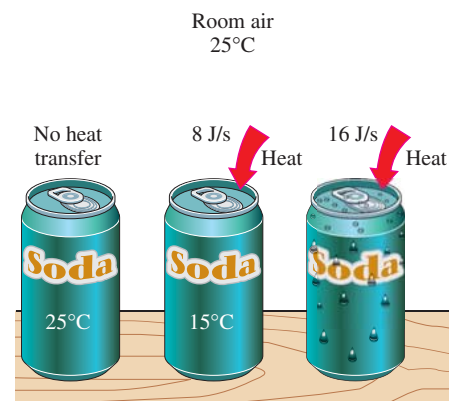


FIGURE 5–48

Temperature difference is the driving force for heat transfer. The larger the temperature difference, the higher is the rate of heat transfer.

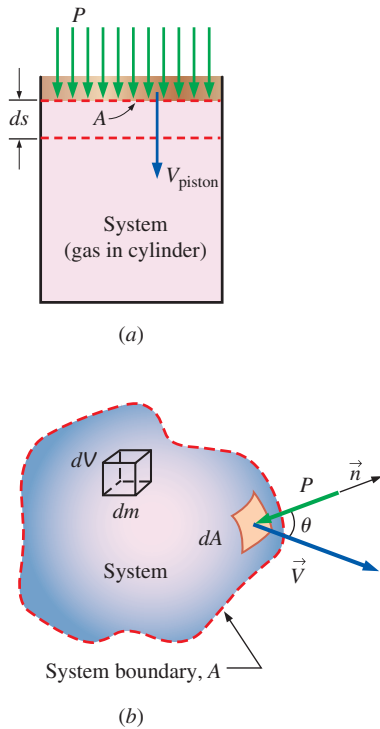


FIGURE 5-49

The pressure force acting on (a) the moving boundary of a system in a piston-cylinder device, and (b) the differential surface area of a system of arbitrary shape.

steam, and gas turbines produce power ( $\dot{W}_{\text{shaft, in}} < 0$ ); compressors, pumps, fans, and mixers consume power ( $\dot{W}_{\text{shaft, in}} > 0$ ).

Work-consuming devices transfer energy to the fluid, and thus increase the energy of the fluid. A fan in a room, for example, mobilizes the air and increases its kinetic energy. The electric energy a fan consumes is first converted to mechanical energy by its motor that forces the shaft of the blades to rotate. This mechanical energy is then transferred to the air, as evidenced by the increase in air velocity. This energy transfer to air has nothing to do with a temperature difference, so it cannot be heat transfer. Therefore, it must be work. Air discharged by the fan eventually comes to a stop and thus loses its mechanical energy as a result of friction between air particles of different velocities. But this is not a “loss” in the real sense; it is simply the conversion of mechanical energy to an equivalent amount of thermal energy (which is of limited value, and thus the term *loss*) in accordance with the conservation of energy principle. If a fan runs a long time in a sealed room, we can sense the buildup of this thermal energy by a rise in air temperature.

A system may involve numerous forms of work, and the total work can be expressed as

$$W_{\text{total}} = W_{\text{shaft}} + W_{\text{pressure}} + W_{\text{viscous}} + W_{\text{other}} \quad (5-51)$$

where  $W_{\text{shaft}}$  is the work transmitted by a rotating shaft,  $W_{\text{pressure}}$  is the work done by the pressure forces on the control surface,  $W_{\text{viscous}}$  is the work done by the normal and shear components of viscous forces on the control surface, and  $W_{\text{other}}$  is the work done by other forces such as electric, magnetic, and surface tension, which are insignificant for simple compressible systems and are not considered in this text. We do not consider  $W_{\text{viscous}}$  either, since moving walls (such as fan blades or turbine runners) are usually *inside* the control volume and are not part of the control surface. But it should be kept in mind that the work done by shear forces as the blades shear through the fluid may need to be considered in a refined analysis of turbomachinery.

### Shaft Work

Many flow systems involve a machine such as a pump, a turbine, a fan, or a compressor whose shaft protrudes through the control surface, and the work transfer associated with all such devices is simply referred to as *shaft work*  $W_{\text{shaft}}$ . The power transmitted via a rotating shaft is proportional to the shaft torque  $T_{\text{shaft}}$  and is expressed as

$$\dot{W}_{\text{shaft}} = \omega T_{\text{shaft}} = 2\pi \dot{n} T_{\text{shaft}} \quad (5-52)$$

where  $\omega$  is the angular speed of the shaft in rad/s and  $\dot{n}$  is the number of revolutions of the shaft per unit time, often expressed in rev/min or rpm.

### Work Done by Pressure Forces

Consider a gas being compressed in the piston-cylinder device shown in Fig. 5-49a. When the piston moves down a differential distance  $ds$  under the influence of the pressure force  $PA$ , where  $A$  is the cross-sectional area of the piston, the boundary work done *on* the system is  $\delta W_{\text{boundary}} = PA ds$ . Dividing both sides of this relation by the differential time interval  $dt$  gives the time rate of boundary work (i.e., *power*),

$$\delta \dot{W}_{\text{pressure}} = \delta \dot{W}_{\text{boundary}} = PA V_{\text{piston}}$$

where  $V_{\text{piston}} = ds/dt$  is the piston speed, which is the speed of the moving boundary at the piston face.

Now consider a material chunk of fluid (a system) of arbitrary shape that moves with the flow and is free to deform under the influence of pressure, as shown in Fig. 5–49b. Pressure always acts inward and normal to the surface, and the pressure force acting on a differential area  $dA$  is  $PdA$ . Again noting that work is force times distance and distance traveled per unit time is velocity, the time rate at which work is done by pressure forces on this differential part of the system is

$$\delta \dot{W}_{\text{pressure}} = -P dA V_n = -P dA (\vec{V} \cdot \vec{n}) \quad (5-53)$$

since the normal component of velocity through the differential area  $dA$  is  $V_n = V \cos \theta = \vec{V} \cdot \vec{n}$ . Note that  $\vec{n}$  is the outward normal of  $dA$ , and thus the quantity  $\vec{V} \cdot \vec{n}$  is positive for expansion and negative for compression. The negative sign in Eq. 5–53 ensures that work done by pressure forces is positive when it is done *on* the system, and negative when it is done *by* the system, which agrees with our sign convention. The total rate of work done by pressure forces is obtained by integrating  $\delta \dot{W}_{\text{pressure}}$  over the entire surface  $A$ ,

$$\dot{W}_{\text{pressure, net in}} = - \int_A P (\vec{V} \cdot \vec{n}) dA = - \int_A \frac{P}{\rho} \rho (\vec{V} \cdot \vec{n}) dA \quad (5-54)$$

In light of these discussions, the net power transfer can be expressed as

$$\dot{W}_{\text{net in}} = \dot{W}_{\text{shaft, net in}} + \dot{W}_{\text{pressure, net in}} = \dot{W}_{\text{shaft, net in}} - \int_A P (\vec{V} \cdot \vec{n}) dA \quad (5-55)$$

Then the rate form of the conservation of energy relation for a closed system becomes

$$\dot{Q}_{\text{net in}} + \dot{W}_{\text{shaft, net in}} + \dot{W}_{\text{pressure, net in}} = \frac{dE_{\text{sys}}}{dt} \quad (5-56)$$

To obtain a relation for the conservation of energy for a *control volume*, we apply the Reynolds transport theorem by replacing  $B$  with total energy  $E$ , and  $b$  with total energy per unit mass  $e$ , which is  $e = u + \text{ke} + \text{pe} = u + V^2/2 + gz$  (Fig. 5–50). This yields

$$\frac{dE_{\text{sys}}}{dt} = \frac{d}{dt} \int_{\text{CV}} e \rho dV + \int_{\text{CS}} e \rho (\vec{V}_r \cdot \vec{n}) dA \quad (5-57)$$

Substituting the left-hand side of Eq. 5–56 into Eq. 5–57, the general form of the energy equation that applies to fixed, moving, or deforming control volumes becomes

$$\dot{Q}_{\text{net in}} + \dot{W}_{\text{shaft, net in}} + \dot{W}_{\text{pressure, net in}} = \frac{d}{dt} \int_{\text{CV}} e \rho dV + \int_{\text{CS}} e \rho (\vec{V}_r \cdot \vec{n}) dA \quad (5-58)$$

which is stated in words as

$$\left( \begin{array}{l} \text{The net rate of energy} \\ \text{transfer into a CV by} \\ \text{heat and work transfer} \end{array} \right) = \left( \begin{array}{l} \text{The time rate of} \\ \text{change of the energy} \\ \text{content of the CV} \end{array} \right) + \left( \begin{array}{l} \text{The net flow rate of} \\ \text{energy out of the control} \\ \text{surface by mass flow} \end{array} \right)$$

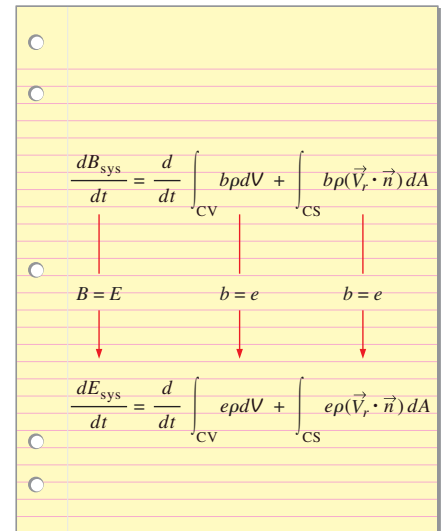


FIGURE 5–50

The conservation of energy equation is obtained by replacing  $B$  in the Reynolds transport theorem by energy  $E$  and  $b$  by  $e$ .

Here  $\vec{V}_r = \vec{V} - \vec{V}_{CS}$  is the fluid velocity relative to the control surface, and the product  $\rho(\vec{V}_r \cdot \vec{n}) dA$  represents the mass flow rate through area element  $dA$  into or out of the control volume. Again noting that  $\vec{n}$  is the outward normal of  $dA$ , the quantity  $\vec{V}_r \cdot \vec{n}$  and thus mass flow is positive for outflow and negative for inflow.

Substituting the surface integral for the rate of pressure work from Eq. 5-54 into Eq. 5-58 and combining it with the surface integral on the right give

$$\dot{Q}_{\text{net in}} + \dot{W}_{\text{shaft, net in}} = \frac{d}{dt} \int_{CV} e \rho dV + \int_{CS} \left( \frac{P}{\rho} + e \right) \rho (\vec{V}_r \cdot \vec{n}) dA \quad (5-59)$$

This is a convenient form for the energy equation since pressure work is now combined with the energy of the fluid crossing the control surface and we no longer have to deal with pressure work.

The term  $P/\rho = P\mathcal{V} = w_{\text{flow}}$  is the **flow work**, which is the work per unit mass associated with pushing a fluid into or out of a control volume. Note that the fluid velocity at a solid surface is equal to the velocity of the solid surface because of the no-slip condition. As a result, the pressure work along the portions of the control surface that coincide with nonmoving solid surfaces is zero. Therefore, pressure work for fixed control volumes can exist only along the imaginary part of the control surface where the fluid enters and leaves the control volume, i.e., inlets and outlets.

For a fixed control volume (no motion or deformation of the control volume),  $\vec{V}_r = \vec{V}$  and the energy equation Eq. 5-59 becomes

$$\text{Fixed CV: } \dot{Q}_{\text{net in}} + \dot{W}_{\text{shaft, net in}} = \frac{d}{dt} \int_{CV} e \rho dV + \int_{CS} \left( \frac{P}{\rho} + e \right) \rho (\vec{V} \cdot \vec{n}) dA \quad (5-60)$$

This equation is not in a convenient form for solving practical engineering problems because of the integrals, and thus it is desirable to rewrite it in terms of average velocities and mass flow rates through inlets and outlets. If  $P/\rho + e$  is nearly uniform across an inlet or outlet, we can simply take it outside the integral. Noting that  $\dot{m} = \int_{A_c} \rho(\vec{V} \cdot \vec{n}) dA_c$  is the mass flow rate across an inlet or outlet, the rate of inflow or outflow of energy through the inlet or outlet can be approximated as  $\dot{m}(P/\rho + e)$ . Then the energy equation becomes (Fig. 5-51)

$$\dot{Q}_{\text{net in}} + \dot{W}_{\text{shaft, net in}} = \frac{d}{dt} \int_{CV} e \rho dV + \sum_{\text{out}} \dot{m} \left( \frac{P}{\rho} + e \right) - \sum_{\text{in}} \dot{m} \left( \frac{P}{\rho} + e \right) \quad (5-61)$$

where  $e = u + V^2/2 + gz$  (Eq. 5-50) is the total energy per unit mass for both the control volume and flow streams. Then,

$$\dot{Q}_{\text{net in}} + \dot{W}_{\text{shaft, net in}} = \frac{d}{dt} \int_{CV} e \rho dV + \sum_{\text{out}} \dot{m} \left( \frac{P}{\rho} + u + \frac{V^2}{2} + gz \right) - \sum_{\text{in}} \dot{m} \left( \frac{P}{\rho} + u + \frac{V^2}{2} + gz \right) \quad (5-62)$$

or

$$\dot{Q}_{\text{net in}} + \dot{W}_{\text{shaft, net in}} = \frac{d}{dt} \int_{CV} e \rho dV + \sum_{\text{out}} \dot{m} \left( h + \frac{V^2}{2} + gz \right) - \sum_{\text{in}} \dot{m} \left( h + \frac{V^2}{2} + gz \right) \quad (5-63)$$

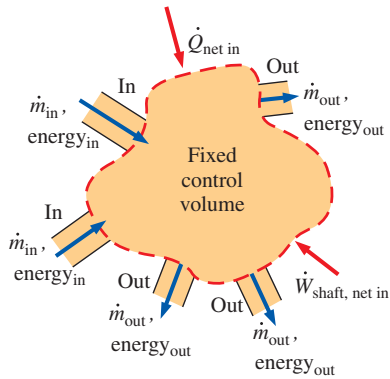


**FIGURE 5-51**

In a typical engineering problem, the control volume may contain many inlets and outlets; energy flows in at each inlet, and energy flows out at each outlet. Energy also enters the control volume through net heat transfer and net shaft work.

where we used the definition of specific enthalpy  $h = u + P/\rho = u + P/\rho$ . The last two equations are fairly general expressions of conservation of energy, but their use is still limited to fixed control volumes, uniform flow at inlets and outlets, and negligible work due to viscous forces and other effects. Also, the subscript “net in” stands for “net input,” and thus any heat or work transfer is positive if *to* the system and negative if *from* the system.

## 5-6 ■ ENERGY ANALYSIS OF STEADY FLOWS

For steady flows, the time rate of change of the energy content of the control volume is zero, and Eq. 5-63 simplifies to

$$\dot{Q}_{\text{net in}} + \dot{W}_{\text{shaft, net in}} = \sum_{\text{out}} \dot{m} \left( h + \frac{V^2}{2} + gz \right) - \sum_{\text{in}} \dot{m} \left( h + \frac{V^2}{2} + gz \right) \quad (5-64)$$

It states that *during steady flow the net rate of energy transfer to a control volume by heat and work transfers is equal to the difference between the rates of outgoing and incoming energy flows by mass flow.*

Many practical problems involve just one inlet and one outlet (Fig. 5-52). The mass flow rate for such **single-stream devices** is the same at the inlet and outlet, and Eq. 5-64 reduces to

$$\dot{Q}_{\text{net in}} + \dot{W}_{\text{shaft, net in}} = \dot{m} \left( h_2 - h_1 + \frac{V_2^2 - V_1^2}{2} + g(z_2 - z_1) \right) \quad (5-65)$$

where subscripts 1 and 2 refer to the inlet and outlet, respectively. The steady-flow energy equation on a unit-mass basis is obtained by dividing Eq. 5-65 by the mass flow rate  $\dot{m}$ ,

$$q_{\text{net in}} + w_{\text{shaft, net in}} = h_2 - h_1 + \frac{V_2^2 - V_1^2}{2} + g(z_2 - z_1) \quad (5-66)$$

where  $q_{\text{net in}} = \dot{Q}_{\text{net in}}/\dot{m}$  is the net heat transfer to the fluid per unit mass and  $w_{\text{shaft, net in}} = \dot{W}_{\text{shaft, net in}}/\dot{m}$  is the net shaft work input to the fluid per unit mass. Using the definition of enthalpy  $h = u + P/\rho$  and rearranging, the steady-flow energy equation can also be expressed as

$$w_{\text{shaft, net in}} + \frac{P_1}{\rho_1} + \frac{V_1^2}{2} + gz_1 = \frac{P_2}{\rho_2} + \frac{V_2^2}{2} + gz_2 + (u_2 - u_1 - q_{\text{net in}}) \quad (5-67)$$

where  $u$  is the *internal energy*,  $P/\rho$  is the *flow energy*,  $V^2/2$  is the *kinetic energy*, and  $gz$  is the *potential energy* of the fluid, all per unit mass. These relations are valid for both compressible and incompressible flows.

The left side of Eq. 5-67 represents the mechanical energy input, while the first three terms on the right side represent the mechanical energy output. If the flow is ideal with no irreversibilities such as friction, the total mechanical energy must be conserved, and the term in parentheses ( $u_2 - u_1 - q_{\text{net in}}$ ) must equal zero. That is,

$$\text{Ideal flow (no mechanical energy loss):} \quad q_{\text{net in}} = u_2 - u_1 \quad (5-68)$$

Any increase in  $u_2 - u_1$  above  $q_{\text{net in}}$  is due to the irreversible conversion of mechanical energy to thermal energy, and thus  $u_2 - u_1 - q_{\text{net in}}$  represents the mechanical energy loss per unit mass (Fig. 5-53). That is,

$$\text{Real flow (with mechanical energy loss):} \quad e_{\text{mech, loss}} = u_2 - u_1 - q_{\text{net in}} \quad (5-69)$$

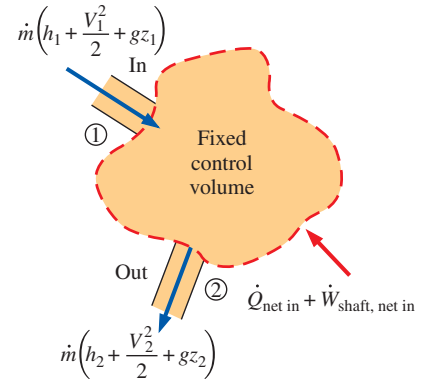


FIGURE 5-52

A control volume with only one inlet and one outlet and energy interactions.

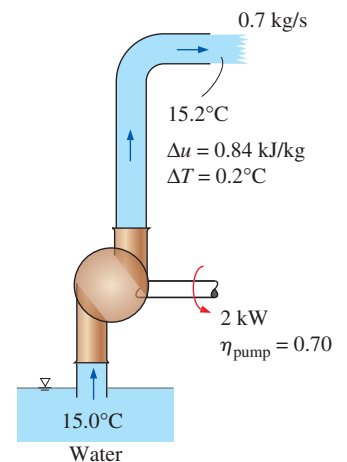


FIGURE 5-53

The lost mechanical energy in a fluid flow system results in an increase in the internal energy of the fluid and thus in a rise of fluid temperature.

For single-phase fluids (a gas or a liquid),  $u_2 - u_1 = c_v(T_2 - T_1)$  where  $c_v$  is the constant-volume specific heat.

The steady-flow energy equation on a unit-mass basis can be written conveniently as a **mechanical energy** balance,

$$e_{\text{mech, in}} = e_{\text{mech, out}} + e_{\text{mech, loss}} \quad (5-70)$$

or

$$w_{\text{shaft, net in}} + \frac{P_1}{\rho_1} + \frac{V_1^2}{2} + gz_1 = \frac{P_2}{\rho_2} + \frac{V_2^2}{2} + gz_2 + e_{\text{mech, loss}} \quad (5-71)$$

Noting that  $w_{\text{shaft, net in}} = w_{\text{pump}} - w_{\text{turbine}}$ , the mechanical energy balance can be written more explicitly as

$$\frac{P_1}{\rho_1} + \frac{V_1^2}{2} + gz_1 + w_{\text{pump}} = \frac{P_2}{\rho_2} + \frac{V_2^2}{2} + gz_2 + w_{\text{turbine}} + e_{\text{mech, loss}} \quad (5-72)$$

where  $w_{\text{pump}}$  is the mechanical work input (due to the presence of a pump, fan, compressor, etc.) and  $w_{\text{turbine}}$  is the mechanical work output (due to a turbine). When the flow is incompressible, either absolute or gage pressure can be used for  $P$  since  $P_{\text{atm}}/\rho$  would appear on both sides and would cancel out.

Multiplying Eq. 5-72 by the mass flow rate  $\dot{m}$  gives

$$\dot{m} \left( \frac{P_1}{\rho_1} + \frac{V_1^2}{2} + gz_1 \right) + \dot{W}_{\text{pump}} = \dot{m} \left( \frac{P_2}{\rho_2} + \frac{V_2^2}{2} + gz_2 \right) + \dot{W}_{\text{turbine}} + \dot{E}_{\text{mech, loss}} \quad (5-73)$$

where  $\dot{W}_{\text{pump}}$  is the shaft power input through the pump's shaft,  $\dot{W}_{\text{turbine}}$  is the shaft power output through the turbine's shaft, and  $\dot{E}_{\text{mech, loss}}$  is the *total* mechanical power loss, which consists of pump and turbine losses as well as the frictional losses in the piping network. That is,

$$\dot{E}_{\text{mech, loss}} = \dot{E}_{\text{mech loss, pump}} + \dot{E}_{\text{mech loss, turbine}} + \dot{E}_{\text{mech loss, piping}}$$

By convention, irreversible pump and turbine losses are treated separately from irreversible losses due to other components of the piping system (Fig. 5-54). Thus, the energy equation is expressed in its most common form in terms of *heads* by dividing each term in Eq. 5-73 by  $\dot{m}g$ . The result is

$$\frac{P_1}{\rho_1 g} + \frac{V_1^2}{2g} + z_1 + h_{\text{pump, } u} = \frac{P_2}{\rho_2 g} + \frac{V_2^2}{2g} + z_2 + h_{\text{turbine, } e} + h_L \quad (5-74)$$

where

- $h_{\text{pump, } u} = \frac{w_{\text{pump, } u}}{g} = \frac{\dot{W}_{\text{pump, } u}}{\dot{m}g} = \frac{\eta_{\text{pump}} \dot{W}_{\text{pump}}}{\dot{m}g}$  is the *useful head delivered to the fluid by the pump*. Because of irreversible losses in the pump,  $h_{\text{pump, } u}$  is less than  $\dot{W}_{\text{pump}}/\dot{m}g$  by the factor  $\eta_{\text{pump}}$ .
- $h_{\text{turbine, } e} = \frac{w_{\text{turbine, } e}}{g} = \frac{\dot{W}_{\text{turbine, } e}}{\dot{m}g} = \frac{\dot{W}_{\text{turbine}}}{\eta_{\text{turbine}} \dot{m}g}$  is the *extracted head removed from the fluid by the turbine*. Because of irreversible losses in the turbine,  $h_{\text{turbine, } e}$  is greater than  $\dot{W}_{\text{turbine}}/\dot{m}g$  by the factor  $\eta_{\text{turbine}}$ .
- $h_L = \frac{e_{\text{mech loss, piping}}}{g} = \frac{\dot{E}_{\text{mech loss, piping}}}{\dot{m}g}$  is the *irreversible head loss* between 1 and 2 due to all components of the piping system other than the pump or turbine.

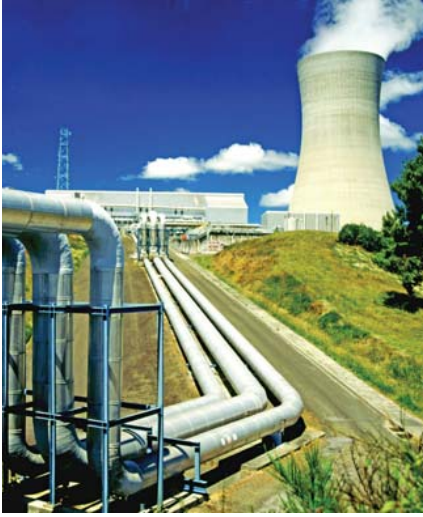
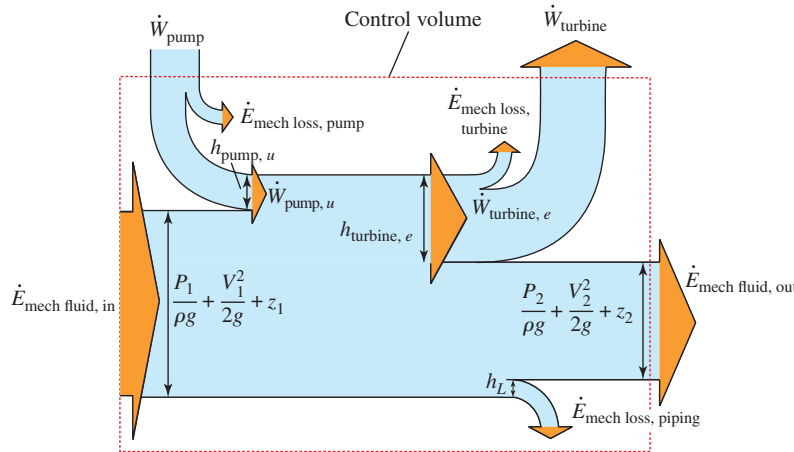


**FIGURE 5-54**

A typical power plant has numerous pipes, elbows, valves, pumps, and turbines, all of which have irreversible losses.

© Brand X Pictures PunchStock RF


**FIGURE 5–55**

Mechanical energy flow chart for a fluid flow system that involves a pump and a turbine. Vertical dimensions show each energy term expressed as an equivalent column height of fluid, i.e., *head*, corresponding to each term of Eq. 5–74.

Note that the head loss  $h_L$  represents the frictional losses associated with fluid flow in piping, and it does not include the losses that occur within the pump or turbine due to the inefficiencies of these devices—these losses are taken into account by  $\eta_{\text{pump}}$  and  $\eta_{\text{turbine}}$ . Equation 5–74 is illustrated schematically in Fig. 5–55.

The *pump head* is zero if the piping system does not involve a pump, a fan, or a compressor, and the *turbine head* is zero if the system does not involve a turbine.

## Special Case: Incompressible Flow with No Mechanical Work Devices and Negligible Friction

When piping losses are negligible, there is negligible dissipation of mechanical energy into thermal energy, and thus  $h_L = e_{\text{mech loss, piping}}/g \cong 0$ , as shown later in Example 5–11. Also,  $h_{\text{pump, u}} = h_{\text{turbine, e}} = 0$  when there are no mechanical work devices such as fans, pumps, or turbines. Then Eq. 5–74 reduces to

$$\frac{P_1}{\rho g} + \frac{V_1^2}{2g} + z_1 = \frac{P_2}{\rho g} + \frac{V_2^2}{2g} + z_2 \quad \text{or} \quad \frac{P}{\rho g} + \frac{V^2}{2g} + z = \text{constant} \quad (5-75)$$

which is the **Bernoulli equation** derived earlier using Newton’s second law of motion. Thus, the Bernoulli equation can be thought of as a degenerate form of the energy equation.

## Kinetic Energy Correction Factor, $\alpha$

The average flow velocity  $V_{\text{avg}}$  was defined such that the relation  $\rho V_{\text{avg}} A$  gives the actual mass flow rate. Therefore, there is no such thing as a correction factor for mass flow rate. However, as Gaspard Coriolis (1792–1843) showed, the kinetic energy of a fluid stream obtained from  $V^2/2$  is not the same as the actual kinetic energy of the fluid stream since the square of a sum is not equal to the sum of the squares of its components (Fig. 5–56). This error can be corrected by replacing the kinetic energy terms  $V^2/2$  in the energy equation by  $\alpha V_{\text{avg}}^2/2$ , where  $\alpha$  is the **kinetic energy correction factor**. By using equations for the variation of velocity with the radial distance, it can be shown that the correction factor is 2.0 for fully developed laminar pipe flow, and it ranges between 1.04 and 1.11 for fully developed turbulent flow in a round pipe.

$$\begin{aligned} \dot{m} &= \rho V_{\text{avg}} A, \quad \rho = \text{constant} \\ \dot{\text{KE}}_{\text{act}} &= \int \text{ke} \delta \dot{m} = \int_A \frac{1}{2} [V(r)]^2 [\rho V(r) dA] \\ &= \frac{1}{2} \rho \int_A [V(r)]^3 dA \\ \dot{\text{KE}}_{\text{avg}} &= \frac{1}{2} \dot{m} V_{\text{avg}}^2 = \frac{1}{2} \rho A V_{\text{avg}}^3 \\ \alpha &= \frac{\dot{\text{KE}}_{\text{act}}}{\dot{\text{KE}}_{\text{avg}}} = \frac{1}{A} \int_A \left( \frac{V(r)}{V_{\text{avg}}} \right)^3 dA \end{aligned}$$

**FIGURE 5–56**

The determination of the *kinetic energy correction factor* using the actual velocity distribution  $V(r)$  and the average velocity  $V_{\text{avg}}$  at a cross section.

The kinetic energy correction factors are often ignored (i.e.,  $\alpha$  is set equal to 1) in an elementary analysis since (1) most flows encountered in practice are turbulent, for which the correction factor is near unity, and (2) the kinetic energy terms are often small relative to the other terms in the energy equation, and multiplying them by a factor less than 2.0 does not make much difference. When the velocity and thus the kinetic energy are high, the flow turns turbulent, and a unity correction factor is more appropriate. However, you should keep in mind that you may encounter some situations for which these factors *are* significant, especially when the flow is laminar. Therefore, we recommend that you always include the kinetic energy correction factor when analyzing fluid flow problems. When the kinetic energy correction factors are included, the energy equations for *steady incompressible flow* (Eqs. 5–73 and 5–74) become

$$\dot{m} \left( \frac{P_1}{\rho} + \alpha_1 \frac{V_1^2}{2} + gz_1 \right) + \dot{W}_{\text{pump}} = \dot{m} \left( \frac{P_2}{\rho} + \alpha_2 \frac{V_2^2}{2} + gz_2 \right) + \dot{W}_{\text{turbine}} + \dot{E}_{\text{mech, loss}} \quad (5-76)$$

$$\frac{P_1}{\rho g} + \alpha_1 \frac{V_1^2}{2g} + z_1 + h_{\text{pump, } u} = \frac{P_2}{\rho g} + \alpha_2 \frac{V_2^2}{2g} + z_2 + h_{\text{turbine, } e} + h_L \quad (5-77)$$

If the flow at an inlet or outlet is fully developed turbulent pipe flow, we recommend using  $\alpha = 1.05$  as a reasonable estimate of the correction factor. This leads to a more conservative estimate of head loss, and it does not take much additional effort to include  $\alpha$  in the equations.

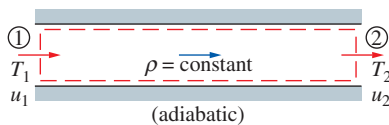


FIGURE 5–57

Schematic for Example 5–11.

### EXAMPLE 5–11 Effect of Friction on Fluid Temperature and Head Loss

Show that during steady and incompressible flow of a fluid in an adiabatic flow section (a) the temperature remains constant and there is no head loss when friction is ignored and (b) the temperature increases and some head loss occurs when frictional effects are considered. Discuss if it is possible for the fluid temperature to decrease during such flow (Fig. 5–57).

**SOLUTION** Steady and incompressible flow through an adiabatic section is considered. The effects of friction on the temperature and the heat loss are to be determined.

**Assumptions** 1 The flow is steady and incompressible. 2 The flow section is adiabatic and thus there is no heat transfer,  $q_{\text{net in}} = 0$ .

**Analysis** The density of a fluid remains constant during incompressible flow and the entropy change is

$$\Delta s = c_v \ln \frac{T_2}{T_1}$$

This relation represents the entropy change of the fluid per unit mass as it flows through the flow section from state 1 at the inlet to state 2 at the outlet. Entropy change is caused by two effects: (1) heat transfer and (2) irreversibilities. Therefore, in the absence of heat transfer, entropy change is due to irreversibilities only, whose effect is always to increase entropy.

(a) The entropy change of the fluid in an adiabatic flow section ( $q_{\text{net in}} = 0$ ) is zero when the process does not involve any irreversibilities such as friction and swirling, and thus for *reversible flow* we have

Temperature change:  $\Delta s = c_v \ln \frac{T_2}{T_1} = 0 \rightarrow T_2 = T_1$

Mechanical energy loss:

$$e_{\text{mech loss, piping}} = u_2 - u_1 - q_{\text{net in}} = c_v(T_2 - T_1) - q_{\text{net in}} = 0$$

Head loss:  $h_L = e_{\text{mech loss, piping}}/g = 0$

Thus we conclude that when heat transfer and frictional effects are negligible, (1) the temperature of the fluid remains constant, (2) no mechanical energy is converted to thermal energy, and (3) there is no irreversible head loss.

(b) When irreversibilities such as friction are taken into account, the entropy change is positive and thus we have:

Temperature change:  $\Delta s = c_v \ln \frac{T_2}{T_1} > 0 \rightarrow T_2 > T_1$

Mechanical energy loss:  $e_{\text{mech loss, piping}} = u_2 - u_1 - q_{\text{net in}} = c_v(T_2 - T_1) > 0$

Head loss:  $h_L = e_{\text{mech loss, piping}}/g > 0$

Thus we conclude that when the flow is adiabatic and irreversible, (1) the temperature of the fluid increases, (2) some mechanical energy is converted to thermal energy, and (3) some irreversible head loss occurs.

**Discussion** It is impossible for the fluid temperature to decrease during steady, incompressible, adiabatic flow since this would require the entropy of an adiabatic system to decrease, which would be a violation of the second law of thermodynamics.

### EXAMPLE 5–12 Pumping Power and Frictional Heating in a Pump

The pump of a water distribution system is powered by a 15-kW electric motor whose efficiency is 90 percent (Fig. 5–58). The water flow rate through the pump is 50 L/s. The diameters of the inlet and outlet pipes are the same, and the elevation difference across the pump is negligible. If the absolute pressures at the inlet and outlet of the pump are measured to be 100 kPa and 300 kPa, respectively, determine (a) the mechanical efficiency of the pump and (b) the temperature rise of water as it flows through the pump due to mechanical inefficiencies.

**SOLUTION** The pressures across a pump are measured. The mechanical efficiency of the pump and the temperature rise of water are to be determined.

**Assumptions** 1 The flow is steady and incompressible. 2 The pump is driven by an external motor so that the heat generated by the motor is dissipated to the atmosphere. 3 The elevation difference between the inlet and outlet of the pump is negligible,  $z_1 \cong z_2$ . 4 The inlet and outlet diameters are the

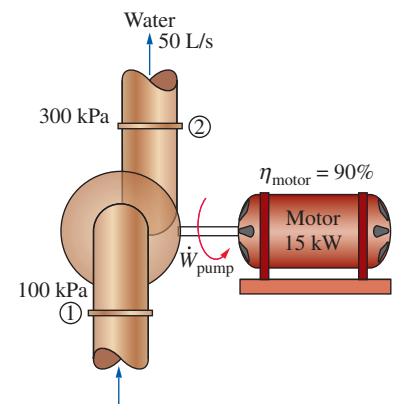


**FIGURE 5–58**  
Schematic for Example 5–12.

same and thus the average inlet and outlet velocities are equal,  $V_1 = V_2$ .

5 The kinetic energy correction factors are equal,  $\alpha_1 = \alpha_2$ .

**Properties** We take the density of water to be  $1 \text{ kg/L} = 1000 \text{ kg/m}^3$  and its specific heat to be  $4.18 \text{ kJ/kg} \cdot ^\circ\text{C}$ .

**Analysis** (a) The mass flow rate of water through the pump is

$$\dot{m} = \rho \dot{V} = (1 \text{ kg/L})(50 \text{ L/s}) = 50 \text{ kg/s}$$

The motor draws 15 kW of power and is 90 percent efficient. Thus the mechanical (shaft) power it delivers to the pump is

$$\dot{W}_{\text{pump, shaft}} = \eta_{\text{motor}} \dot{W}_{\text{electric}} = (0.90)(15 \text{ kW}) = 13.5 \text{ kW}$$

To determine the mechanical efficiency of the pump, we need to know the increase in the mechanical energy of the fluid as it flows through the pump, which is

$$\Delta \dot{E}_{\text{mech, fluid}} = \dot{E}_{\text{mech, out}} - \dot{E}_{\text{mech, in}} = \dot{m} \left( \frac{P_2}{\rho} + \alpha_2 \frac{V_2^2}{2} + gz_2 \right) - \dot{m} \left( \frac{P_1}{\rho} + \alpha_1 \frac{V_1^2}{2} + gz_1 \right)$$

Simplifying it for this case and substituting the given values,

$$\Delta \dot{E}_{\text{mech, fluid}} = \dot{m} \left( \frac{P_2 - P_1}{\rho} \right) = (50 \text{ kg/s}) \left( \frac{(300 - 100) \text{ kPa}}{1000 \text{ kg/m}^3} \right) \left( \frac{1 \text{ kJ}}{1 \text{ kPa} \cdot \text{m}^3} \right) = 10.0 \text{ kW}$$

Then the mechanical efficiency of the pump becomes

$$\eta_{\text{pump}} = \frac{\dot{W}_{\text{pump, u}}}{\dot{W}_{\text{pump, shaft}}} = \frac{\Delta \dot{E}_{\text{mech, fluid}}}{\dot{W}_{\text{pump, shaft}}} = \frac{10.0 \text{ kW}}{13.5 \text{ kW}} = \mathbf{0.741} \text{ or } \mathbf{74.1\%}$$

(b) Of the 13.5-kW mechanical power supplied by the pump, only 10.0 kW is imparted to the fluid as mechanical energy. The remaining 3.5 kW is converted to thermal energy due to frictional effects, and this “lost” mechanical energy manifests itself as a heating effect in the fluid,

$$\dot{E}_{\text{mech, loss}} = \dot{W}_{\text{pump, shaft}} - \Delta \dot{E}_{\text{mech, fluid}} = 13.5 - 10.0 = 3.5 \text{ kW}$$

The temperature rise of water due to this mechanical inefficiency is determined from the thermal energy balance,  $\dot{E}_{\text{mech, loss}} = \dot{m}(u_2 - u_1) = \dot{m}c\Delta T$ . Solving for  $\Delta T$ ,

$$\Delta T = \frac{\dot{E}_{\text{mech, loss}}}{\dot{m}c} = \frac{3.5 \text{ kW}}{(50 \text{ kg/s})(4.18 \text{ kJ/kg} \cdot ^\circ\text{C})} = \mathbf{0.017^\circ\text{C}}$$

Therefore, the water experiences a temperature rise of  $0.017^\circ\text{C}$  which is very small, due to mechanical inefficiency, as it flows through the pump.

**Discussion** In an actual application, the temperature rise of water would probably be less since part of the heat generated would be transferred to the casing of the pump and from the casing to the surrounding air. If the entire pump and motor were submerged in water, then the 1.5 kW dissipated due to motor inefficiency would also be transferred to the surrounding water as heat.

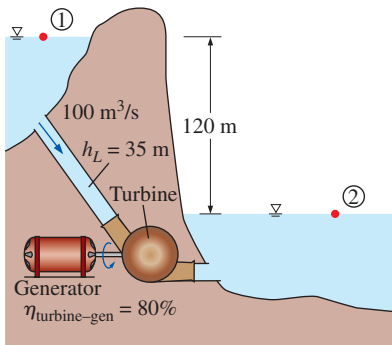


FIGURE 5–59

Schematic for Example 5–13.

### EXAMPLE 5–13 Hydroelectric Power Generation from a Dam

In a hydroelectric power plant,  $100 \text{ m}^3/\text{s}$  of water flows from an elevation of 120 m to a turbine, where electric power is generated (Fig. 5–59). The total irreversible head loss in the piping system from point 1 to point 2 (excluding

the turbine unit) is determined to be 35 m. If the overall efficiency of the turbine-generator is 80 percent, estimate the electric power output.

**SOLUTION** The available head, flow rate, head loss, and efficiency of a hydroelectric turbine are given. The electric power output is to be determined.

**Assumptions** 1 The flow is steady and incompressible. 2 Water levels at the reservoir and the discharge site remain constant.

**Properties** We take the density of water to be  $1000 \text{ kg/m}^3$ .

**Analysis** The mass flow rate of water through the turbine is

$$\dot{m} = \rho \dot{V} = (1000 \text{ kg/m}^3)(100 \text{ m}^3/\text{s}) = 10^5 \text{ kg/s}$$

We take point 2 as the reference level, and thus  $z_2 = 0$ . Also, both points 1 and 2 are open to the atmosphere ( $P_1 = P_2 = P_{\text{atm}}$ ) and the flow velocities are negligible at both points ( $V_1 = V_2 = 0$ ). Then the energy equation for steady, incompressible flow reduces to

$$\frac{P_1}{\rho g} + \alpha_1 \frac{V_1^2}{2g} + z_1 + h_{\text{pump}, u} = \frac{P_2}{\rho g} + \alpha_2 \frac{V_2^2}{2g} + z_2 + h_{\text{turbine}, e} + h_L$$

or

$$h_{\text{turbine}, e} = z_1 - h_L$$

Substituting, the extracted turbine head and the corresponding turbine power are

$$h_{\text{turbine}, e} = z_1 - h_L = 120 - 35 = 85 \text{ m}$$

$$\dot{W}_{\text{turbine}, e} = \dot{m} g h_{\text{turbine}, e} = (10^5 \text{ kg/s})(9.81 \text{ m/s}^2)(85 \text{ m}) \left( \frac{1 \text{ kJ/kg}}{1000 \text{ m}^2/\text{s}^2} \right) = 83,400 \text{ kW}$$

Therefore, a perfect turbine-generator would generate 83,400 kW of electricity from this resource. The electric power generated by the actual unit is

$$\dot{W}_{\text{electric}} = \eta_{\text{turbine-gen}} \dot{W}_{\text{turbine}, e} = (0.80)(83.4 \text{ MW}) = \mathbf{66.7 \text{ MW}}$$

**Discussion** Note that the power generation would increase by almost 1 MW for each percentage point improvement in the efficiency of the turbine-generator unit. You will learn how to determine  $h_L$  in Chap. 8.

### EXAMPLE 5-14 Fan Selection for Air Cooling of a Computer

A fan is to be selected to cool a computer case whose dimensions are  $12 \text{ cm} \times 40 \text{ cm} \times 40 \text{ cm}$  (Fig. 5-60). Half of the volume in the case is expected to be filled with components and the other half to be air space. A 5-cm-diameter hole is available at the back of the case for the installation of the fan that is to replace the air in the void spaces of the case once every second. Small low-power fan-motor combined units are available in the market and their efficiency is estimated to be 30 percent. Determine (a) the wattage of the fan-motor unit to be purchased and (b) the pressure difference across the fan. Take the air density to be  $1.20 \text{ kg/m}^3$ .

**Solution** A fan is to cool a computer case by completely replacing the air inside once every second. The power of the fan and the pressure difference across it are to be determined.

**Assumptions** 1 The flow is steady and incompressible. 2 Losses other than those due to the inefficiency of the fan-motor unit are negligible. 3 The flow

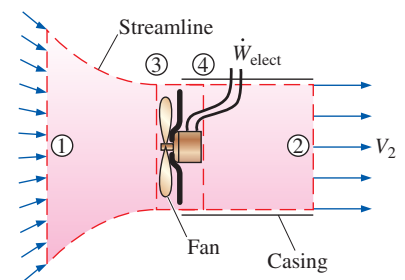


FIGURE 5-60

Schematic for Example 5-14.

**FIGURE 5–61**

The cooling fans used in computers and computer power supplies are typically small and consume only a few watts of electrical power.

© PhotoDisc/Getty RF

at the outlet is fairly uniform except near the center (due to the wake of the fan motor), and the kinetic energy correction factor at the outlet is 1.10.

**Properties** The density of air is given to be  $1.20 \text{ kg/m}^3$ .

**Analysis** (a) Noting that half of the volume of the case is occupied by the components, the air volume in the computer case is

$$\begin{aligned} V &= (\text{Void fraction})(\text{Total case volume}) \\ &= 0.5(12 \text{ cm} \times 40 \text{ cm} \times 40 \text{ cm}) = 9600 \text{ cm}^3 \end{aligned}$$

Therefore, the volume and mass flow rates of air through the case are

$$\begin{aligned} \dot{V} &= \frac{V}{\Delta t} = \frac{9600 \text{ cm}^3}{1 \text{ s}} = 9600 \text{ cm}^3/\text{s} = 9.6 \times 10^{-3} \text{ m}^3/\text{s} \\ \dot{m} &= \rho \dot{V} = (1.20 \text{ kg/m}^3)(9.6 \times 10^{-3} \text{ m}^3/\text{s}) = 0.0115 \text{ kg/s} \end{aligned}$$

The cross-sectional area of the opening in the case and the average air velocity through the outlet are

$$\begin{aligned} A &= \frac{\pi D^2}{4} = \frac{\pi (0.05 \text{ m})^2}{4} = 1.96 \times 10^{-3} \text{ m}^2 \\ V &= \frac{\dot{V}}{A} = \frac{9.6 \times 10^{-3} \text{ m}^3/\text{s}}{1.96 \times 10^{-3} \text{ m}^2} = 4.90 \text{ m/s} \end{aligned}$$

We draw the control volume around the fan such that both the inlet and the outlet are at atmospheric pressure ( $P_1 = P_2 = P_{\text{atm}}$ ), as shown in Fig. 5–60, where the inlet section 1 is large and far from the fan so that the flow velocity at the inlet section is negligible ( $V_1 \cong 0$ ). Noting that  $z_1 = z_2$  and frictional losses in the flow are disregarded, the mechanical losses consist of fan losses only and the energy equation (Eq. 5–76) simplifies to

$$\dot{m} \left( \frac{P_1}{\rho} + \alpha_1 \frac{V_1^2}{2} + gz_1 \right) + \dot{W}_{\text{fan}} = \dot{m} \left( \frac{P_2}{\rho} + \alpha_2 \frac{V_2^2}{2} + gz_2 \right) + \dot{W}_{\text{turbine}} + \dot{E}_{\text{mech loss, fan}}$$

Solving for  $\dot{W}_{\text{fan}} - \dot{E}_{\text{mech loss, fan}} = \dot{W}_{\text{fan, u}}$  and substituting,

$$\dot{W}_{\text{fan, u}} = \dot{m} \alpha_2 \frac{V_2^2}{2} = (0.0115 \text{ kg/s})(1.10) \frac{(4.90 \text{ m/s})^2}{2} \left( \frac{1 \text{ N}}{1 \text{ kg} \cdot \text{m/s}^2} \right) = 0.152 \text{ W}$$

Then the required electric power input to the fan is determined to be

$$\dot{W}_{\text{elect}} = \frac{\dot{W}_{\text{fan, u}}}{\eta_{\text{fan-motor}}} = \frac{0.152 \text{ W}}{0.3} = \mathbf{0.506 \text{ W}}$$

Therefore, a fan-motor rated at about a half watt is adequate for this job (Fig. 5–61). (b) To determine the pressure difference across the fan unit, we take points 3 and 4 to be on the two sides of the fan on a horizontal line. This time  $z_3 = z_4$  again and  $V_3 = V_4$  since the fan is a narrow cross section, and the energy equation reduces to

$$\dot{m} \frac{P_3}{\rho} + \dot{W}_{\text{fan}} = \dot{m} \frac{P_4}{\rho} + \dot{E}_{\text{mech loss, fan}} \rightarrow \dot{W}_{\text{fan, u}} = \dot{m} \frac{P_4 - P_3}{\rho}$$

Solving for  $P_4 - P_3$  and substituting,

$$P_4 - P_3 = \frac{\rho \dot{W}_{\text{fan}, u}}{\dot{m}} = \frac{(1.2 \text{ kg/m}^3)(0.152 \text{ W})}{0.0115 \text{ kg/s}} \left( \frac{1 \text{ Pa} \cdot \text{m}^3}{1 \text{ Ws}} \right) = \mathbf{15.8 \text{ Pa}}$$

Therefore, the pressure rise across the fan is 15.8 Pa.

**Discussion** The efficiency of the fan–motor unit is given to be 30 percent, which means 30 percent of the electric power  $\dot{W}_{\text{electric}}$  consumed by the unit is converted to useful mechanical energy while the rest (70 percent) is “lost” and converted to thermal energy. Also, a more powerful fan is required in an actual system to overcome frictional losses inside the computer case. Note that if we had ignored the kinetic energy correction factor at the outlet, the required electrical power and pressure rise would have been 10 percent lower in this case (0.460 W and 14.4 Pa, respectively).

### EXAMPLE 5–15 Pumping Water from a Lake to a Pool

A submersible pump with a shaft power of 5 kW and an efficiency of 72 percent is used to pump water from a lake to a pool through a constant diameter pipe (Fig. 5–62). The free surface of the pool is 25 m above the free surface of the lake. If the irreversible head loss in the piping system is 4 m, determine the discharge rate of water and the pressure difference across the pump.

**SOLUTION** Water from a lake is pumped to a pool at a given elevation. For a given head loss, the flow rate and the pressure difference across the pump are to be determined.

**Assumptions** 1 The flow is steady and incompressible. 2 Both the lake and pool are large enough that their surface elevations remain fixed.

**Properties** We take the density of water to be  $1 \text{ kg/L} = 1000 \text{ kg/m}^3$ .

**Analysis** The pump delivers 5 kW of shaft power and is 72 percent efficient. The useful mechanical power it imparts to the water is

$$\dot{W}_{\text{pump}, u} = \eta_{\text{pump}} \dot{W}_{\text{shaft}} = (0.72)(5 \text{ kW}) = 3.6 \text{ kW}$$

We take point 1 at the free surface of the lake, which is also taken as the reference level ( $z_1 = 0$ ), and point 2 at the free surface of the pool. Also, both points 1 and 2 are open to the atmosphere ( $P_1 = P_2 = P_{\text{atm}}$ ), and the velocities are negligible there ( $V_1 \cong V_2 \cong 0$ ). Then the energy equation for steady, incompressible flow through a control volume between these two surfaces that includes the pump is expressed as

$$\dot{m} \left( \frac{P_1}{\rho} + \alpha_1 \frac{V_1^2}{2} + gz_1 \right) + \dot{W}_{\text{pump}, u} = \dot{m} \left( \frac{P_2}{\rho} + \alpha_2 \frac{V_2^2}{2} + gz_2 \right) + \dot{W}_{\text{turbine}, e} + \dot{E}_{\text{mech loss, piping}}$$

Under the stated assumptions, the energy equation reduces to

$$\dot{W}_{\text{pump}, u} = \dot{m}gz_2 + \dot{E}_{\text{mech loss, piping}}$$

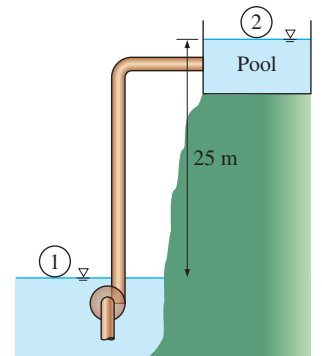


FIGURE 5–62

Schematic for Example 5–15.

Noting that  $\dot{E}_{\text{mech loss, piping}} = \dot{m}gh_L$ , the mass and volume flow rates of water become

$$\dot{m} = \frac{\dot{W}_{\text{pump}, u}}{gz_2 + gh_L} = \frac{\dot{W}_{\text{pump}, u}}{g(z_2 + h_L)} = \frac{3.6 \text{ kJ/s}}{(9.81 \text{ m/s}^2)(25 + 4 \text{ m})} \left( \frac{1000 \text{ m}^2/\text{s}^2}{1 \text{ kJ}} \right) = 12.7 \text{ kg/s}$$

$$\dot{V} = \frac{\dot{m}}{\rho} = \frac{12.7 \text{ kg/s}}{1000 \text{ kg/m}^3} = \mathbf{12.7 \times 10^{-3} \text{ m}^3/\text{s} = 12.7 \text{ L/s}}$$

We now take the pump as the control volume. Assuming that the elevation difference and the kinetic energy change across the pump are negligible, the energy equation for this control volume yields

$$\Delta P = P_{\text{out}} - P_{\text{in}} = \frac{\dot{W}_{\text{pump}, u}}{\dot{V}} = \frac{3.6 \text{ kJ/s}}{12.7 \times 10^{-3} \text{ m}^3/\text{s}} \left( \frac{1 \text{ kN} \cdot \text{m}}{1 \text{ kJ}} \right) \left( \frac{1 \text{ kPa}}{1 \text{ kN/m}^2} \right) = \mathbf{283 \text{ kPa}}$$

**Discussion** It can be shown that in the absence of head loss ( $h_L = 0$ ) the flow rate of water would be 14.7 L/s, which is an increase of 16 percent. Therefore, frictional losses in pipes should be minimized since they always cause the flow rate to decrease.

## SUMMARY

This chapter deals with the mass, Bernoulli, and energy equations and their applications. The amount of mass flowing through a cross section per unit time is called the *mass flow rate* and is expressed as

$$\dot{m} = \rho VA_c = \rho \dot{V}$$

where  $\rho$  is the density,  $V$  is the average velocity,  $\dot{V}$  is the volume flow rate of the fluid, and  $A_c$  is the cross-sectional area normal to the flow direction. The conservation of mass relation for a control volume is expressed as

$$\frac{d}{dt} \int_{\text{CV}} \rho dV + \int_{\text{CS}} \rho(\vec{V} \cdot \vec{n}) dA = 0$$

It states that *the time rate of change of the mass within the control volume plus the net mass flow rate out of the control surface is equal to zero*.

In simpler terms,

$$\frac{dm_{\text{CV}}}{dt} = \sum_{\text{in}} \dot{m} - \sum_{\text{out}} \dot{m}$$

For steady-flow devices, the conservation of mass principle is expressed as

$$\text{Steady flow:} \quad \sum_{\text{in}} \dot{m} = \sum_{\text{out}} \dot{m}$$

*Steady flow (single stream):*

$$\dot{m}_1 = \dot{m}_2 \rightarrow \rho_1 V_1 A_1 = \rho_2 V_2 A_2$$

*Steady, incompressible flow:*

$$\sum_{\text{in}} \dot{V} = \sum_{\text{out}} \dot{V}$$

*Steady, incompressible flow (single stream):*

$$\dot{V}_1 = \dot{V}_2 \rightarrow V_1 A_1 = V_2 A_2$$

*Mechanical energy* is the form of energy associated with the velocity, elevation, and pressure of the fluid, and it can be converted to mechanical work completely and directly by an ideal mechanical device. The efficiencies of various *real* devices are defined as

$$\eta_{\text{pump}} = \frac{\Delta \dot{E}_{\text{mech, fluid}}}{\dot{W}_{\text{shaft, in}}} = \frac{\dot{W}_{\text{pump}, u}}{\dot{W}_{\text{pump}}}$$

$$\eta_{\text{turbine}} = \frac{\dot{W}_{\text{shaft, out}}}{|\Delta \dot{E}_{\text{mech, fluid}}|} = \frac{\dot{W}_{\text{turbine}}}{\dot{W}_{\text{turbine}, e}}$$

$$\eta_{\text{motor}} = \frac{\text{Mechanical power output}}{\text{Electric power input}} = \frac{\dot{W}_{\text{shaft, out}}}{\dot{W}_{\text{elect, in}}}$$

$$\eta_{\text{generator}} = \frac{\text{Electric power output}}{\text{Mechanical power input}} = \frac{\dot{W}_{\text{elect, out}}}{\dot{W}_{\text{shaft, in}}}$$

$$\eta_{\text{pump-motor}} = \eta_{\text{pump}}\eta_{\text{motor}} = \frac{\Delta \dot{E}_{\text{mech, fluid}}}{\dot{W}_{\text{elect, in}}} = \frac{\dot{W}_{\text{pump, u}}}{\dot{W}_{\text{elect, in}}}$$

$$\eta_{\text{turbine-gen}} = \eta_{\text{turbine}}\eta_{\text{generator}} = \frac{\dot{W}_{\text{elect, out}}}{|\Delta \dot{E}_{\text{mech, fluid}}|} = \frac{\dot{W}_{\text{elect, out}}}{\dot{W}_{\text{turbine, e}}}$$

The *Bernoulli equation* is a relation between pressure, velocity, and elevation in steady, incompressible flow, and is expressed along a streamline and in regions where net viscous forces are negligible as

$$\frac{P}{\rho} + \frac{V^2}{2} + gz = \text{constant}$$

It can also be expressed between any two points on a streamline as

$$\frac{P_1}{\rho} + \frac{V_1^2}{2} + gz_1 = \frac{P_2}{\rho} + \frac{V_2^2}{2} + gz_2$$

The Bernoulli equation is an expression of mechanical energy balance and can be stated as: *The sum of the kinetic, potential, and flow energies of a fluid particle is constant along a streamline during steady flow when the compressibility and frictional effects are negligible.* Multiplying the Bernoulli equation by density gives

$$P + \rho \frac{V^2}{2} + \rho gz = \text{constant}$$

where  $P$  is the *static pressure*, which represents the actual pressure of the fluid;  $\rho V^2/2$  is the *dynamic pressure*, which represents the pressure rise when the fluid in motion is brought to a stop; and  $\rho gz$  is the *hydrostatic pressure*, which accounts for the effects of fluid weight on pressure. The sum of the static, dynamic, and hydrostatic pressures is called the *total pressure*. The Bernoulli equation states that *the total pressure along a streamline is constant*. The sum of the static and dynamic pressures is called the *stagnation pressure*, which represents the pressure at a point where the fluid is brought to a complete stop in an isentropic manner.

The Bernoulli equation can also be represented in terms of “heads” by dividing each term by  $g$ ,

$$\frac{P}{\rho g} + \frac{V^2}{2g} + z = H = \text{constant}$$

where  $P/\rho g$  is the *pressure head*, which represents the height of a fluid column that produces the static pressure  $P$ ;  $V^2/2g$  is the *velocity head*, which represents the elevation needed for a fluid to reach the velocity  $V$  during frictionless free fall; and  $z$  is the *elevation head*, which represents the potential energy of the fluid. Also,  $H$  is the *total head* for the flow. The curve that represents the sum of the static pressure and the elevation heads,  $P/\rho g + z$ , is called the *hydraulic grade line* (HGL), and the curve that represents the total head of the fluid,  $P/\rho g + V^2/2g + z$ , is called the *energy grade line* (EGL).

The *energy equation* for steady, incompressible flow is

$$\begin{aligned} \frac{P_1}{\rho g} + \alpha_1 \frac{V_1^2}{2g} + z_1 + h_{\text{pump, u}} \\ = \frac{P_2}{\rho g} + \alpha_2 \frac{V_2^2}{2g} + z_2 + h_{\text{turbine, e}} + h_L \end{aligned}$$

where

$$\begin{aligned} h_{\text{pump, u}} &= \frac{w_{\text{pump, u}}}{g} = \frac{\dot{W}_{\text{pump, u}}}{\dot{m}g} = \frac{\eta_{\text{pump}} \dot{W}_{\text{pump}}}{\dot{m}g} \\ h_{\text{turbine, e}} &= \frac{w_{\text{turbine, e}}}{g} = \frac{\dot{W}_{\text{turbine, e}}}{\dot{m}g} = \frac{\dot{W}_{\text{turbine}}}{\eta_{\text{turbine}} \dot{m}g} \\ h_L &= \frac{e_{\text{mech loss, piping}}}{g} = \frac{\dot{E}_{\text{mech loss, piping}}}{\dot{m}g} \\ e_{\text{mech, loss}} &= u_2 - u_1 - q_{\text{net in}} \end{aligned}$$

The mass, Bernoulli, and energy equations are three of the most fundamental relations in fluid mechanics, and they are used extensively in the chapters that follow. In Chap. 6, either the Bernoulli equation or the energy equation is used together with the mass and momentum equations to determine the forces and torques acting on fluid systems. In Chaps. 8 and 14, the mass and energy equations are used to determine the pumping power requirements in fluid systems and in the design and analysis of turbomachinery. In Chaps. 12 and 13, the energy equation is also used to some extent in the analysis of compressible flow and open-channel flow.

## REFERENCES AND SUGGESTED READING

1. R. C. Dorf, ed. in chief. *The Engineering Handbook*, 2nd ed. Boca Raton, FL: CRC Press, 2004.
2. R. L. Pantou. *Incompressible Flow*, 3rd ed. New York: Wiley, 2005.
3. M. Van Dyke. *An Album of Fluid Motion*. Stanford, CA: The Parabolic Press, 1982.

## PROBLEMS\*

## Conservation of Mass

**5-1C** Name four physical quantities that are conserved and two quantities that are not conserved during a process.

**5-2C** Define mass and volume flow rates. How are they related to each other?

**5-3C** Does the amount of mass entering a control volume have to be equal to the amount of mass leaving during an unsteady-flow process?

**5-4C** When is the flow through a control volume steady?

**5-5C** Consider a device with one inlet and one outlet. If the volume flow rates at the inlet and at the outlet are the same, is the flow through this device necessarily steady? Why?

**5-6** In climates with low night-time temperatures, an energy-efficient way of cooling a house is to install a fan in the ceiling that draws air from the interior of the house and discharges it to a ventilated attic space. Consider a house whose interior air volume is  $720 \text{ m}^3$ . If air in the house is to be exchanged once every 20 minutes, determine (a) the required flow rate of the fan and (b) the average discharge speed of air if the fan diameter is 0.5 m.

**5-7E** A garden hose attached with a nozzle is used to fill a 20-gal bucket. The inner diameter of the hose is 1 in and it reduces to 0.5 in at the nozzle exit. If the average velocity in the hose is 8 ft/s, determine (a) the volume and mass flow rates of water through the hose, (b) how long it will take to fill the bucket with water, and (c) the average velocity of water at the nozzle exit.

**5-8E** Air whose density is  $0.082 \text{ lbm/ft}^3$  enters the duct of an air-conditioning system at a volume flow rate of  $450 \text{ ft}^3/\text{min}$ . If the diameter of the duct is 16 in, determine the velocity of the air at the duct inlet and the mass flow rate of air.

**5-9** A  $0.75\text{-m}^3$  rigid tank initially contains air whose density is  $1.18 \text{ kg/m}^3$ . The tank is connected to a high-pressure supply line through a valve. The valve is opened, and air is allowed to enter the tank until the density in the tank rises to  $4.95 \text{ kg/m}^3$ . Determine the mass of air that has entered the tank. *Answer: 2.83 kg*

**5-10** Consider the flow of an incompressible Newtonian fluid between two parallel plates. If the upper plate moves to the right with  $u_1 = 3 \text{ m/s}$  while the bottom one moves to the left with

$u_2 = 0.75 \text{ m/s}$ , what would be the net flow rate at a cross-section between two plates? Take the plate width to be  $b = 5 \text{ cm}$ .

**5-11** Consider a fully filled tank of semi-circular cross section tank with radius  $R$  and width of  $b$  into the page, as shown in Fig. P5-11. If the water is pumped out of the tank at flow rate of  $\dot{V} = Kh^2$ , where  $K$  is a positive constant and  $h$  is the water depth at time  $t$ . Determine the time needed to drop the water level to a specified  $h$  value of  $h_0$  in terms of  $R$ ,  $K$ , and  $h_0$ .

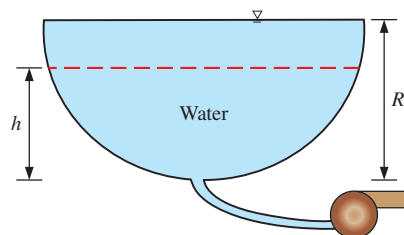


FIGURE P5-11

**5-12** A desktop computer is to be cooled by a fan whose flow rate is  $0.40 \text{ m}^3/\text{min}$ . Determine the mass flow rate of air through the fan at an elevation of 3400 m where the air density is  $0.7 \text{ kg/m}^3$ . Also, if the average velocity of air is not to exceed 110 m/min, determine the minimum diameter of the casing of the fan. *Answers: 0.00467 kg/s, 0.0569 m*

**5-13** A smoking lounge is to accommodate 40 heavy smokers. The minimum fresh air requirement for smoking lounges is specified to be 30 L/s per person (ASHRAE, Standard 62, 1989). Determine the minimum required flow rate of fresh air that needs to be supplied to the lounge, and the minimum diameter of the duct if the air velocity is not to exceed 8 m/s.

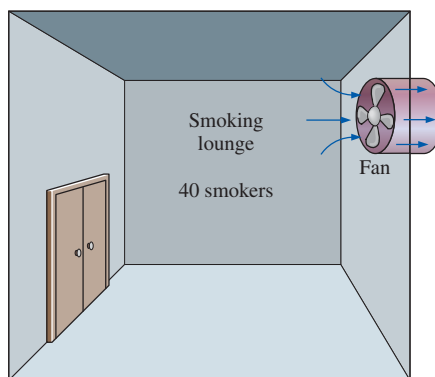


FIGURE P5-13

**5-14** The minimum fresh air requirement of a residential building is specified to be 0.35 air changes per hour (ASHRAE, Standard 62, 1989). That is, 35 percent of the

\* Problems designated by a "C" are concept questions, and students are encouraged to answer them all. Problems designated by an "E" are in English units, and the SI users can ignore them. Problems with the  icon are solved using EES, and complete solutions together with parametric studies are included on the text website. Problems with the  icon are comprehensive in nature and are intended to be solved with an equation solver such as EES.

entire air contained in a residence should be replaced by fresh outdoor air every hour. If the ventilation requirement of a 2.7-m-high, 200-m<sup>2</sup> residence is to be met entirely by a fan, determine the flow capacity in L/min of the fan that needs to be installed. Also determine the minimum diameter of the duct if the average air velocity is not to exceed 5 m/s.

**5-15** Air enters a nozzle steadily at 2.21 kg/m<sup>3</sup> and 20 m/s and leaves at 0.762 kg/m<sup>3</sup> and 150 m/s. If the inlet area of the nozzle is 60 cm<sup>2</sup>, determine (a) the mass flow rate through the nozzle, and (b) the exit area of the nozzle. *Answers: (a) 0.265 kg/s, (b) 23.2 cm<sup>2</sup>*

**5-16** Air at 40°C flows steadily through the pipe shown in Fig. P5-16. If  $P_1 = 50$  kPa (gage),  $P_2 = 10$  kPa (gage),  $D = 3d$ ,  $P_{\text{atm}} \approx 100$  kPa, the average velocity at section 2 is  $V_2 = 30$  m/s, and air temperature remains nearly constant, determine the average speed at section 1.

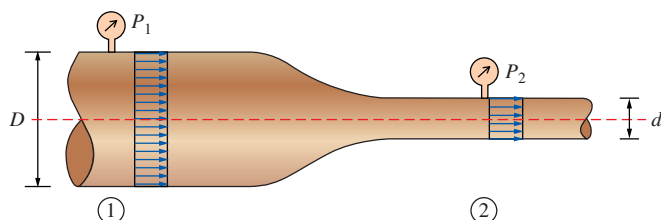


FIGURE P5-16

**5-17** A hair dryer is basically a duct of constant diameter in which a few layers of electric resistors are placed. A small fan pulls the air in and forces it through the resistors where it is heated. If the density of air is 1.20 kg/m<sup>3</sup> at the inlet and 1.05 kg/m<sup>3</sup> at the exit, determine the percent increase in the velocity of air as it flows through the hair dryer.

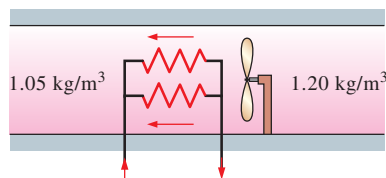


FIGURE P5-17

### Mechanical Energy and Efficiency

**5-18C** Define turbine efficiency, generator efficiency, and combined turbine-generator efficiency.

**5-19C** What is mechanical efficiency? What does a mechanical efficiency of 100 percent mean for a hydraulic turbine?

**5-20C** How is the combined pump-motor efficiency of a pump and motor system defined? Can the combined pump-motor efficiency be greater than either the pump or the motor efficiency?

**5-21C** What is mechanical energy? How does it differ from thermal energy? What are the forms of mechanical energy of a fluid stream?

**5-22** At a certain location, wind is blowing steadily at 8 m/s. Determine the mechanical energy of air per unit mass and the power generation potential of a wind turbine with 50-m-diameter blades at that location. Also determine the actual electric power generation assuming an overall efficiency of 30 percent. Take the air density to be 1.25 kg/m<sup>3</sup>.

**5-23**  Reconsider Prob. 5-22. Using EES (or other) software, investigate the effect of wind velocity and the blade span diameter on wind power generation. Let the velocity vary from 5 to 20 m/s in increments of 5 m/s, and the diameter to vary from 20 to 80 m in increments of 20 m. Tabulate the results, and discuss their significance.

**5-24E** A differential thermocouple with sensors at the inlet and exit of a pump indicates that the temperature of water rises 0.048°F as it flows through the pump at a rate of 1.5 ft<sup>3</sup>/s. If the shaft power input to the pump is 23 hp and the heat loss to the surrounding air is negligible, determine the mechanical efficiency of the pump. *Answer: 72.4 percent*

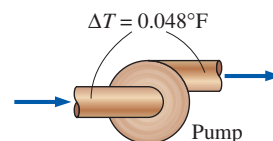


FIGURE P5-24E

**5-25** Electric power is to be generated by installing a hydraulic turbine-generator at a site 110 m below the free surface of a large water reservoir that can supply water steadily at a rate of 900 kg/s. If the mechanical power output of the turbine is 800 kW and the electric power generation is 750 kW, determine the turbine efficiency and the combined turbine-generator efficiency of this plant. Neglect losses in the pipes.

**5-26** Consider a river flowing toward a lake at an average speed of 4 m/s at a rate of 500 m<sup>3</sup>/s at a location 70 m above the lake surface. Determine the total mechanical energy of the river water per unit mass and the power generation potential of the entire river at that location. *Answer: 347 MW*

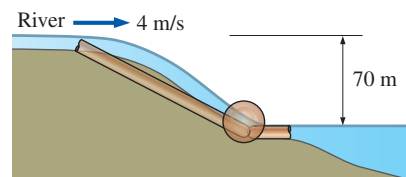


FIGURE P5-26

**5-27** Water is pumped from a lake to a storage tank 18 m above at a rate of 70 L/s while consuming 20.4 kW of electric power. Disregarding any frictional losses in the pipes and any changes in kinetic energy, determine (a) the overall efficiency of

the pump–motor unit and (b) the pressure difference between the inlet and the exit of the pump.

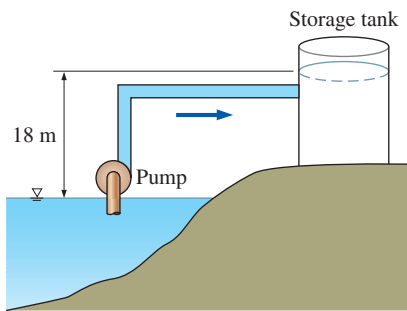


FIGURE P5-27

### Bernoulli Equation

**5-28C** What is stagnation pressure? Explain how it can be measured.

**5-29C** Express the Bernoulli equation in three different ways using (a) energies, (b) pressures, and (c) heads.

**5-30C** What are the three major assumptions used in the derivation of the Bernoulli equation?

**5-31C** Define static, dynamic, and hydrostatic pressure. Under what conditions is their sum constant for a flow stream?

**5-32C** What is streamwise acceleration? How does it differ from normal acceleration? Can a fluid particle accelerate in steady flow?

**5-33C** Define pressure head, velocity head, and elevation head for a fluid stream and express them for a fluid stream whose pressure is  $P$ , velocity is  $V$ , and elevation is  $z$ .

**5-34C** Explain how and why a siphon works. Someone proposes siphoning cold water over a 7-m-high wall. Is this feasible? Explain.

**5-35C** How is the location of the hydraulic grade line determined for open-channel flow? How is it determined at the outlet of a pipe discharging to the atmosphere?

**5-36C** In a certain application, a siphon must go over a high wall. Can water or oil with a specific gravity of 0.8 go over a higher wall? Why?

**5-37C** What is the hydraulic grade line? How does it differ from the energy grade line? Under what conditions do both lines coincide with the free surface of a liquid?

**5-38C** A glass manometer with oil as the working fluid is connected to an air duct as shown in Fig. P5-38C. Will the oil levels in the manometer be as in Fig. P5-38Ca or b? Explain. What would your response be if the flow direction is reversed?

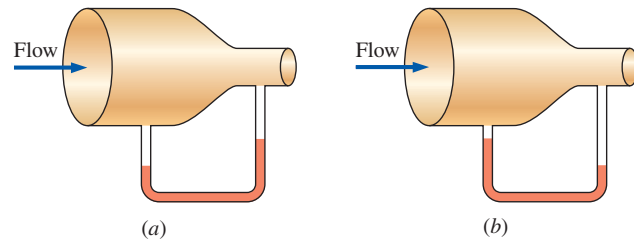


FIGURE P5-38C

**5-39C** The velocity of a fluid flowing in a pipe is to be measured by two different Pitot-type mercury manometers shown in Fig. P5-39C. Would you expect both manometers to predict the same velocity for flowing water? If not, which would be more accurate? Explain. What would your response be if air were flowing in the pipe instead of water?

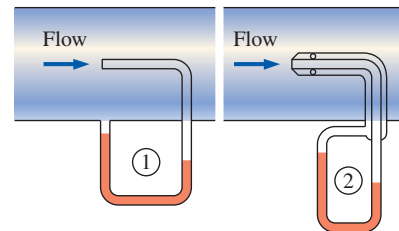


FIGURE P5-39C

**5-40C** The water level of a tank on a building roof is 20 m above the ground. A hose leads from the tank bottom to the ground. The end of the hose has a nozzle, which is pointed straight up. What is the maximum height to which the water could rise? What factors would reduce this height?

**5-41C** A student siphons water over a 8.5-m-high wall at sea level. She then climbs to the summit of Mount Shasta (elevation 4390 m,  $P_{\text{atm}} = 58.5$  kPa) and attempts the same experiment. Comment on her prospects for success.

**5-42** In a hydroelectric power plant, water enters the turbine nozzles at 800 kPa absolute with a low velocity. If the nozzle outlets are exposed to atmospheric pressure of 100 kPa, determine the maximum velocity to which water can be accelerated by the nozzles before striking the turbine blades.

**5-43** A Pitot-static probe is used to measure the speed of an aircraft flying at 3000 m. If the differential pressure reading is 3 kPa, determine the speed of the aircraft.

**5-44** The air velocity in the duct of a heating system is to be measured by a Pitot-static probe inserted into the duct parallel to the flow. If the differential height between the water columns connected to the two outlets of the probe is 2.4 cm, determine (a) the flow velocity and (b) the pressure rise at

the tip of the probe. The air temperature and pressure in the duct are 45°C and 98 kPa, respectively.

**5-45E**  The drinking water needs of an office are met by large water bottles. One end of a 0.25-in-diameter plastic hose is inserted into the bottle placed on a high stand, while the other end with an on/off valve is maintained 2 ft below the bottom of the bottle. If the water level in the bottle is 1.5 ft when it is full, determine how long it will take at the minimum to fill an 8-oz glass (= 0.00835 ft<sup>3</sup>) (a) when the bottle is first opened and (b) when the bottle is almost empty. Neglect frictional losses.

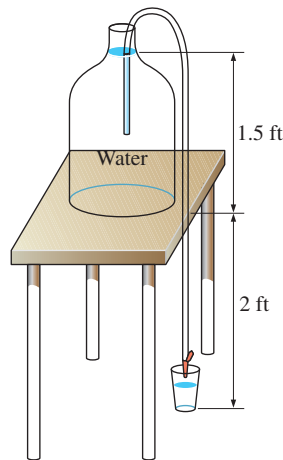


FIGURE P5-45E

**5-46** A piezometer and a Pitot tube are tapped into a 4-cm-diameter horizontal water pipe, and the height of the water columns are measured to be 26 cm in the piezometer and 35 cm in the Pitot tube (both measured from the top surface of the pipe). Determine the velocity at the center of the pipe.

**5-47** The diameter of a cylindrical water tank is  $D_o$  and its height is  $H$ . The tank is filled with water, which is open to the atmosphere. An orifice of diameter  $D$  with a smooth entrance (i.e., negligible losses) is open at the bottom. Develop a relation for the time required for the tank (a) to empty halfway and (b) to empty completely.

**5-48E** A siphon pumps water from a large reservoir to a lower tank that is initially empty. The tank also has a rounded orifice 20 ft below the reservoir surface where the water leaves the tank. Both the siphon and the orifice diameters are 2 in. Ignoring frictional losses, determine to what height the water will rise in the tank at equilibrium.

**5-49** Water enters a tank of diameter  $D_T$  steadily at a mass flow rate of  $\dot{m}_{in}$ . An orifice at the bottom with diameter  $D_o$  allows water to escape. The orifice has a rounded entrance, so the frictional losses are negligible. If the tank is initially empty, (a) determine the maximum height that the water will

reach in the tank and (b) obtain a relation for water height  $z$  as a function of time.

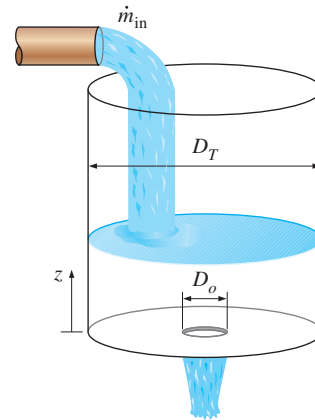


FIGURE P5-49

**5-50E** Water flows through a horizontal pipe at a rate of 2.4 gal/s. The pipe consists of two sections of diameters 4 in and 2 in with a smooth reducing section. The pressure difference between the two pipe sections is measured by a mercury manometer. Neglecting frictional effects, determine the differential height of mercury between the two pipe sections.

Answer: 3.0 in

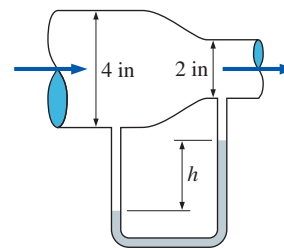


FIGURE P5-50E

**5-51** An airplane is flying at an altitude of 12,000 m. Determine the gage pressure at the stagnation point on the nose of the plane if the speed of the plane is 300 km/h. How would you solve this problem if the speed were 1050 km/h? Explain.

**5-52** While traveling on a dirt road, the bottom of a car hits a sharp rock and a small hole develops at the bottom of its gas tank. If the height of the gasoline in the tank is 30 cm, determine the initial velocity of the gasoline at the hole. Discuss how the velocity will change with time and how the flow will be affected if the lid of the tank is closed tightly.

Answer: 2.43 m/s

**5-53** The water in an 8-m-diameter, 3-m-high above-ground swimming pool is to be emptied by unplugging a 3-cm-diameter, 25-m-long horizontal pipe attached to the bottom of the pool. Determine the maximum discharge rate of water through the pipe. Also, explain why the actual flow rate will be less.

**5-54** Reconsider Prob. 5-53. Determine how long it will take to empty the swimming pool completely. *Answer: 15.4 h*

**5-55**  Reconsider Prob. 5-54. Using EES (or other) software, investigate the effect of the discharge pipe diameter on the time required to empty the pool completely. Let the diameter vary from 1 to 10 cm in increments of 1 cm. Tabulate and plot the results.

**5-56** Air at 105 kPa and 37°C flows upward through a 6-cm-diameter inclined duct at a rate of 65 L/s. The duct diameter is then reduced to 4 cm through a reducer. The pressure change across the reducer is measured by a water manometer. The elevation difference between the two points on the pipe where the two arms of the manometer are attached is 0.20 m. Determine the differential height between the fluid levels of the two arms of the manometer.

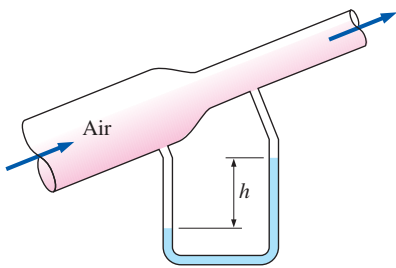


FIGURE P5-56

**5-57** A handheld bicycle pump can be used as an atomizer to generate a fine mist of paint or pesticide by forcing air at a high velocity through a small hole and placing a short tube between the liquid reservoir and the high-speed air jet. The pressure across a subsonic jet exposed to the atmosphere is nearly atmospheric, and the surface of the liquid in the reservoir is also open to atmospheric pressure. In light of this, explain how the liquid is sucked up the tube. *Hint: Read Sec. 5-4 carefully.*

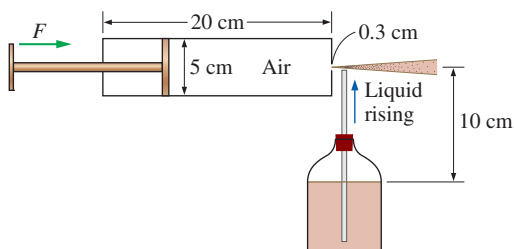


FIGURE P5-57

**5-58** Water at 20°C is siphoned from a reservoir as shown in Fig. P5-58. For  $d = 10$  cm and  $D = 16$  cm, determine (a) the minimum flow rate that can be achieved without cavitation occurring in the piping system and (b) the maximum elevation of the highest point of the piping system to avoid cavitation.

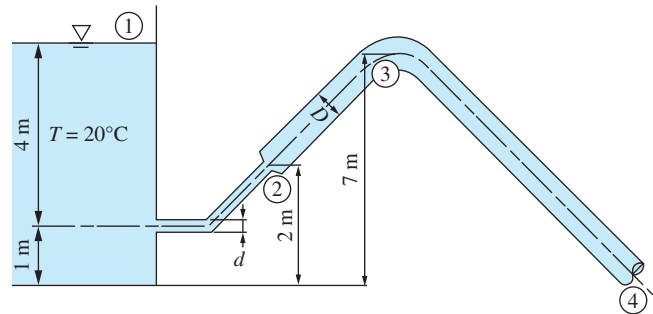


FIGURE P5-58

**5-59** The water pressure in the mains of a city at a particular location is 270 kPa gage. Determine if this main can serve water to neighborhoods that are 25 m above this location.

**5-60** A pressurized tank of water has a 10-cm-diameter orifice at the bottom, where water discharges to the atmosphere. The water level is 2.5 m above the outlet. The tank air pressure above the water level is 250 kPa (absolute) while the atmospheric pressure is 100 kPa. Neglecting frictional effects, determine the initial discharge rate of water from the tank. *Answer: 0.147 m³/s*

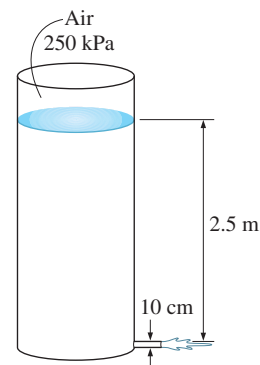


FIGURE P5-60

**5-61**  Reconsider Prob. 5-60. Using EES (or other) software, investigate the effect of water height in the tank on the discharge velocity. Let the water height vary from 0 to 5 m in increments of 0.5 m. Tabulate and plot the results.

**5-62E** Air is flowing through a venturi meter whose diameter is 2.6 in at the entrance part (location 1) and 1.8 in at the throat (location 2). The gage pressure is measured to be 12.2 psia at the entrance and 11.8 psia at the throat. Neglecting frictional effects, show that the volume flow rate can be expressed as

$$\dot{V} = A_2 \sqrt{\frac{2(P_1 - P_2)}{\rho(1 - A_2^2/A_1^2)}}$$

and determine the flow rate of air. Take the air density to be 0.075 lbm/ft<sup>3</sup>.

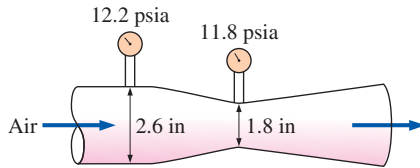


FIGURE P5-62E

**5-63** The water level in a tank is 15 m above the ground. A hose is connected to the bottom of the tank, and the nozzle at the end of the hose is pointed straight up. The tank cover is airtight, and the air pressure above the water surface is 3 atm gage. The system is at sea level. Determine the maximum height to which the water stream could rise. *Answer: 46.0 m*

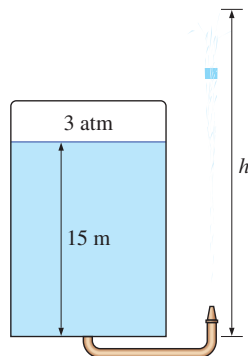


FIGURE P5-63

**5-64** A Pitot-static probe connected to a water manometer is used to measure the velocity of air. If the deflection (the vertical distance between the fluid levels in the two arms) is 5.5 cm, determine the air velocity. Take the density of air to be 1.16 kg/m<sup>3</sup>.

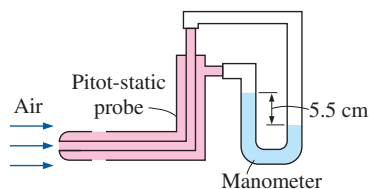


FIGURE P5-64

**5-65E** The air velocity in a duct is measured by a Pitot-static probe connected to a differential pressure gage. If the air is at 13.4 psia absolute and 70°F and the reading of the differential pressure gage is 0.15 psi, determine the air velocity. *Answer: 143 ft/s*

**5-66** In cold climates, water pipes may freeze and burst if proper precautions are not taken. In such an occurrence, the exposed part of a pipe on the ground ruptures, and water shoots up to 42 m. Estimate the gage pressure of water in the pipe. State your assumptions and discuss if the actual pressure is more or less than the value you predicted.

**5-67** A well-fitting piston with 4 small holes in a sealed water-filled cylinder, shown in Fig. P5-67, is pushed to the right at a constant speed of 4 mm/s while the pressure in the right compartment remains constant at 50 kPa gage. Disregarding the frictional effects, determine the force  $F$  that needs to be applied to the piston to maintain this motion.

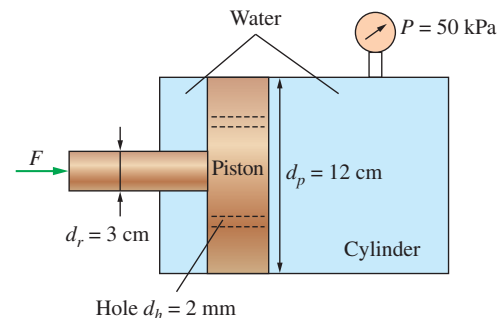


FIGURE P5-67

**5-68** A fluid of density  $\rho$  and viscosity  $\mu$  flows through a section of horizontal converging-diverging duct. The duct cross-sectional areas  $A_{\text{inlet}}$ ,  $A_{\text{throat}}$ , and  $A_{\text{outlet}}$  are known at the inlet, throat (minimum area), and outlet, respectively. Average pressure  $P_{\text{outlet}}$  is measured at the outlet, and average velocity  $V_{\text{inlet}}$  is measured at the inlet. (a) Neglecting any irreversibilities such as friction, generate expressions for the average velocity and average pressure at the inlet and the throat in terms of the given variables. (b) In a real flow (with irreversibilities), do you expect the actual pressure at the inlet to be higher or lower than the prediction? Explain.

### Energy Equation

**5-69C** What is useful pump head? How is it related to the power input to the pump?

**5-70C** Consider the steady adiabatic flow of an incompressible fluid. Can the temperature of the fluid decrease during flow? Explain.

**5-71C** What is irreversible head loss? How is it related to the mechanical energy loss?

**5-72C** Consider the steady adiabatic flow of an incompressible fluid. If the temperature of the fluid remains constant during flow, is it accurate to say that the frictional effects are negligible?

**5-73C** What is the kinetic energy correction factor? Is it significant?

**5-74C** The water level in a tank is 20 m above the ground. A hose is connected to the bottom of the tank, and the nozzle at the end of the hose is pointed straight up. The water stream from the nozzle is observed to rise 25 m above the ground. Explain what may cause the water from the hose to rise above the tank level.

**5-75C** A person is filling a knee-high bucket with water using a garden hose and holding it such that water discharges from the hose at the level of his waist. Someone suggests that the bucket will fill faster if the hose is lowered such that water discharges from the hose at the knee level. Do you agree with this suggestion? Explain. Disregard any frictional effects.

**5-76C** A 3-m-high tank filled with water has a discharge valve near the bottom and another near the top. (a) If these two valves are opened, will there be any difference between the discharge velocities of the two water streams? (b) If a hose whose discharge end is left open on the ground is first connected to the lower valve and then to the higher valve, will there be any difference between the discharge rates of water for the two cases? Disregard any frictional effects.

**5-77E** In a hydroelectric power plant, water flows from an elevation of 400 ft to a turbine, where electric power is generated. For an overall turbine-generator efficiency of 85 percent, determine the minimum flow rate required to generate 100 kW of electricity. *Answer: 217 lbm/s*

**5-78E** Reconsider Prob. 5-77E. Determine the flow rate of water if the irreversible head loss of the piping system between the free surfaces of the inlet and the outlet is 36 ft.

**5-79** An oil pump is drawing 25 kW of electric power while pumping oil with  $\rho = 860 \text{ kg/m}^3$  at a rate of  $0.1 \text{ m}^3/\text{s}$ . The inlet and outlet diameters of the pipe are 8 cm and 12 cm, respectively. If the pressure rise of oil in the pump is measured

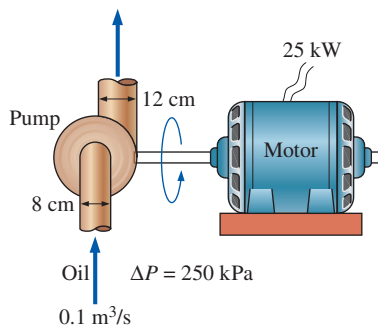


FIGURE P5-79

to be 250 kPa and the motor efficiency is 90 percent, determine the mechanical efficiency of the pump. Take the kinetic energy correction factor to be 1.05.

**5-80** Water is being pumped from a large lake to a reservoir 25 m above at a rate of 25 L/s by a 10-kW (shaft) pump. If the irreversible head loss of the piping system is 5 m, determine the mechanical efficiency of the pump. *Answer: 73.6 percent*

**5-81**  Reconsider Prob. 5-80. Using EES (or other) software, investigate the effect of irreversible head loss on the mechanical efficiency of the pump. Let the head loss vary from 0 to 15 m in increments of 1 m. Plot the results, and discuss them.

**5-82** A 15-hp (shaft) pump is used to raise water to a 45-m higher elevation. If the mechanical efficiency of the pump is 82 percent, determine the maximum volume flow rate of water.

**5-83** Water flows at a rate of  $0.035 \text{ m}^3/\text{s}$  in a horizontal pipe whose diameter is reduced from 15 cm to 8 cm by a reducer. If the pressure at the centerline is measured to be 480 kPa and 445 kPa before and after the reducer, respectively, determine the irreversible head loss in the reducer. Take the kinetic energy correction factors to be 1.05. *Answer: 1.18 m*

**5-84** The water level in a tank is 20 m above the ground. A hose is connected to the bottom of the tank, and the nozzle at the end of the hose is pointed straight up. The tank is at sea level, and the water surface is open to the atmosphere. In the line leading from the tank to the nozzle is a pump, which increases the pressure of water. If the water jet rises to a height of 27 m from the ground, determine the minimum pressure rise supplied by the pump to the water line.

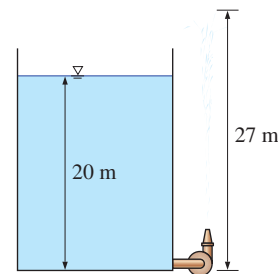


FIGURE P5-84

**5-85** A hydraulic turbine has 50 m of head available at a flow rate of  $1.30 \text{ m}^3/\text{s}$ , and its overall turbine-generator efficiency is 78 percent. Determine the electric power output of this turbine.

**5-86**  A fan is to be selected to ventilate a bathroom whose dimensions are  $2 \text{ m} \times 3 \text{ m} \times 3 \text{ m}$ . The air velocity is not to exceed 8 m/s to minimize vibration and noise. The combined efficiency of the fan-motor unit to be

used can be taken to be 50 percent. If the fan is to replace the entire volume of air in 10 min, determine (a) the wattage of the fan–motor unit to be purchased, (b) the diameter of the fan casing, and (c) the pressure difference across the fan. Take the air density to be  $1.25 \text{ kg/m}^3$  and disregard the effect of the kinetic energy correction factors.

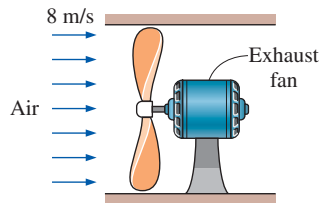


FIGURE P5-86

**5-87** Water flows at a rate of  $20 \text{ L/s}$  through a horizontal pipe whose diameter is constant at  $3 \text{ cm}$ . The pressure drop across a valve in the pipe is measured to be  $2 \text{ kPa}$ , as shown in Fig P5-87. Determine the irreversible head loss of the valve, and the useful pumping power needed to overcome the resulting pressure drop. *Answers:  $0.204 \text{ m}$ ,  $40 \text{ W}$*

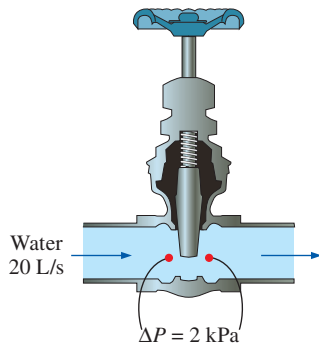


FIGURE P5-87

**5-88E** The water level in a tank is  $34 \text{ ft}$  above the ground. A hose is connected to the bottom of the tank at the ground level and the nozzle at the end of the hose is pointed straight up. The tank cover is airtight, but the pressure over the water surface is unknown. Determine the minimum tank air pressure (gage) that will cause a water stream from the nozzle to rise  $72 \text{ ft}$  from the ground.

**5-89** A large tank is initially filled with water  $5 \text{ m}$  above the center of a sharp-edged  $10\text{-cm}$ -diameter orifice. The tank water surface is open to the atmosphere, and the orifice drains to the atmosphere. If the total irreversible head loss in the system is  $0.3 \text{ m}$ , determine the initial discharge velocity of water from the tank. Take the kinetic energy correction factor at the orifice to be  $1.2$ .

**5-90** Water enters a hydraulic turbine through a  $30\text{-cm}$ -diameter pipe at a rate of  $0.6 \text{ m}^3/\text{s}$  and exits through a  $25\text{-cm}$ -diameter pipe. The pressure drop in the turbine is measured by a mercury manometer to be  $1.2 \text{ m}$ . For a combined turbine–generator efficiency of  $83 \text{ percent}$ , determine the net electric power output. Disregard the effect of the kinetic energy correction factors.

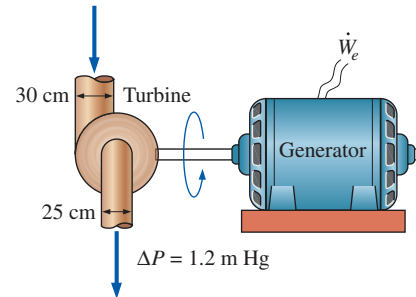


FIGURE P5-90

**5-91** The velocity profile for turbulent flow in a circular pipe is approximated as  $u(r) = u_{\max}(1 - r/R)^{1/n}$ , where  $n = 9$ . Determine the kinetic energy correction factor for this flow. *Answer:  $1.04$*

**5-92** Water is pumped from a lower reservoir to a higher reservoir by a pump that provides  $20 \text{ kW}$  of useful mechanical power to the water. The free surface of the upper reservoir is  $45 \text{ m}$  higher than the surface of the lower reservoir. If the flow rate of water is measured to be  $0.03 \text{ m}^3/\text{s}$ , determine the irreversible head loss of the system and the lost mechanical power during this process.

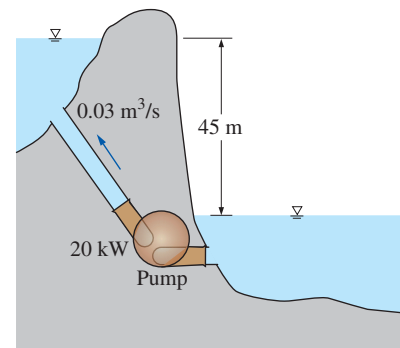


FIGURE P5-92

**5-93** Water in a partially filled large tank is to be supplied to the roof top, which is  $8 \text{ m}$  above the water level in the tank, through a  $2.5\text{-cm}$ -internal-diameter pipe by maintaining a constant air pressure of  $300 \text{ kPa}$  (gage) in the tank. If the head loss in the piping is  $2 \text{ m}$  of water, determine the discharge rate of the supply of water to the roof top.

**5-94** Underground water is to be pumped by a 78 percent efficient 5-kW submerged pump to a pool whose free surface is 30 m above the underground water level. The diameter of the pipe is 7 cm on the intake side and 5 cm on the discharge side. Determine (a) the maximum flow rate of water and (b) the pressure difference across the pump. Assume the elevation difference between the pump inlet and the outlet and the effect of the kinetic energy correction factors to be negligible.

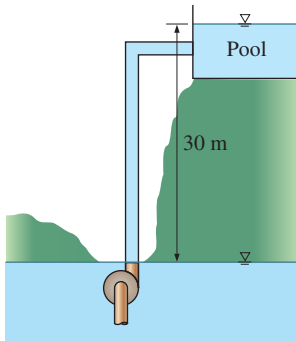


FIGURE P5-94

**5-95** Reconsider Prob. 5-94. Determine the flow rate of water and the pressure difference across the pump if the irreversible head loss of the piping system is 4 m.

**5-96E** A 73-percent efficient 12-hp pump is pumping water from a lake to a nearby pool at a rate of 1.2 ft<sup>3</sup>/s through a constant-diameter pipe. The free surface of the pool is 35 ft above that of the lake. Determine the irreversible head loss of the piping system, in ft, and the mechanical power used to overcome it.

**5-97** The demand for electric power is usually much higher during the day than it is at night, and utility companies often sell power at night at much lower prices to encourage consumers to use the available power generation capacity and to avoid building new expensive power plants that will be used only a short time during peak periods. Utilities are also willing to purchase power produced during the day from private parties at a high price.

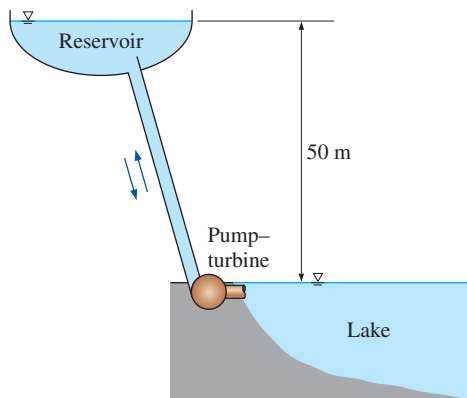


FIGURE P5-97

Suppose a utility company is selling electric power for \$0.06/kWh at night and is willing to pay \$0.13/kWh for power produced during the day. To take advantage of this opportunity, an entrepreneur is considering building a large reservoir 50 m above the lake level, pumping water from the lake to the reservoir at night using cheap power, and letting the water flow from the reservoir back to the lake during the day, producing power as the pump-motor operates as a turbine-generator during reverse flow. Preliminary analysis shows that a water flow rate of 2 m<sup>3</sup>/s can be used in either direction, and the irreversible head loss of the piping system is 4 m. The combined pump-motor and turbine-generator efficiencies are expected to be 75 percent each. Assuming the system operates for 10 h each in the pump and turbine modes during a typical day, determine the potential revenue this pump-turbine system can generate per year.

**5-98** When a system is subjected to a linear rigid body motion with constant linear acceleration  $a$  along a distance  $L$ , the modified Bernoulli Equation takes the form

$$\left( \frac{P_1}{\rho} + \frac{V_1^2}{2} + gz_1 \right) - \left( \frac{P_2}{\rho} + \frac{V_2^2}{2} + gz_2 \right) = aL + \text{Losses}$$

where  $V_1$  and  $V_2$  are velocities relative to a fixed point and 'Losses' which represents frictional losses is zero when the frictional effects are negligible. The tank with two discharge pipes shown in Fig. P5-98 accelerates to the left at a constant linear acceleration of 3 m/s<sup>2</sup>. If volumetric flow rates from both pipes are to be identical, determine the diameter  $D$  of the inclined pipe. Disregard any frictional effects.

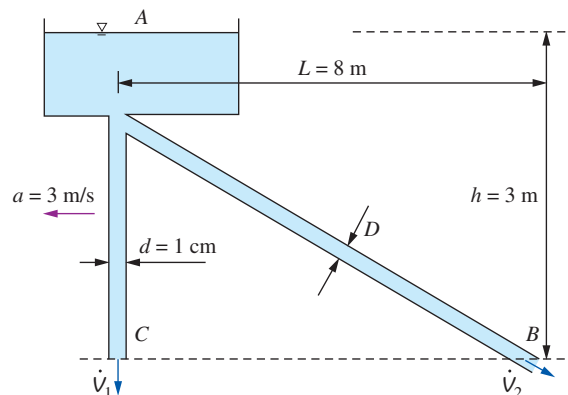


FIGURE P5-98

**5-99** A fireboat is to fight fires at coastal areas by drawing seawater with a density of 1030 kg/m<sup>3</sup> through a 10-cm-diameter pipe at a rate of 0.04 m<sup>3</sup>/s and discharging it through a hose nozzle with an exit diameter of 5 cm. The total irreversible head loss of the system is 3 m, and the position of the nozzle is 3 m above sea level. For a pump efficiency of 70 percent, determine the required shaft power input to the pump and the water discharge velocity. *Answers: 39.2 kW, 20.4 m/s*



FIGURE P5-99

**Review Problems**

**5-100** The velocity of a liquid flowing in a circular pipe of radius  $R$  varies from zero at the wall to a maximum at the pipe center. The velocity distribution in the pipe can be represented as  $V(r)$ , where  $r$  is the radial distance from the pipe center. Based on the definition of mass flow rate  $\dot{m}$ , obtain a relation for the average velocity in terms of  $V(r)$ ,  $R$ , and  $r$ .

**5-101** Air at  $2.50 \text{ kg/m}^3$  enters a nozzle that has an inlet-to-exit area ratio of 2:1 with a velocity of  $120 \text{ m/s}$  and leaves with a velocity of  $330 \text{ m/s}$ . Determine the density of air at the exit. *Answer:  $1.82 \text{ kg/m}^3$*

**5-102E** The water level in a tank is  $55 \text{ ft}$  above the ground. A hose is connected to the bottom of the tank, and the nozzle at the end of the hose is pointed straight up. The tank is at sea level, and the water surface is open to the atmosphere. In the line leading from the tank to the nozzle is a pump, which increases the water pressure by  $10 \text{ psia}$ . Determine the maximum height to which the water stream could rise.

**5-103** A pressurized  $2\text{-m}$ -diameter tank of water has a  $10\text{-cm}$ -diameter orifice at the bottom, where water discharges to the atmosphere. The water level initially is  $3 \text{ m}$  above the outlet. The tank air pressure above the water level is maintained at  $450 \text{ kPa}$  absolute and the atmospheric pressure is  $100 \text{ kPa}$ . Neglecting frictional effects, determine (a) how long it will take for half of the water in the tank to be discharged and (b) the water level in the tank after  $10 \text{ s}$ .

**5-104** Air flows through a pipe at a rate of  $120 \text{ L/s}$ . The pipe consists of two sections of diameters  $22 \text{ cm}$  and  $10 \text{ cm}$  with a smooth reducing section that connects them. The pressure difference between the two pipe sections is measured by a water manometer. Neglecting frictional effects, determine the differential height of water between the two pipe sections. Take the air density to be  $1.20 \text{ kg/m}^3$ . *Answer:  $1.37 \text{ cm}$*

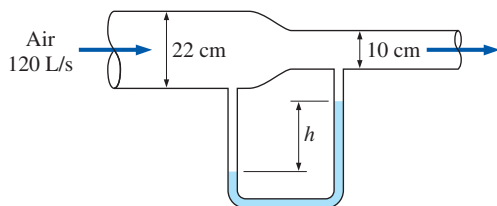


FIGURE P5-104

**5-105**  Air at  $100 \text{ kPa}$  and  $25^\circ\text{C}$  flows in a horizontal duct of variable cross section. The water column in the manometer that measures the difference between two sections has a vertical displacement of  $8 \text{ cm}$ . If the velocity in the first section is low and the friction is negligible, determine the velocity at the second section. Also, if the manometer reading has a possible error of  $\pm 2 \text{ mm}$ , conduct an error analysis to estimate the range of validity for the velocity found.

**5-106** A very large tank contains air at  $102 \text{ kPa}$  at a location where the atmospheric air is at  $100 \text{ kPa}$  and  $20^\circ\text{C}$ . Now a  $2\text{-cm}$ -diameter tap is opened. Determine the maximum flow rate of air through the hole. What would your response be if air is discharged through a  $2\text{-m}$ -long,  $4\text{-cm}$ -diameter tube with a  $2\text{-cm}$ -diameter nozzle? Would you solve the problem the same way if the pressure in the storage tank were  $300 \text{ kPa}$ ?

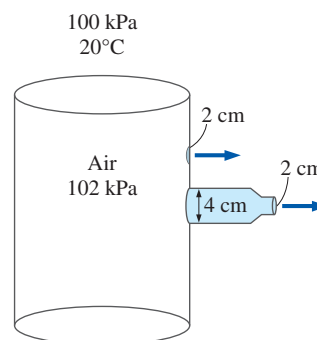


FIGURE P5-106

**5-107** Water is flowing through a Venturi meter whose diameter is  $7 \text{ cm}$  at the entrance part and  $4 \text{ cm}$  at the throat. The pressure is measured to be  $380 \text{ kPa}$  at the entrance and  $150 \text{ kPa}$  at the throat. Neglecting frictional effects, determine the flow rate of water. *Answer:  $0.0285 \text{ m}^3/\text{s}$*

**5-108** Water flows at a rate of  $0.011 \text{ m}^3/\text{s}$  in a horizontal pipe whose diameter increases from  $6$  to  $11 \text{ cm}$  by an enlargement section. If the head loss across the enlargement section is  $0.65 \text{ m}$  and the kinetic energy correction factor at both the inlet and the outlet is  $1.05$ , determine the pressure change.

**5-109** The air in a  $6\text{-m} \times 5\text{-m} \times 4\text{-m}$  hospital room is to be completely replaced by conditioned air every  $20 \text{ min}$ . If the average air velocity in the circular air duct leading to the room is not to exceed  $5 \text{ m/s}$ , determine the minimum diameter of the duct.

**5-110** Underground water is being pumped into a pool whose cross section is  $3 \text{ m} \times 4 \text{ m}$  while water is discharged through a  $5\text{-cm}$ -diameter orifice at a constant average velocity of  $5 \text{ m/s}$ . If the water level in the pool rises at a rate of  $1.5 \text{ cm/min}$ , determine the rate at which water is supplied to the pool, in  $\text{m}^3/\text{s}$ .

**5-111** A  $3\text{-m}$ -high large tank is initially filled with water. The tank water surface is open to the atmosphere, and a

sharp-edged 10-cm-diameter orifice at the bottom drains to the atmosphere through a horizontal 80-m-long pipe. If the total irreversible head loss of the system is determined to be 1.5 m, determine the initial velocity of the water from the tank. Disregard the effect of the kinetic energy correction factors. *Answer: 5.42 m/s*

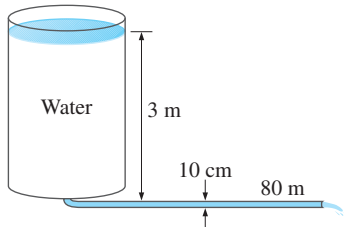


FIGURE P5-111

**5-112**  Reconsider Prob. 5-111. Using EES (or other) software, investigate the effect of the tank height on the initial discharge velocity of water from the completely filled tank. Let the tank height vary from 2 to 15 m in increments of 1 m, and assume the irreversible head loss to remain constant. Tabulate and plot the results.

**5-113** Reconsider Prob. 5-111. In order to drain the tank faster, a pump is installed near the tank exit. Determine the pump head input necessary to establish an average water velocity of 6.5 m/s when the tank is full.

**5-114** A  $D_0 = 8$ -m-diameter tank is initially filled with water 2 m above the center of a  $D = 10$ -cm-diameter valve near the bottom. The tank surface is open to the atmosphere, and the tank drains through a  $L = 80$ -m-long pipe connected to the valve. The friction factor of the pipe is given to be  $f = 0.015$ , and the discharge velocity is expressed as

$$V = \sqrt{\frac{2gz}{1.5 + fL/D}}$$
 where  $z$  is the water height above the center of the valve. Determine (a) the initial discharge velocity from the tank and (b) the time required to empty the tank. The tank can be considered to be empty when the water level drops to the center of the valve.

**5-115** In some applications, elbow-type flow meters like the one shown in Fig. P5-115 are used to measure flow rates. The pipe radius is  $R$ , the radius of curvature of the elbow is  $\lambda$ , and the pressure difference  $\Delta P$  across the curvature inside the pipe is measured. From the potential flow theory, it is known that  $Vr = C$ , where  $V$  is the fluid velocity at a distance  $r$  from the center of curvature  $O$ , and  $C$  is a constant. Assuming frictionless steady-state flow and thus the Bernoulli equation across streamlines to be applicable, obtain a relation for the flow rate as a function of  $\rho$ ,  $g$ ,  $\Delta P$ ,  $\lambda$ , and  $R$ .

*Answer:  $\dot{V} = \pi \sqrt{\frac{2\Delta P}{\rho g \lambda R}} (\lambda^2 - R^2)(\lambda - \sqrt{\lambda^2 - R^2})$*

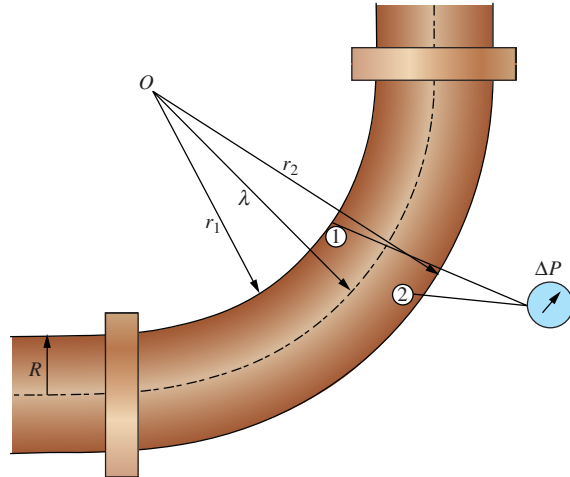


FIGURE P5-115

**5-116** The cylindrical water tank with a valve at the bottom shown in Fig. P5-116 contains air at the top part at the local atmospheric pressure of 100 kPa and water as shown. Is it possible to completely empty this tank by fully opening the valve? If not, determine the water height in the tank when water stops flowing out of the fully open valve. Assume the temperature of the air inside the cylinder to remain constant during the discharging process.

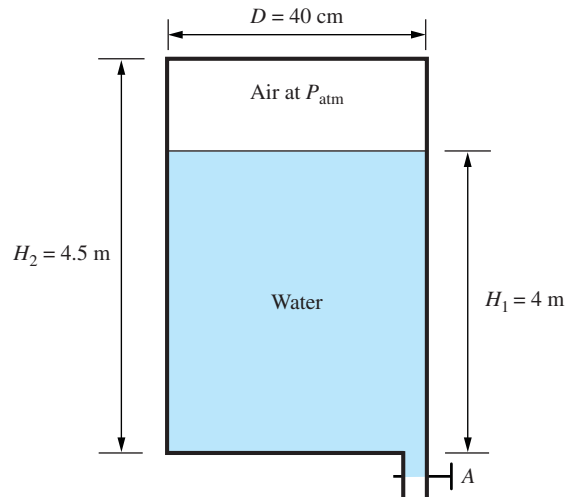


FIGURE P5-116

**5-117** A rigid tank of volume  $1.5 \text{ m}^3$  initially contains atmospheric air at  $20^\circ\text{C}$  and 150 kPa. Now a compressor is turned on, and atmospheric air at a constant rate of  $0.05 \text{ m}^3/\text{s}$  is supplied to the tank. If the pressure and density in the tank varies as  $P/\rho^{1.4} = \text{constant}$  during charging, (a) obtain a relation for the variation of pressure in the tank with time and

(b) calculate how long it will take for the absolute pressure in the tank to triple.

**5-118** A wind tunnel draws atmospheric air at  $20^\circ\text{C}$  and  $101.3\text{ kPa}$  by a large fan located near the exit of the tunnel. If the air velocity in the tunnel is  $80\text{ m/s}$ , determine the pressure in the tunnel.

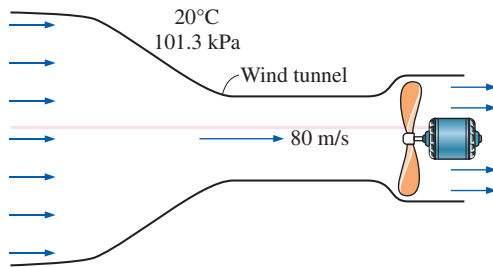


FIGURE P5-118

### Fundamentals of Engineering (FE) Exam Problems

**5-119** Water flows in a 5-cm-diameter pipe at a velocity of  $0.75\text{ m/s}$ . The mass flow rate of water in the pipe is  
(a)  $353\text{ kg/min}$  (b)  $75\text{ kg/min}$  (c)  $37.5\text{ kg/min}$   
(d)  $1.47\text{ kg/min}$  (e)  $88.4\text{ kg/min}$

**5-120** Air at  $100\text{ kPa}$  and  $20^\circ\text{C}$  flows in a 12-cm-diameter pipe at a rate of  $9.5\text{ kg/min}$ . The velocity of air in the pipe is  
(a)  $1.4\text{ m/s}$  (b)  $6.0\text{ m/s}$  (c)  $9.5\text{ m/s}$  (d)  $11.8\text{ m/s}$   
(e)  $14.0\text{ m/s}$

**5-121** A water tank initially contains  $140\text{ L}$  of water. Now, equal rates of cold and hot water enter the tank for a period of 30 minutes while warm water is discharged from the tank at a rate of  $25\text{ L/min}$ . The amount of water in the tank at the end of this 30-min period is  $50\text{ L}$ . The rate of hot water entering the tank is  
(a)  $33\text{ L/min}$  (b)  $25\text{ L/min}$  (c)  $11\text{ L/min}$  (d)  $7\text{ L/min}$   
(e)  $5\text{ L/min}$

**5-122** Water enters a 4-cm-diameter pipe at a velocity of  $1\text{ m/s}$ . The diameter of the pipe is reduced to  $3\text{ cm}$  at the exit. The velocity of the water at the exit is  
(a)  $1.78\text{ m/s}$  (b)  $1.25\text{ m/s}$  (c)  $1\text{ m/s}$  (d)  $0.75\text{ m/s}$   
(e)  $0.50\text{ m/s}$

**5-123** The pressure of water is increased from  $100\text{ kPa}$  to  $900\text{ kPa}$  by a pump. The mechanical energy increase of water is  
(a)  $0.9\text{ kJ/kg}$  (b)  $0.5\text{ kJ/kg}$  (c)  $500\text{ kJ/kg}$  (d)  $0.8\text{ kJ/kg}$   
(e)  $800\text{ kJ/kg}$

**5-124** A 75-m-high water body that is open to the atmosphere is available. Water is run through a turbine at a rate of  $200\text{ L/s}$  at the bottom of the water body. The pressure difference across the turbine is  
(a)  $736\text{ kPa}$  (b)  $0.736\text{ kPa}$  (c)  $1.47\text{ kPa}$  (d)  $1470\text{ kPa}$   
(e)  $368\text{ kPa}$

**5-125** A pump is used to increase the pressure of water from  $100\text{ kPa}$  to  $900\text{ kPa}$  at a rate of  $160\text{ L/min}$ . If the shaft power input to the pump is  $3\text{ kW}$ , the efficiency of the pump is  
(a)  $0.532$  (b)  $0.660$  (c)  $0.711$  (d)  $0.747$  (e)  $0.855$

**5-126** A hydraulic turbine is used to generate power by using the water in a dam. The elevation difference between the free surfaces upstream and downstream of the dam is  $120\text{ m}$ . The water is supplied to the turbine at a rate of  $150\text{ kg/s}$ . If the shaft power output from the turbine is  $155\text{ kW}$ , the efficiency of the turbine is  
(a)  $0.77$  (b)  $0.80$  (c)  $0.82$  (d)  $0.85$  (e)  $0.88$

**5-127** The motor of a pump consumes  $1.05\text{ hp}$  of electricity. The pump increases the pressure of water from  $120\text{ kPa}$  to  $1100\text{ kPa}$  at a rate of  $35\text{ L/min}$ . If the motor efficiency is 94 percent, the pump efficiency is  
(a)  $0.75$  (b)  $0.78$  (c)  $0.82$  (d)  $0.85$  (e)  $0.88$

**5-128** The efficiency of a hydraulic turbine-generator unit is specified to be 85 percent. If the generator efficiency is 96 percent, the turbine efficiency is  
(a)  $0.816$  (b)  $0.850$  (c)  $0.862$  (d)  $0.885$  (e)  $0.960$

**5-129** Which parameter is *not* related in the Bernoulli equation?  
(a) Density (b) Velocity (c) Time (d) Pressure  
(e) Elevation

**5-130** Consider incompressible, frictionless flow of a fluid in a horizontal piping. The pressure and velocity of a fluid is measured to be  $150\text{ kPa}$  and  $1.25\text{ m/s}$  at a specified point. The density of the fluid is  $700\text{ kg/m}^3$ . If the pressure is  $140\text{ kPa}$  at another point, the velocity of the fluid at that point is  
(a)  $1.26\text{ m/s}$  (b)  $1.34\text{ m/s}$  (c)  $3.75\text{ m/s}$  (d)  $5.49\text{ m/s}$   
(e)  $7.30\text{ m/s}$

**5-131** Consider incompressible, frictionless flow of water in a vertical piping. The pressure is  $240\text{ kPa}$  at  $2\text{ m}$  from the ground level. The velocity of water does not change during this flow. The pressure at  $15\text{ m}$  from the ground level is  
(a)  $227\text{ kPa}$  (b)  $174\text{ kPa}$  (c)  $127\text{ kPa}$  (d)  $120\text{ kPa}$   
(e)  $113\text{ kPa}$

**5-132** Consider water flow in a piping network. The pressure, velocity, and elevation at a specified point (point 1) of the flow are  $150\text{ kPa}$ ,  $1.8\text{ m/s}$ , and  $14\text{ m}$ . The pressure and velocity at point 2 are  $165\text{ kPa}$  and  $2.4\text{ m/s}$ . Neglecting frictional effects, the elevation at point 2 is  
(a)  $12.4\text{ m}$  (b)  $9.3\text{ m}$  (c)  $14.2\text{ m}$  (d)  $10.3\text{ m}$  (e)  $7.6\text{ m}$

**5-133** The static and stagnation pressures of a fluid in a pipe are measured by a piezometer and a pitot tube to be  $200\text{ kPa}$  and  $210\text{ kPa}$ , respectively. If the density of the fluid is  $550\text{ kg/m}^3$ , the velocity of the fluid is  
(a)  $10\text{ m/s}$  (b)  $6.03\text{ m/s}$  (c)  $5.55\text{ m/s}$  (d)  $3.67\text{ m/s}$   
(e)  $0.19\text{ m/s}$

**5-134** The static and stagnation pressures of a fluid in a pipe are measured by a piezometer and a pitot tube. The heights of

the fluid in the piezometer and pitot tube are measured to be 2.2 m and 2.0 m, respectively. If the density of the fluid is  $5000 \text{ kg/m}^3$ , the velocity of the fluid in the pipe is  
(a) 0.92 m/s (b) 1.43 m/s (c) 1.65 m/s (d) 1.98 m/s (e) 2.39 m/s

**5-135** The difference between the heights of energy grade line (EGL) and hydraulic grade line (HGL) is equal to  
(a)  $z$  (b)  $P/\rho g$  (c)  $V^2/2g$  (d)  $z + P/\rho g$  (e)  $z + V^2/2g$

**5-136** Water at 120 kPa (gage) is flowing in a horizontal pipe at a velocity of 1.15 m/s. The pipe makes a  $90^\circ$  angle at the exit and the water exits the pipe vertically into the air. The maximum height the water jet can rise is  
(a) 6.9 m (b) 7.8 m (c) 9.4 m (d) 11.5 m (e) 12.3 m

**5-137** Water is withdrawn at the bottom of a large tank open to the atmosphere. The water velocity is 6.6 m/s. The minimum height of the water in the tank is  
(a) 2.22 m (b) 3.04 m (c) 4.33 m (d) 5.75 m (e) 6.60 m

**5-138** Water at 80 kPa (gage) enters a horizontal pipe at a velocity of 1.7 m/s. The pipe makes a  $90^\circ$  angle at the exit and the water exits the pipe vertically into the air. Take the correction factor to be 1. If the irreversible head loss between the inlet and exit of the pipe is 3 m, the height the water jet can rise is  
(a) 3.4 m (b) 5.3 m (c) 8.2 m (d) 10.5 m (e) 12.3 m

**5-139** Seawater is to be pumped into a large tank at a rate of 165 kg/min. The tank is open to the atmosphere and the water enters the tank from a 80-m-height. The overall efficiency of the motor-pump unit is 75 percent and the motor consumes electricity at a rate of 3.2 kW. Take the correction factor to be 1. If the irreversible head loss in the piping is 7 m, the velocity of the water at the tank inlet is  
(a) 2.34 m/s (b) 4.05 m/s (c) 6.21 m/s (d) 8.33 m/s (e) 10.7 m/s

**5-140** Water enters a pump at 350 kPa at a rate of 1 kg/s. The water leaving the pump enters a turbine in which the pressure is reduced and electricity is produced. The shaft power input to the pump is 1 kW and the shaft power output from the turbine is 1 kW. Both the pump and turbine are 90 percent efficient. If the elevation and velocity of the water remain constant throughout the flow and the irreversible head loss is 1 m, the pressure of water at the turbine exit is  
(a) 350 kPa (b) 100 kPa (c) 173 kPa (d) 218 kPa (e) 129 kPa

**5-141** An adiabatic pump is used to increase the pressure of water from 100 kPa to 500 kPa at a rate of 400 L/min. If the efficiency of the pump is 75 percent, the maximum temperature rise of the water across the pump is  
(a)  $0.096^\circ\text{C}$  (b)  $0.058^\circ\text{C}$  (c)  $0.035^\circ\text{C}$  (d)  $1.52^\circ\text{C}$  (e)  $1.27^\circ\text{C}$

**5-142** The shaft power from a 90 percent-efficient turbine is 500 kW. If the mass flow rate through the turbine

is 575 kg/s, the extracted head removed from the fluid by the turbine is

(a) 48.7 m (b) 57.5 m (c) 147 m (d) 139 m (e) 98.5 m

### Design and Essay Problems

**5-143** Using a large bucket whose volume is known and measuring the time it takes to fill the bucket with water from a garden hose, determine the mass flow rate and the average velocity of water through the hose.

**5-144** Your company is setting up an experiment that involves the measurement of airflow rate in a duct, and you are to come up with proper instrumentation. Research the available techniques and devices for airflow rate measurement, discuss the advantages and disadvantages of each technique, and make a recommendation.

**5-145** Computer-aided designs, the use of better materials, and better manufacturing techniques have resulted in a tremendous increase in the efficiency of pumps, turbines, and electric motors. Contact one or more pump, turbine, and motor manufacturers and obtain information about the efficiency of their products. In general, how does efficiency vary with rated power of these devices?

**5-146** Using a handheld bicycle pump to generate an air jet, a soda can as the water reservoir, and a straw as the tube, design and build an atomizer. Study the effects of various parameters such as the tube length, the diameter of the exit hole, and the pumping speed on performance.

**5-147** Using a flexible drinking straw and a ruler, explain how you would measure the water flow velocity in a river.

**5-148** The power generated by a wind turbine is proportional to the cube of the wind velocity. Inspired by the acceleration of a fluid in a nozzle, someone proposes to install a reducer casing to capture the wind energy from a larger area and accelerate it before the wind strikes the turbine blades, as shown in Fig. P5-148. Evaluate if the proposed modification should be given a consideration in the design of new wind turbines.

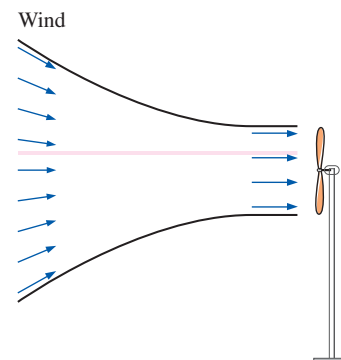


FIGURE P5-148