



USER MANUAL



Wireless Pixel Tube (AL1)

Manual Version: 3.2.20
Release Date: July. 23rd.2010

Aster LED Technology GmbH
Address : Nahestrasse 68-70, 55593 Rüdesheim a. d. Nahe, Germany Tel.: +49(0)6536-355361 Email: sales@astera-led.com

1 Table of Contents

1 Table of Contents.....	2
2 Safety.....	3
3 Specifications.....	4
3.1 Technical Data.....	5
4 Quick Start.....	6
4.1 Overview.....	6
4.2 Holder for Mounting.....	7
4.3 Advantages.....	8
4.4 Button and Operation.....	8
5 Battery Runtime.....	9
6 Troubleshooting.....	10
7 Disposal.....	11

2 Safety



Before you operate the unit, read this manual carefully. Make sure to keep the manual, in case you need to consult this manual again or you give the unit to another person.

Always make sure to include this manual if you hand out the unit to another person.

Keep in mind that this manual cannot address all possible dangers and environments. Please use your own caution when operating.



Only qualified personnel may repair this product. Don't open the case.



Do not operate the unit in areas where the high temperature condition or outdoors. It will cause abnormal function or damage the product.



The Li-ion is inbuilt, please avoid bumping or plunging, it will cause FIRE or EXPLOSION.

Never store the battery when fully drained. Always recharge immediately when empty.



Make sure to fully charge all "Wireless Pixel Tube" units before storing them.

Partially charged batteries will lose capacity.

3 Specifications

- a) **Wireless tubelight, for indoor and outdoor use**
- b) **Displays more than 16 million colors.**
- c) **Low power consumption**
- d) **Controllable by Radio Frequency Remote Control**
- e) **DMX integration via ART3 wireless DMX Transmitter**
- f) **3-24 hours operation time without recharging the battery.**
- g) **Up to 300 meter operation distance of the remote control**
- h) **High brightness LEDs**
- i) **RGB LEDs combined with white LEDs for a better color mixing and color appearance**

3.1 Technical Data

Light Sources

Light Sources	high-brightness bullet LEDs
Amount of LEDs	128 (32xR, 32xG, 32xB, 32xW)
LED Power	16W

Power Supply

Power supply unit	Shipping with the Wireless Pixel Tube
Input power	AC 100-240V, 50/60Hz, 0.3A
Output power	DC 5V, 0.5A
Battery operational time	8 ~ 24h (depending on selected colors, brightness, programs)

Wireless Module

Available versions	RF(radio frequency), IR(infra-red)
Range	R: up to 10m RF: 50m up to 300m
RF Frequency	Europe: 868.000 MHz – 869.750 MHz US: 902MHz – 928 Mhz

Housing

Material	polycarbonate
Size	L100cm : Ø4cm
Weight	0.520 kg

Environmental Requirements

Operational Temperature	0 ~ 50 °C work temperature
Environment	Indoor and Outdoor (splash-proof)

4 Quick Start


This Wireless Pixel Tube is designed for event illumination and decorative lighting. Due to its integrated battery and wireless module it offers an uncomplicated setup without the need to lay out cables for control and power supply.

The AL1 offers several mounting possibilities. Through its magnetic back it can be quickly attached at walls, ceilings or under tables and chairs. It can also be used to light up a range of optional decorative objects.

An AL1 can be used as standalone lamp since basic illumination can be started with the touch button. However, for better setting of colors and programs and additional functions it is recommended to use it together with the ARC2 remote control or the μR Remote Control.

For a larger setup, AL1s can be grouped and paired with other AL1 units and other wireless Astera lamps. This can be done with the ARC2 remote control or the ART3 Wireless DMX transmitter.

4.1 Overview

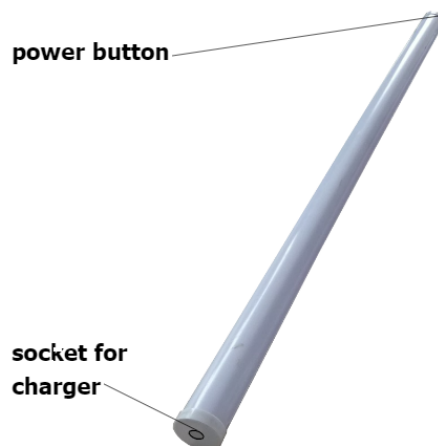

4.2 Holder for Mounting

(holder is sold separately)

1. Installation - align the AL1 rails to the holder and slowly slide in




2. Operation - AL1 is fixed on the rail, AL1 end-caps are overlapping the rail



3. Removal - bend AL1 upwards, then pull out the holder



4. Mounting - thread for O-screws, holes for safety chain, holes to screw into walls/ceiling

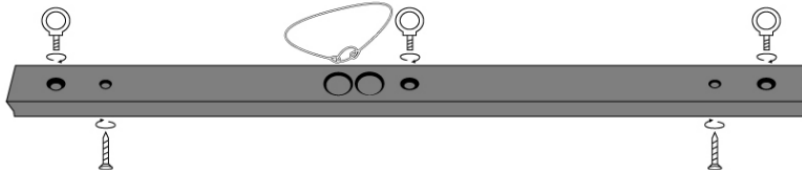

4.3 Advantages

Wireless design --- The AL1 is easy for installation due to its integrated battery and RF receiver.

Smart programing --- The AL1 not only displays complex color-changing programs but also gives you the possibility to use your own customized colors for these programs when controlled by an ARC2 Remote Control. The AL1 can be used as a standalone unit or grouped and paired with other Astera lamps and be contro'led with an ARC2 RF Remote Control.

Energy saving design --- Low working voltage, low power consumption and additional white LEDs helps to save up to 80% energy so it can reach a maximum operation time of up to 24 hours.

4.4 Button and Operation

To power on the unit, hold the on/off button for 2-.. second.

To power off, press the on/off button shortly.

To choose basic colors or a rainbow effect, turn the unit on, then hold down the button and keep the finger until the lamp turns into the blue blinking mode. Push the button several times to cycle through the basic colors until the rainbow effect. When the desired color is displayed, hold the button until the LEDs stop blinking and the lamp turns into normal operation.

To do a Factory Reset, turn the unit on. Then hold down the button and keep the finger until: unit turns off → turns on blue blinking → turns off again
When the unit turns off for the second time, a factory reset was done.

While powered up, the indicator LED will show the battery charge state:
red – orange .. green corresponding to the charge state

While charging, the LED will blink in green.

ε

5 Battery Runtime

The work temperature is 0~60 Celsius degree.

When you switch on but it's not working and the red light is keep shining means you need recharge the battery.

The LED POWER modes description:

- When we use maximum runtime, we setting the LED power is 50% full power, the LED will run longer time, but the brightness is just 50% also
- When we use normal brightness, we setting the LED power is 70% full power , the LED will run time is our normal time.
- When we use high brightness, we setting the LED power is 100% full power, then the LED will more bright, but the run time will be shorter then the normal brightness or maximum runtime mode.

Here are estimated battery runtimes:

Color	MAX RUNTIME	NORMAL	HIGH BRIGHTNESS
COLR WHITE	9,6 h	8,0 h	5,6 h
CYAN	11,4 h	9,8 h	7,0 h
MAGENTA	12,9 h	11,1 h	8,1 h
YELLOW	13,5 h	11,7 h	8,5 h
ORANGE	17,3 h	15,1 h	11,1 h
GREEN	18,9 h	16,6 h	12,3 h
BLUE	21,2 h	18,4 h	13,8 h
RED	23,7 h	20,9 h	15,7 h

6 Troubleshooting

Faulty condition	Cause	Troubleshooting
LED no light when you switch on.	Due to the vast number of settings, one can not always predict behavior of the units, if setup was already done earlier.	Set the brightness to other value.
Units behave incorrectly	Due to the vast number of settings, one can not always predict behavior of the units, if setup was already done earlier.	Do :ACQUY RESET on units and/or remote control.
Couldn't turn on the system.	Maybe the battery is run out.	Plug the AC input, and put the system charge 1 hour more, then can turn ON
The indicator not blinking when charging	DC plug or AC input not settled well or battery is already full	Discharge the battery a little or check whether the DC has been plugged or whether the AC input has any problem.
Units will go out of battery after only 6 hours of operation.	The units last only 8 hours with COLD WHITE, if the LED POWER is set to NORMAL. For HIGH BRIGHTNESS the run time is shorter than 8 hours.	Adjust LED POWER and/or see manual of the unit.

7 Disposal

Follow local ordinances and/or regulations for disposal!



PACKAGING:

The unit is shipped in protective packaging.
This packaging can be recycled!



UNIT:

Don't throw the unit into the garbage at the end of its lifetime.

Make sure to dispose is according to your local ordinances and/or regulations, to avoid polluting the environment!



BATTERIES:

Don't throw empty batteries into the garbage!

Bring them to a collecting point for used batteries!

This instruction manual is part of the device and persons operating the device must have access to it at any time.
Safety precautions mentioned in the instruction manual have to be observed.
If the device is being sold, this instruction manual has to be included.

Translations

If the device is being sold, this instruction manual has to be translated into the national language of the destination country.
If discrepancies occur in the translated text, the original instruction manual has to be used to solve them for the manufacturer has to be contacted

©2010, Astera LED Technology GmbH
All rights reserved
Rüdesheim an der Nahe, Germany