

office copy.
25 made Apr 28/82

HUSKY LIQUID MANURE H 5000 PUMP PARTS MANUAL

HUSKY FARM EQUIPMENT LIMITED

ALMA

ONTARIO

PHONE 519-846-5329

NOB 1A0

DATE PURCHASED _____
MACHINE SERIAL NO. _____
SIZE OF PUMP _____
ASSESSORIES _____

HUSKY LIQUID MANURE PUMP - Manufactured by:
Husky Farm Equipment Limited, Alma, Ontario

OPERATING INSTRUCTIONS

We welcome you as an owner of a Husky Liquid Manure Pump. We know that these machines will last a long time with a very small amount of maintenance. However with no attention at all the life of this machine will be shortened considerably. Your manure pump should not be left in the pit unless a machine is used regularly. It should be washed inside & out.

PLEASE NOTE:

The Key number system in this parts book is arranged as follows:


- --Key number with one circle denote main assemblies
- Key numbers not circled are individual parts

Please order parts by number

CAUTION:


Do not enter a manure pit storage or spreader at any time while there is danger of gas from the manure. Have a ladder in your pit, so that if by accident you should fall in, you can get out again. Keep all lids closed and open pits fenced to keep children and animals out.

THANK YOU FOR BUYING "HUSKY"

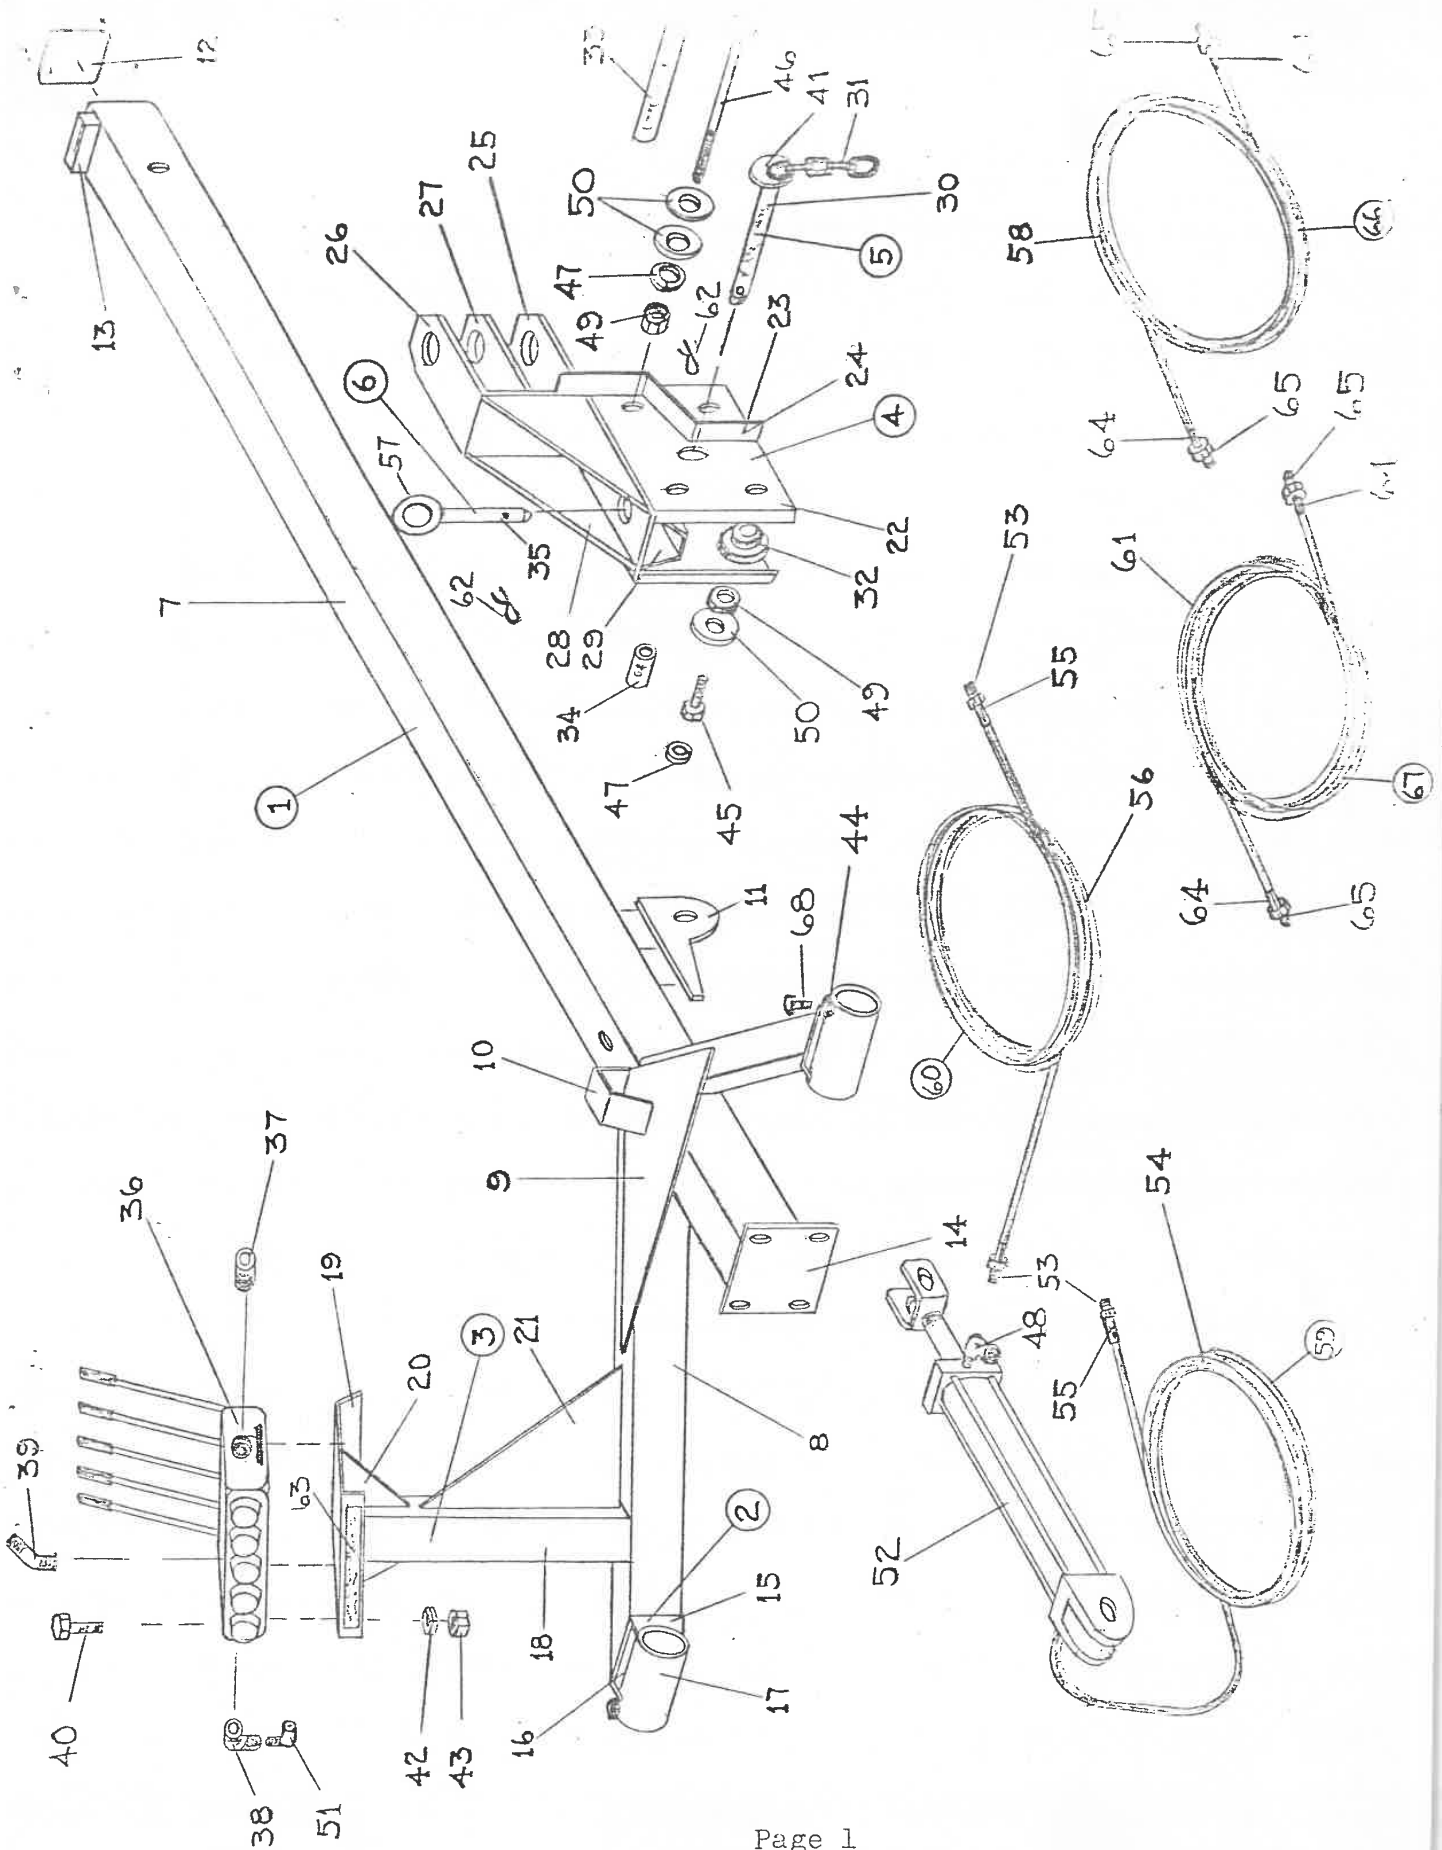


Key	Part Number	Description	Qty
1	242-18-00-000	Trailer Assy	1
2	242-18-14-000	Angle Brace Brkt Assy	2
3	242-18-15-000	Control Valve Stand Assy	1
4	242-21-00-000	Roller Brkt Assy	1
5	242-22-00-000	Stabilizer Pin Assy	1
6	242-23-00-000	Drop Pin Assy	1
7	242-18-00-092	Trailer Tube	1
8	242-18-00-093	Frame Tube Brace	2
9	242-18-00-094	Main Frame Gusset	1
10	242-18-00-095	Roller Case Stop	1
11	242-18-00-096	Cylinder Gusset	1
12	242-18-00-097	Trailer Tube End Cap	1
13	242-18-00-098	Roller Stop	1
14	242-18-00-099	Tongue Brkt	1
15	242-18-14-100	Axle Brace Brkt	2
16	242-18-14-101	Axle Brace Brkt Support	2
17	242-18-00-102	Outer Sleeve	2
18	242-18-15-103	Control Valve Stand Tube	1
19	242-18-15-104	Racine-Control Valve Plate	1
20	242-18-15-105	Control Valve Plate Gusset	2
21	242-18-00-106	Standtube Gusset	1
22	242-21-00-114	Roller Brkt	2
23	242-21-00-115	R.H. Roller Brkt Brace	1
24	242-21-00-116	L.H. Roller Brkt Brace	1
25	242-21-00-117	Tongue Lower Plate	1
26	242-21-00-118	Upper Tongue Plate	1
27	242-21-00-119	Tongue Centre Plate	1
28	242-21-00-120	Tongue Gusset	2
29	242-21-00-121	Drop Pin Guide	1
30	242-22-00-122	Stabilizer Pin	1
31	242-22-00-123	Stabilizer Pin Coil Chain	1
32	242-00-00-124	Tongue Roller	8
33	242-00-00-125	Roller Tube	2
34	242-00-00-126	Lower Roller Tube	4
35	242-23-00-127	Drop Pin	1
36	R20794	5 Bank Hydraulic Valve	1
37	R21276	3/4-16 SAE M x 1/2 NPT Swivel Adaptor	1
38	R20814	3/4-16 SAE x 1/2 NPT F Swivel Adaptor 90°	1
39	R20826	3/4-16 SAE x 3/8 NPT F Swivel Adaptor 45°	10
40	R07675	3/8 x 1 1/4 Hex Hd Bolt	3
41	R07826	5/8 Flat Washer	1
42	R07803	3/8 Lock Washer	3
43	R07783	3/8 Hex Nut	3
44	R07785	1/2 Hex Nut	2
45	R07630	7/16 x 2 Hex Head Bolt	4
46	R07636	7/16 x 6 Hex Head Bolt	2
47	R07804	7/16 Lock Washer	6
48	R21335	Restrictor Plug 90°	1
49	R07784	7/16 Hex Nut	6
50	R07833	7/16 Automotive Washer	8

Key	Part Number	Description	Qty
51	R02103	1/2 Street Elbow 90	1
52	R20729	14" Hyd Cylinder	1
53	R20804	1/2-14 NPT Solid Stem	4
54	242-35-00-159	1/4 Hyd Hose Cyl to tractor	1
55	R20805	Ferrule ClTH - 1/4" Hose	4
56	242-34-00-158	1/4 Hyd Hose Cyl to tractor	1
57	R07925	1/4 x 1 1/2 Plated Ring	1
58	242-71-00-188	1/2" Hyd Hose - Tractor to Control	1
59	242-35-00-000	Hose Assy Tractor to Cylinder	1
60	242-34-00-000	Hose Assy Tractor to Cylinder	1
61	242-72-00-189	1/2" Hyd Hose - Tractor to Control	1
62	R07948	5/32 Hairpin	2
63	R09506	Valve Control Sticker	1
64	R21240	Steel Ferrule	4
65	R20818	1/2" Solid Male Stem	4
66	242-71-00-000	Hose Assy - Tractor to Control	1
67	242-72-00-000	Hose Assy - Tractor to Control	1
68	R07637	1/2 x 1 Hex Head Bolt	2

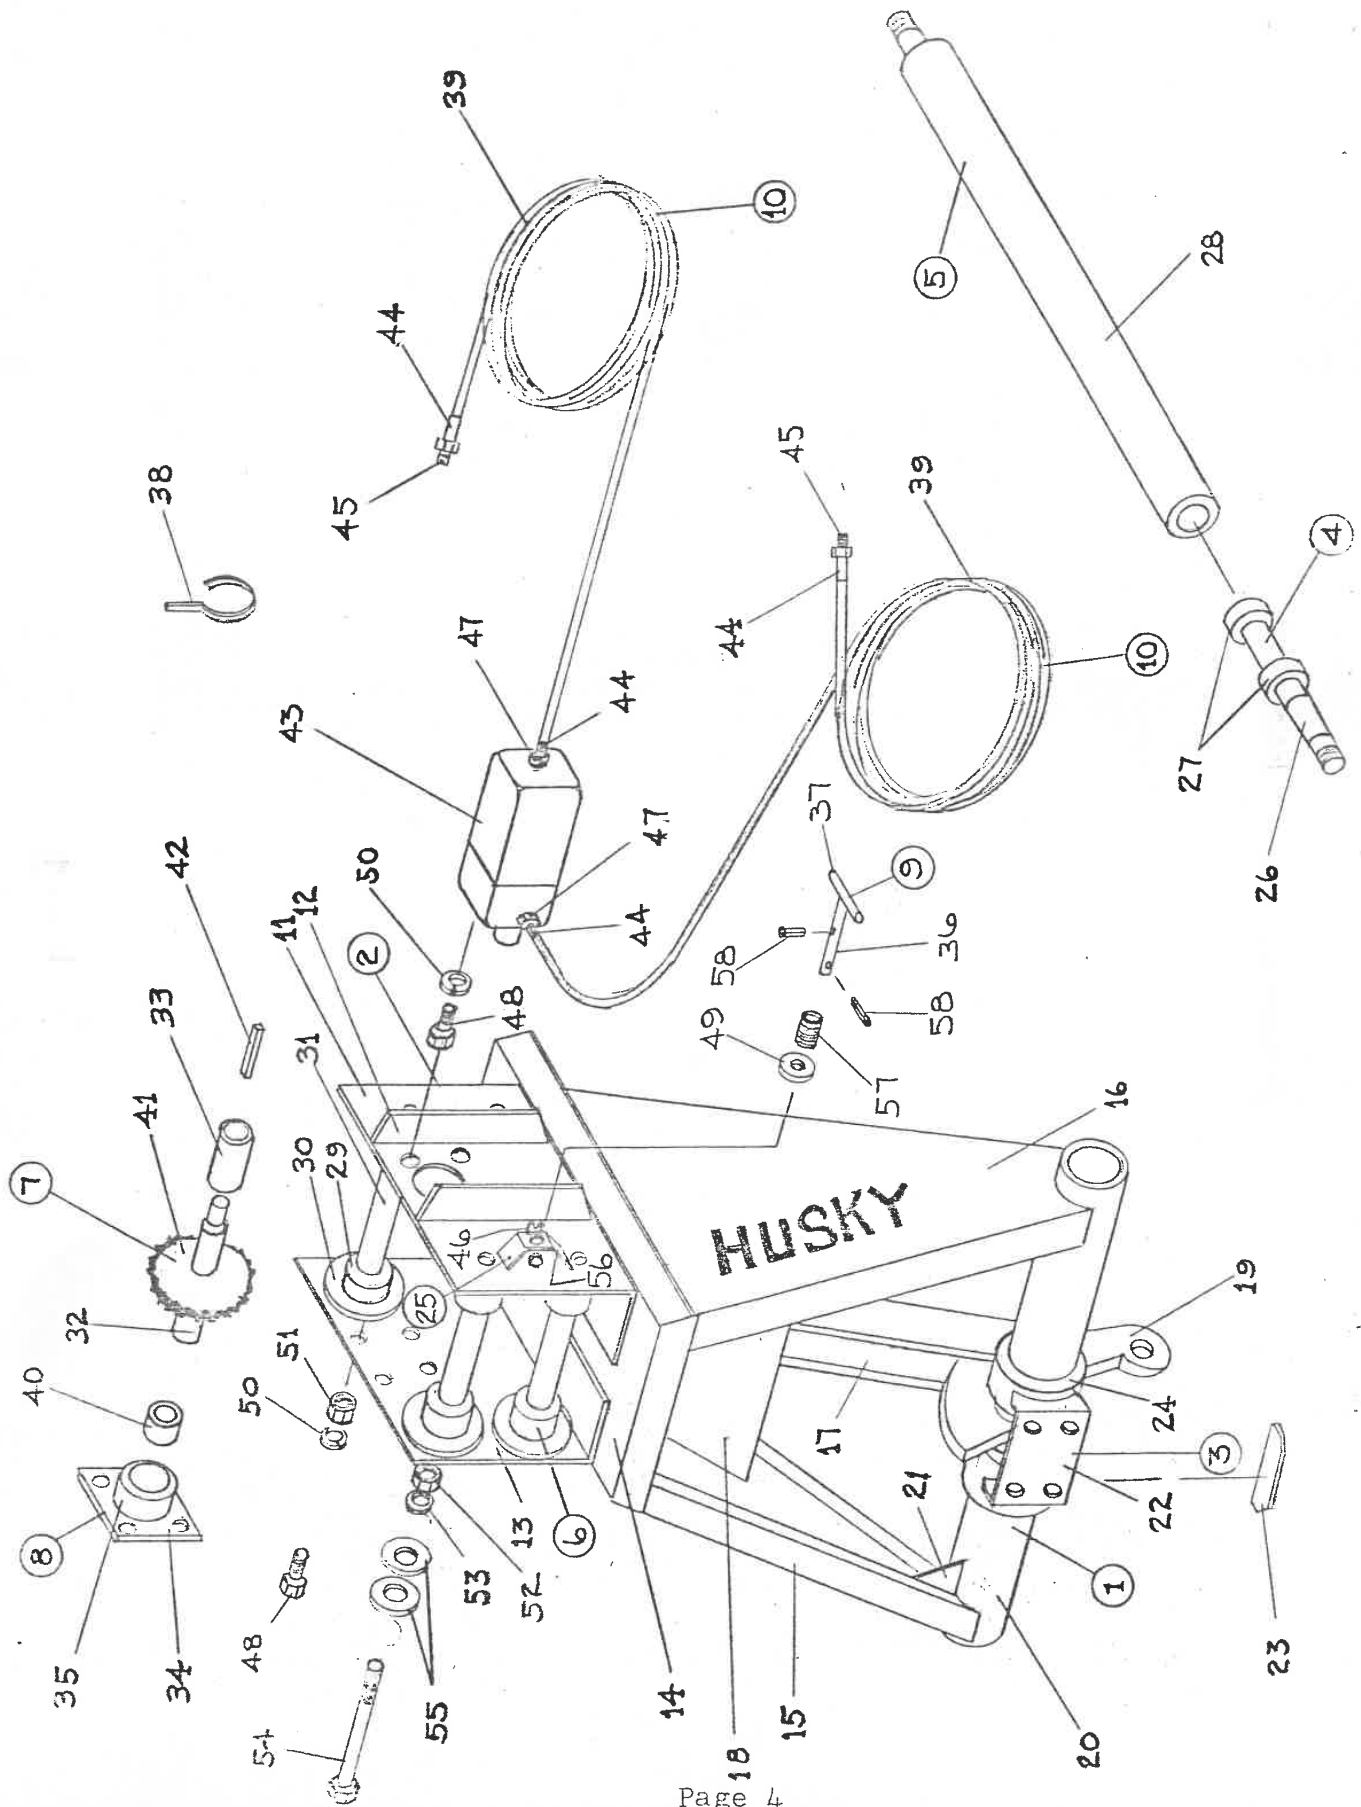


Key	Part Number	Description	Qty
1	242-17-00-000	"A" Frame Assy	1
2	242-17-13-000	R.H. Spool Holder Assy	1
3	242-19-00-000	Tongue Axle Brkt Assy	1
4	242-20-16-000	Axle Stub Assy	2
5	242-20-00-000	Axle Assy Complete	1
6	242-24-00-000	Spool Assy	8
7	242-25-00-000	Sprocket Drive Assy	1
8	242-26-00-000	Bushing Holder Assy	1
9	242-17-18-000	Side Lock Pin Assy	1
10	242-38-00-000	Hose Assy Control to lift	2
11	242-17-13-081	Spool Holder R.H.	1
12	242-17-13-082	Spool Holder Brace	2
13	242-17-00-083	Spool Holder L.H.	1
14	242-17-00-084	Tilt Frame Base	1
15	242-17-00-085	L.H. Support Arm	1
16	242-17-00-086	R.H. Support Arm	1
17	242-17-00-087	Reinforcing Bars	2
18	242-17-00-088	Tilt Frame Gusset	1
19	242-17-00-089	Cylinder Axle Brkt	1
20	242-17-00-090	Wheel Shaft Sleeve	1
21	242-17-00-091	Support Arm Gusset	2
22	242-19-00-107	Tongue Axle Brkt	1
23	242-19-00-108	Tongue Axle Brkt Reinforcing Bar	1
24	242-19-00-109	Outer Sleeve	2
25	242-17-17-000	Side Lock Brkt Assy	1
26	242-20-16-111	Axle Spindle	2
27	242-20-16-112	Plug Washer	4
28	242-20-00-113	Inner Axle	1
29	242-24-00-128	Spool Roller	8
30	242-24-00-129	Spool End Plate	8
31	242-00-00-130	Spool Sleeve	4
32	242-25-00-131	Sprocket Shaft	1
33	242-25-00-132	Motor to Shaft Coupling	1
34	242-26-00-133	Bushing Holder Plate	1
35	242-26-00-134	Bushing Holder	1
36	242-17-18-195	Side Lock Pin	1
37	242-17-18-196	Pin Handle	1
38	242-00-00-157	Hose Niblick	2
39	242-38-00-162	Hyd Hose Control to Lift	2
40	R20259	Brass Bushing 1 1/4 x 1 1/2 x 3/4	1
41	242-25-00-192	80 B-8 Sprocket - 32 Bore	1
42	R11114	Sprocket Drive Key comes w/Hyd Motor	1
43	R20851	Hyd Motor	1
44	R20805	Ferrules	4
45	R20806	3/8-18 NPT Swivel Adaptor	4
46	242-17-17-194	Pin Stop	1
47	R20804	1/2 - 14 NPT Solid Stem	2
48	R07619	3/8 x 1 Hex Hd Bolt	8
49	R07826	5/8 Flat Washer	1
50	R07803	3/8 Lock Washer	8
51	R07783	3/8 Hex Nut	4
52	R07785	1/2 Hex Nut	5
53	R07805	1/2" Lock Washer	4
54	R07679	1/2 x 8 Hex Hd Bolt	4
55	R07828	1" Flat Washer	8
56	242-17-17-193	Side Lock Brkt	1
57	R08027	Spring	1
58	R07977	3/16 x 1 1/4 Roll Pin	2

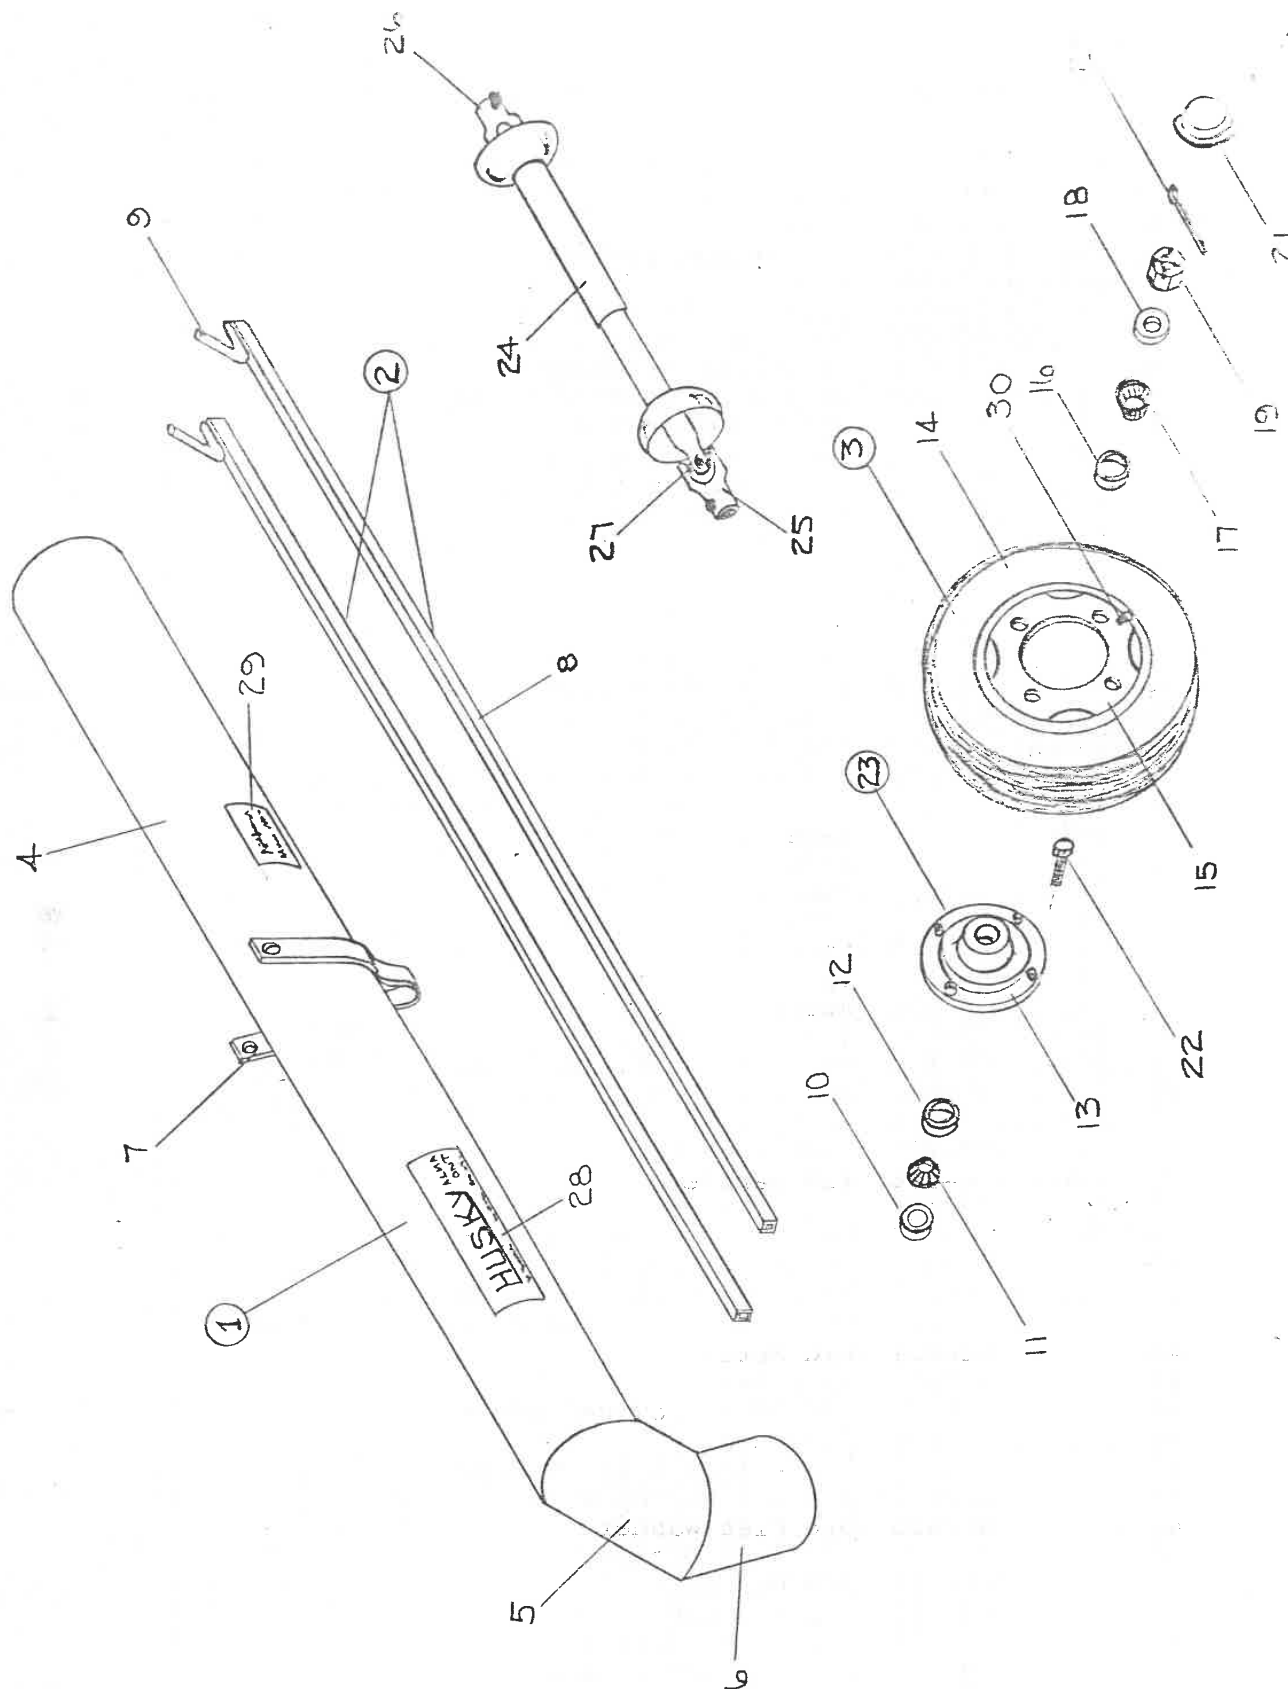


Key	Part Number	Description	Qty
1	242-30-00-000	Discharge Pipe Assy	1
2	242-33-00-000	Bipod Leg Assy	2
3	242-61-00-000	Wheel Assy	2
4	242-30-00-145	Discharge Pipe	1
5	242-30-00-146	Discharge Elbow Centre Piece	1
6	242-30-00-147	Discharge Elbow End Piece	1
7	242-30-00-148	Discharge Pipe Hook	1
8	242-33-00-155	Bipod Legs	2
9	242-33-00-156	Leg Hook	2
10	R20150	Seal CR 521277	2
11	R20146	Rear Cone LM 29749	2
12	R20148	Rear Cup LM 29710	2
13	R20156	Hub 4000 Lb	2
14	R20007	Tire 760 X 15	2
15	R20077	Wheel Rim 15 x 6 bolt 4.62 Pilot	2
16	R20149	Front Cup LM 67010	2
17	R20147	Front Cone LM 67048	2
18	R20154	Spindle Washer SAF - 1000	2
19	R20136	Slotted Jam Nut 1-14	2
20	R08003	3/16 x 2 Cotter Pin	2
21	R20153	Dust Cap D-4000	2
22	R20155	Wheel Bolt 1/2-20	12
23	R20157	Hub Assy	2
24	R20373	P.T.O. 1480 - 540 rpm #949134-4	*
24	R20375	P.T.O. 1480 - 1000 rpm #949134-5	*
25	R20382	Q. D. Spline 1 3/4 - 27 Teeth	1
26	R20381	Q. D. Spline 1 3/8 - 6 teeth, 540 rpm	1
26	R20383	Q. D. Spline 1 3/8 - 21 teeth, 1000 rpm	1
27	R20385	Journal & Brg Kit	2
28	R09502	Husky Sticker	1
29	R09690	Caution Sticker	1
30	R20020	Valve Stem	2


* As ordered

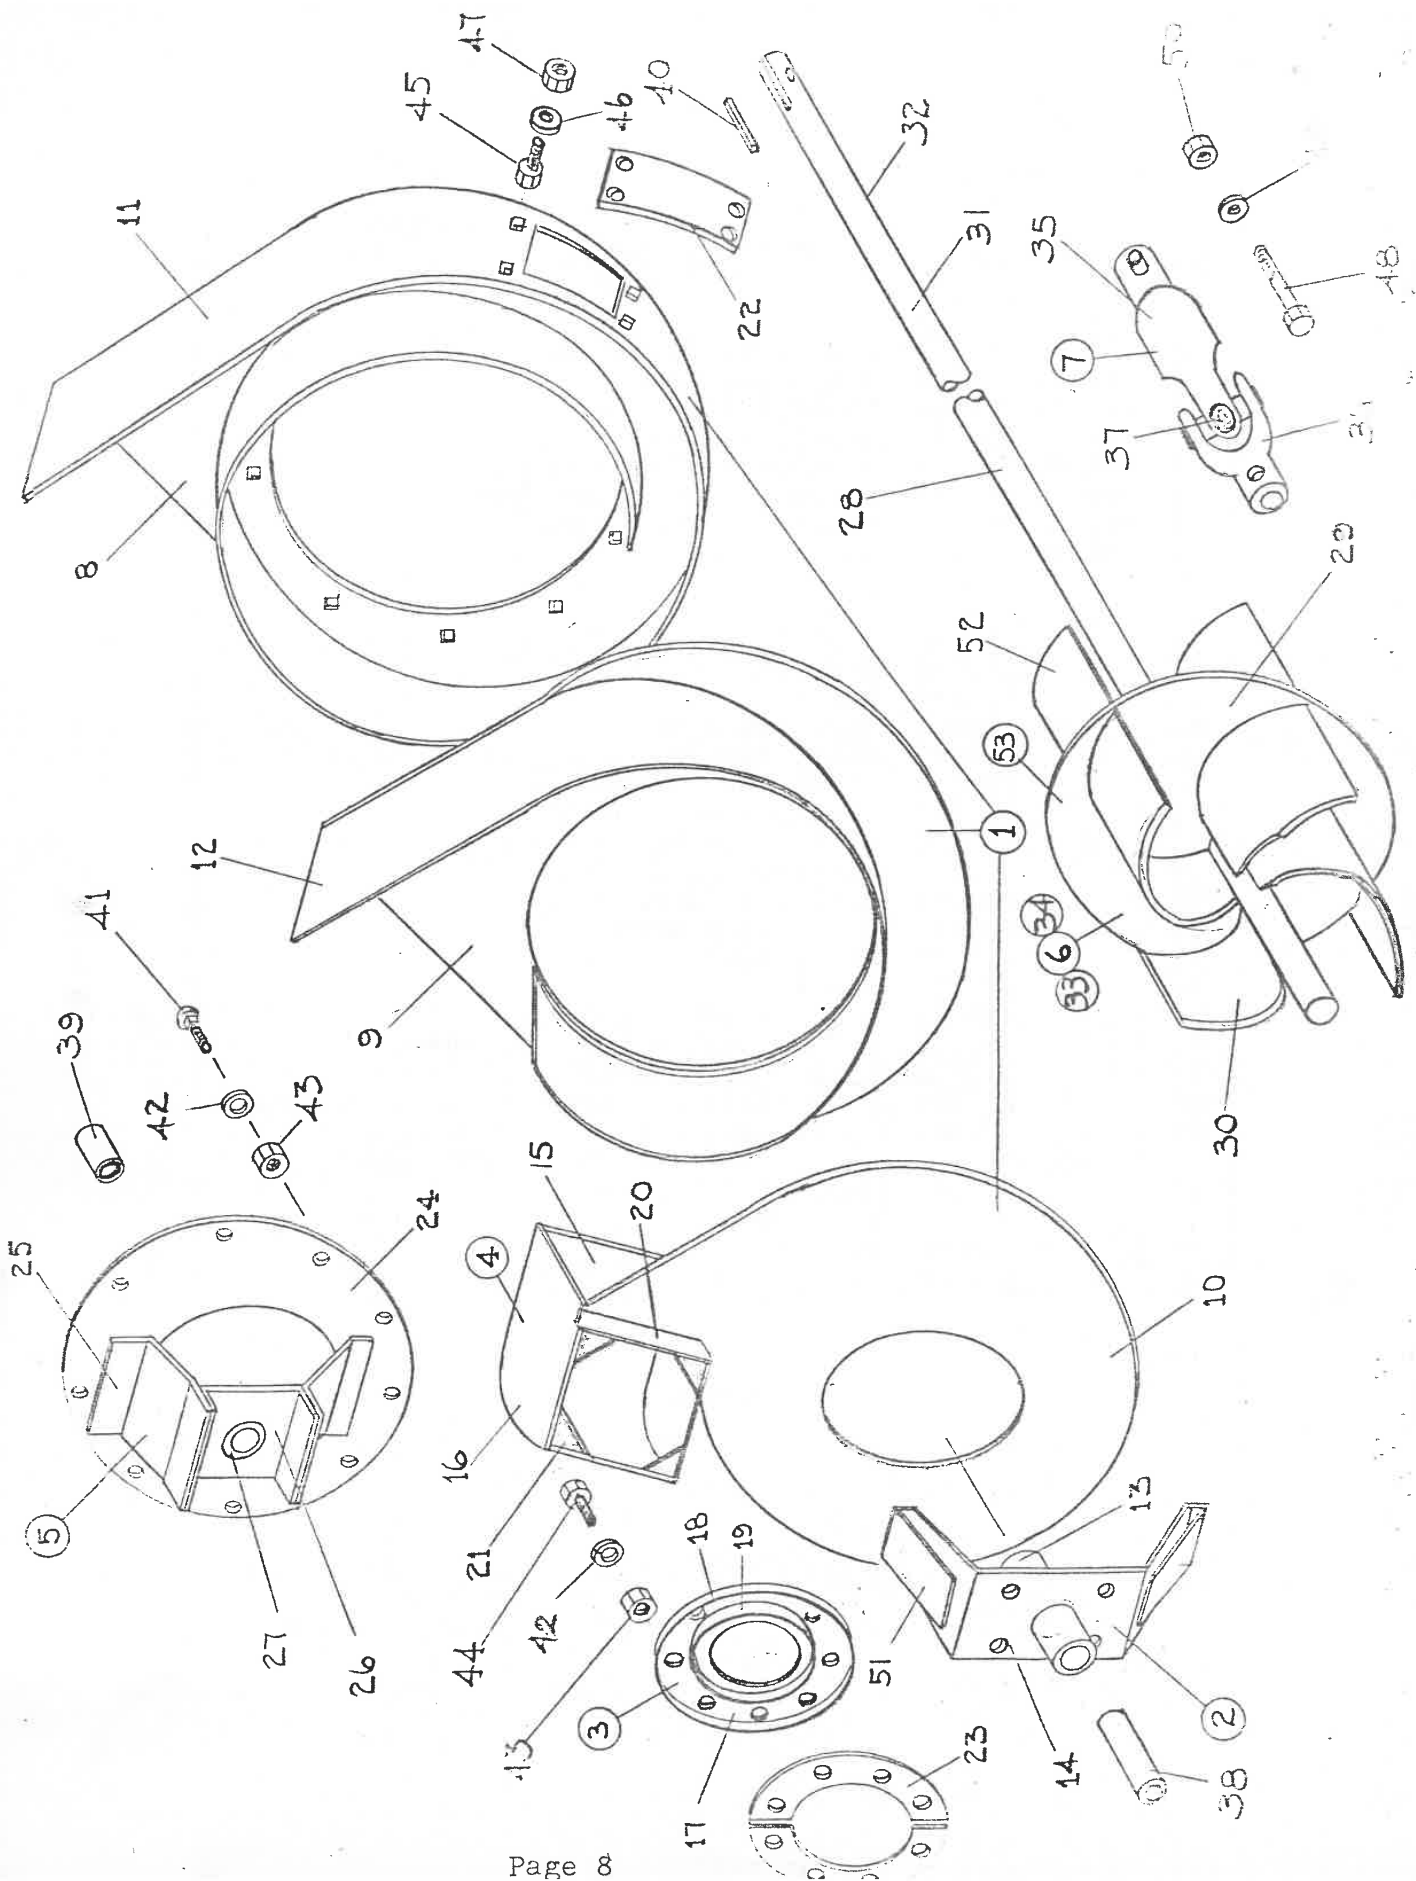


Key	Part Number	Description	Qty
1	242-01-00-000	Fan Housing Assy Complete	1
2	242-01-01-000	Marine Brg Holder Assy	1
3	242-01-03-000	Lower Standpipe Swivel Assy	1
4	242-01-02-000	Boot Assy	1
5	242-02-00-000	Cover Plate Assy	1
6	242-03-00-000	Impeller Assy	1
7	242-54-00-000	"U" Joint Assy	1
8	242-01-00-001	Lower Housing Plate	1
9	242-01-00-002	Middle Housing Plate	1
10	242-01-00-003	Upper Housing Plate	1
11	242-01-00-004	Housing Band	1
12	242-01-00-005	Inner Housing Band	1
13	242-01-01-006	Marine Brg Holder	1
14	242-01-01-007	Connector Brkt	1
15	242-01-02-008	Boot End Plate	1
16	242-01-02-009	Side Plate	2
17	242-01-03-010	Back Plate	1
18	242-01-03-012	Outer Band	1
19	242-01-03-013	Inner Band	1
20	242-01-00-014	Filler Plate	1
21	242-01-00-015	Corner Pieces	4
22	242-00-00-016	Housing Band Cover Plate	1
23	242-00-00-017	Half Rings	1
24	242-02-00-018	Housing Cover Plate	1
25	242-02-00-019	Foot Brace	2
26	242-02-00-020	Foot	1
27	242-02-00-021	Lower Brg Holder	1
28	242-03-00-022	Drive Shaft - 8 Foot	1
29	242-03-00-023	Impeller Back Plate	1
30	242-03-00-024	Impeller Blade R.H.	4
31	244-42-00-165	Drive Shaft - 10 Foot	1
32	246-48-00-173	Drive Shaft - 12 Foot	1
33	244-42-00-000	Impeller Assy - 10 Foot	1
34	246-48-00-000	Impeller Assy - 12 Foot	1
35	R20382	Q. D. Yoke 3-4-6210X	1
36	R20384	Round Hole Yoke 1 3/4 3-4-1213	1
37	R20385	Journal & Brg Kit	1
38	242-77-00-000	1 3/4 Marine Brg	1
39	242-78-00-000	Half of 1 3/4" Marine Brg	1
40	280-00-00-046	3/8 x 3/8 x 2 Long Key	1
41	R07731	7/16 x 1 Carriage Bolt	8
42	R07804	7/16 Lock Washer	14
43	R07784	7/16 Hex Nut	14
44	R07671	7/16 x 1 1/2 Hex Hd Bolt	6
45	R07711	5/16 x 1 Carriage Bolt	4
46	R07802	5/16 Lock Washer	4
47	R07782	5/16 Hex Nut	4
48	R07625	3/8 x 4 Hex Hd Bolt	1
49	R07803	3/8 Lock Washer	1
50	R07783	3/8 Hex Nut	1
51	242-01-01-180	Connector Brkt Brace	2
52	242-03-00-187	Impeller Blade L.H.	4
53	242-03-19-000	Impeller Sub Assy	1

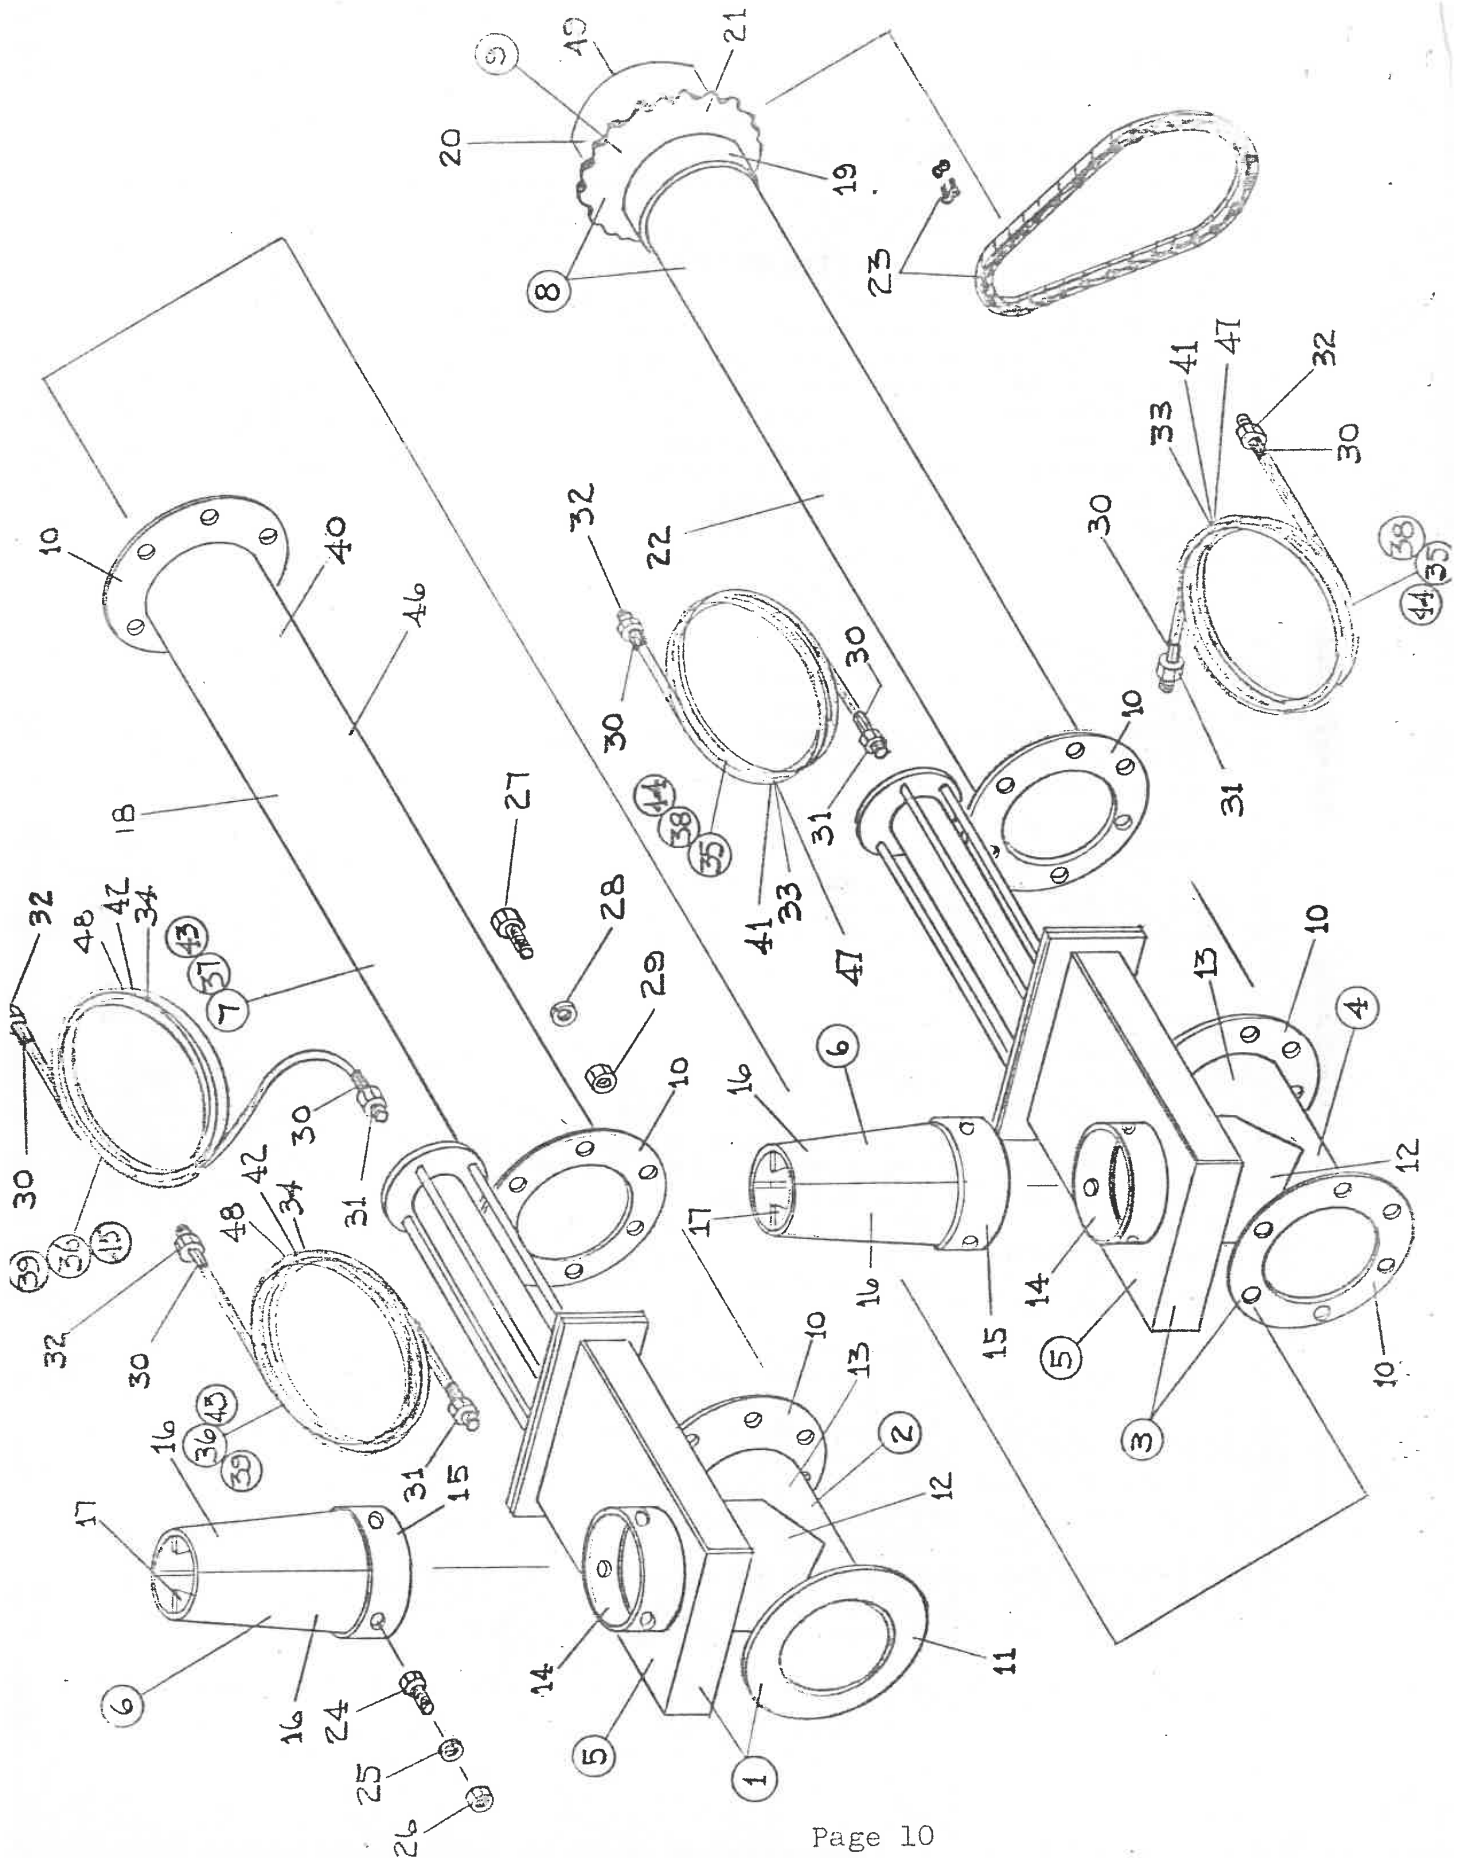


Key	Part Number	Description	Qty
1	242-04-00-000	Lower Agitator Valve Assy	1
2	242-04-04-000	Lower Tee Assy	1
3	242-05-00-000	Upper Agitator Valve Assy	1
4	242-05-05-000	Upper Tee Assy	1
5	242-06-00-000	Valve Assy Complete	2
6	242-07-00-000	Cone Assy	2
7	242-08-00-000	Lower Standpipe Assy 8 ft	1
8	242-09-00-000	Upper Standpipe Assy	1
9	242-09-09-000	Lower Extension Pipe Assy	1
10	242-04-04-025	Standpipe Flanges	6
11	242-04-04-026	Standpipe Ring	1
12	242-04-04-027	Tee Side	2
13	242-04-04-028	Tee Base	2
14	242-04-00-043	Cone Mount	2
15	242-07-00-044	Cone Band	2
16	242-07-00-045	Tee Cone	4
17	242-07-00-046	Cone Ribs	8
18	242-08-00-047	Lower Standpipe - 8 ft	1
19	242-09-09-048	Extension Pipe	1
20	242-09-09-049	Coupling Base	1
21	R20610	Agitator Turn Sprocket	1
22	242-09-00-051	Upper Standpipe	1
23	242-00-00-137	#50 Roller Chain & C/L	1
24	R07611	5/16 x 1 Hex Hd Bolt	6
25	R07802	5/16 Lock Washer	6
26	R07782	5/16 Hex Nut	6
27	R07671	7/16 x 1 1/4 Hex Hd Bolt	18
28	R07804	7/16 Lock Washer	18
29	R07784	7/16 Hex Nut	18
30	R20805	Ferrules	8
31	R20803	3/8-18 NPT Solid Stem Male	4
32	R20806	3/8-18 NPT Swivel Stem Male	4
33	242-40-00-164	Hyd Hose Control to Top Tee 8 ft	2
34	242-36-00-160	Hyd Hose Control to Lower Tee 8 ft	2
35	242-40-00-000	Hose Assy Control to Top Tee 8 ft	2
36	242-41-00-000	Hose Assy Control to Lower Tee 8 ft	2
37	244-43-00-000	Lower Standpipe Assy 10 ft	1
38	244-46-00-000	Hose Assy Control to Top Tee 10 ft	2
39	244-47-00-000	Hose Assy Control to Bottom Tee 10 ft	2
40	244-43-00-166	Lower Standpipe 10 ft	1
41	244-46-00-171	Hyd Hose Control to Top Tee 10 ft	2
42	244-47-00-172	Hyd Hose Control to Bottom Tee 10 ft	2
43	246-49-00-000	Lower Standpipe Assy 12 ft	1
44	246-46-00-000	Hose Assy Control to Top Tee 12 ft	2
45	246-52-00-000	Hose Assy Control to Bottom Tee 12 ft	2
46	246-49-00-174	Lower Standpipe 12 ft	1
47	244-46-00-171	Hyd Hose Control to Top Tee 12 ft	2
48	246-52-00-178	Hyd Hose Control to Bottom Tee 12 ft	2
49	R02360	Standpipe Gasket	1

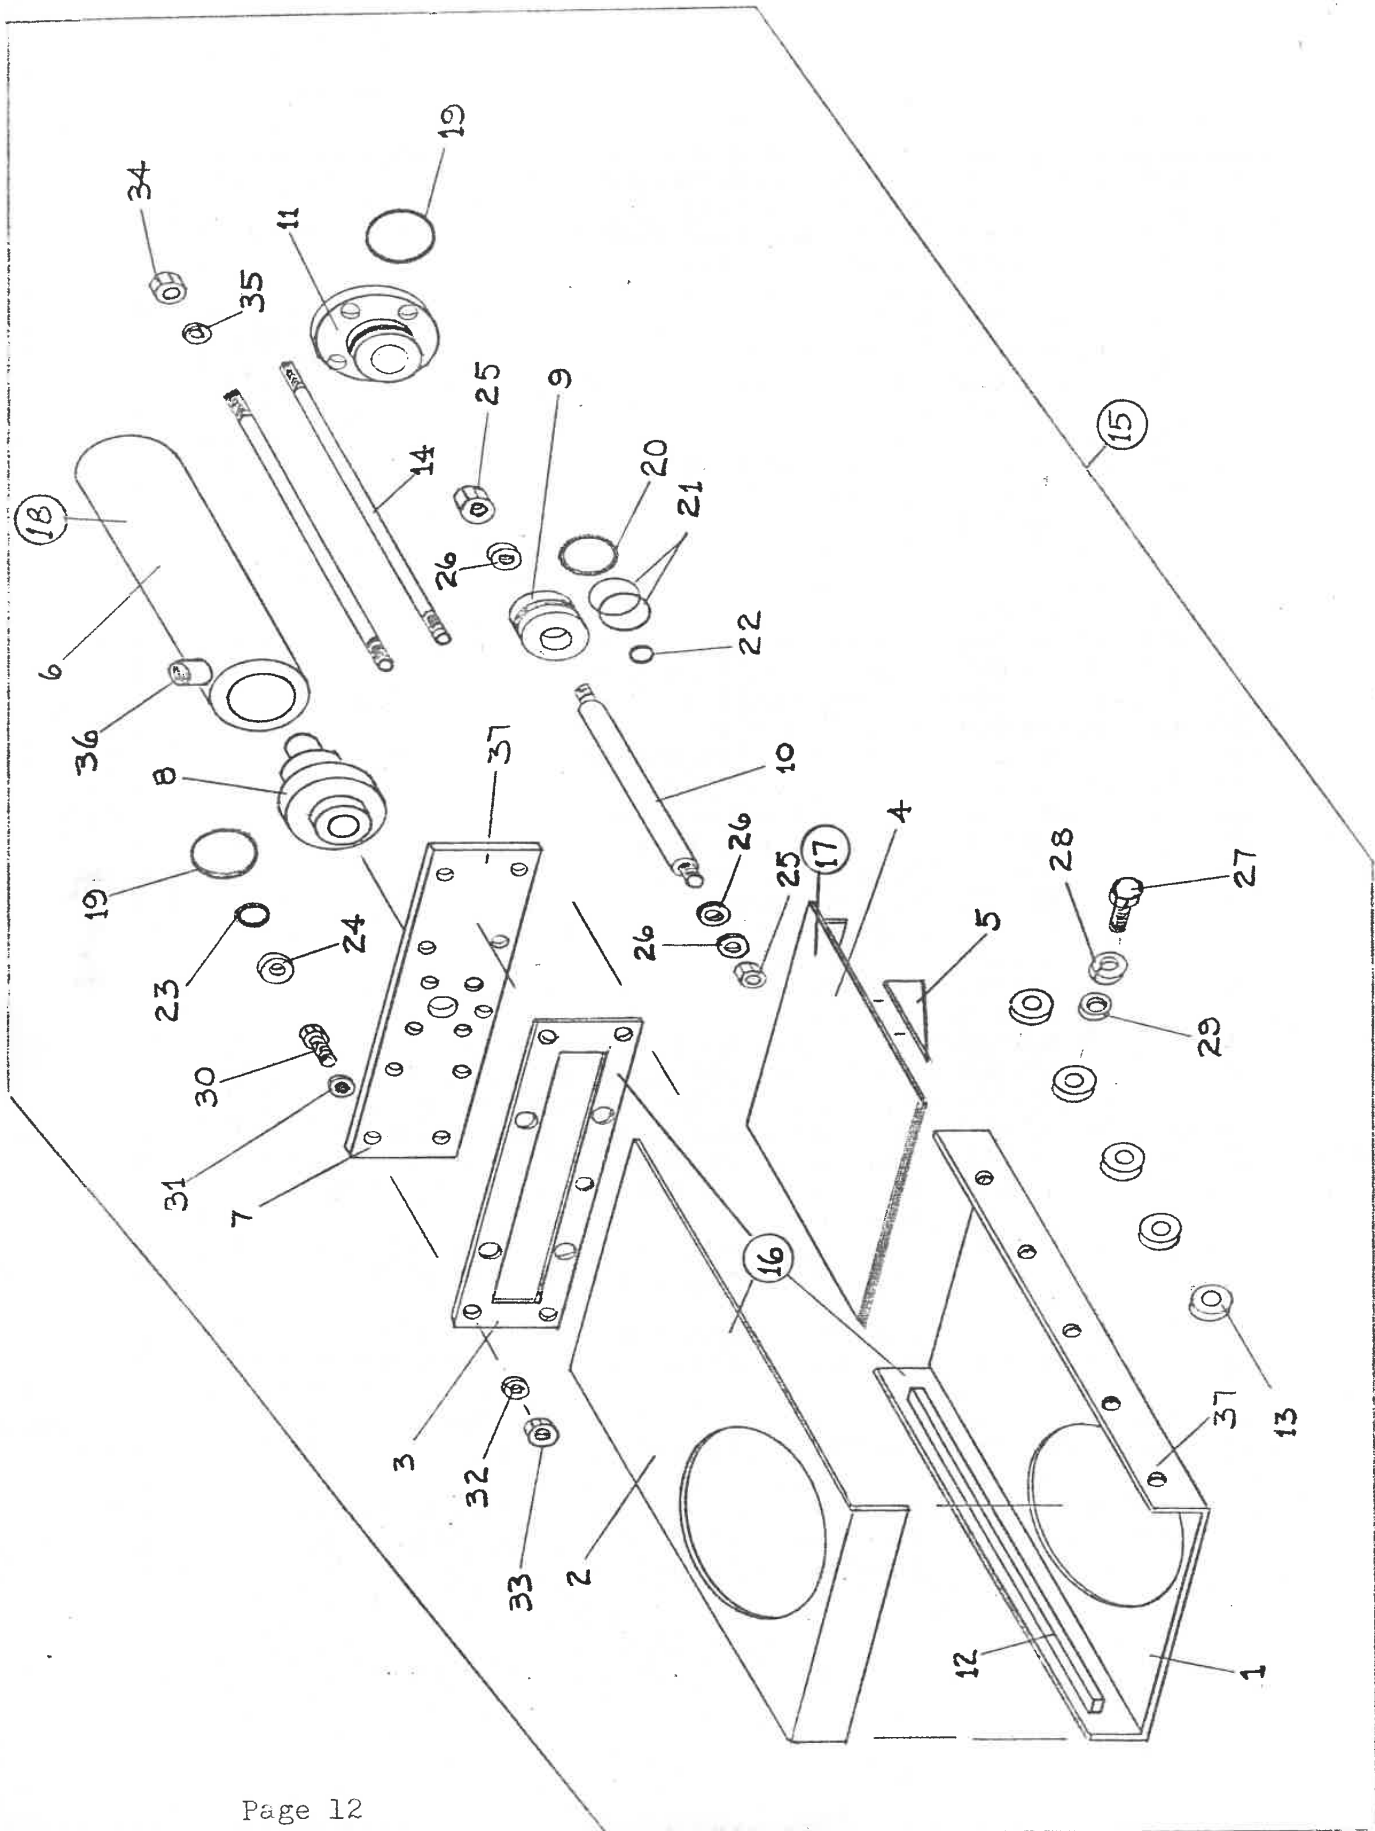

Key	Part Number	Description	Qty
1	242-06-06-029	Valve Main Body	1
2	242-06-06-030	Valve Top Plate	1
3	242-06-06-031	Valve Inner Flange	1
4	242-06-07-032	Valve Gate	1
5	242-06-07-033	Valve Gate Gusset	2
6	242-06-08-034	Cylinder Tube	1
7	242-00-00-035	Valve Outer Flange	1
8	242-00-00-036	Valve Rod Wiper Block	1
9	242-00-00-037	Cylinder Plunger	1
10	242-00-00-038	Cylinder Shaft	1
11	242-00-00-039	Cylinder End Plate	1
12	242-00-00-040	Valve Guide Bar	2
13	242-00-00-041	Valve Guide Bar Washer	10
14	242-00-00-042	Cylinder Tie Rod	4
15	242-06-00-000	Valve Assy Complete	1
16	242-06-06-000	Valve Housing Assy	1
17	242-06-07-000	Valve Gate Assy	1
18	242-06-08-000	Cylinder Tube Assy	1
19	R20772	O Ring 11-133	2
20	R02744	O Ring 11-326	1
21	R20745	Back Ups 8 - 326	2
22	R20770	O Ring - 11-012	1
23	R20771	O Ring - 11-210	1
24	R20773	Rod Wiper 3/4"	1
25	R07885	1/2" 2 Way Lock Nut	2
26	R07824	7/16" Flat Washer	3
27	R07611	5/16 x 1 Hex Hd Bolt	10
28	R07802	5/16 Lock Washer	10
29	R07822	5/16 Flat Washer	10
30	R07629	7/16 x 1 1/2 Hex Hd Bolts	9
31	R07824	7/16 Flat Washer	9
32	R07804	7/16 Lock Washer	9
33	R07784	7/16 Hex Nut	9
34	R07783	3/8 Hex Nut	4
35	R07803	3/8 Lock Washer	4
36	R02068	3/8 Half Coupling	1
37	R04102	Silicone Sealant	1

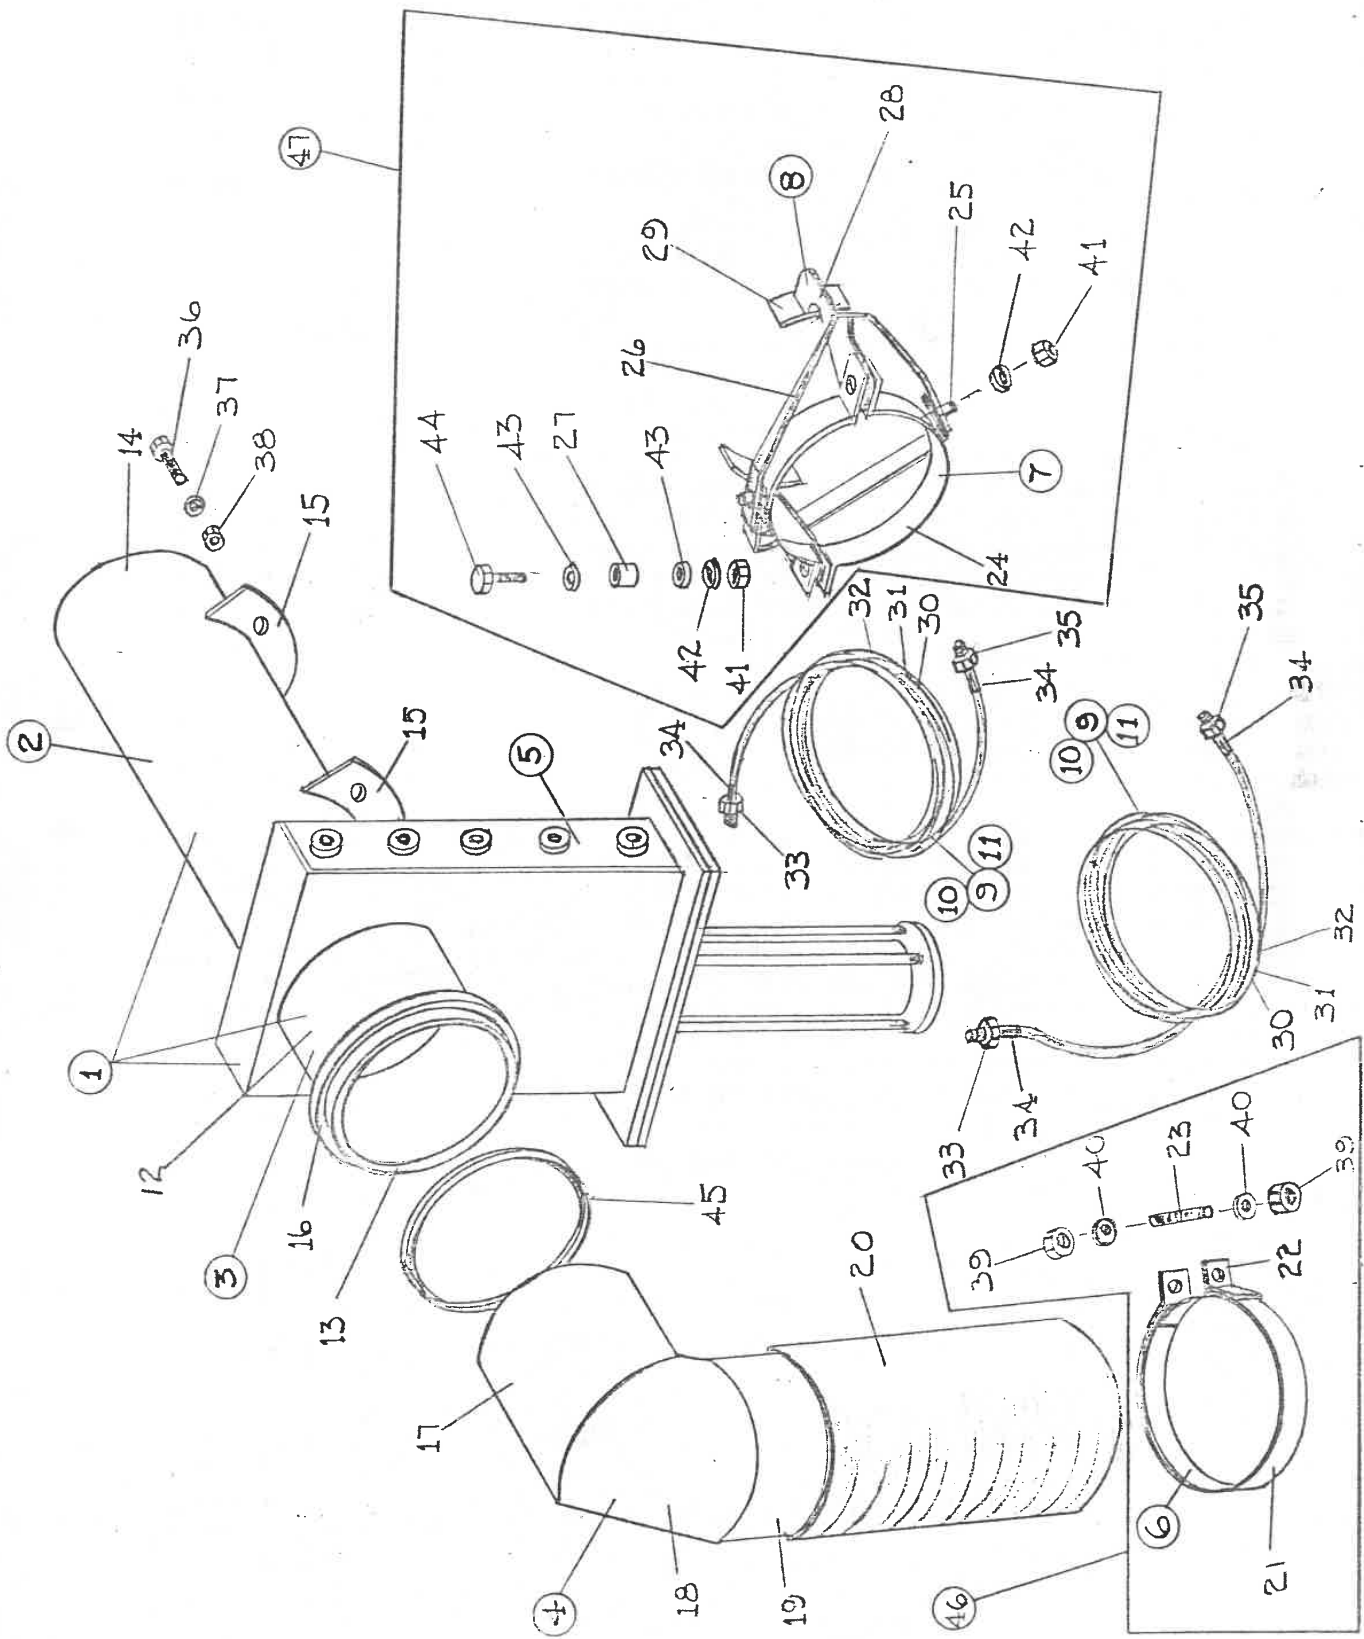

Key	Part Number	Description	Qty
1	242-10-00-000	Upper Standpipe & Valve Assy	1
2	242-10-10-000	Upper Fixed Standpipe Assy	1
3	242-10-11-000	Upper Extension Pipe Assy	1
4	242-28-00-000	Pump Elbow Assy	1
5	242-06-00-000	Valve Assy Complete	1
6	242-29-00-000	Clamp Assy	2
7	242-31-00-000	Discharge Pipe Sleeve Assy	2
8	242-32-00-000	Discharge Pipe Hook Assy	2
9	242-39-00-000	Hose Assy-Control to Discharge 8 ft	2
10	244-45-00-000	Hose Assy Control to Discharge 10 ft	2
11	246-51-00-000	Hose Assy Control to Discharge 12 ft	2
12	270-01-18-134	Valve Extension Pipe	1
13	242-09-09-049	Coupling Base	1
14	242-10-10-052	Fixed Upper Standpipe	1
15	242-10-10-053	Standpipe Hold Down Brkt	2
16	242-10-11-054	Hook Rings	1
17	242-28-00-138	Pump Elbow Base Section	1
18	242-28-00-139	Pump Elbow Middle Section	1
19	242-28-00-140	Pump Elbow Upper Section	1
20	242-00-00-141	Flexible Hose Section	1
21	242-29-00-142	Clamp Strap	2
22	242-29-00-143	Pipe Clamp Angle	4
23	242-00-00-144	Pipe Clamp Reddi-Rod	2
24	242-31-00-149	Discharge Pipe Lock Brkt	2
25	242-31-00-150	Reddi Rod	2
26	242-00-00-151	Bracket Lock	2
27	242-00-00-152	Hook Spacer	2
28	242-32-00-153	Discharge Pipe Hook	2
29	242-32-00-154	Hook Plate	2
30	242-39-00-163	Hyd Hose-Control to Discharge	2
31	244-45-00-170	Hyd Hose-Control to Discharge	2
32	242-35-00-159	Hyd Hose-Control to Discharge	2
33	R20803	3/8 - 18 NPT Solid Stem Male	2
34	R20805	Ferrules	4
35	R20806	3/8 - 18 NPT Swivel Stem - Male	2
36	R07674	1/2 x 1 1/4 Hex Hd Bolt	6
37	R07805	1/2 Lock Washer	6
38	R07785	1/2" Hex Nut	6
39	R07783	3/8 Hex Nut	4
40	R07803	3/8 Lock Washer	4
41	R07782	5/16 Hex Nut	4
42	R07802	5/16 Lock Washer	4
43	R07822	5/16 Flat Washer	4
44	R07611	5/16 x 1 Hex Hd Bolt	2
45	R02360	Standpipe Gasket	1
46	242-76-00-000	8" Pipe Clamp Kit	1
47	270-44-00-000	Discharge Pipe Hook Kit	

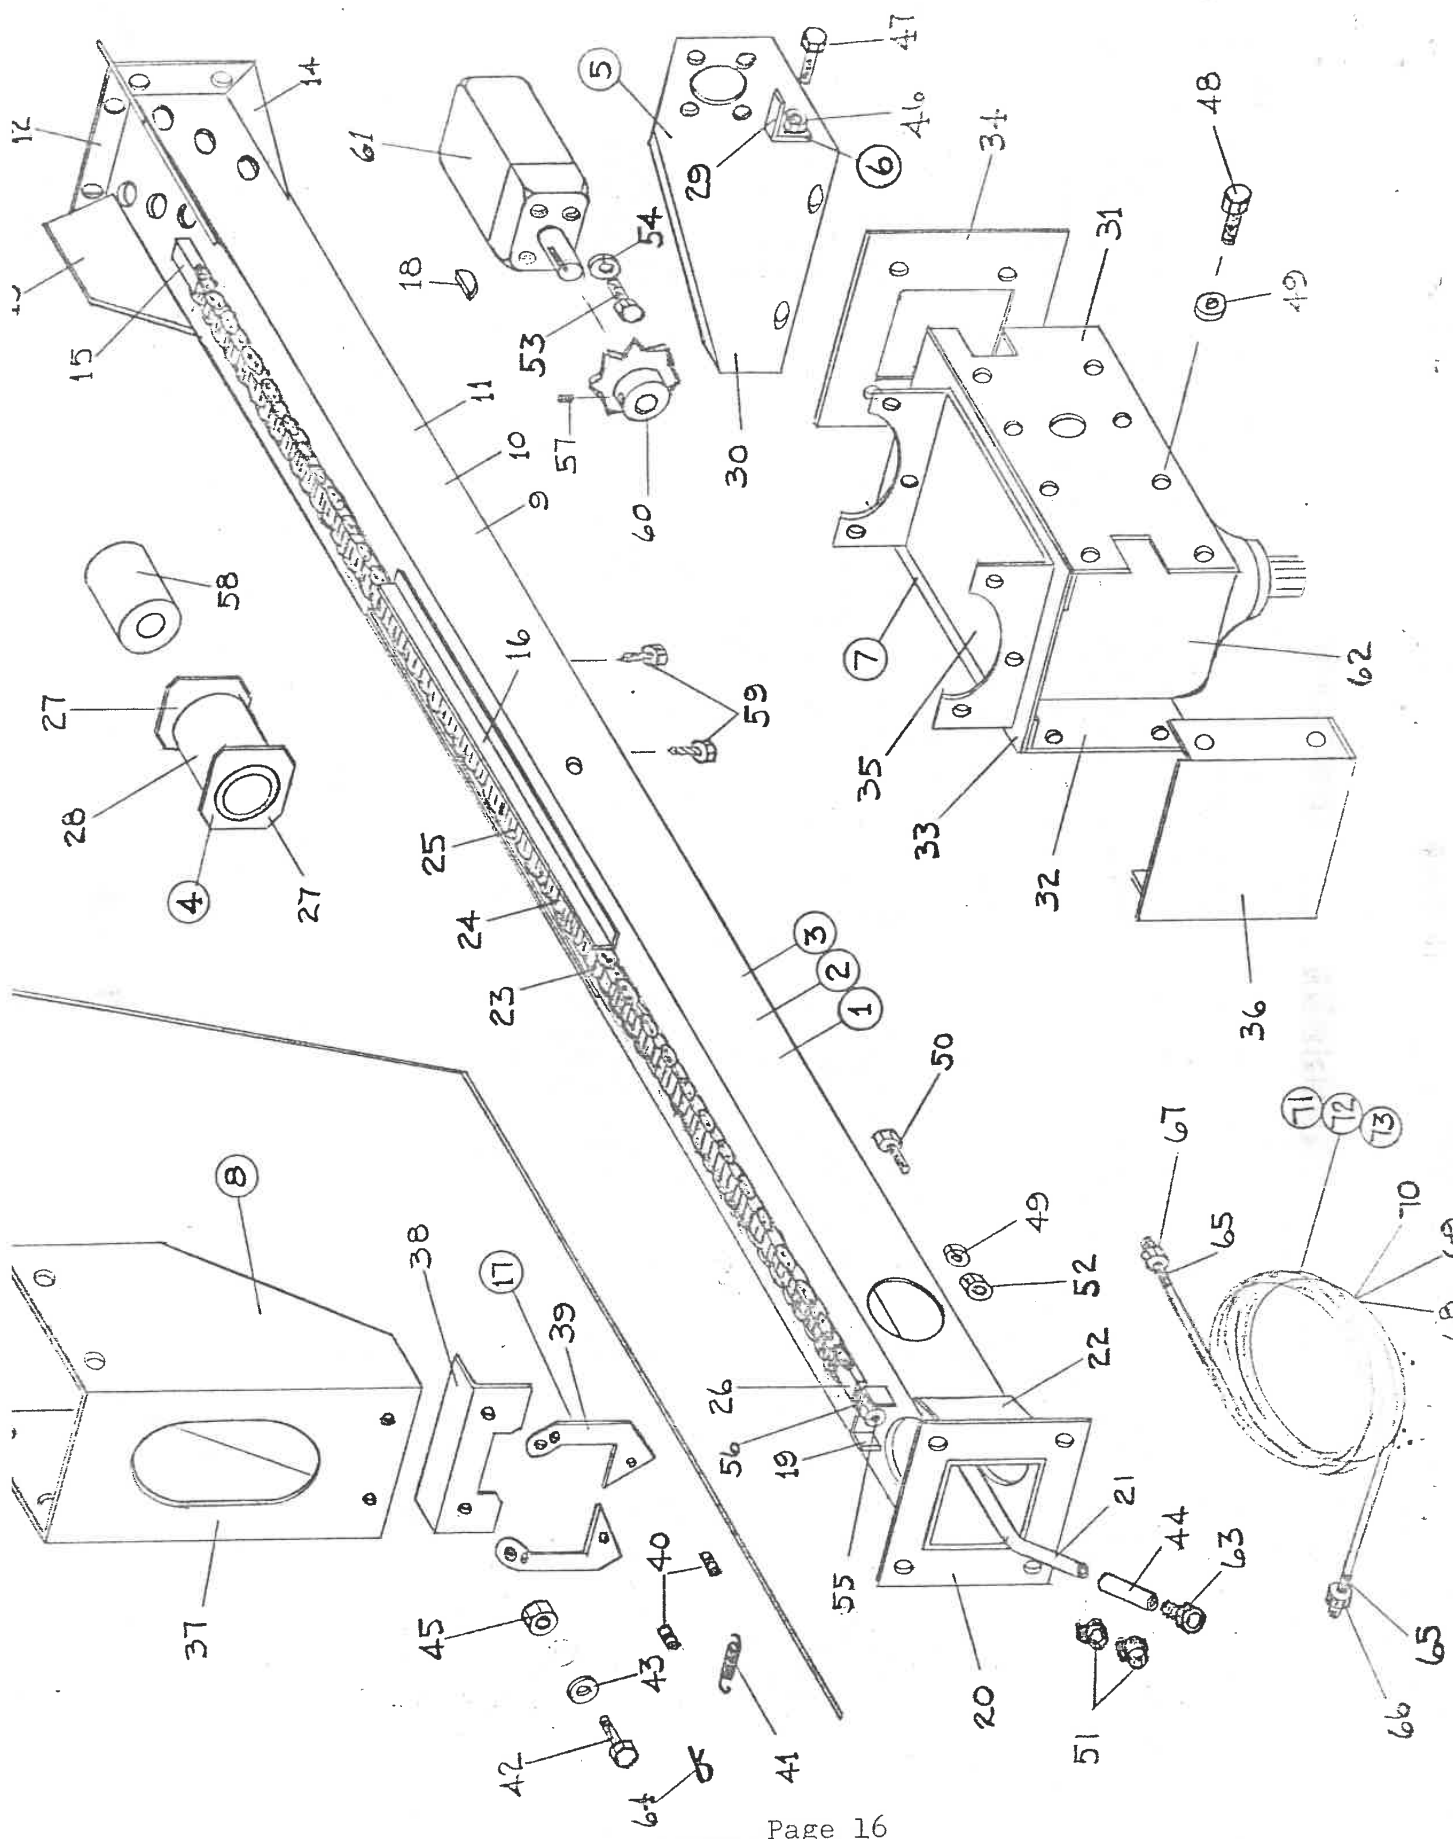

Key	Part Number	Description	Qty
1	242-11-00-000	Shaft Tube Assy 8 ft	1
2	244-44-00-000	Shaft Tube Assy - 10 ft Model	1
3	246-50-00-000	Shaft Tube Assy - 12 ft Model	1
4	242-12-00-000	Middle Brg Holder Assy	1
5	242-13-00-000	Chain Tightener Assy Complete	1
6	242-13-12-000	Roller Chain Tightener Assy	1
7	242-14-00-000	Gearbox Assy	1
8	242-15-00-000	PTO Guard Assy	1
9	242-11-00-055	Shaft Tube 8 ft Model	1
10	244-44-00-167	Shaft Tube - 10 ft Model	1
11	246-50-00-175	Shaft Tube - 12 ft Model	1
12	242-11-00-056	Connector Flange	1
13	242-11-00-057	Gusset Stop Plate	2
14	242-11-00-058	Shaft Tube Gusset	2
15	242-11-00-059	Chain Hold Down Brkt	1
16	242-11-00-060	Roller Chain Guide - 8 ft Model	2
17	242-16-00-000	Stabilizer Brkt Assy	2
18	R11114	1" x 1/4 Woodruff Key	1
19	242-11-00-061	Tightener Brkt	1
20	242-11-00-062	Drive Shaft Tube End Plate	1
21	242-11-00-063	Tube Water Pipe	1
22	242-11-00-064	Tube Gusset	2
23	242-00-00-065	Lift Chain - 8 ft Model	1
24	244-00-00-169	Lift Chain - 10 ft Model	1
25	246-00-00-177	Lift Chain - 12 ft Model	1
26	242-00-00-066	Chain Tightener	1
27	242-12-00-067	Bearing Holder	2
28	242-12-00-068	Shaft Tube Brg Holder	1
29	242-13-12-069	Roller Chain Tightener Brkt	1
30	242-13-00-070	Hyd Motor Mount	1
31	242-14-00-071	R.H. Gearbox Mount Plate	1
32	242-14-00-072	L.H. Gearbox Mount Plate	1
33	242-14-00-073	Gear Box Plate	1
34	242-14-00-074	Gear Box Lower Plate	1
35	242-14-00-075	Standpipe Saddle	1
36	242-00-00-076	Gear Box End Plate (1000 rpm only)	1
37	242-15-00-077	PTO Guard	1
38	242-15-00-078	PTO Guard Reinforcing Angle	1
39	242-16-00-079	Stabilizer Brkt	2
40	242-16-00-080	Spring Retaining Rod	2
41	R08025	Stabilizer Brkt Spring	1
42	R07671	7/16 x 1 1/4 Hex Hd Bolt	2
43	R07824	7/16 Flat Washer	2
44	242-00-00-183	1/2" Water Hose	1
45	R07891	2 Way Lock Nut 7/16	2
46	R07785	1/2 Hex Nut	1
47	R07639	1/2 x 2 Hex Hd Bolt	1
48	R07673	5/8 x 1 1/4 Hex Hd Bolt	8
49	R07806	5/8 Lock Washer	12
50	R07646	5/8 x 1 1/2 Hex Head Bolt	4
51	R02227	Gear Clamp HS 8	2
52	R07786	5/8 Hex Nut	4
53	R07619	3/8 x 1 Hex Hd Bolt	4
54	R07803	3/8 Lock Washer	4
55	R07868	3/8-24UNF x 1 1/2 Socket Hd Cap Screw	1

Key	Part Number	Description	Qty
56	R07797	3/8 Hex Nut 24 UNF	1
57	R07903	1/4 x 3/8 Long Set Screw	1
58	R20231	1 3/4 Wood Bearing	1
59	R08160	12 x 3/4 Type U Drive Screws	2
60	R20602	#50 B12 Sprocket 1" Bore	1
61	R20851	Hyd Motor 101-1008	1
62	R20536	A-100 Gear Box	1
63	R02430	1/2" Female Brass Hose Connector	1
64	R07948	5/32 Hairpin	1
65	R20805	Ferrules	4
66	R20804	1/2-14 NPT Solid Stem M	2
67	R20806	3/8-18 NPT Swivel Stem M	2
68	242-37-00-161	Hyd Hose Control to Rotate 8 ft	2
69	242-39-00-163	Hyd Hose Control to Rotate 10 ft	2
70	244-45-00-170	Hyd Hose Control to Rotate 12 ft	2
71	242-37-00-000	Hose Assy-Control to Rotate 8 ft	2
72	244-54-00-000	Hose Assy-Control to Rotate 10 ft	2
73	246-53-00-000	Hose Assy-Control to Rotate 12 ft	2

HUSKY FARM EQUIPMENT LIMITED GUARANTEE

All Husky Farm Equipment manufactured by Husky Farm Equipment Limited is Guaranteed.

- A. Guarantee covers replacement cost or repair of all parts found to be defective from manufacture.
- B. Guarantee also covers labour installing said parts if they are installed at Husky's manufacturing plant.
- C. Time and use is the essence of the Guarantee. If equipment is used on a private property for an individual's use, guarantee will be in effect for 12 months from date of invoice.

If equipment is used for commercial use to do custom work for money then guarantee will be in effect for 3 months from date of invoice.

Exemptions from Guarantee

- D. Costs of transporting equipment to or from Husky Farm Equipment Limited either by customer or by Husky service staff or cost of mail or public transportation is not covered.
- E. Tires and electric or hydraulic motors are covered by manufacturer's warranty and although Husky may assist to get warranty Husky will not be responsible other than that allowed by manufacturer's warranty.
- F. Items subject to normal wear from use are not covered by guarantee if faulty part is simply worn.




If it's for liquid manure and we don't have it we'll make it!

HUSKY®

Offers full line of HUSKY barnyard and liquid manure accessories.
Check the list and give us a call.

- ⊙ HUSKY electric - 400 gpm pump (5 hp motor) used for transfer and flushing in hog barns or milk houses.
- ⊙ HUSKY model A pump - 3 point hitch, 40 hp, 1000 gpm
- ⊙ HUSKY model C72 pump - on wheels, 65 hp, 2000 gpm
- ⊙ HUSKY model H5000 pump - on wheels, 80-100 HP, 5000 gpm
- ⊙ HUSKY side-mounted pump - for above ground storages
- ⊙ HUSKY propeller type agitator
- ⊙ HUSKY 5000 gpm lagoon pump
- ⊙ HUSKY 1500, 2000, 2500, 3000, 4000 imp. gal. tank spreader, tandem axle flotation tires
- ⊙ HUSKY corn row attachment and spring tooth cultivator, to work manure into ground. Available for all above spreader tanks.
- ⊙ HUSKY also manufactures and sells 7, 8 and 9 ft. snow blowers.
- ⊙ HUSKY barn cleaners - we specialize in replacement chain for all barn cleaners.
- ⊙ HUSKY liquid manure storage tanks - made of steel - any size

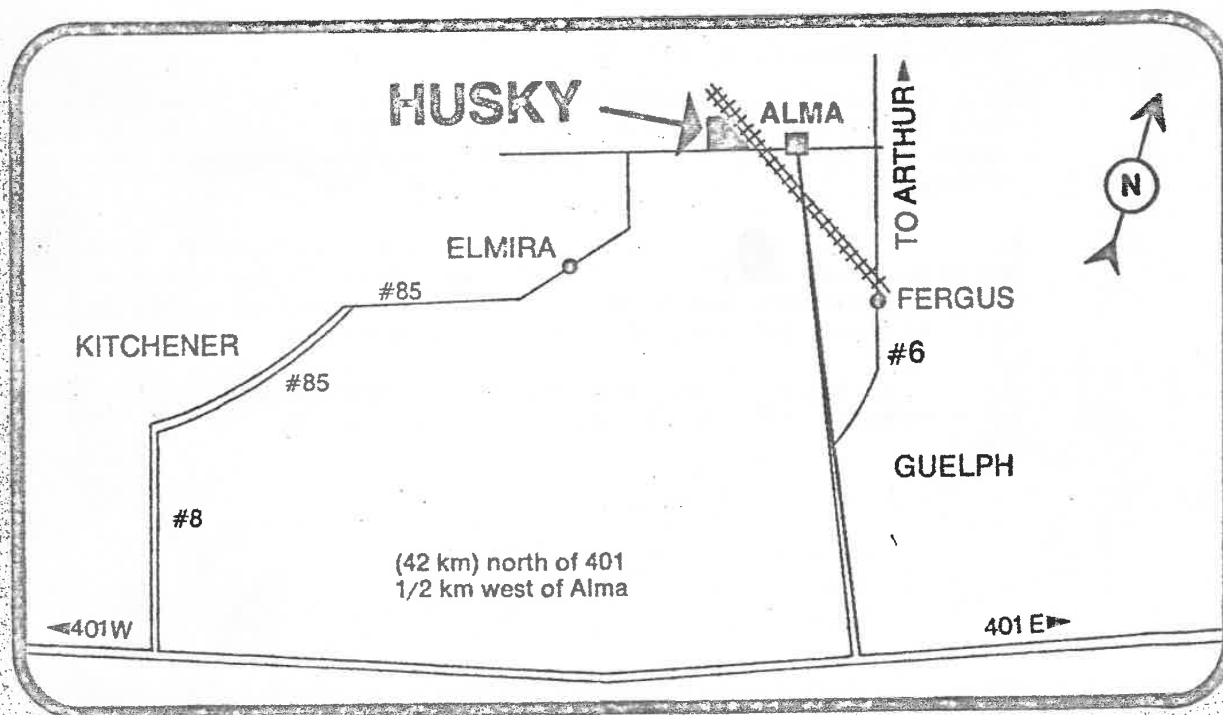

HUSKY FARM EQUIPMENT LIMITED
ALMA, ONTARIO, NOB 1A0 • PHONE (519) 846-5329