

Free Shipping on Domestic Orders \$75+

[Electronics](#) > [Smart Home Device](#) > [Virtual Home Assistant](#) > [Amazon Echo Show](#) [Parts](#) [Guides](#) [Answers](#) [Edit](#)

Amazon Echo Show Teardown

[★ Featured Guide](#)

 **TEARDOWN**

Amazon Echo Show Teardown

Written By: Adam O'Camb (and 12 other contributors)

Published: June 28, 2017

[★ Featured Guide](#)

 Comments: 24  Favorites: 4  Views: 66.2k

What you need

Tools

**T5 Torx Screwdriver**

\$5.49 iFixit

★★★★★ 4.9

[Add to cart](#)**T6 Torx Screwdriver**

\$9.99

★★★★★ 4.9

[Show more...](#)[Go to step 1](#) ↓

Introduction

Is there an echo in here? Seems like Alexa's talking to us from a lot of devices now. The new Echo Show adds a screen to bring even more Alexa, and now *she watches you* while she listens. Creepy? Maybe. A little endearing? Okay yeah, a little. Hey Alexa, let's Drop In on another teardown!

Want to see our teardowns before anyone else? Of course you do! Sign up for our news list [here](#) and get teardowns delivered to your inbox before anybody else.

And if you can't get enough teardown, here's where to get more: Follow us on [Facebook](#), [Instagram](#), or [Twitter](#) for the latest teardown news.

Video Overview



This teardown is **not** a repair guide. To repair your Amazon Echo Show, use our [service manual](#).

Step 1 Amazon Echo Show Teardown







● Let's see if Amazon's newest Echo can Show us somethin' good. Here are the tech specs:

- 7-inch touchscreen display with 1024 × 600 resolution
- Dual 2-inch stereo speakers
- Intel Atom x5-Z8350 (2M cache, up to 1.92 GHz) processor
- 5 MP front-facing camera
- 8-microphone array

Ask FixBot | Add a comment


Step 2



- The star of the Show is its 7-inch, 1024 × 600 touchscreen display.
- ④ That 170 PPI pixel density seems a little low by today's standards, but it's not so bad considering Amazon expects you to use this device from half a room away.
- Or maybe they just needed to get rid of some [Fire Tablet](#) displays...
- The back and top of the Show share some similarities with the old Echo devices: physical volume and microphone/camera on/off buttons.
- In a wild departure from the cylindrical Echo shapes of yore, the Show looks closer to [something out of Star Trek](#).
- ④ And a little like the [Chumby](#). You all remember the Chumby, right?

Ask FixBot | 2 comments


Step 3

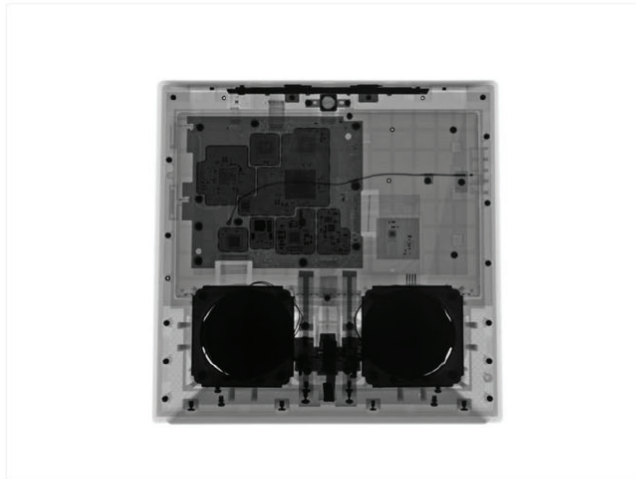

- After bringing the Show [around town](#), we [look right through it](#) to find—big ol' speakers and a circuit board.
- ④ But no hints for opening, unfortunately ...
- The rubber foot holds FCC info, and seems like a [likely point of entry](#).
- It also bears the model number MW46WB.

Ask FixBot | 1 comment


Step 4

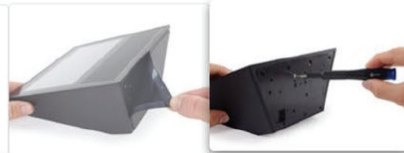

- So, like most Echo devices, we start from the bottom. After peeling up the taped-in rubber foot, we spy a handful of T5 Torx screws...
- But with all screws dispatched, there are no seams—we seem to be ... *screwed* ... for now.
- We immediately hunt for new ingress points.

Ask FixBot | Add a comment

Step 5

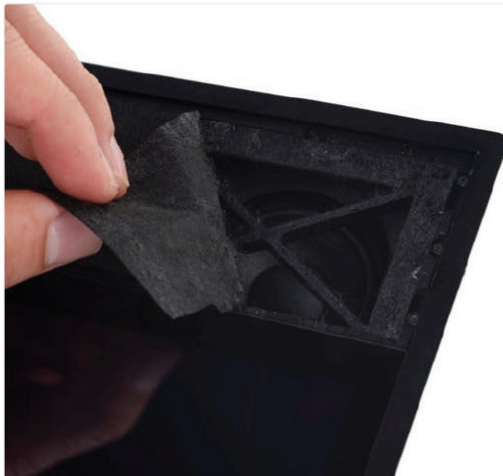

- Lacking any action on the foot, we start to pry around the display.
 - And then we keep prying.
 - ... and *prying* ...
- It turns out the multitude of screws at the bottom was a **red green** herring—the speaker grille is the real ingress point.
- Tucked under the grille, we find some sound-dampening fabric (just like the stuff rolled around the [original Echo](#)) and some more screws.
- But still no dice removing that front panel—time to get to work on what looks like the digitizer. [iOpener](#), engage!



TOOL USED ON THIS STEP:

iOpener
\$24.95

Add To Cart

Ask FixBot | Add a comment

Meet Your New Repair Assistant

AI repair help built on real-world fixes

Try FixBot Now




Step 6



- We lift the digitizer to reveal ... more screws under the bezel! Unsurprisingly, the digitizer cable disappears into the frame, holding the digitizer captive for now.
- Fortunately we *can* free the front frame, under which Amazon hid some hefty speakers.
- Our hard work and early screw removal pay off! Finally, we get to see what this Echo has to Show for itself.

Ask FixBot | Add a comment


Step 7

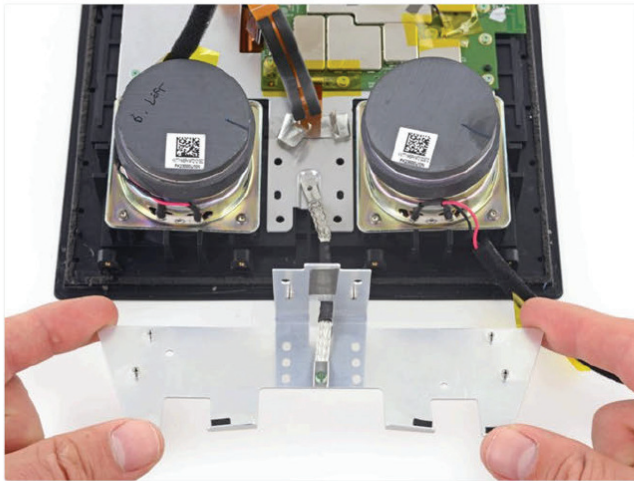

- Alexa's new form is powerful. How powerful? Well, the wall adapter outputs 15.0 VDC at 1.4 A, meaning there is 21 W driving Alexa ...
- Someone needs to pull Alexa back down to *earth*, and luckily we spot a burly braided cable grounding the Show.
- ① 1.4 A is not a small amount of current, and a braided ground cable is a flexible solution to get Alexa's feet back on ground. It also has a large surface area, which can pick up and ground stray EMI.
- That juice is going somewhere, and it looks like those upgraded speakers are thirsty.
- And check out those [magnets](#).

Ask FixBot | 1 comment

Step 8



● Out comes the main board, hiding its chips under an inscrutable jigsaw puzzle of [EMI shields](#). After we pop the lids, it's time for Show and tell:

- Intel [SR2KT](#) Atom x5-Z8350 Processor (2M Cache, up to 1.92 GHz)
- SK Hynix H9CCNNN8KTM1BR-NTD 2 GB RAM
- Sandisk [SDIN9DS2-8G](#) 8 GB NAND embedded flash drive
- Cypress Semiconductor (formerly Broadcom) [BCM43570KFFBG](#) 5G Wi-Fi IEEE 802.11ac 2x2 MAC/baseband/radio with integrated Bluetooth 4.1 and EDR
- Winbond [W25Q16FW](#) 1.8V 16 Mb serial flash memory
- Goodix [GT9271](#) 10-point capacitive touch controller
- Texas Instruments [SND9039A2](#) power management, Monolithic Power Systems [MP8762](#) 10 A step-down converter, and Novatek [NT50167](#) display power management

Ask FixBot | Add a comment

Step 9




● Next we get to pop out the power supply board. We deal with so many mobile devices, it's almost novel to see this tiny li'l guy.

● Looks like a party with some [cans](#) and some chips:

- Texas Instruments [TPA3118](#) 30-W stereo (BTL) class-D audio amplifier
- Wolfson [WM8904G](#) ultra-low-power codec for portable audio applications
- Rohm [BU4831F](#) 3.1 V voltage detector
- Rohm [BU4813F](#) 1.3 V voltage detector
- There's also an array of contacts (accessible via the Show's rubber foot), likely for testing purposes.

Ask FixBot | 2 comments

Step 10

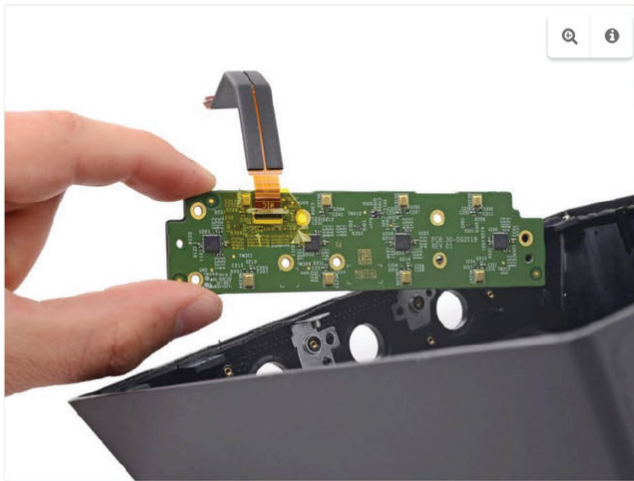


- We pull the final board from the top of the Show, and find the expected hardware—buttons, lots of microphones, and some ADCs to funnel your voice from the microphones to the CPU:
- Texas Instruments [TLV320ADC3101](#) 92 dB SNR Low-Power Stereo ADC (x4) as seen in the [Echo](#) and [Echo Dot](#)
- Knowles MEMS Microphone (x8)
- Switch (x3)
- Fun fact: all that foam tape minimizes vibration noise so that Alexa still has a chance of hearing you during loud music sessions.

Ask FixBot

1 comment

Step 11

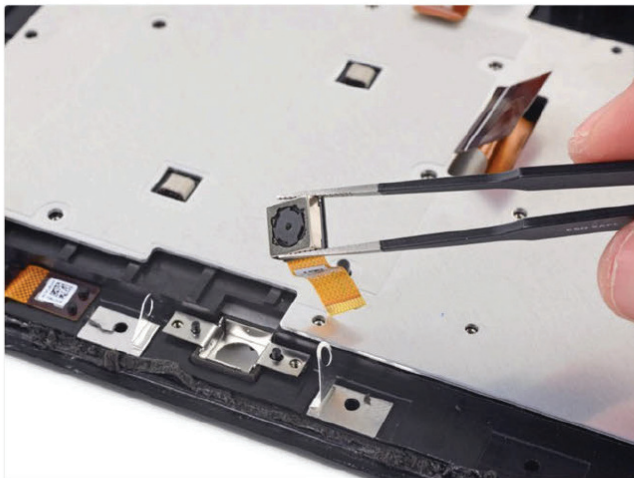

- Turning our attention to the "show" part of the Show, we easily pluck the 5-megapixel ~~spy~~ camera from the display assembly (after bending a bracket out of the way).
- The display itself is another matter. It's guarded by some impossibly tough foam tape that basically requires you to break the display rather than lift it out. So first we did the [former](#), then the latter.
- The panel is model TV070WSM-NMO, manufactured by BOE.
- We half expected this display to be borrowed straight from the similarly-specced Kindle Fire, but it's not one we've seen before.
- A Richtek LED backlight driver sits on the flex cable.

Ask FixBot

Add a comment

Step 12



- The Show is now an empty, echoing cave, its components laid bare. We're free!
- ① tl;dr: Amazon wants as much data as they can possibly mine. Their solution is to make cheap products that are too convenient not to use, then start soaking up those keywords. Enjoy the convenience, but remember that you're the product. Oh, and don't bump this off the kitchen counter or it's curtains on this Show.
- Once again, thanks to our superpowered friends at [Creative Electron](#) for helping us see the unseen!

Ask FixBot | Add a comment

Final Thoughts

- ✓ The Echo Show only uses standard T5 and T6 Torx screws.
- While they may not get much wear, the most wear-prone components (buttons and power jack) are soldered to boards, complicating replacement.
- The digitizer is not fused to the display, but must be pried up from tough adhesive to do any repair.
- ✗ The display is adhered very tightly in the midframe, and is difficult to remove without damage.
- ✗ Any repair is going to require cutting through and replacing lots of tough adhesive.

Repairability Score



Repairability 4 out of 10
(10 is easiest to repair)



Have a question about this teardown?
Ask FixBot for help with repairs or troubleshooting.

Ask FixBot

Gear Up For Future Repairs

[Shop all](#)





Mako Driver Kit - 64 Precision Bits

★★★★★ 889

\$39.95



Pro Tech Toolkit

★★★★★ 2858

\$79.95



Prying and Opening Tool Assortment

★★★★★ 413

\$9.95



Electronics Cleaning Bundle

★★★★★ 60

\$23.99

Author



Adam O'Camb

Member since: 04/11/15

222,924 Reputation

416 Guides authored

with 12 other contributors

Badges: 39



+36 more badges

17 GUIDE COMMENTS

Add a comment



Just a tablet without a battery and oversized speakers. Rather overpriced.

[George A.](#) - Jun 30, 2017



There seems to be minimal to no heatsinking for the processor, compared to other devices with a similar chip.

[Larry Chen](#) - Jul 1, 2017



This is because Intel Atom series processors are meant for budget, ultra-low power setups. In small netbooks where heat matters over performance, such as the Echo Show, cheap processors that cannot do absolutely anything else are ideal.

[Ethan](#) - Oct 1, 2017



i agree, on the surface the Show is overpriced but you aren't just paying for the hardware. You have to employ the people creating the infrastructure behind it. i purchased a Show for my elderly parents. my mom gets frustrated with computers including her tablet. She ends up pressing the wrong button or something. so having an interface and the supporting infrastructure that amazon is assembling makes a big difference.

[tobymacbailey](#) - Jul 2, 2017



Would like to know how/where one might add a mini plug to out the audio to a larger external system, like the Dot does.

[Mick Snyder](#) - Oct 8, 2017

Load more comments

Add Comment

Cancel

Post comment

 View Statistics:	Past 24 Hours: 10	Past 7 Days: 44	Past 30 Days: 204	All Time: 66,228
---	--------------------------	------------------------	--------------------------	-------------------------